




23. HEAD LAMP & DRL (DAY TIME RUNNING LIGHT) UNIT CIRCUIT

8310

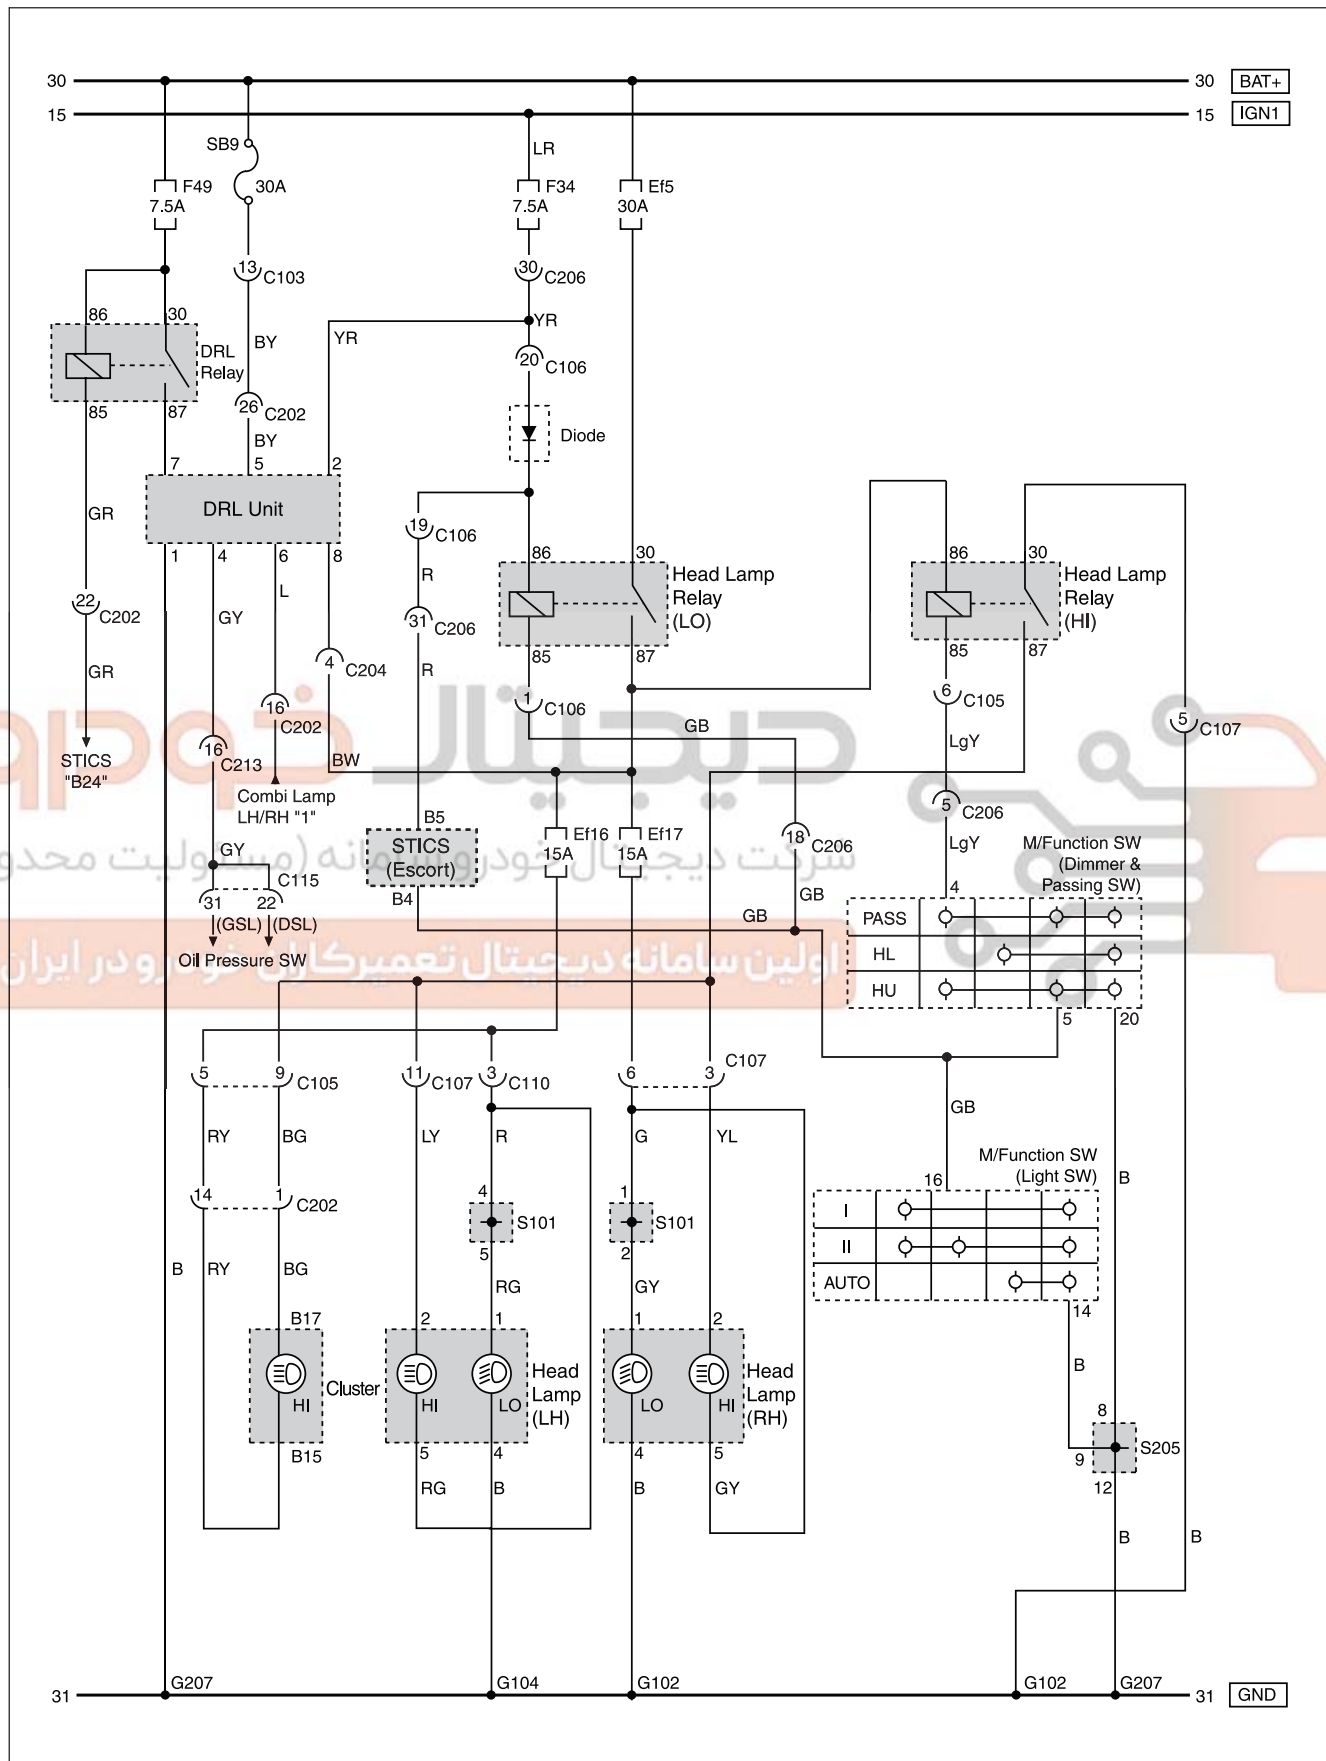

A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C105 (10Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C107 (12Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
G102	W/H Eng Room	Behind LH Head Lamp	
G104	W/H Eng Room	Behind RH Head Lamp	
G207	W/H Main	Inner the Passenger Cowl Side PNL	
S101 (6Pin, Black)	W/H Eng	Inside the Eng Room Fuse & Relay Box	Head Lamp
S205 (14Pin, Black)	W/H Main	Upper the PTC Protector	GND

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



C105

W/H Floor

(Eng Room Fuse Relay Box)



C106

W/H Floor


(Eng Room Fuse Relay Box)



C107

W/H Eng


(Eng Room Fuse Relay Box)



C110


W/H Eng

(Eng Room Fuse Relay Box)

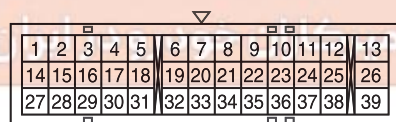


C202

W/H Floor

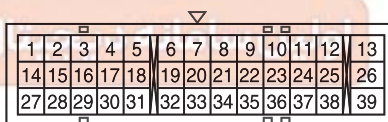


C206


W/H Floor

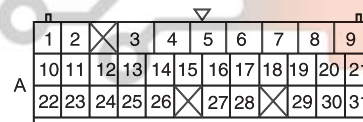


A



B



M/Function SW

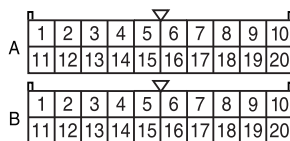


A

B

Cluster



Head Lamp
(LH/RH)

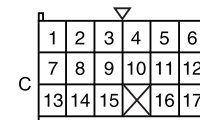

C

STICS