




## 29. STOP & BACK-UP LAMP CIRCUIT 4810

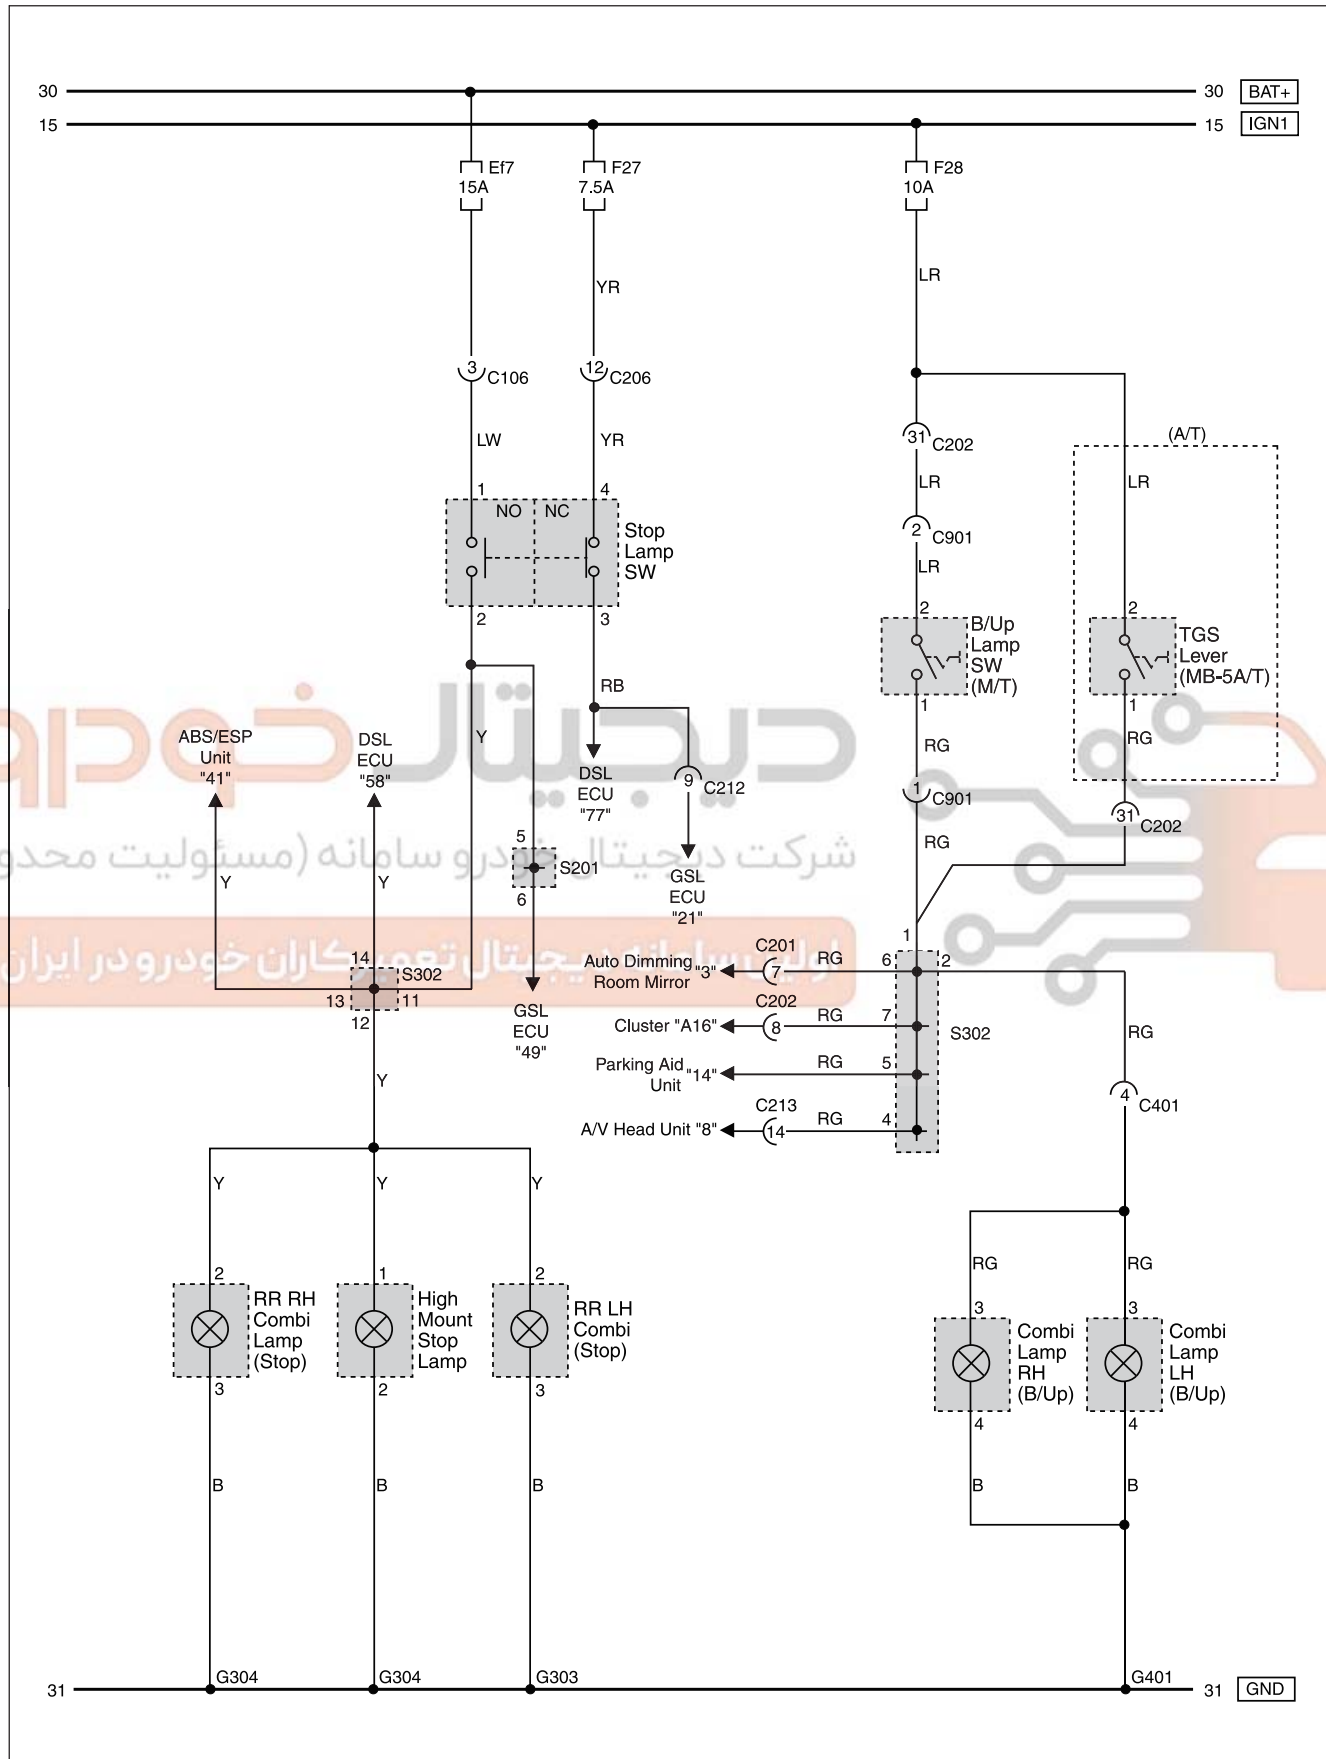


## A. CONNECTOR INFORMATION

| Connector Number<br>(Pin Number, Color) | Connecting Wiring<br>Harness          | Connector Position                      | Remark   |
|-----------------------------------------|---------------------------------------|-----------------------------------------|----------|
| C106 (20Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box               |          |
| C201 (20Pin, White)                     | W/H Floor - W/H Roof                  | Inside Driver Cowl Side PNL             |          |
| C202 (39Pin, Black)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder               |          |
| C206 (39Pin, Black)                     | W/H Main - W/H Floor                  | Upper the Driver Legroom                | C/Holder |
| C401 (12Pin, Black)                     | W/H Floor - W/H T/Gate                | Upper the RH T/Gate                     |          |
| C901 (12Pin, Black)                     | W/H Floor - W/H T/M                   | Upper the T/M                           | A/T      |
| C901 (4Pin, Black)                      | W/H Floor - W/H T/M                   | Upper the T/M                           | M/T      |
| G303                                    | W/H Floor                             | Driver QTR PNL (Under the QTR Glass)    |          |
| G304                                    | W/H Floor                             | Passenger QTR PNL (Under the QTR Glass) |          |
| G401                                    | W/H T/Gate                            | Center the T/Gate                       |          |
| S201 (14Pin, Black)                     | W/H Main                              | RH Protector of the Driver Legroom      |          |
| S202 (14Pin, Black)                     | W/H Main                              | RH Protector of the Driver Legroom      | CAN      |


## B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C106  
W/H Floor  
(Eng Room Fuse & Relay Box)




C201  
W/H Roof

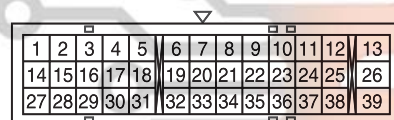


C202  
W/H Floor



C206  
W/H Floor




C401  
W/H T/Gate



C901  
W/H Transmission  
(A/T)



C901  
W/H Transmission  
(M/T)

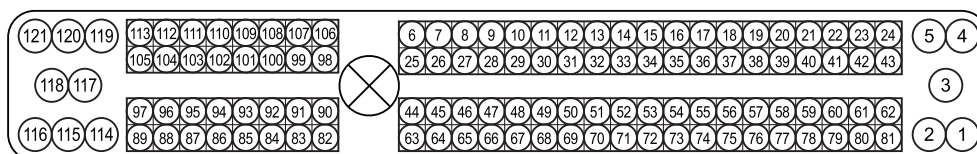


DSL ECU



Combi Lamp



B/up Lamp

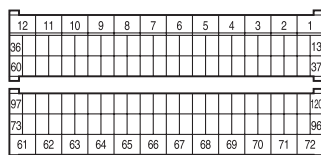

ECU (GSL)




HMS Lamp



Stop Lamp SW



Combi Lamp  
(T/Gate)



TGS  
Lever Unit