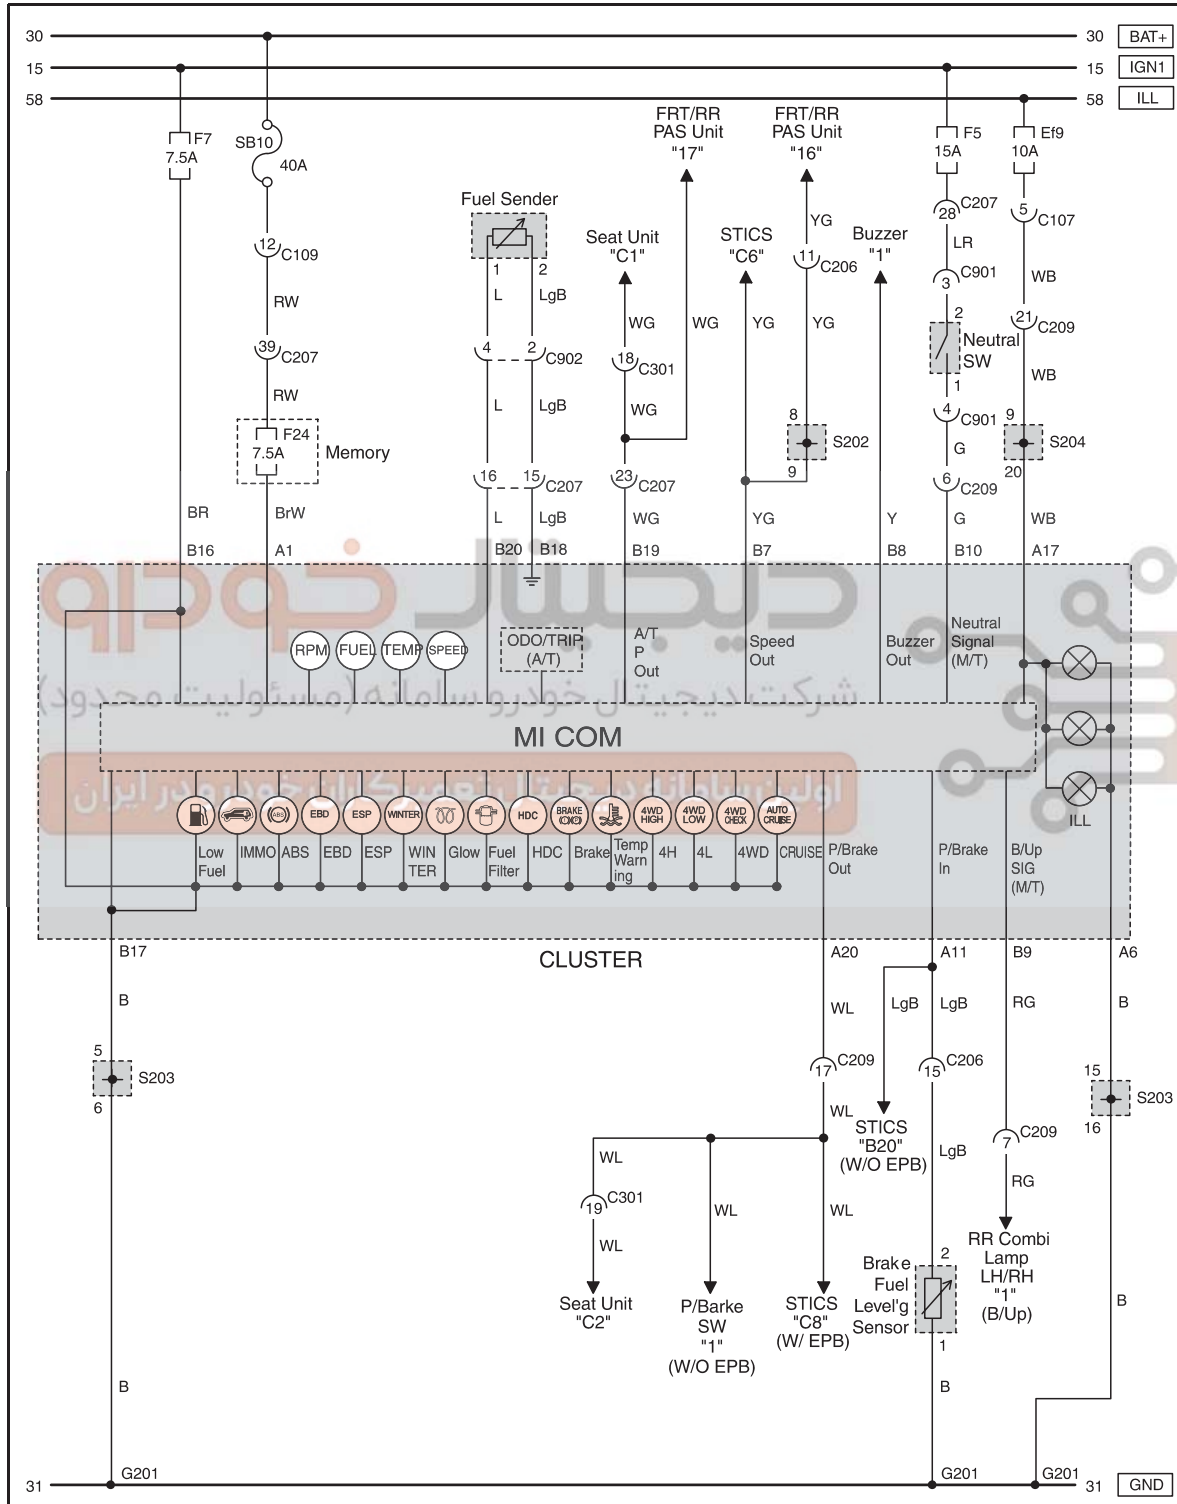


S.G.N.

8010-01 CLUSTER**1) GAUGE (SPEED, RPM, FUEL, TEMP), WARNING LAMP (FUEL, FUEL FILTER, ABS/ESP, BRAKE, HDC, 4WD)**

CIRCUIT


REXTON 2010.01

Modification basis	
Application basis	
Affected VIN	

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)		Connecting Wiring Harness	Connector Position	Remark
C107 (14Pin, White)		W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C109 (16Pin, White)		W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C206 (21Pin, Black)		W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C207 (39Pin, Gray)		W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C209 (26Pin, Black)		W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C301	(20Pin, White)	W/H Floor - W/H Driver Seat	Under the Driver Seat	Memory/Power
	(20Pin, White)	W/H Floor - W/H Driver Seat	Under the Driver Seat	W/O Memory
C901	(12Pin, White)	W/H Floor - W/H T/M	Upper the T/M	A/T
	(4Pin, White)	W/H Floor - W/H T/M	Upper the T/M	M/T
C902 (4Pin, Black)		W/H Floor - W/H Fuel Sender	Upper the T/M	
G201		W/H Main	Under the Driver Cowl Side PNL	
S202 (20Pin)		W/H Main	Upper the I/P Relay Box (Inside Protector)	CAN
S203 (20Pin)		W/H Main	Backside A/V Head Unit (Inside LH Protector)	GND
S204 (20Pin)		W/H Main	Backside A/V Head Unit (Inside LH Protector)	

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

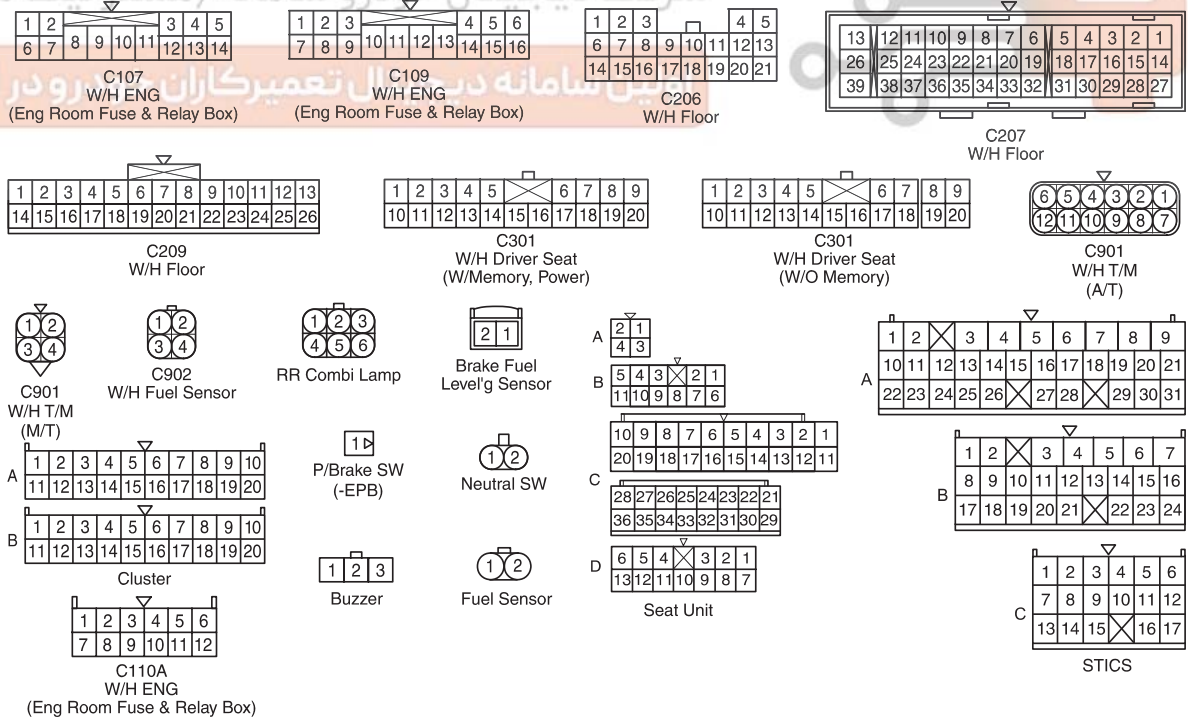

Modification basis	
Application basis	
Affected VIN	


CIRCUIT

REXTON 2010.01

04-50

8010-01

2) WARNING LAMP (EPB, AUTO PARK'G, GLOBAL), TPMS DISPLAY

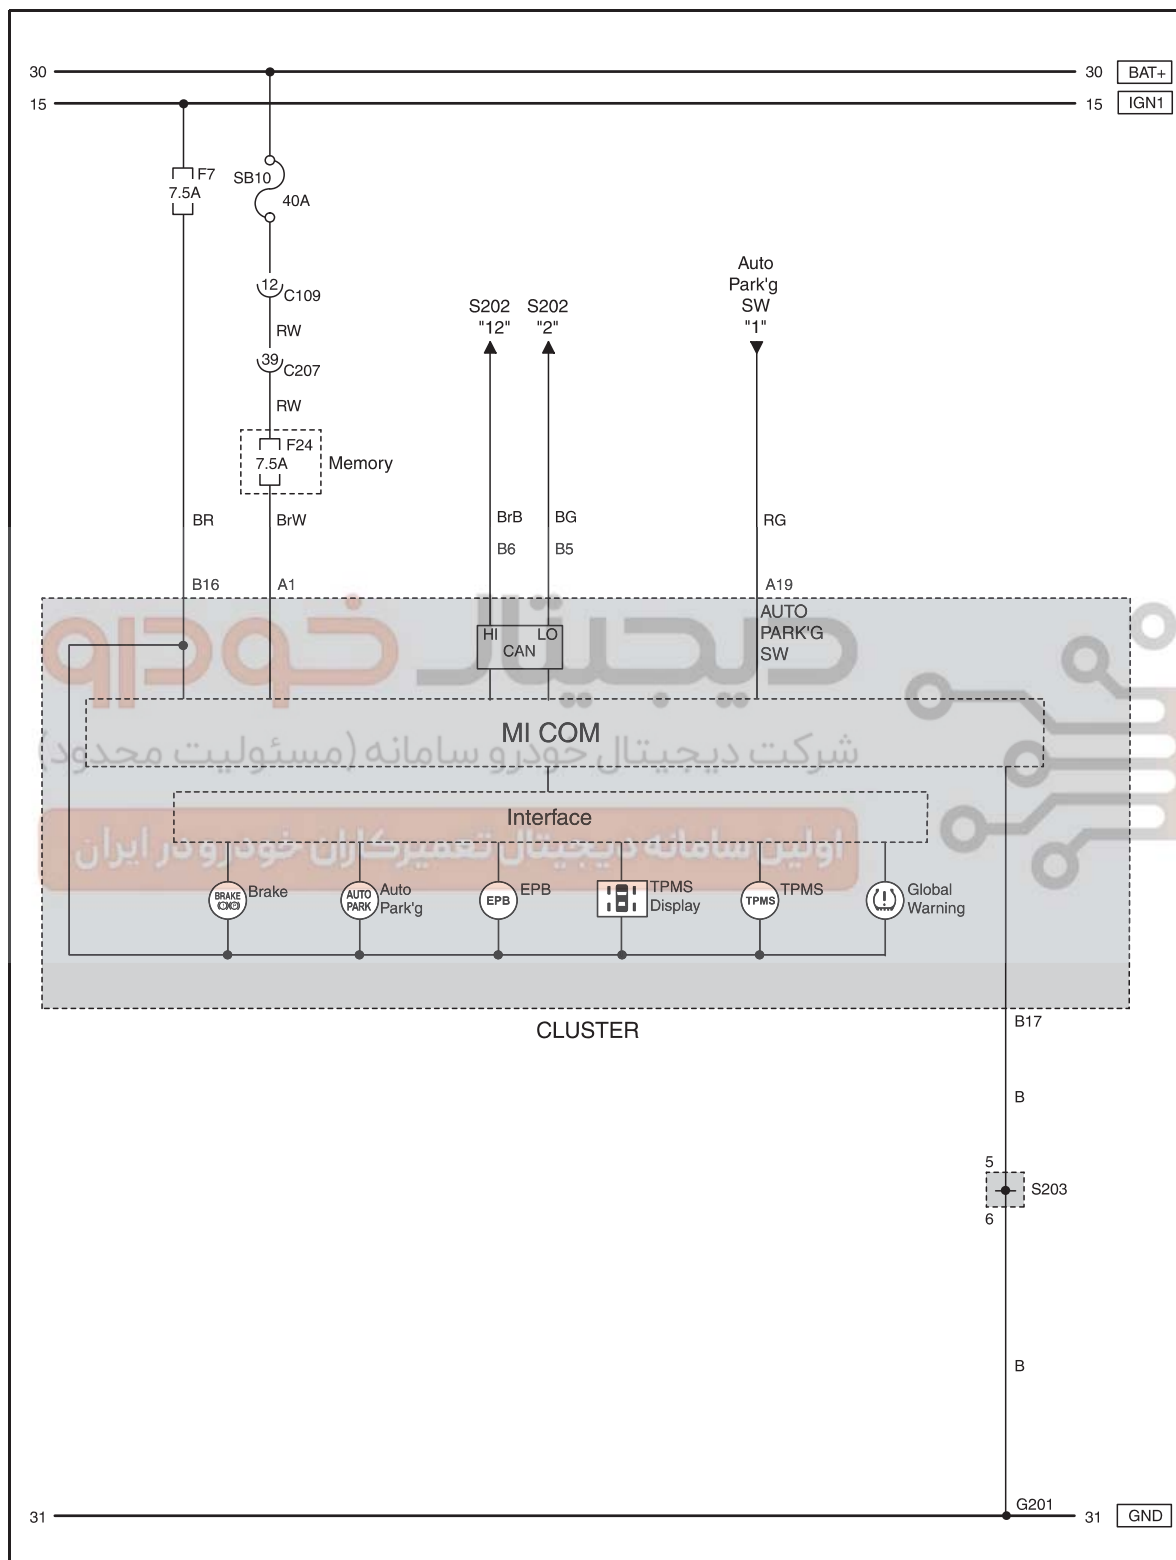


CIRCUIT

REXTON 2010.01


Modification basis	
Application basis	
Affected VIN	

(1) CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C109 (16Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C207 (39Pin, Gray)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
G201	W/H Main	Under the Driver Cowl Side PNL	
S202 (20Pin)	W/H Main	Upper the I/P Relay Box (Inside Protector)	CAN
S203 (20Pin)	W/H Main	Backside A/V Head Unit (Inside LH Protector)	GND

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

C109
W/H ENG
(Eng Room Fuse & Relay Box)

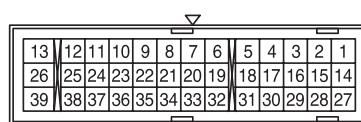

C207
W/H Floor

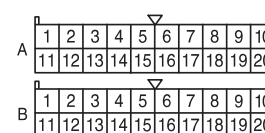


Cluster



Auto Park'g SW

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

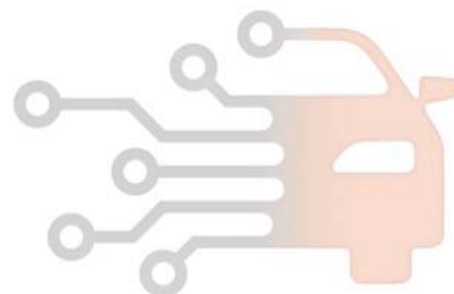


Modification basis	
Application basis	
Affected VIN	

CIRCUIT

REXTON 2010.01

3) WARNING LAMP (BATT CHARGE, OIL, SSPS, DOOR, ENG CHECK, AIR BAG, SEAT BELT), TURN SIGNAL, FOG LAMP, HAZARD

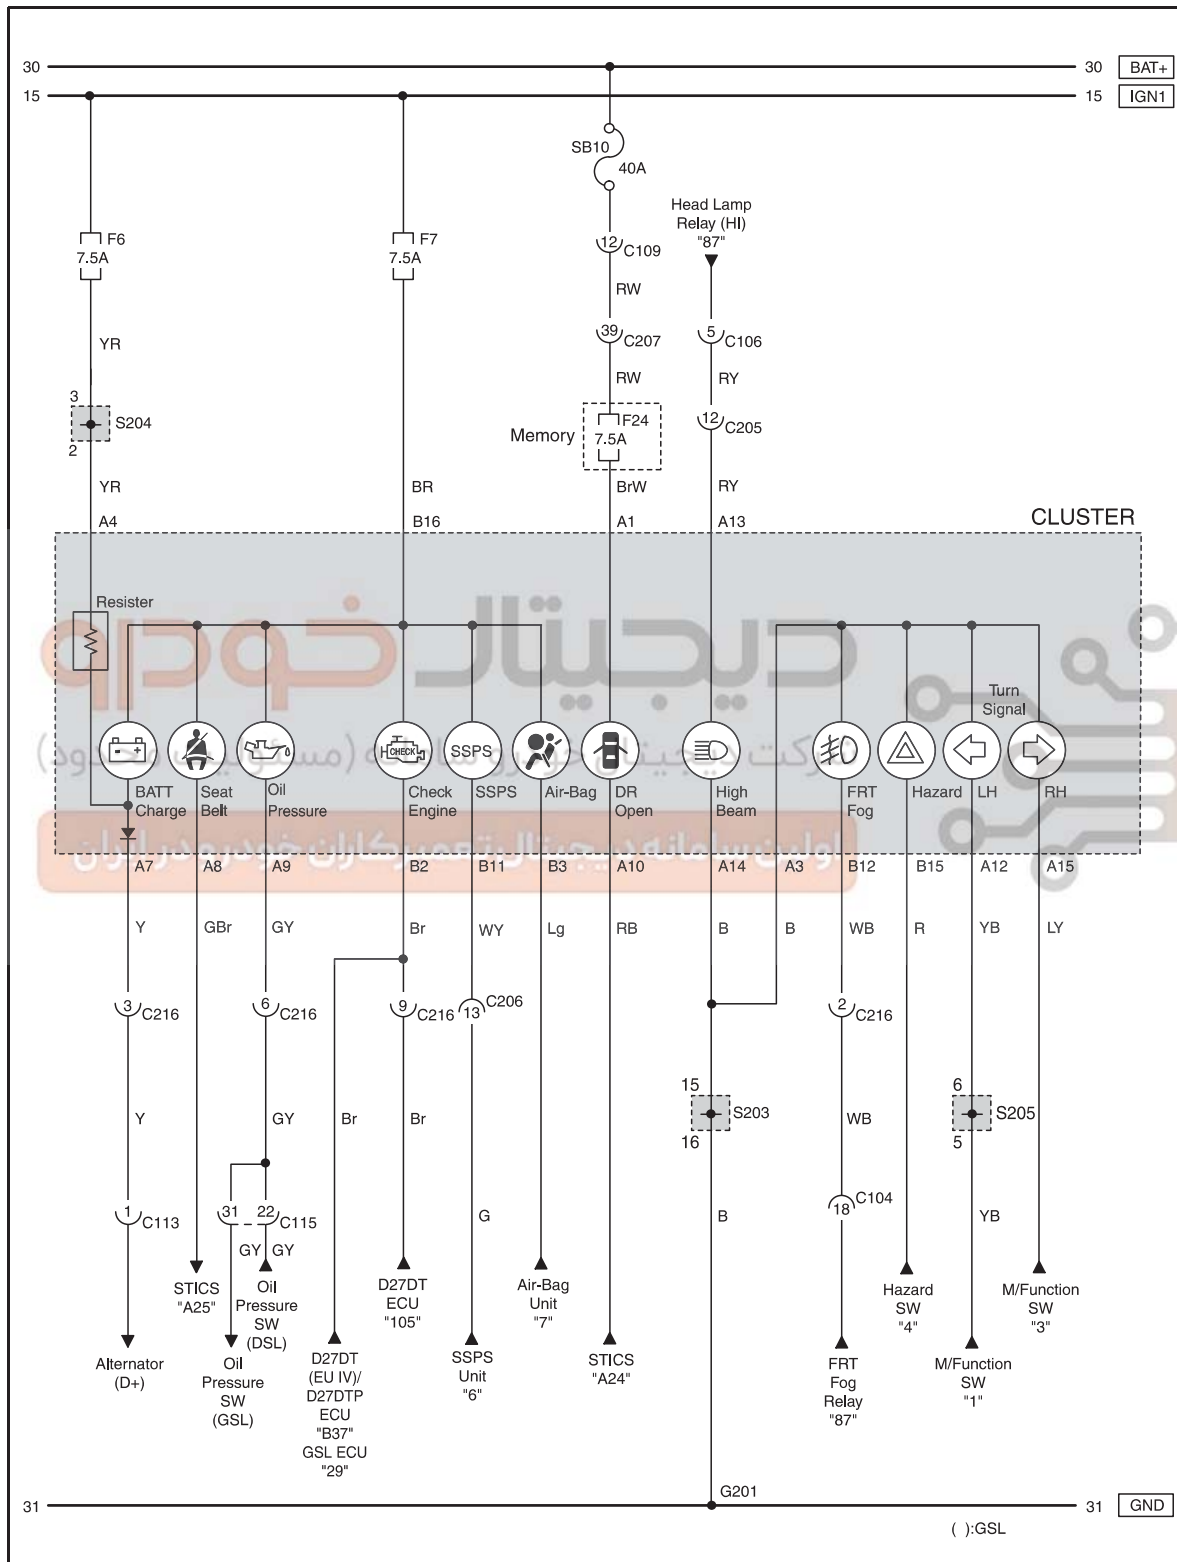


CIRCUIT

REXTON 2010.01

Modification basis	
Application basis	
Affected VIN	

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C104 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C109 (16Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (2Pin, Black)	W/H Eng - W/H Alternator	Under the Coolant Reserve Tank	
C115 (42Pin, Black)	W/H Eng - W/H Eng Control	Right Eng Room Dash PNL	
C205 (16Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C206 (21Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C207 (39Pin, Gray)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C216 (26Pin, White)	W/H Main - W/H Eng	Passenger Cowl Side C/Holder	C/Holder
G201	W/H Main	Under the Driver Cowl Side PNL	
S203 (20Pin)	W/H Main	Backside A/V Head Unit (Inside LH Protector)	GND
S204 (20Pin)	W/H Main	Backside A/V Head Unit (Inside LH Protector)	
S205 (20Pin)	W/H Main	Backside A/V Head Unit (Inside RH Protector)	

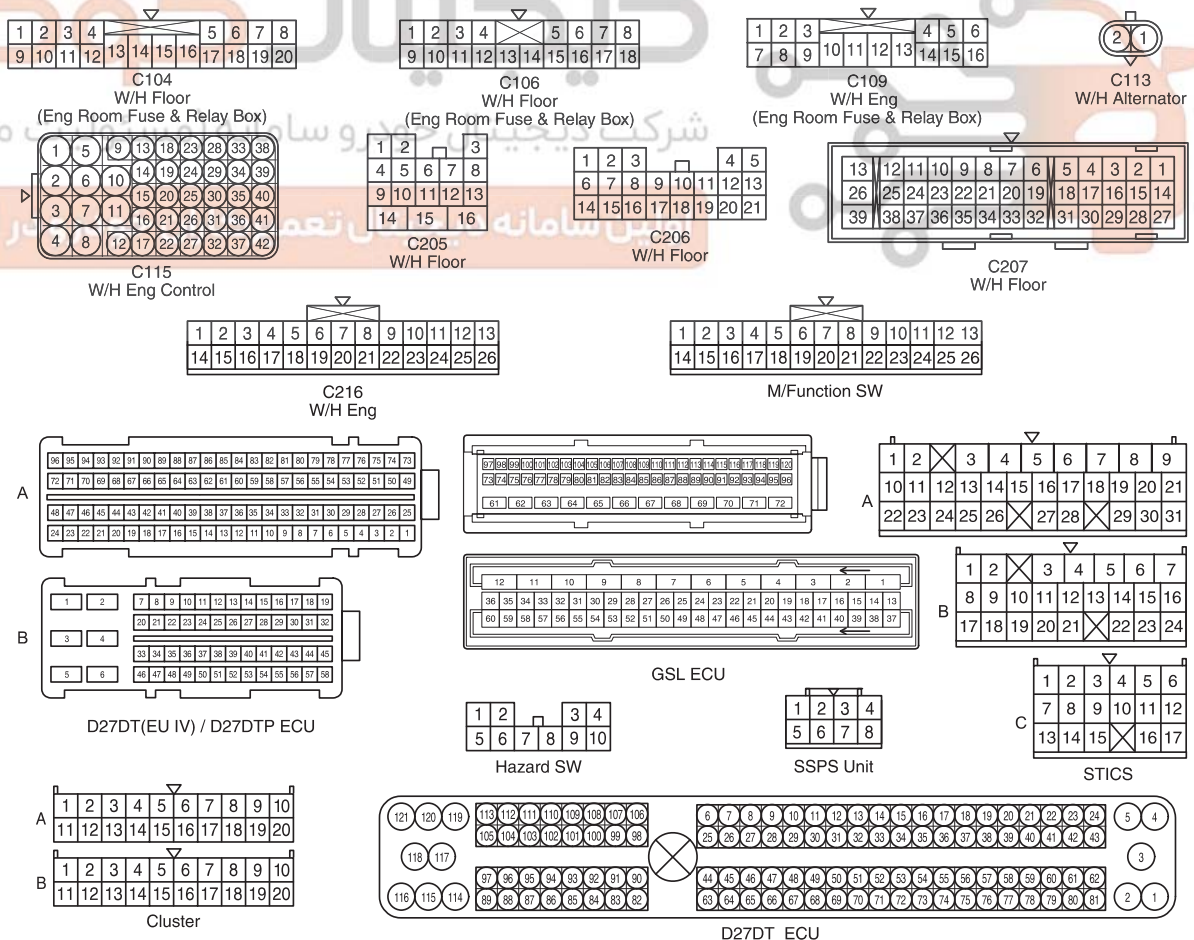(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

Modification basis	
Application basis	
Affected VIN	

CIRCUIT

REXTON 2010.01