


Front Wiper & Washer

Front Wiper & Washer (1)


SD981-1



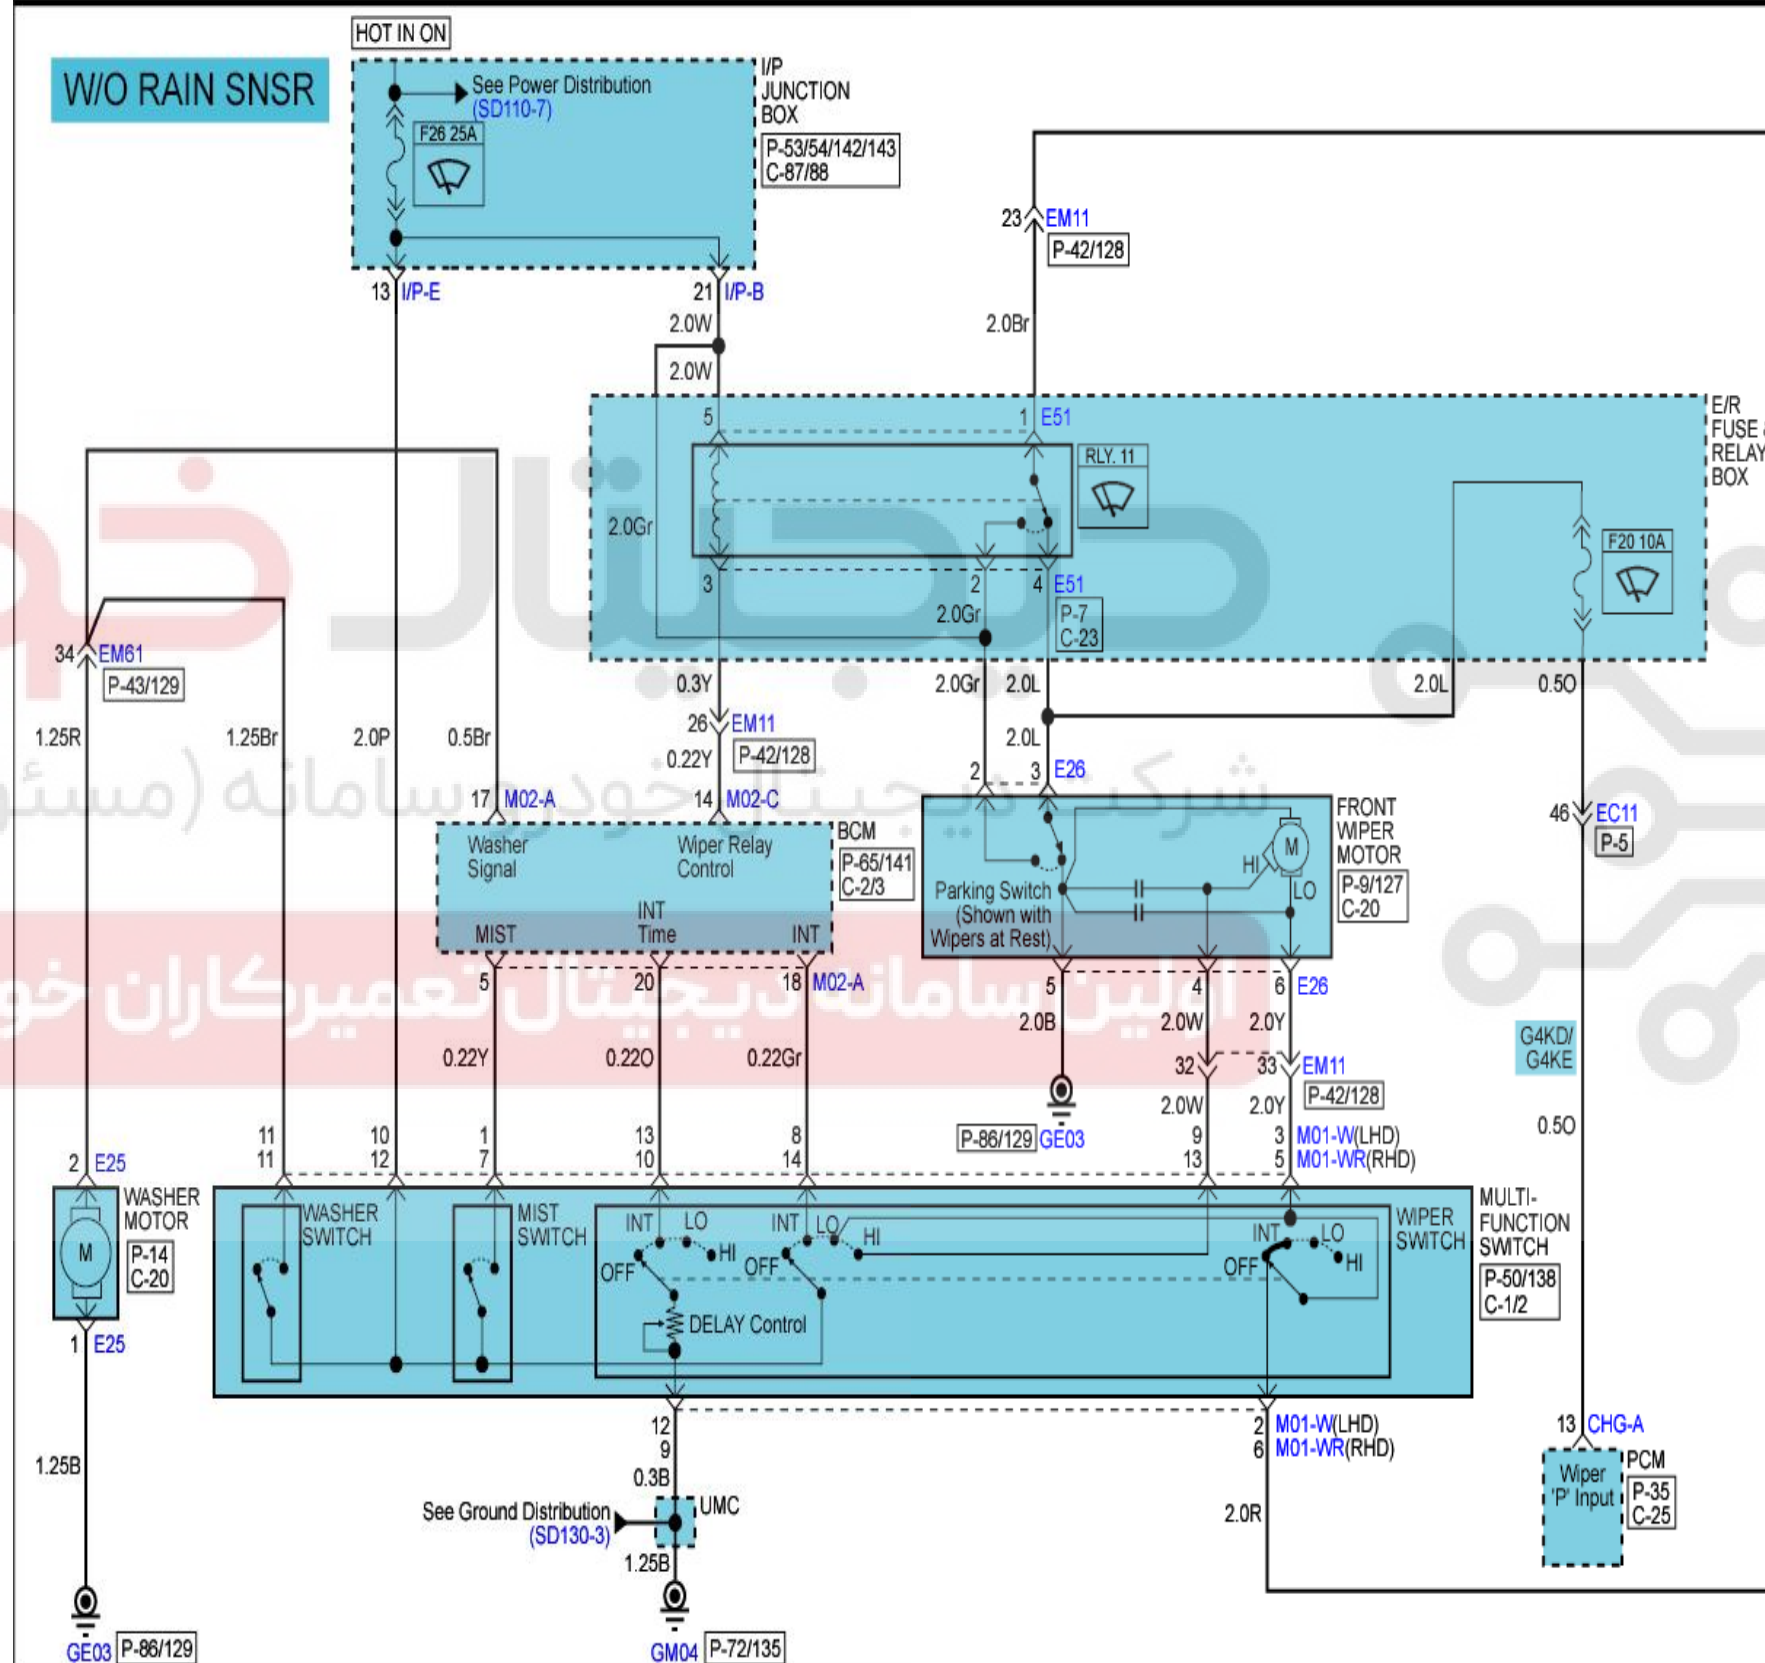

Connector	Component	Component2	Harness
E26 Front Wiper Motor - 6 Female / Black (KUM_NMWP_06F_B) 			
1. —	—	4. W	Wiper Switch (High)
2. Gr	I/P Junction Box - F26 25A, E/R Fuse & Relay Box - RLY. 11	5. B	Ground (GE03)
3. L	E/R Fuse & Relay Box - RLY. 11, F20 10A	6. Y	Wiper Switch (Low)

9. Left Side of Cowl Top Panel

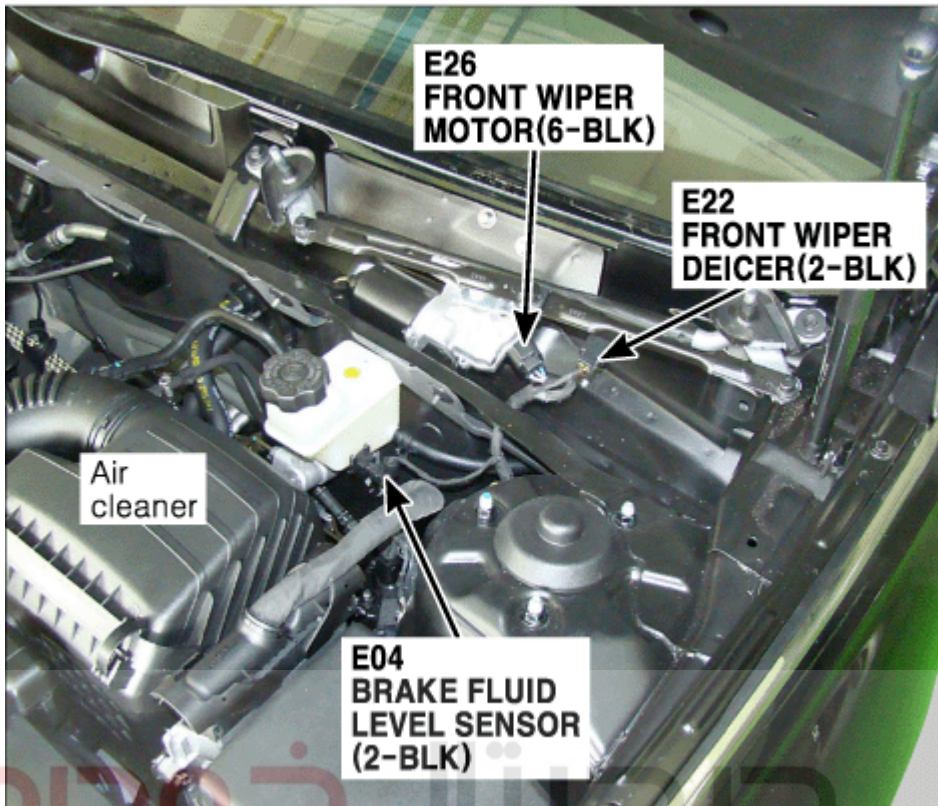

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران






Connector	Component	Harness
-----------	-----------	---------

R03 Rain Sensor

- 8 Female / Black (MLX_118_08F_B)

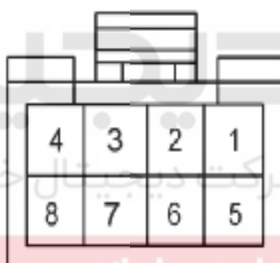


1. —	—	5. P	I/P Junction Box - F27 7.5A
2. L	E/R Fuse & Relay Box - RLY. 11	6. B	Ground (GM03)
3. Br	Multifunction Switch (Washer Switch)	7. Gr	E/R Fuse & Relay Box - RLY. 12
	Washer Motor	8. Y	E/R Fuse & Relay Box - RLY. 11
4. O	Multifunction Switch (Wiper Switch - Auto)		BCM



Connector	Component	Component2	Harness	Harness2
-----------	-----------	------------	---------	----------

M02-C BCM

- 18 Female / White (KET_040III_18F_W)

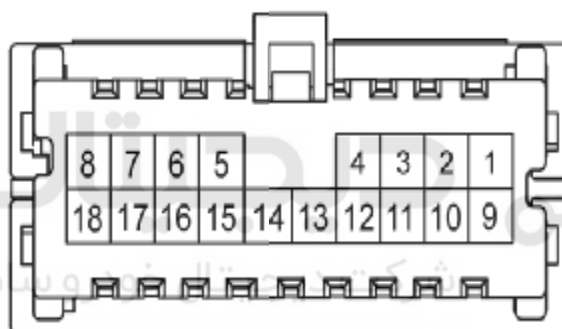

1. Gr	Safety Power Window Module	10. —	—
2. Br	Driver IMS Module (Key IN)	11. G	Glove Box Lamp
3. —	—	12. —	—
4. Y/B	Overhead Console Lamp (Door(-))	13. —	—
5. —	—	14. Y	E/R Fuse & Relay Box - RLY. 11
6. L	Key Solenoid	15. —	—
7. —	—	16. —	—
8. O	Glove Box Switch	17. —	—
9. B/O	Ignition Key ILL.	18. B	Ground (GM04)




Connector	Component	Harness
-----------	-----------	---------

E51 Wiper Relay (RLY. 11)

- 5 Female / N/A (CR05F011)

- Symbol

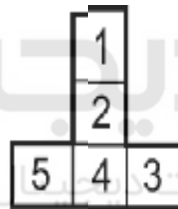

1. Br Wiper Switch (OFF)

2. Gr Wiper Motor,
I/P Junction Box - F26 25A


3. Y BCM (RLY. 11 Control),
[With Rain Sensor]
Rain Sensor (RLY. 11 Control)

4. L

5. W

Wiper Motor,
E/R Fuse & Relay Box - F20 10A,
[With Rain Sensor]
Rain Sensor (Parking Switch)
I/P Junction Box - F26 25A,
Wiper Motor,
[With Rain Sensor]
E/R Fuse & Relay Box - RLY. 12

7. Left Side of Engine Room

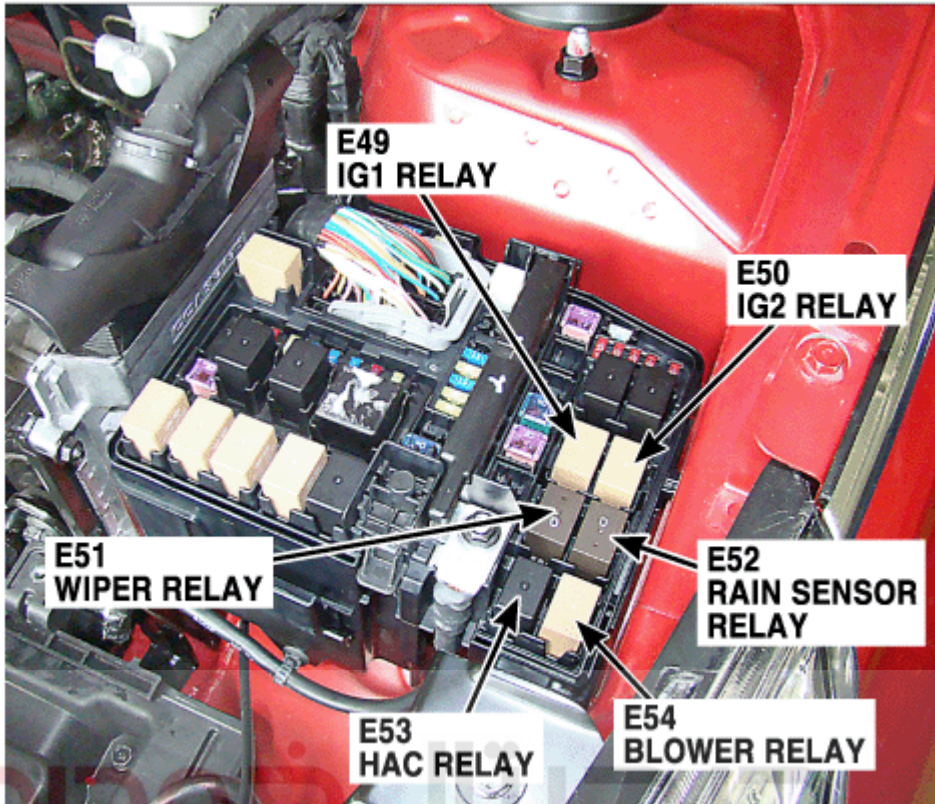

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران






Connector	Component	Harness
-----------	-----------	---------


M01-WR Multifunction Switch (Wiper) (RHD)

- 14 Female / White (KET_N090III_14F_W)

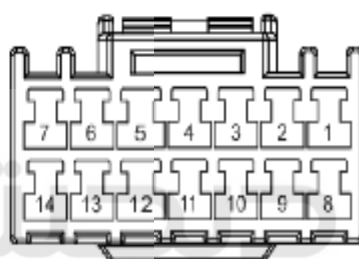

1. —	—	10. O	[W/O Rain Sensor] BCM (INT. Time)
2. —	—		[With Rain Sensor] Rain Sensor (Auto-Volume)
3. —	—	11. Br	Washer Motor ; [W/O Rain Sensor] BCM (Washer Signal) [With Rain Sensor] Rain Sensor (Washer Signal)
4. —	—	12. P	I/P Junction Box - F26 25A
5. Y	Wiper Motor (LO)	13. W	Wiper Motor (HI)
6. R	[W/O Rain Sensor] E/R Fuse & Relay Box - RLY. 11 [With Rain Sensor] E/R Fuse & Relay Box - RLY. 12	14. Gr	[W/O Rain Sensor] BCM (INT.) [With Rain Sensor] Wiper Switch (Delay Control)
7. Y	BCM (Mist)		
8. —	—		
9. W/O	[W/O Rain Sensor]		
B	Ground (GM04)		
Gr	[With Rain Sensor] Wiper Switch (Auto)		

138. Steering Column

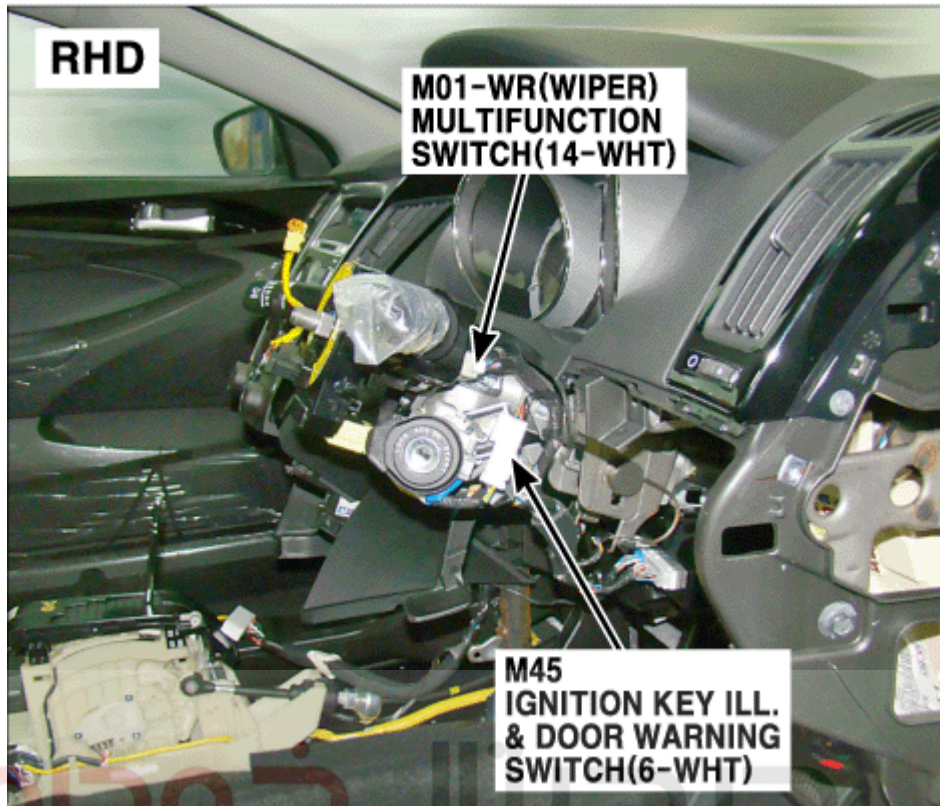

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران







Connector	Component	Component2	Harness	Harness2
-----------	-----------	------------	---------	----------

MP-E MP Junction Box

- 36 Female / Black (AMP_06250LIF_36F_B)

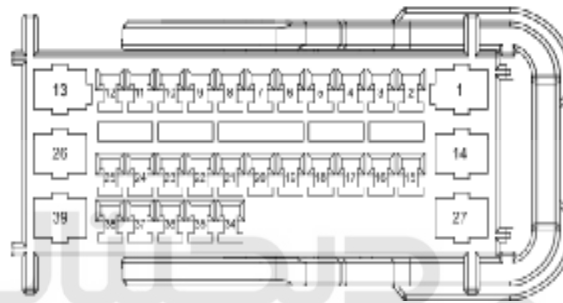

54. Left Side of Dash Panel

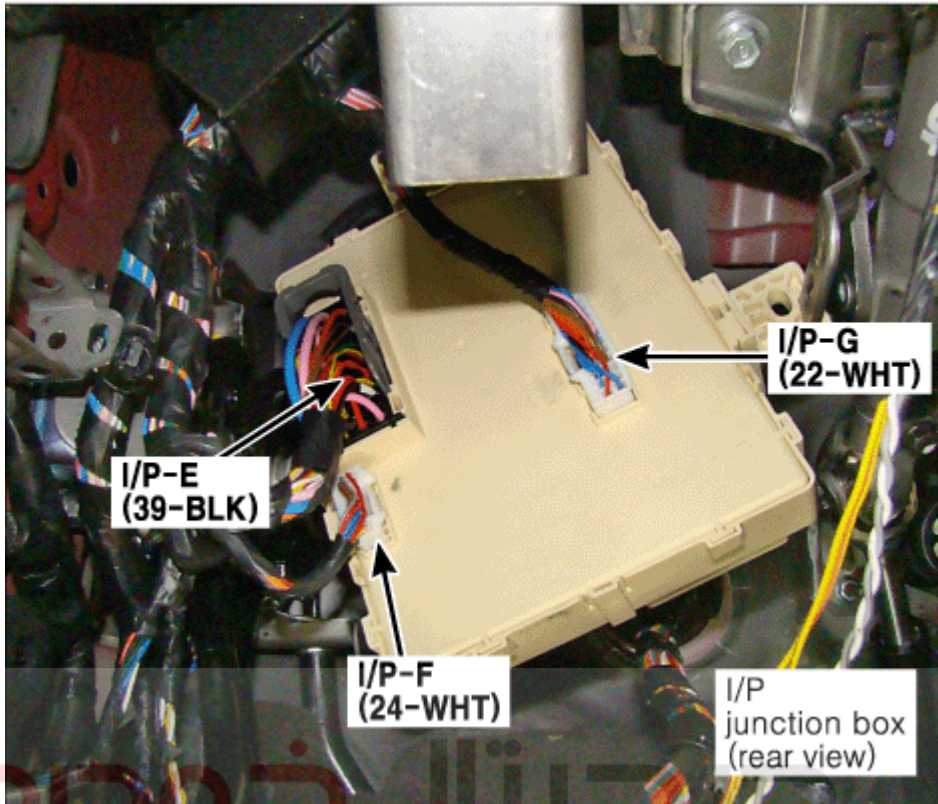

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

