


S.G.N. 8410-10 INTERIOR FUSE BOX

1) Mounting Location



2) Capacity And Designation

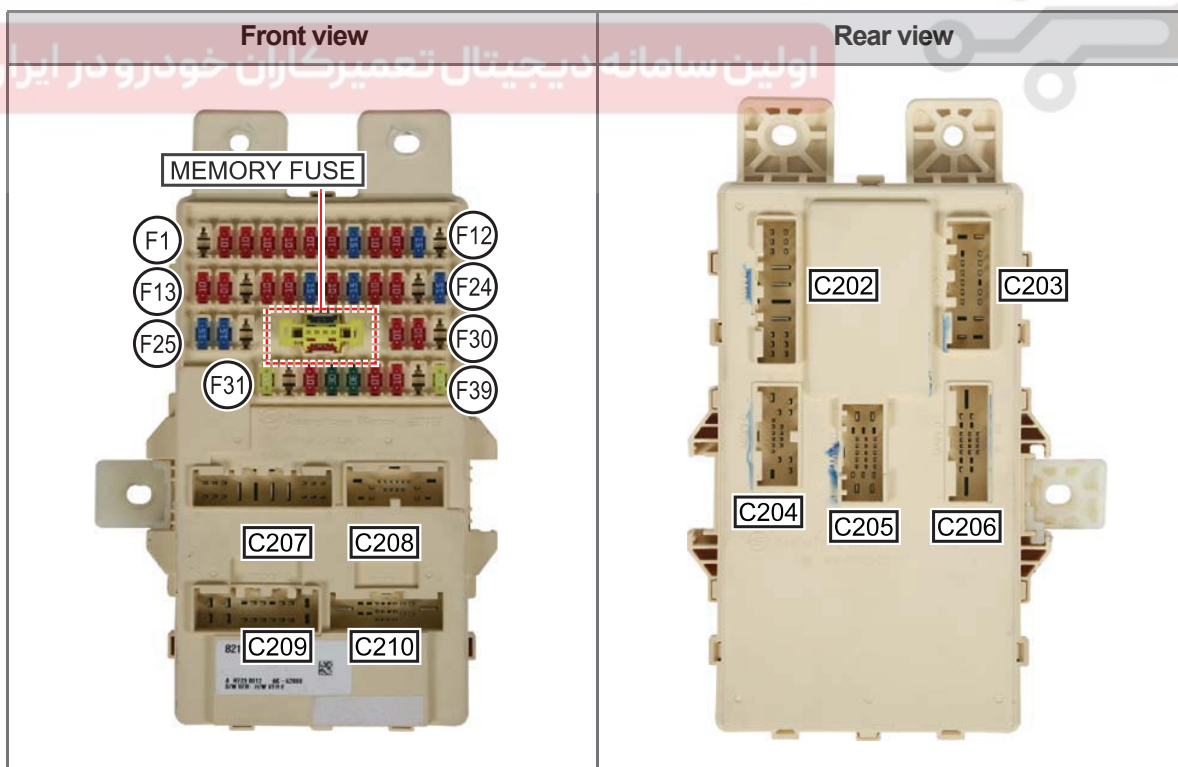

3) Use For Each Fuse Number

Fuse NO.	Capacity	Usage
F1	10A	Start
F2	10A	Insid Mirror
F3	10A	A/Con, Stop Lamp, PTC, Fuel Heater
F4	10A	A/Con, HTR RLY, Converter Heat Pipe
F5	10A	H/Lamp Leveling Device
F6	10A	ABS/ESP
F7	10A	TCU, AWD
F8	15A	FRT Seat HTR, Vent Seat
F9	10A	Audio
F10	10A	Out Side Mirror, Smart Key
F11	15A	Cigar Lighter
F12	-	-
F13	10A	ENG ECU
F14	10A	Bugler Alarm Horn
F15	-	-
F16	10A	Back Up Lamp, PAS
F17	10A	Air Bag
F18	15A	Smart Key
F19	10A	Start Button, Diagnosis
F20	15A	RR Seat Heater
F21	10A	HVAC

Fuse NO.	Capacity	Usage
F22	10A	Cluster, BCM, Smart Key
F23	-	-
F24	15A	Heated Steering
F25	15A	Hazard, Turn Signal, Lamp
F26	15A	Door Lock
F27	-	-
F28	10A	RR Wiper
F29	10A	Washer
F30	-	-
F31	20A	Power Outlet (12V)
F32	-	-
F33	10A	RR Fog
F34	25A	Power Window LH
F35	25A	Power Window RH
F36	10A	FRT Fog Lamp
F37	10A	DRL
F38	-	-
F39	20A	Sunroof
MEMORY FUSE	15A	Audio
	10A	Room Lamp, Fold'g Mirror, HVAC , TPMS

4) Relay Integrated To Interior Fuse Box

NO.	Usage	Remark
1	DR Lock/Unlock	TWIN RLY
2	Front Fog Lamp	
3	T/Gate Open	
4	Fold/Unfold Mirr	TWIN RLY
5	Rear Fog Lamp	
6	-	
7	A/T Shift Lock	
8	FRT/RR Washer	TWIN RLY

NO.	Usage	Remark
9	B/Horn	
10	-	
11	Power Window	
12	ACC	Smart Key
13	IGN1	
14	IGN2	
15	Rear Wiper	
16	P/Outlet	
17	Back Up Lamp	

FUSE

BCM

SKM

INSTRUMENT

SWITCH

LAMP

WIPER AND

AVN

MP3 AUDIO

LCD AUDIO

ISG SYSTEM