



8010-01 CLUSTER

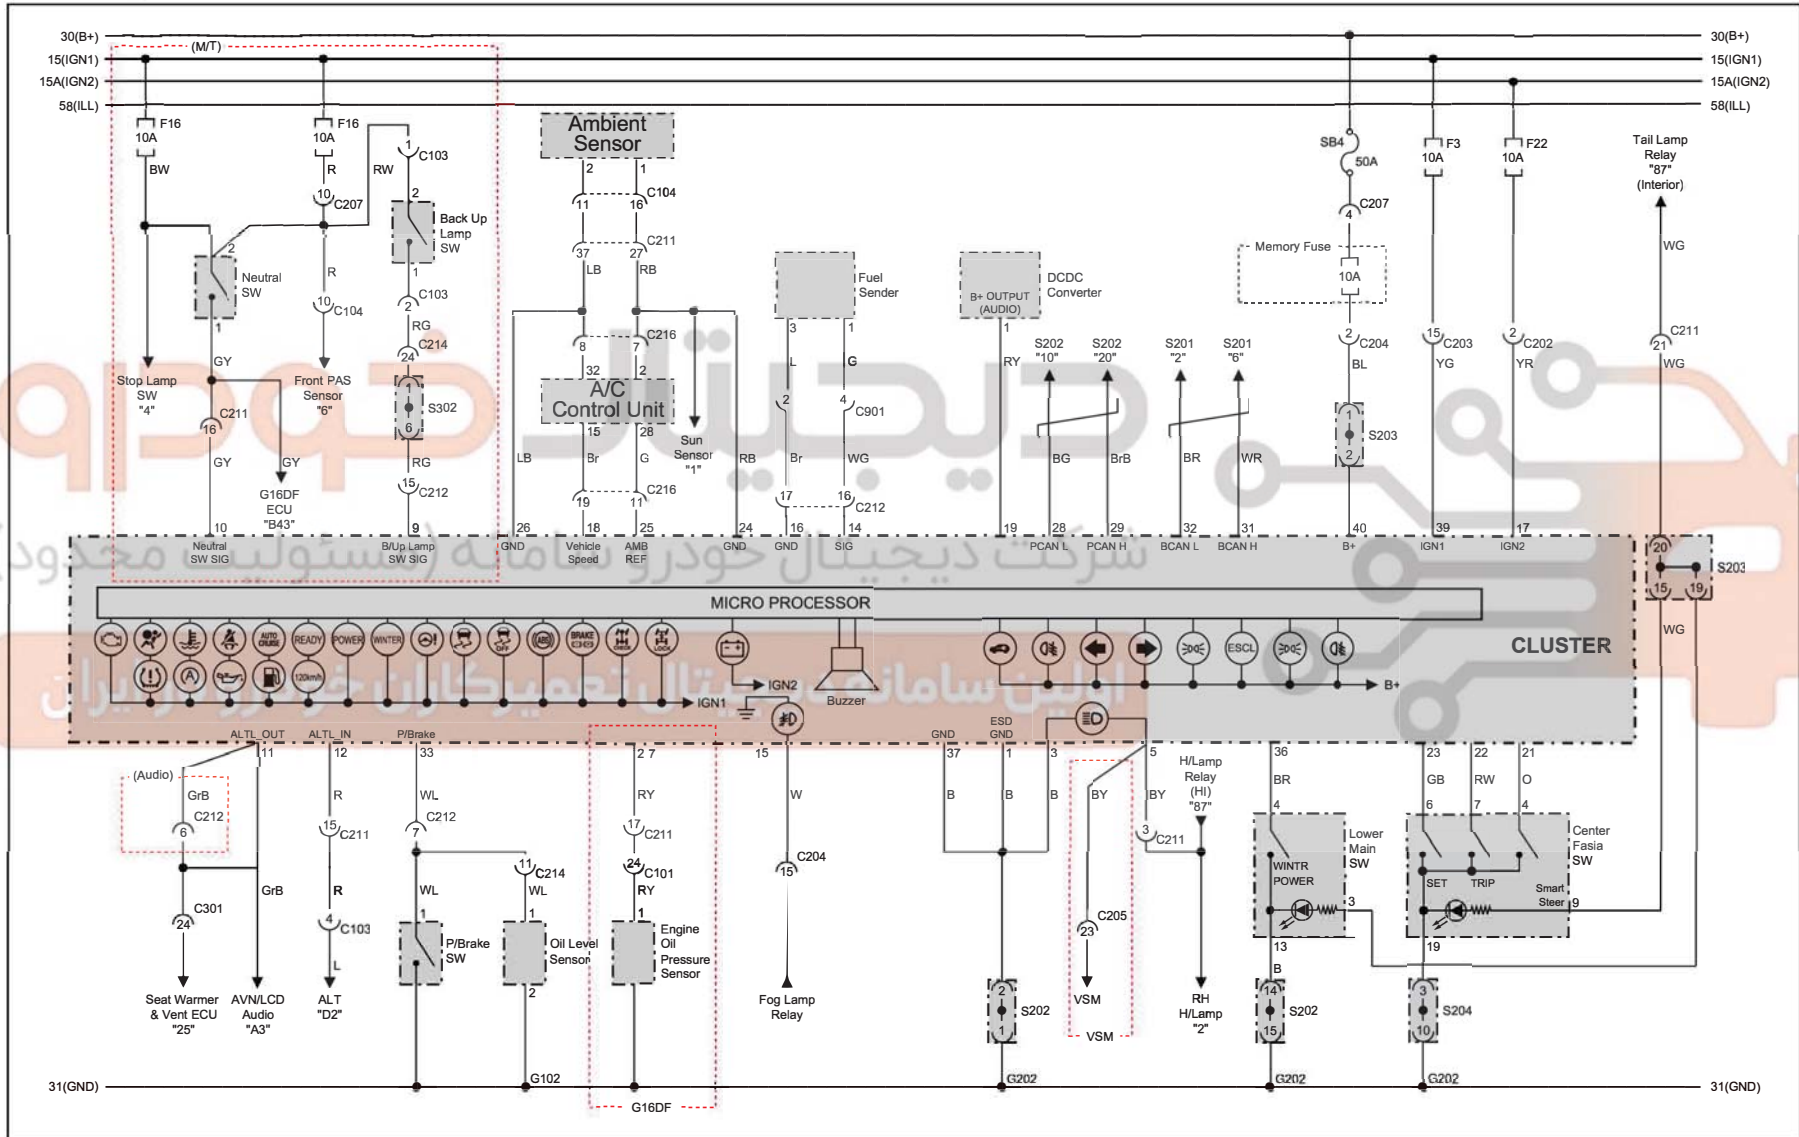

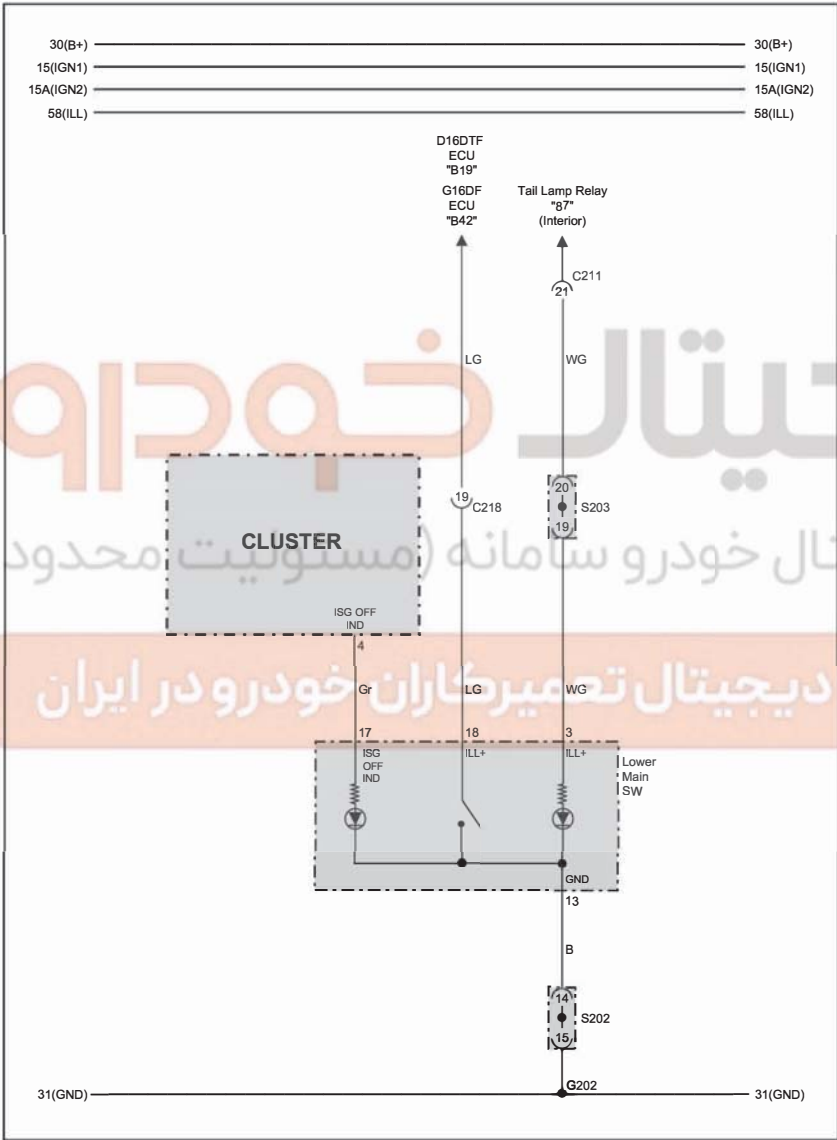

1) CONNECTOR

Connector Number (Pin Number/Color)	Connecting Wiring Harness	Connector Position	Remark
C101	26 Black	W/H Eng Main - W/H Eng Room	Under ECU Bracket
C103	4 Black	W/H Eng Compartment - W/H BATT	Under Battery Tray
C104	20 Black	W/H Front END Module - W/H Eng Room	Behind LH Fog Lamp
C201	18 White	W/H IP (Main) - W/H Roof	Inside of LH A-Pillar
C202	16 White	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box
C203	18 White	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box
C204	18 White	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box
C205	25 White	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box
C207	16 White	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box
C211	41 White	W/H Eng Room - W/H IP (Main)	Inside of Driver Cowl Side
C212	46 Black	W/H IP (Main) - W/H Floor	Inside of Driver Cowl Side
C214	25 White	W/H Eng Room - W/H Floor	Inside of Driver Cowl Side
C216	20 Colorless	W/H IP (Main) - W/H Aircon	Behind Audio
C218	22 White	W/H Eng Room - W/H IP (Main)	Inside of Front Passenger Cowl Side
C301	26 White	W/H Floor - W/H Driver Seat	Under Driver Seat
C901	4 Black	W/H Floor - W/H Fuel Sende	In front of Fuel Tank

2) GROUND

Connector Number	Connecting Wiring Harness	Connecting Position	Remark
G102	W/H Eng Room	Above External Buzzer (back)	LH headlamp/side repeater, stop lamp switch, wiper motor
G202	W/H IP (Main)	Rear LH of Cluster (IP Panel Frame)	S202, S204, IP Fuse

3) SPLICE PACK

Connector Number (Pin Number)	Connecting Wiring Harness	Connector Position	Remark
S202	20	W/H IP (Main)	Rear RH of IP
S203	20	W/H IP (Main)	Rear LH of Front Passenger Air Bag
S204	20	W/H IP (Main)	Rear Center of Front Passenger Air Bag
S302	14	W/H Floor	Under RH of Driver Seat

ENGINE

CHASSIS

ELECTRICAL

4) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

