




15. ELECTRIC OUTSIDE MIRROR & FOLDING (W/O MEMORY) 8510

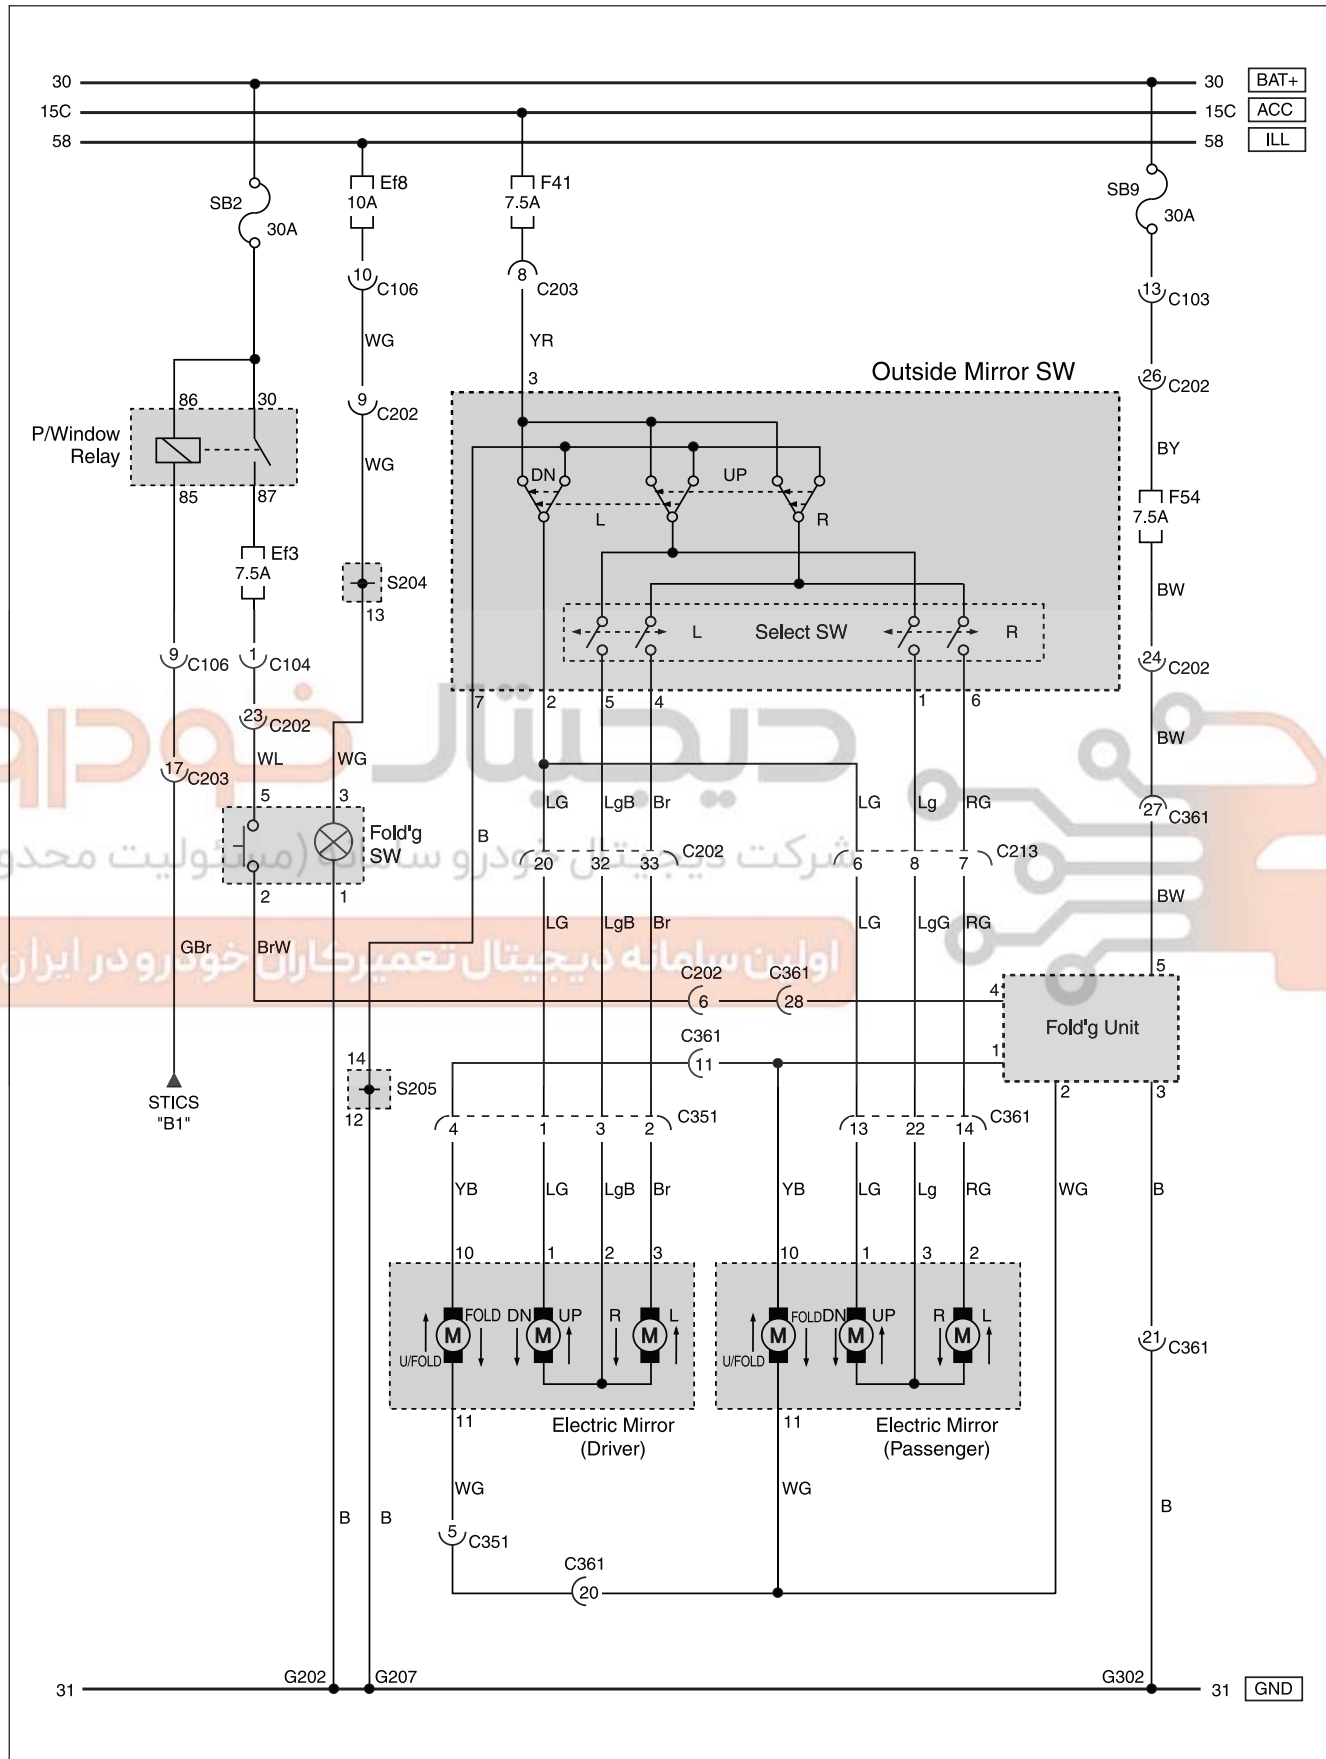

A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Hoder	
C351 (33Pin, White)	W/H Floor - W/H Driver DR	Under the LH "A" Pillar	
C361 (33Pin, White)	W/H Floor - W/H Passenger DR	Under the LH "A" Pillar	
G202	W/H Main	Under the Driver "A" Pillar	
G207	W/H Main	Inner the Passenger Cowl Side PNL	
G302	W/H Floor	Under the Passenger Seat	
S205 (14Pin, Black)	W/H Main	Upper the PTC Protector	GND


B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C103
W/H Floor
(Eng Room Fuse & Relay Box)




C106
W/H Floor
(Eng Room Fuse & Relay Box)




C202
W/H Floor






C213
W/H Floor




C351
W/H Driver DR




C361
W/H Passenger DR

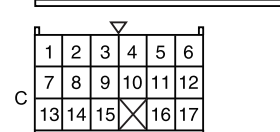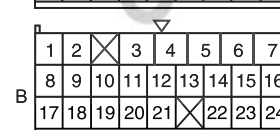


STICS



O/S Mirror SW



Fold'g SW



O/S Mirror



Fold'g Unit