




6) FRT WIPER/WASHER & RR WASHER

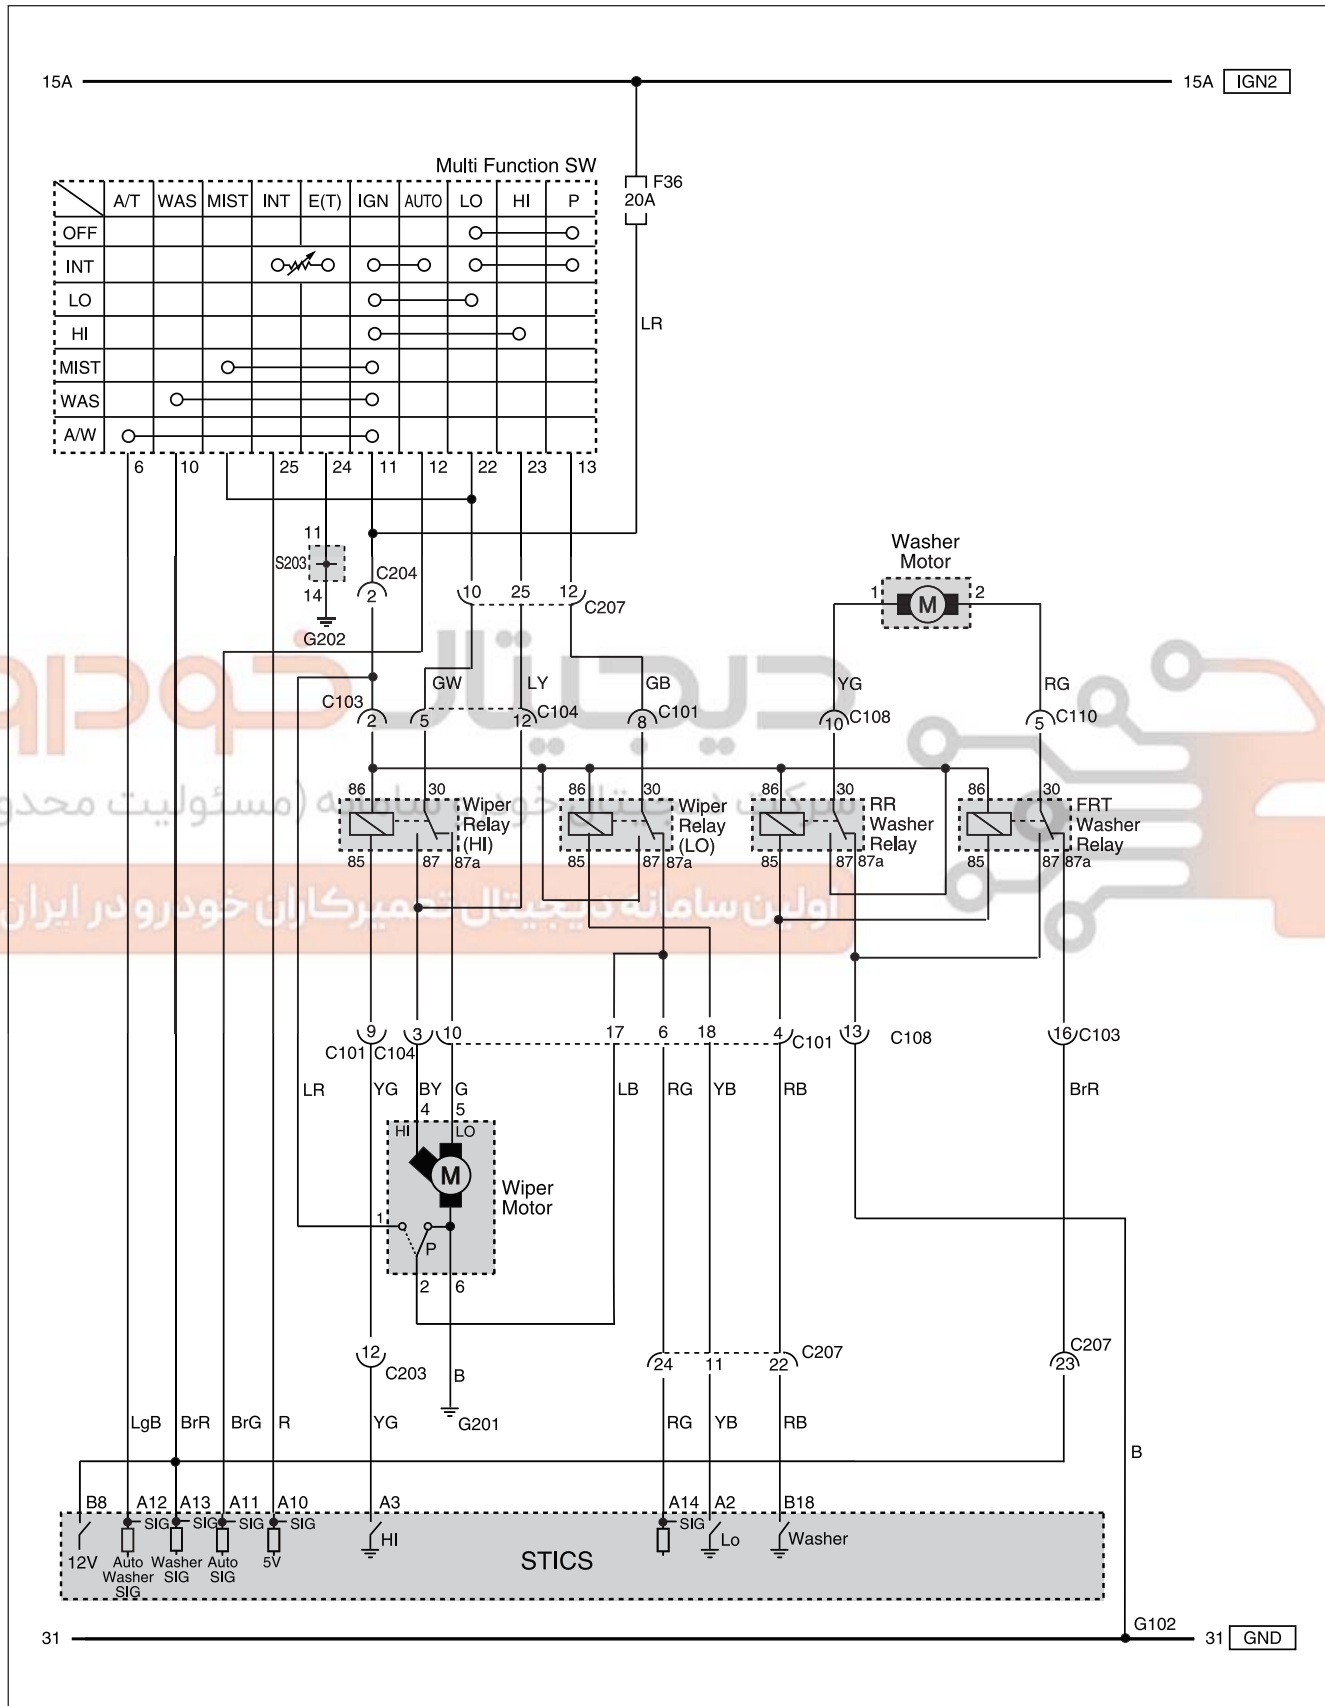

A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C104 (14Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G202	W/H Main	Under the Driver "A" Pillar	
S203 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

