

FUSE & RELAY INFORMATION EECB4FE1



FUSE & RELAY INFORMATION (1)

SD100-1

< FRONT >

I/P JUNCTION BOX

< REAR >

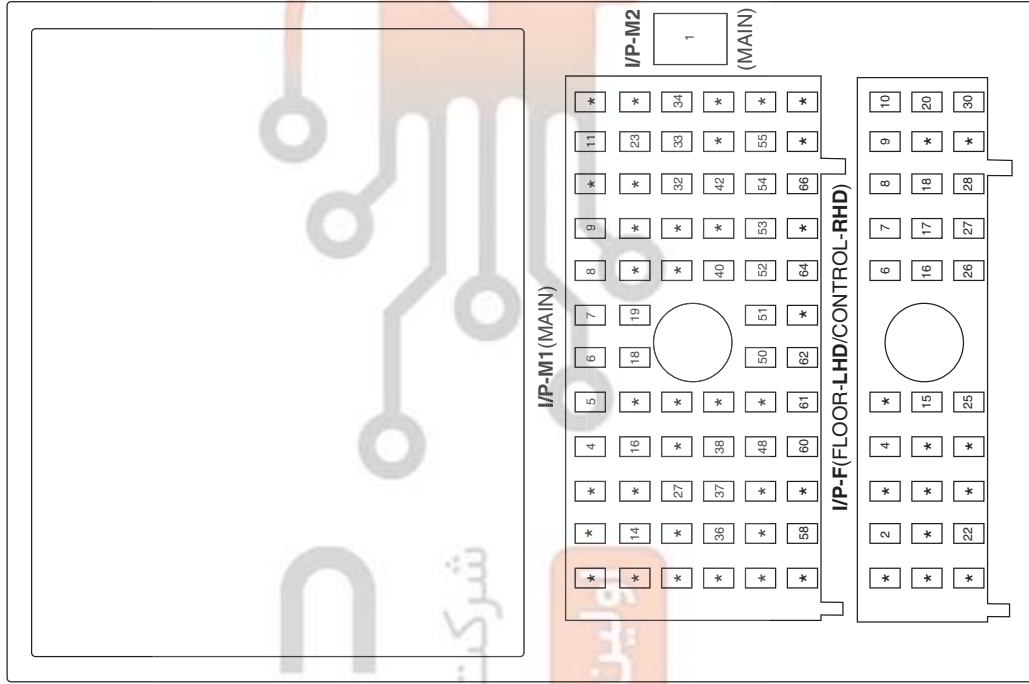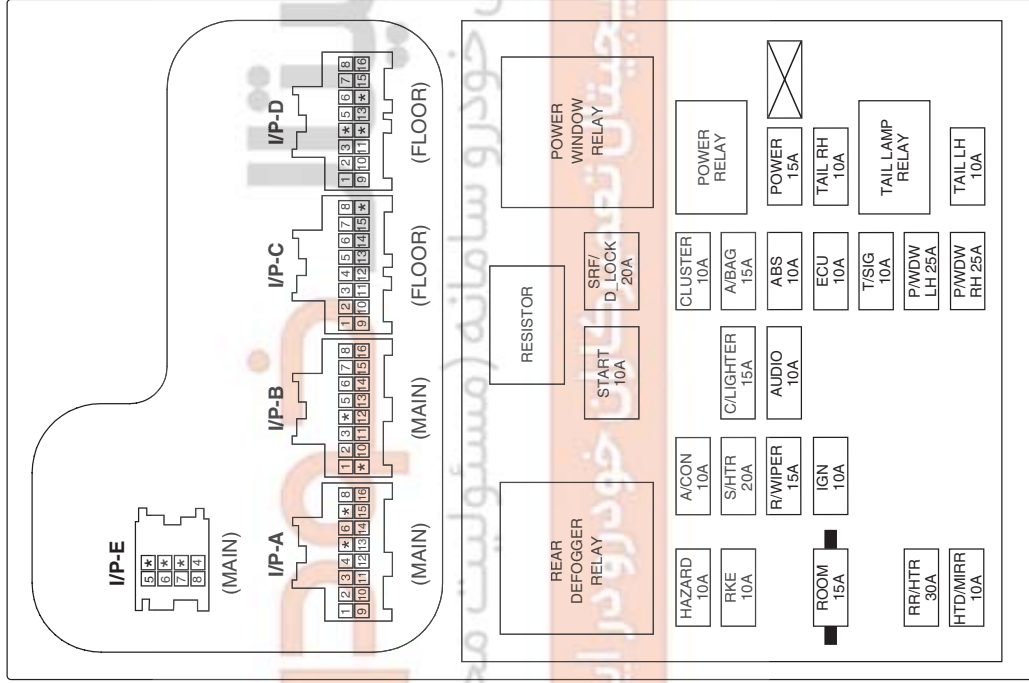

※ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (2)

SD100-2

CIRCUIT

FUSE	(A)	Circuit Protected
HAZARD	10A	Instrument Cluster, Rear Combination Lamp, Side Repeater Lamp, Front Turn Signal Lamp, BCM
RKE	10A	Burglar Alarm Horn, Keyless Entry Receiver, BCM
POWER CONNECTOR (ROOM)	15A	Map Lamp, Room Lamp, Sunroof Switch, Instrument Cluster, Data Link Connector, Door Warning Switch, A/C Control Module, Digital Clock, Audio, Power Antenna, Luggage Lamp, Door Lamp, BCM
RR/HTR	30A	Rear Defogger
HTD/MIRR	10A	Power Outside Mirror Motor, A/C Control Module, ECM (G4FC), Instrument Cluster
A/CON	10A	Electro Chromic Mirror, Sunroof Motor, Blower Relay, A/C Control Module, Active Incar & Humidity Sensor, BCM
S/HTR	20A	Front Seat Warmer Switch
R/WIPER	15A	Multifunction Switch, Rear Wiper Relay, Rear Wiper Motor
IGN	10A	Head Lamp Relay (HIGH/LOW), AQS Sensor, Diesel Box (Fuel Filter Heater Relay)
START	10A	BCM, Start Relay, Ignition Lock Switch, Transaxle Range Switch
C/LIGHTER	15A	Power Relay, Cigarette Lighter
AUDIO	10A	Audio, Digital Clock, Power Outside Mirror Switch
SRF/D_LOCK	20A	BCM, Sunroof Motor
CLUSTER	10A	Instrument Cluster, TCS Switch, Auto Light Control Module, BCM, Generator, Resistor
A/BAG	15A	Instrument Cluster, SRS Control Module, PAB Cut Off Switch
ABS	10A	ABS Control Module
ECU	10A	Multifunction Switch (G4GC), Pulse Generator, Transaxle Range Switch, Back-up Lamp Switch, Vehicle Speed Sensor, Fuel Filter Warning Switch (D4FB), Cruise Control Module (G4GC), Stop Lamp Switch (G4GC), Condenser (G4FC), Ignition Coil #1-#4 (G4FC), Air Flow Sensor (D4FB), ECM, TCM
T/SIG	10A	Multifunction Switch
P/WDW LH	25A	Rear Power Window Switch LH, Safety Power Window Module, Safety Power Window Switch, Power Window Main Switch
P/WDW RH	25A	Power Window Main Switch, Safety Power Window Switch, Rear Power Window Switch RH, Passenger Power Window Switch
POWER	15A	Power Outlet
TAIL RH	10A	Front Position Lamp RH, SHUNT, DRL Relay, Front Fog Lamp Relay, Rear Combination Lamp RH
TAIL LH	10A	License Lamp, Rear Combination Lamp LH, Front Position Lamp LH

※ USE THE DESIGNATED FUSE ONLY