

RT-2

Restraint

General Information

General Information

The supplemental restraint system (SRS) is designed to supplement the seat belt to help reduce the risk or severity of injury to the driver and passenger by activating and deploying the driver, passenger, side airbag and belt pretensioner in certain frontal or side collisions.

The SRS (Airbag) consists of ; a driver side airbag module located in the center of the steering wheel, which contains the folded cushion and an inflator unit ; a passenger side airbag module located in the passenger side crash pad contains the folded cushion assembled with inflator unit ; side airbag modules located in the front seat contain the folded cushion and an inflator unit ; curtain airbag modules located inside of the headliner which contains folded cushions and inflator units. The impact sensing function of the SRSCM is carried out by electronic accelerometer that continuously measure the vehicle's acceleration and delivers a corresponding signal through amplifying and filtering circuitry to the microprocessor.

SRSCM (SRS Control Module)

SRSCM will detect front impact with front impact sensor, and side impact with side impact sensor, and determine airbag module deployment.

1. DC/DC converter: DC/DC converter in power supply unit includes up/down transformer converter, and provide ignition voltage for 2 front airbag ignition circuits and the internal operation voltage of the SRSCM. If the internal operation voltage is below critical value setting, it will perform resetting.
2. Back up power supply: SRSCM has separate back up power supply, that will supply deployment energy instantly in low voltage condition or upon power failure by front crash.
3. Self diagnosis: SRSCM will constantly monitor current SRS operation status and detect system failure while vehicle power supply is on, system failure may be checked with trouble codes using GDS.

4. Airbag warning lamp on: Upon detecting error, the module will transmit signal to SRSCM indicator lamp located at cluster. MIL lamp will indicate driver SRS error. Upon ignition key on, SRS lamp will turn on for about six seconds.
5. Trouble code registration: Upon error occurrence in system, SRSCM will store DTC corresponding to the error. DTC can be cleared only by GDS. However, if an internal fault code is logged or if a crash is recorded the fault clearing should not happen.
6. Self diagnostic connector: Data stored in SRSCM memory will be output to GDS or other external output devices through connector located below driver side crash pad.
7. Once airbag is deployed, SRSCM should not be used again but replaced.
8. SRSCM will determine whether passenger put on seat belt by the signal from built-in switch in seat belt buckle, and deploy front seat airbag at each set crash speed.
9. Side airbag deployment will be determined by SRSCM that will detect satellite sensor impact signal upon side crash, irrespective to seat belt condition.
10. Vehicle on an even surface not to be damaged the rollover sensor.
Ignition switched off during the SRSCM repair procedure.
11. Check for the normal operation of SRSCM after repair procedure.

General Information

RT-3



Specification

Item	Resistance (Ω)
Driver Airbag (DAB)	1.5 ~ 6.0
Passenger Airbag (PAB)	1.5 ~ 6.0
Side Airbag (SAB)	1.5 ~ 6.0
Curtain Airbag (CAB)	1.5 ~ 6.0
Seat Belt Pretensioner (BPT)	1.5 ~ 6.0
Anchor Pretensioner (APT)	1.5 ~ 6.0

Tightening Torques





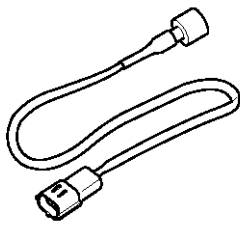
Item	N.m	kgf.m	lb-ft
Driver Airbag (DAB)	7.8 ~ 10.8	0.8 ~ 1.1	5.8 ~ 8.0
Passenger Airbag (PAB)	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7
Side Airbag (SAB)	7.0 ~ 9.0	0.7 ~ 0.9	5.1 ~ 6.6
Curtain Airbag (CAB)	7.0 ~ 9.0	0.7 ~ 0.9	5.1 ~ 6.6
Seat Belt Anchor Bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
SRSCM	6.8 ~ 9.2	0.7 ~ 0.9	5.0 ~ 6.8
Front Impact Sensor (FIS) Mounting Nut	7.0 ~ 9.0	0.7 ~ 0.9	5.1 ~ 6.6
Side Impact Sensor (SIS) Mounting Bolt	7.0 ~ 9.0	0.7 ~ 0.9	5.1 ~ 6.6
Anchor Pretensioner (APT) Mounting Bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8

Special Service Tools

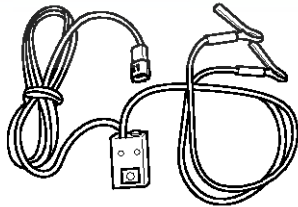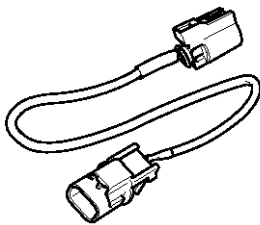Tool(Number and Name)	Illustration	Use
Deployment tool 0957A-34100A	 ARIE500A	Airbag deployment tool.
Deployment adapter 0957A-3F100	 ERKD001F	Use with deployment tool. (SAB)

RT-4

Restraint

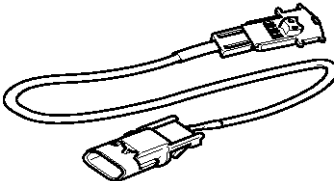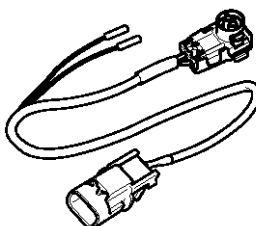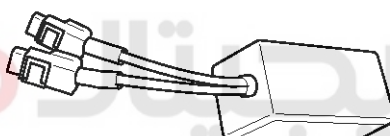Tool(Number and Name)	Illustration	Use
Deployment adapter 0957A-38500	 ARIE500C	Use with deployment tool. (DAB, BPT, APT)
Deployment adapter 0957A-3S100	 SYFRT0300D	Use with deployment tool. (PAB, CAB)
Dummy 0957A-38200	 ARIE500D	Simulator to check the resistance of each wiring harness.
Dummy adapter 0957A-3F000	 ERKD001G	Use with dummy (SAB)
Dummy adapter 0957A-2G000	 ARIE500F	Use with dummy (DAB, PAB, CAB, BPT)

DAB : Driver Airbag

PAB : Passenger Airbag

SAB : Side Airbag

CAB : Curtain Airbag

BPT : Seat Belt Pretensioner

APT : Anchor Pretensioner

General Information

RT-5

Precautions

General Precautions

Please read the following precautions carefully before performing the airbag system service.

Observe the instructions described in this manual, or the airbags could accidentally deploy and cause damage or injuries.

- Except when performing electrical inspections, always turn the ignition switch OFF and disconnect the negative cable from the battery, and wait at least three minutes before beginning work.

NOTICE

The contents in the memory are not erased even if the ignition switch is turned OFF or the battery cables are disconnected from the battery.

- Use the replacement parts which are manufactured to the same standards as the original parts and quality. Do not install used SRS parts from another vehicle. Use only new parts when making SRS repairs.
- Carefully inspect any SRS part before you install it. Do not install any part that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.



ERKD002V


- Before removing any of the SRS parts (including the disconnection of the connectors), always disconnect the SRSCM connector.

Airbag Handling and Storage

Do not disassemble the airbags; it has no serviceable parts. Once an airbag has been deployed, it cannot be repaired or reused.

For temporary storage of the air bag during service, please observe the following precautions.

- Store the removed airbag with the pad surface up.
- Keep free from any oil, grease, detergent, or water to prevent damage to the airbag assembly.

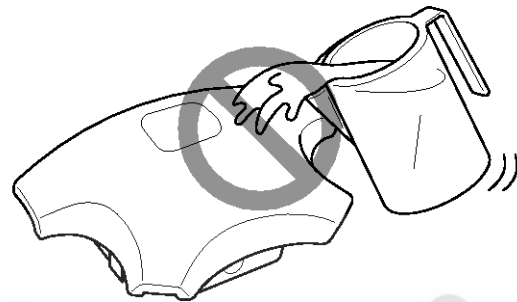

ERKD002Z

- Store the removed airbag on secure, flat surface away from any high heat source (exceeding 85 C/185 F).
- Never perform electrical inspections to the airbags, such as measuring resistance.
- Do not position yourself in front of the airbag assembly during removal, inspection, or replacement.
- Refer to the scrapping procedures for disposal of the damaged airbag.
- Be careful not to bump or impact the SRS unit or the side impact sensors or front impact sensors whenever the ignition switch is ON, wait at least three minutes after the ignition switch is turned OFF before begin work.
- During installation or replacement, be careful not to bump (by impact wrench, hammer, etc.) the area around the SRS unit and the side impact sensor and the front impact sensors. The airbags could accidentally deploy and cause damage or injury.

RT-6


Restraint

- Replace the front airbag module, SRSCM, FIS when deploying the front airbag. Replace the airbag wiring when the airbag wiring get damaged. Replace the side airbag module, the curtain airbag module, SRSCM, SIS when deploying the side airbag. Replace the airbag when the airbag wiring get damaged.
- After a collision in which the airbags or the side air bags did not deploy, inspect for any damage or any deformation on the SRS unit and the side impact sensors. If there is any damage, replace the SRS unit, the front impact sensor and/or the side impact sensors.
- Do not disassemble the SRS unit, the front impact sensor or the side impact sensors.
- Turn the ignition switch OFF, disconnect the battery negative cable and wait at least three minutes before beginning installation or replacement of the SRS unit.
- Be sure the SRS unit, the front impact sensor and side impact sensors are installed securely with the mounting bolts.
- Do not spill water or oil on the SRS unit, or the front impact sensor or the side impact sensors and keep them away from dust.
- Store the SRS unit, the front impact sensor and the side impact sensors in a cool (15 ~ 25 C/ 59 ~ 77 F) and dry (30 ~ 80% relative humidity, no moisture) area.

Wiring Precautions

SRS wiring can be identified by special yellow outer covering. Observe the instructions described in this section.

- Never attempt to modify, splice, or repair SRS wiring. If there is an open or damage in SRS wiring, replace the harness.

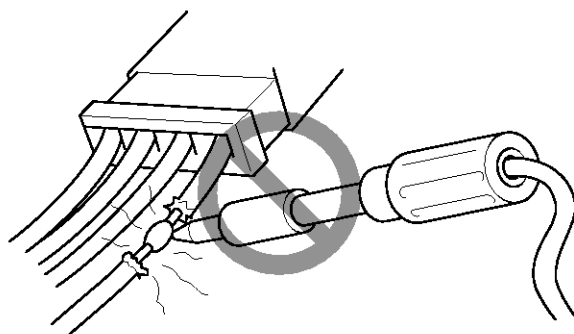

ARIE500I

- Be sure to install the harness wires so that they are not pinched, or interfere with other parts.



ARIE500J


- Make sure all SRS ground locations are clean, and grounds are securely fastened for optimum metal-to-metal contact. Poor grounding can cause intermittent problems that are difficult to diagnose.

General Information

RT-7

Precautions for Electrical Inspections

- When using electrical test equipment, insert the probe of the tester into the wire side of the connector. Do not insert the probe of the tester into the terminal side of the connector, and do not tamper with the connector.

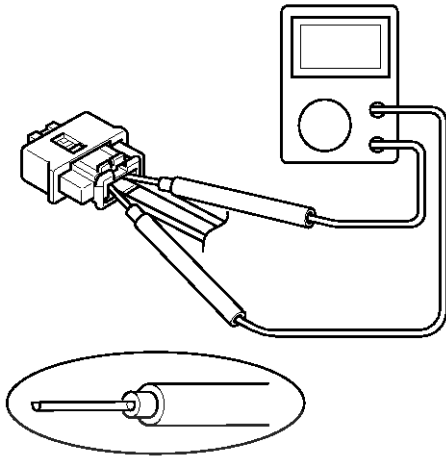

ERKD002W

- Use a u-shaped probe. Do not insert the probe forcibly.
- Use specified service connectors for troubleshooting. Using improper tools could cause an error in inspection due to poor metal contact.

Spring-laded Lock Connector


Some SRS system connectors have a spring-loaded lock.

Airbag Connector

Disconnecting

To release the lock, pull the spring-loaded sleeve (A) and the slider (B), while holding the opposite half of the connector.


Pull the connector halves apart. Be sure to pull on the sleeve and not on the connector half.

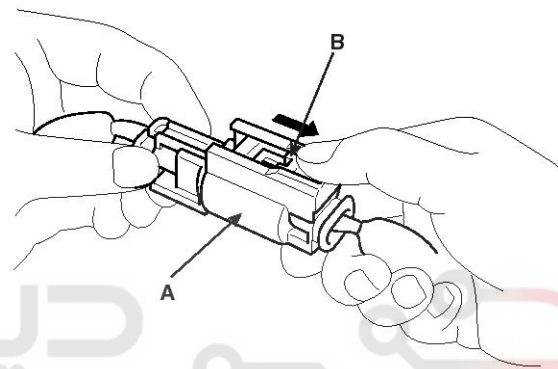

ERKD511D

Connecting

Hold both connector halves and press firmly until the projection (C) of the sleeve-side connector clicks to lock.

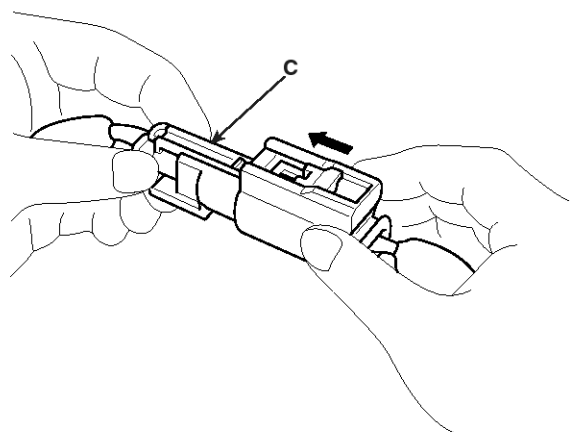

ERKD511E

RT-8

Restraint

Warning Lamp Activation


Warning Lamp Behavior after Ignition On

As soon as the operating voltage is applied to the SRSCM ignition input, the SRSCM activates the warning lamp for a bulb check.

The lamp shall turn on for 6 seconds during the initialization phase and be turned off afterward.

However, in order to indicate the driver, the warning lamp shall turn on for 6 seconds and off for one second then on continuously after the operating voltage is applied if any active fault exists.

1. Active fault.

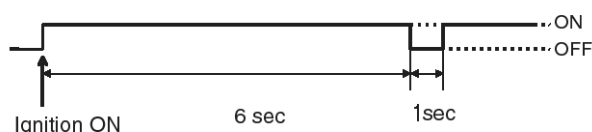


2. Normal or historical fault only exist.



- When turning the ignition switch ON during variant coding (EOL) mode, the airbag warning lamp is turned on and blinks at intervals of 1 second till the coding is completed.

In case the variant coding is normally completed, the airbag warning lamp is turned on for 6 seconds, and then turned off. Otherwise the airbag warning lamp continuously blinks at intervals of 1 second.

1) In case the variant coding is normally completed

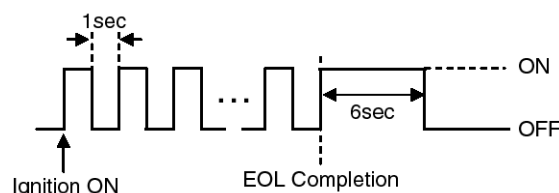

2) In case the variant coding is not completed



When there is current fault in airbag system or SRSCM internal fault, the variant coding (EOL) can't be completed. In this case, do the variant coding (EOL) procedure again after troubleshooting with the GDS.

SRSCM Independent Warning Lamp Activation

There are certain fault conditions in which the SRSCM cannot function and thus cannot control the operation of the standard warning lamp. In these cases, the standard warning lamp is directly activated by appropriate circuitry that operates independently of the SRSCM. These cases are:

- Loss of battery supply to the SRSCM : warning lamp turned on continuously.
- Loss of internal operating voltage : warning lamp turned on continuously.
- Loss of Microprocessor operation : warning lamp turned on continuously.
- SRSCM not connected : warning lamp turned on continuously.

General Information

RT-9

Component Replacement After Deployment

NOTICE

Before doing any SRS repairs, use the GDS Pro to check for DTCs. Refer to the Diagnostic Trouble Code list for repairing of the related DTCs.

When the front airbag(s) deployed after a collision, replace the following items.

- SRSCM
- Deployed airbag(s)
- Seat belt pretensioner(s)
- Front impact sensors
- SRS wiring harnesses
- Inspect the clock spring for heat damage.

If any damage found, replace the clock spring.

When the side/curtain airbag(s) deployed after a collision, replace the following items.

- SRSCM
- Deployed airbag(s)
- Side impact sensor(s) for the deployed side(s)
- SRS wiring harnesses
- Seat belt pretensioner(s)

After the vehicle is completely repaired, confirm the SRS airbag system is OK.

- Turn the ignition switch ON; the SRS indicator should come on for about six seconds and then go off.




اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

RT-10

Restraint

Components (1)

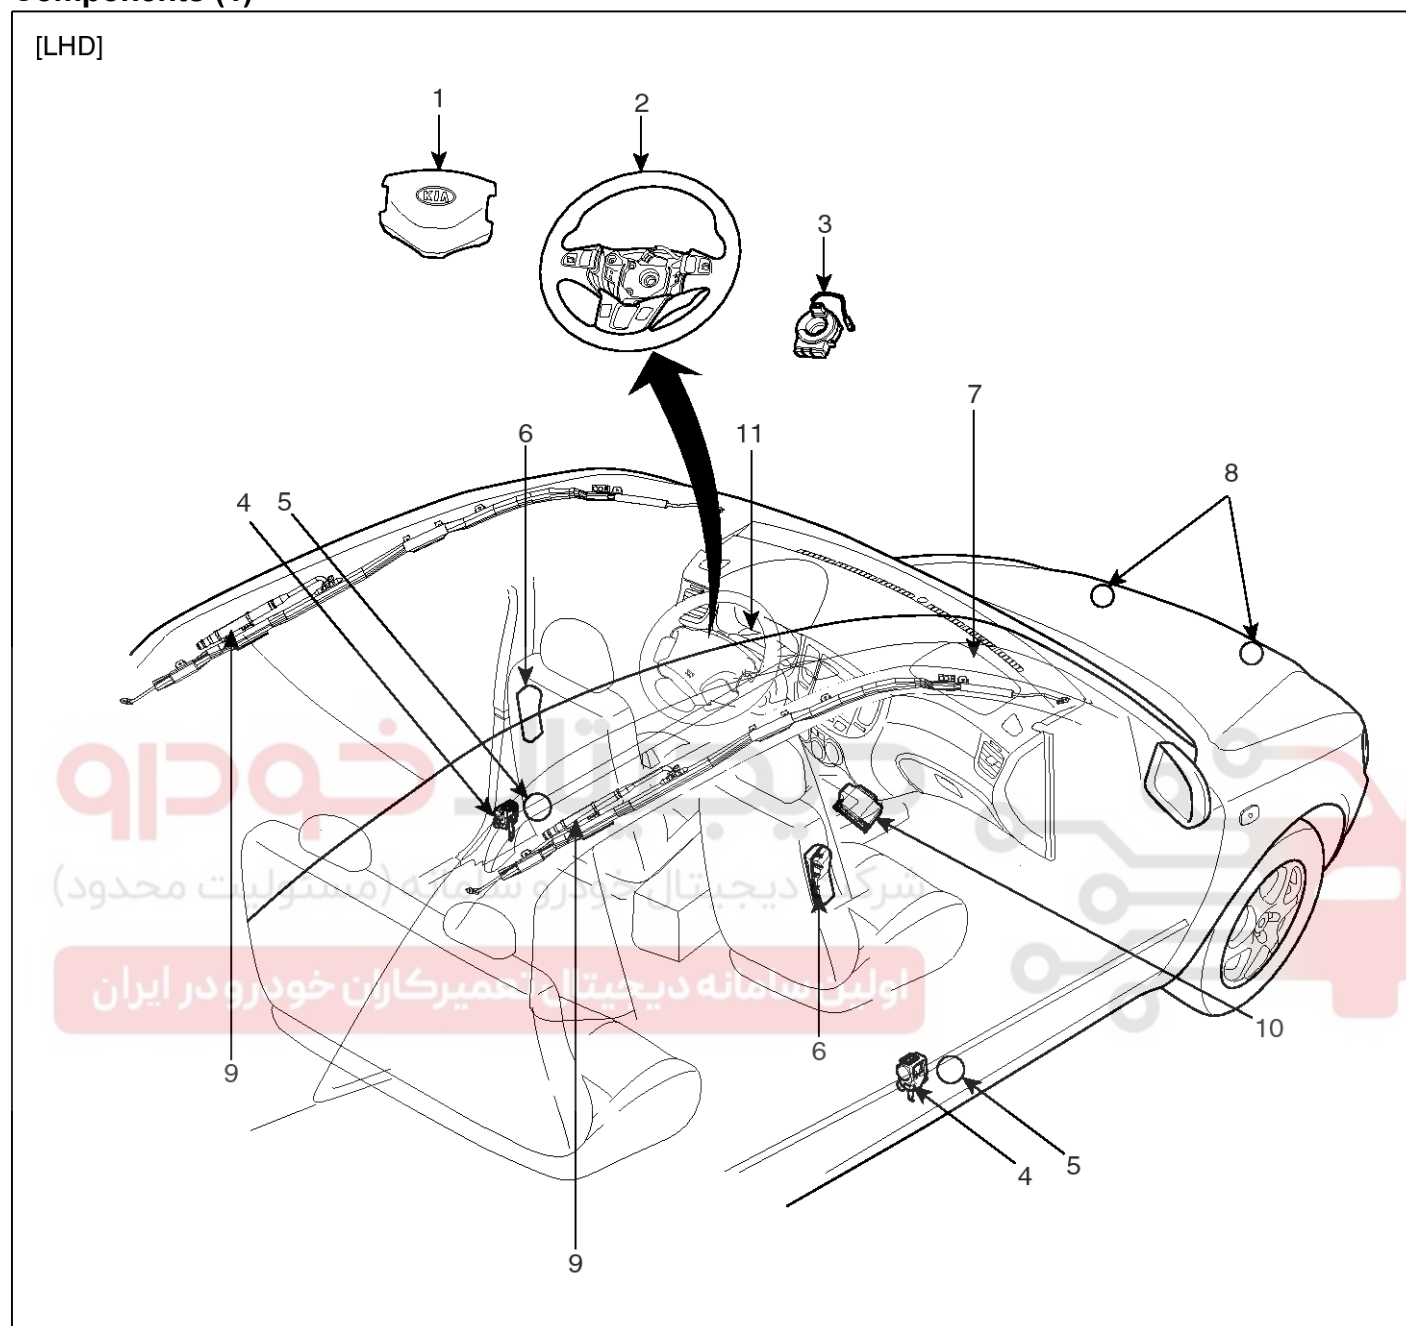

SSLRT1001L

1. Driver Airbag (DAB)
2. Steering Wheel
3. Clock Spring
4. Seat Belt Pretensioner (BPT)
5. Side Impact Sensor (SIS)
6. Side Airbag (SAB)


7. Passenger Airbag (PAB)
8. Front Impact Sensor (FIS)
9. Curtain Airbag (CAB)
10. Supplemental Restraint System Control Module (SRSCM)
11. Airbag Warning Lamp

General Information

RT-11

Components (2)

[RHD]

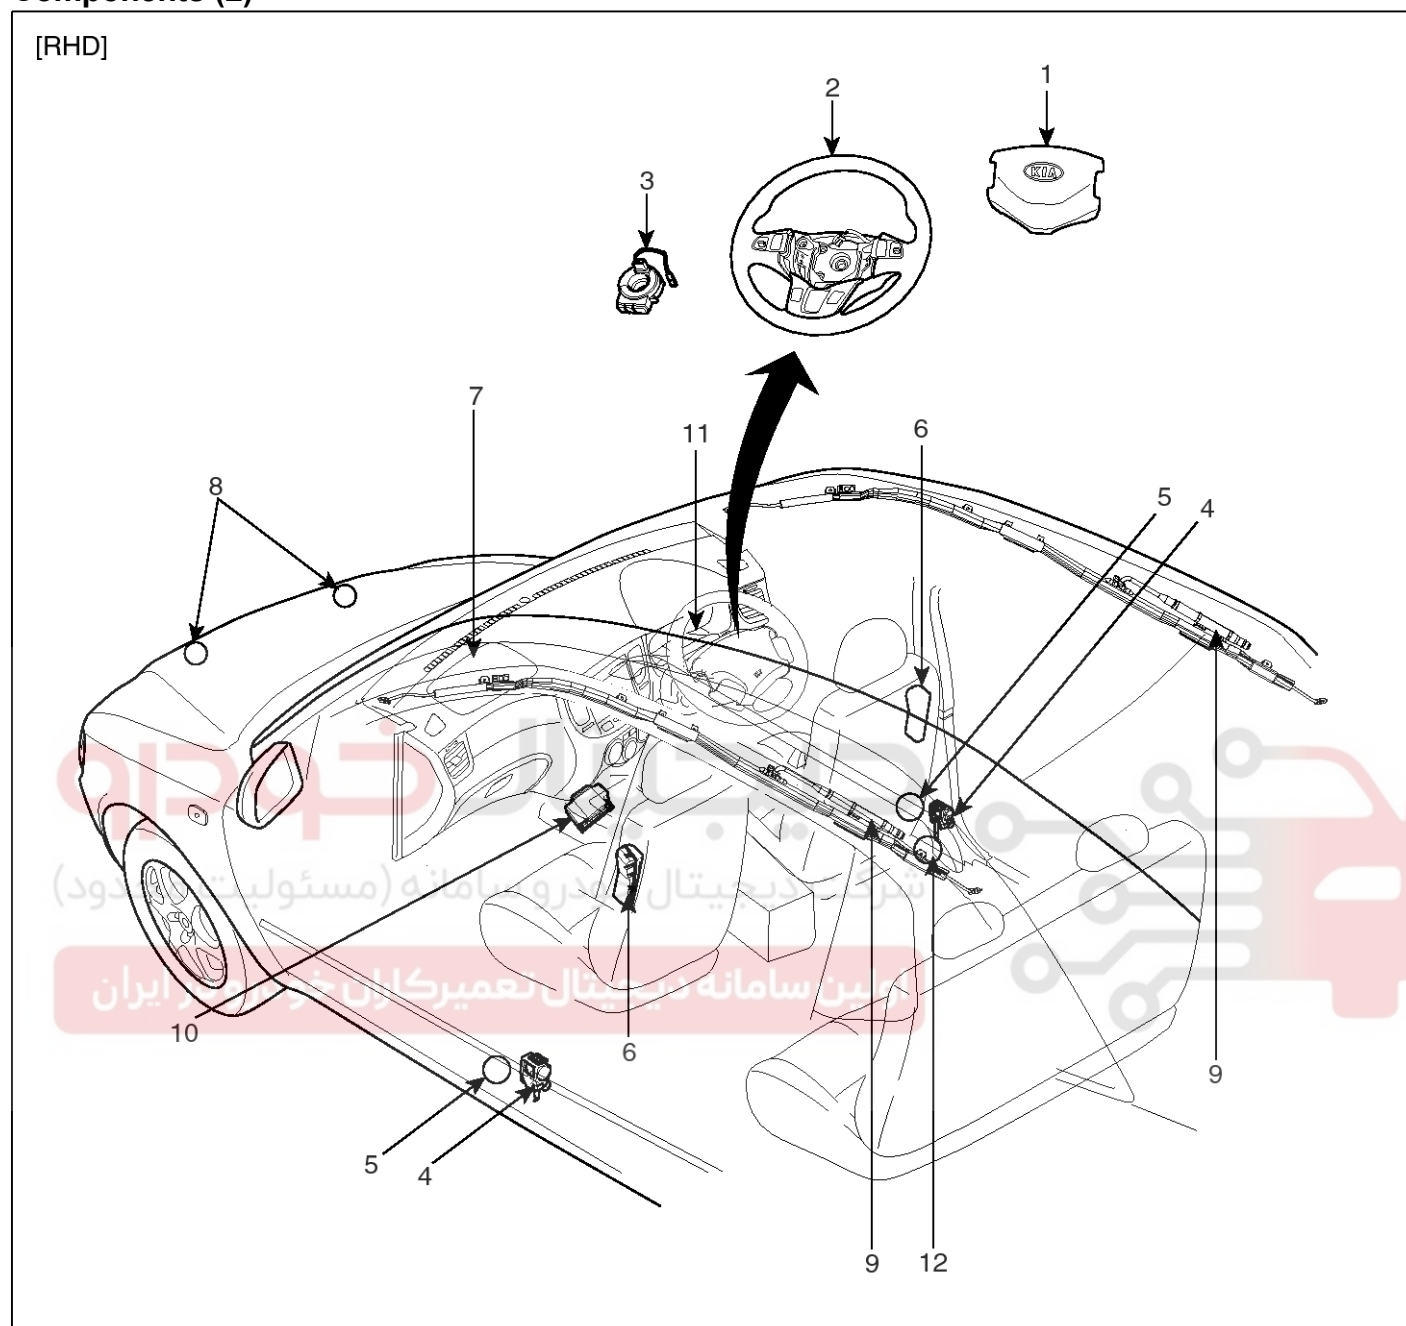

SSLRT1001R


- | | |
|---------------------------------|--|
| 1. Driver Airbag (DAB) | 7. Passenger Airbag (PAB) |
| 2. Steering Wheel | 8. Front Impact Sensor (FIS) |
| 3. Clock Spring | 9. Curtain Airbag (CAB) |
| 4. Seat Belt Pretensioner (BPT) | 10. Supplemental Restraint System Control Module (SRSCM) |
| 5. Side Impact Sensor (SIS) | 11. Airbag Warning Lamp |
| 6. Side Airbag (SAB) | 12. Anchor Pretensioner (Australia only) |

RT-12

Restraint


Components Location

Supplemental Restraint System Control Module (SRSCM)

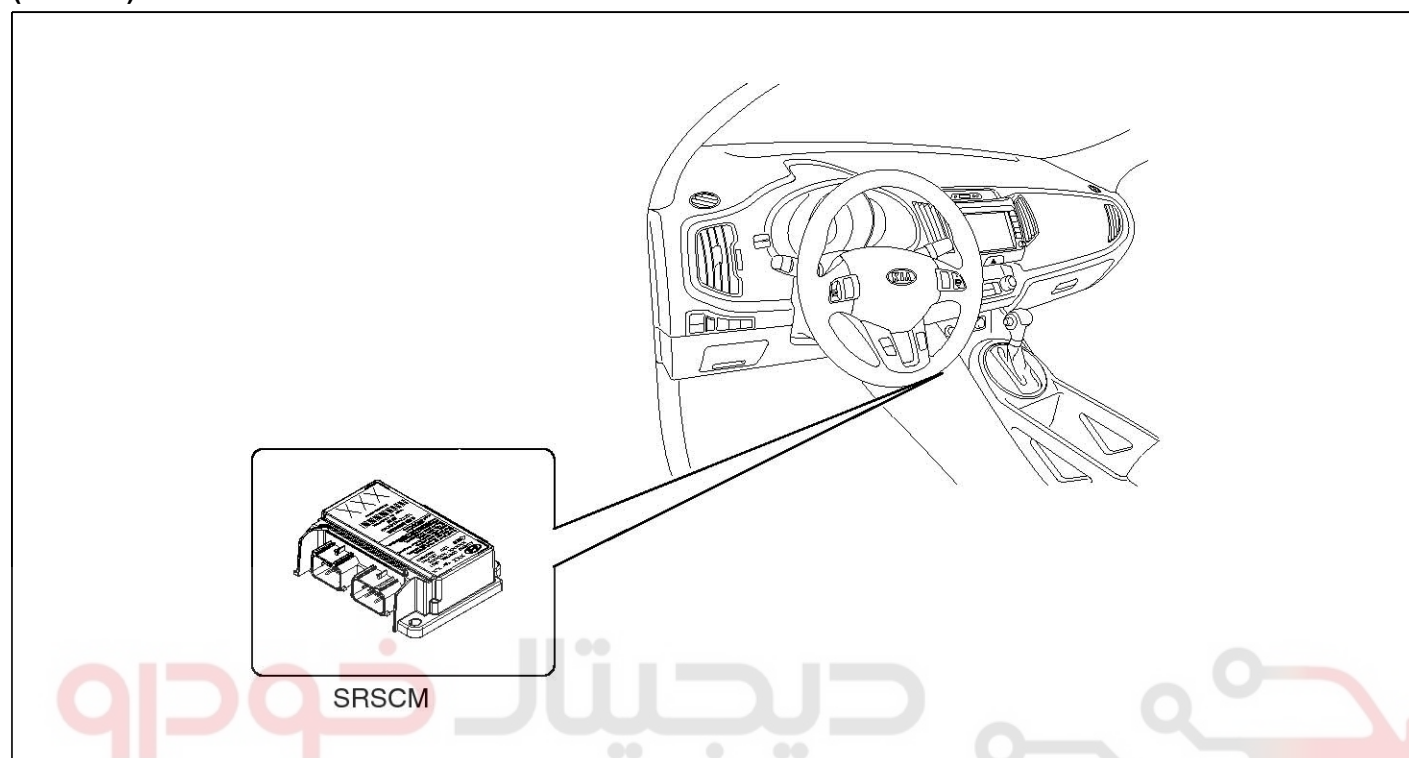

SSLRT1010N

Driver Airbag (DAB) / Passenger Airbag (PAB)

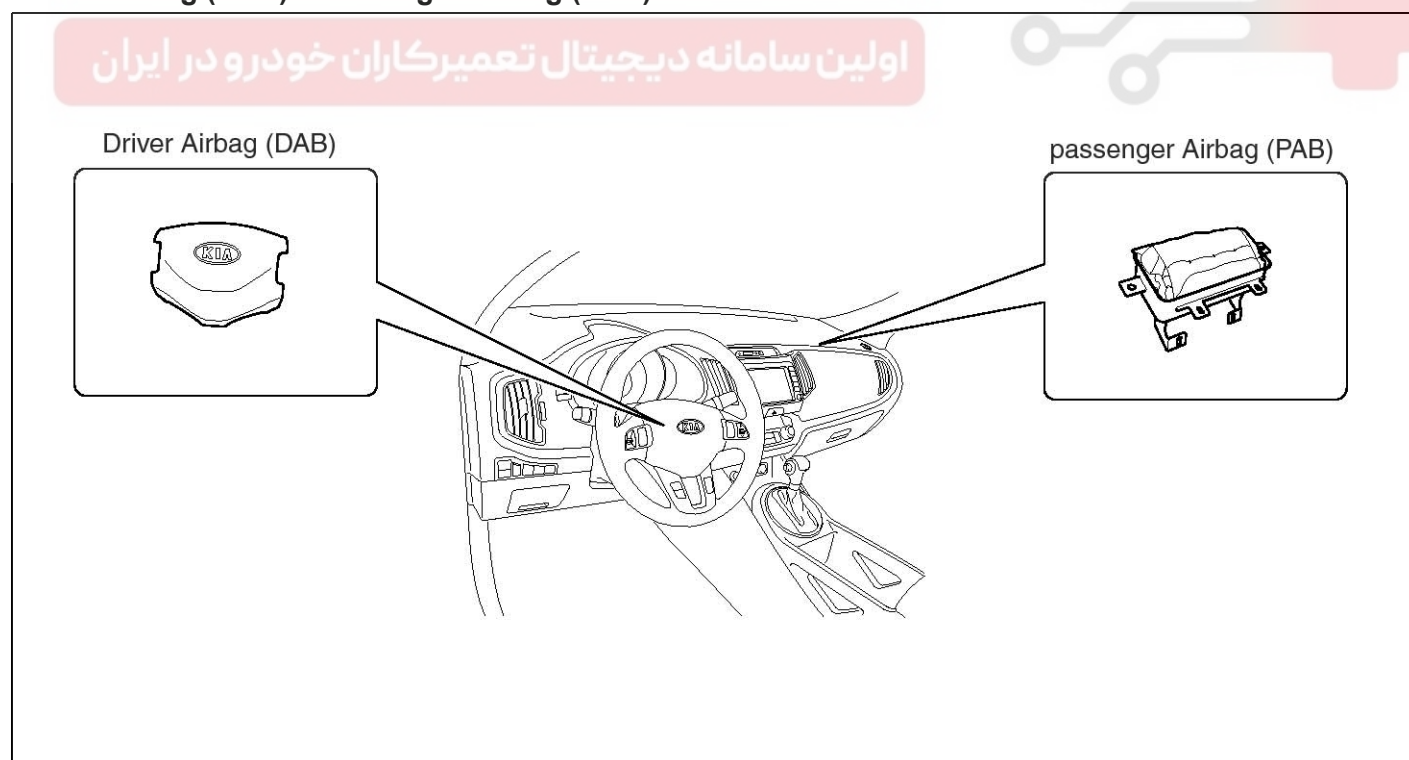


SSLRT1002L

General Information


RT-13

Side Airbag (SAB)

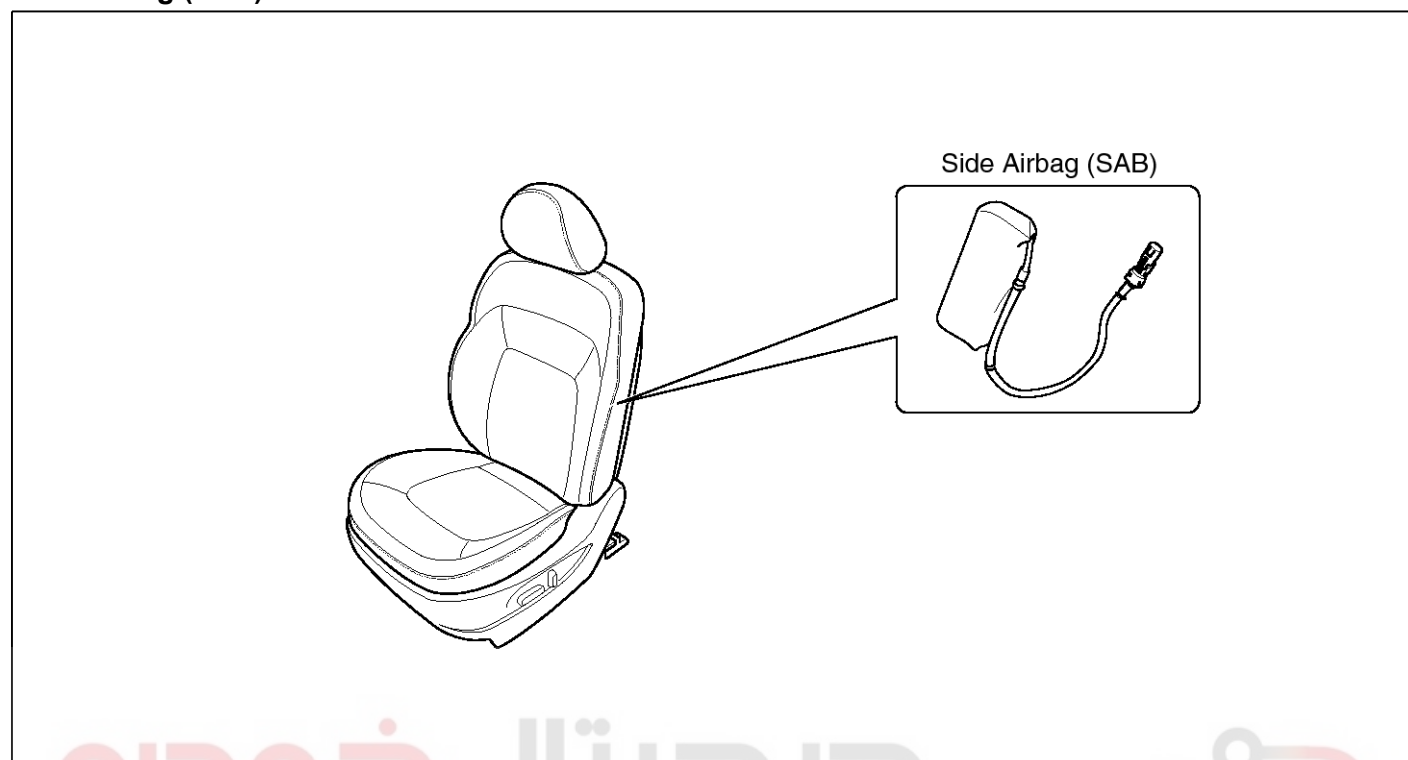

SSLRT1240N

Curtain Airbag (CAB)

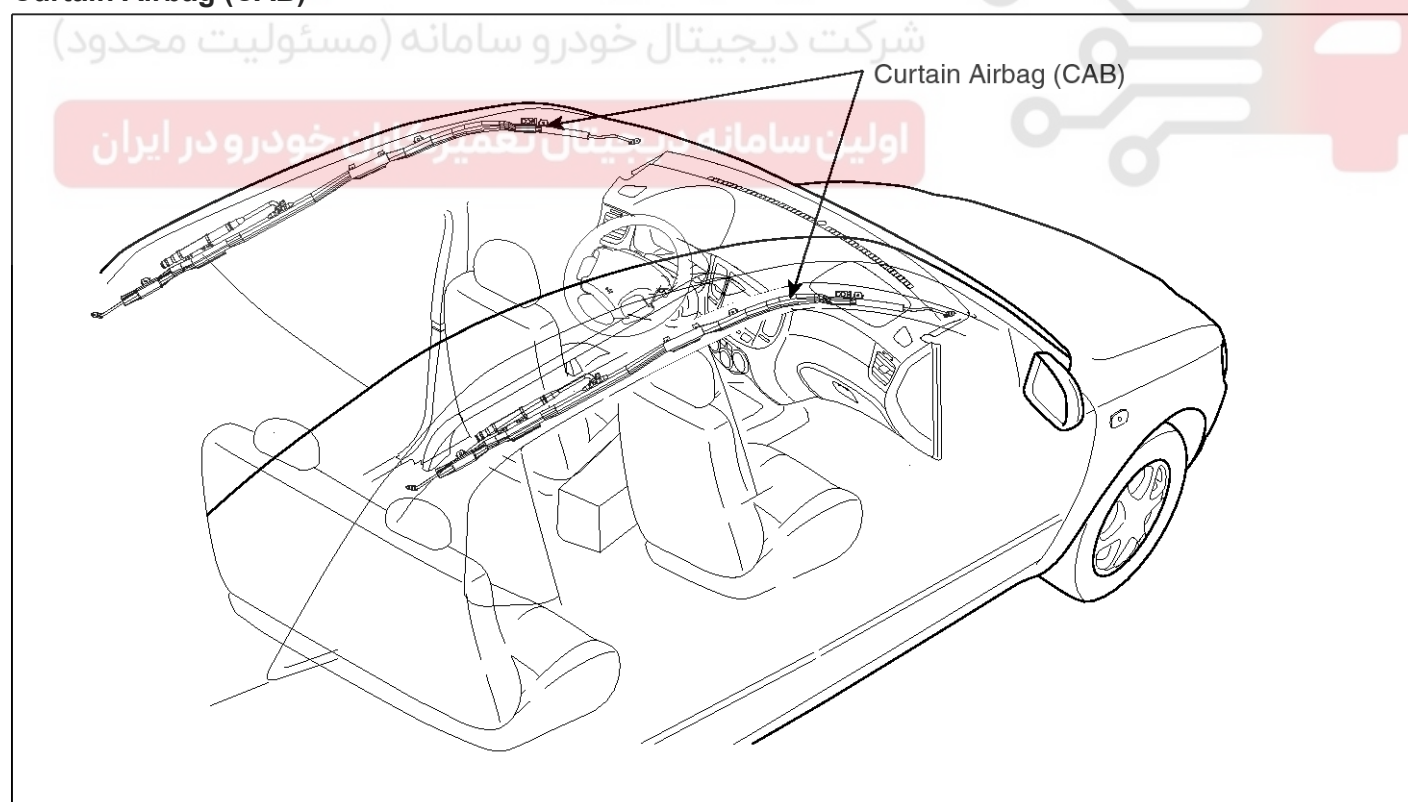


SXMRT0260L

RT-14


Restraint

Seat Belt Pretensioner (BPT)/ Anchor Pretensioner (APT)

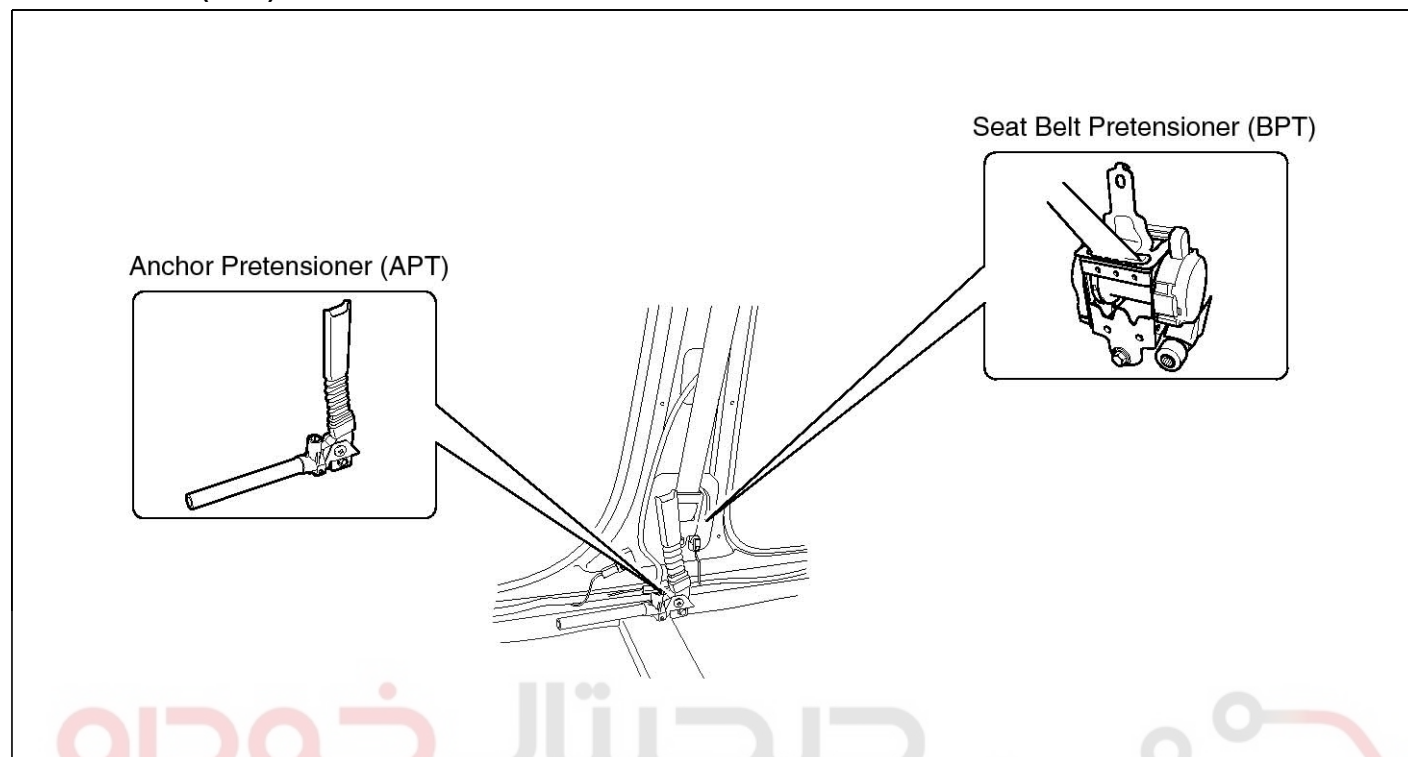

SSLRT1345L

Front Impact Sensor (FIS)

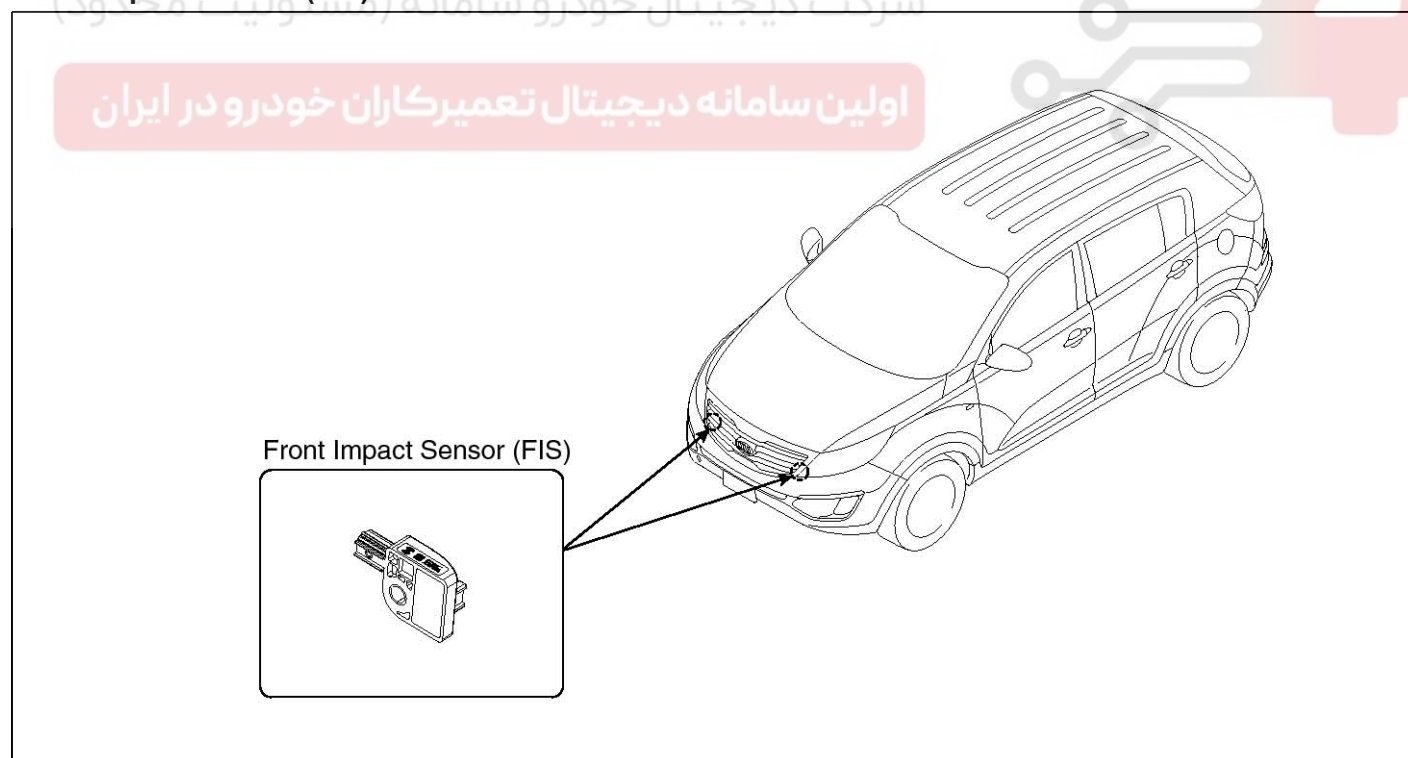


SSLRT1030N

General Information

RT-15

Side Impact Sensor (SIS)

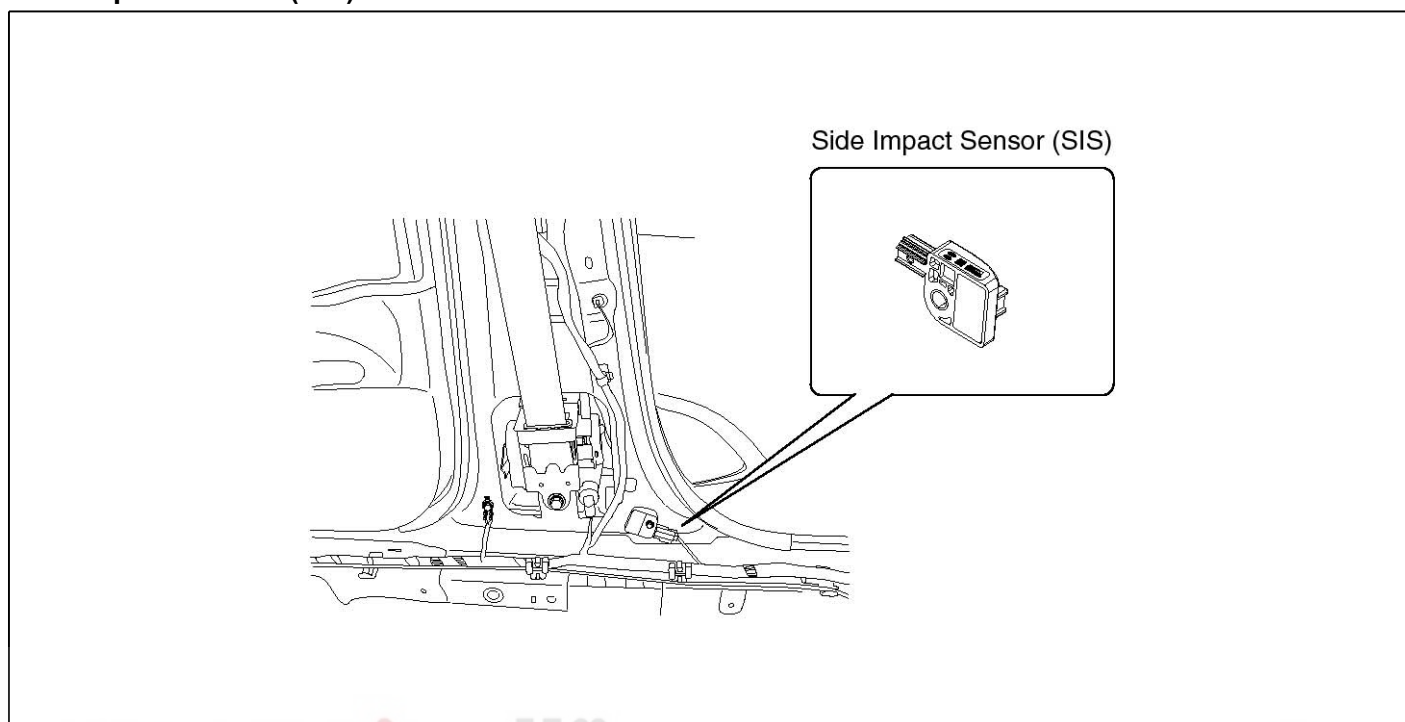


SLMRT0050L

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

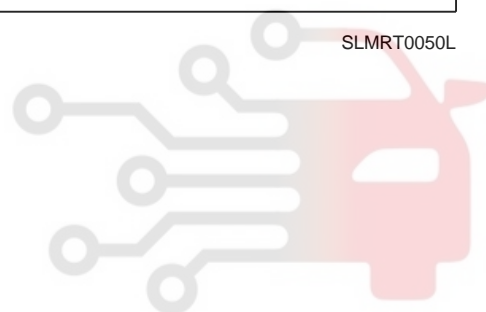

RT-16

Restraint

SRSCM

SRS Control Module (SRSCM)

Description

The primary purpose of the SRSCM (Supplemental Restraints System Control Module) is to discriminate between an event that warrants restraint system deployment and an event that does not. The SRSCM must decide whether to deploy the restraint system or not. After determining that pretensioners and/or airbag deployment is required, the SRSCM must supply sufficient power to the pretensioners and airbag igniters to initiate deployment.


The SRSCM determines that an impact may require deployment of the pretensioners and airbags from data obtained from impact sensors and other components in conjunction with a safing function.

The SRSCM will not be ready to detect a crash or to activate the restraint system devices until the signals in the SRSCM circuitry stabilize.

It is possible that the SRSCM could activate the safety restraint devices in approximately 2 seconds but is guaranteed to fully function after prove-out is completed.

The SRSCM must perform a diagnostic routine and light a system readiness indicator at key-on. The system must perform a continuous diagnostic routine and provide fault annunciation through a warning lamp indicator in the event of fault detection. A serial diagnostic communication interface will be used to facilitate servicing of the restraint control system.

Components

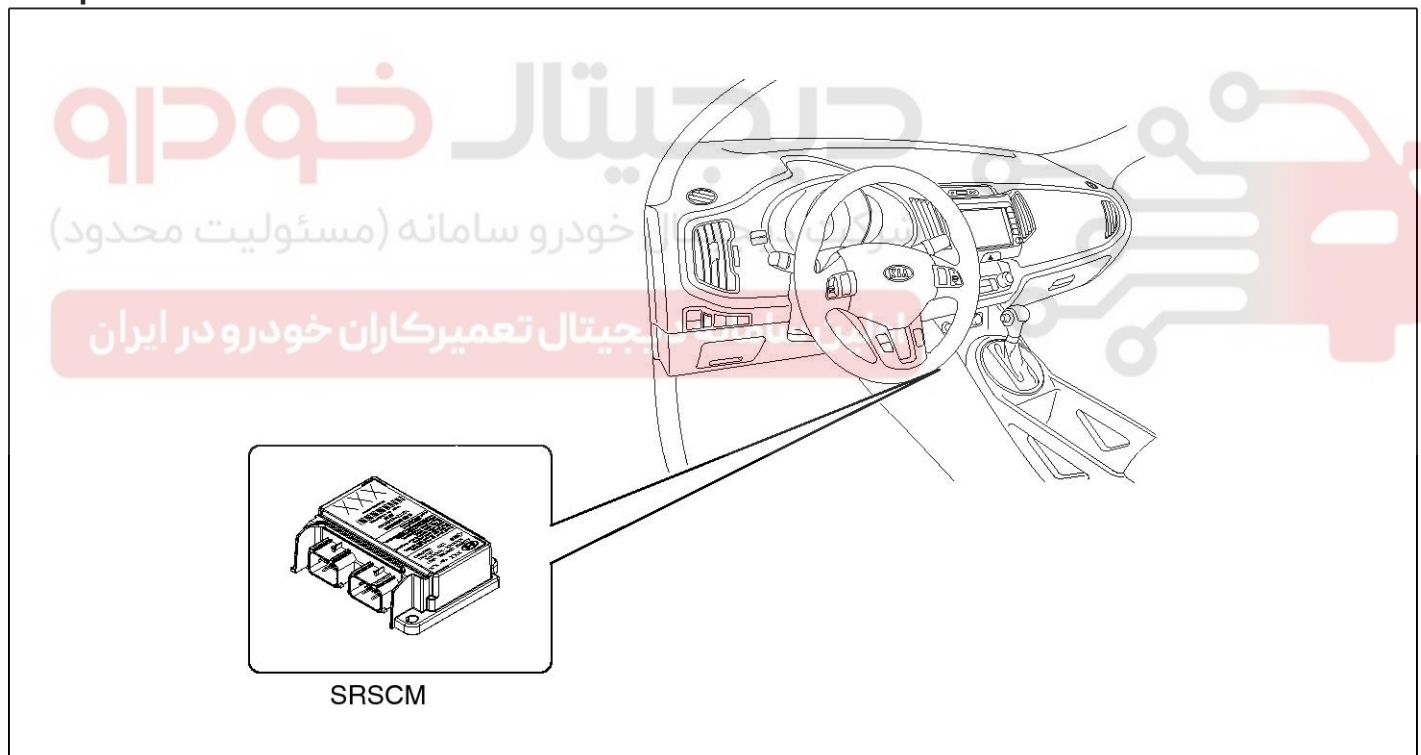

SSLRT1010N


SRSCM

RT-17

Removal

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
3. Disconnect the DAB, PAB, SAB, CAB and BPT connectors.
4. Remove the floor console upper cover. (Refer to the Body group - console)
5. Remove the shift lever assembly. (Refer to the transaxle system group - shift lever)
6. Pull the lock (1) forward and then pull the lever (3) after pressing the lever lock (2).

Disconnect the airbag system control module connector. (A and B)

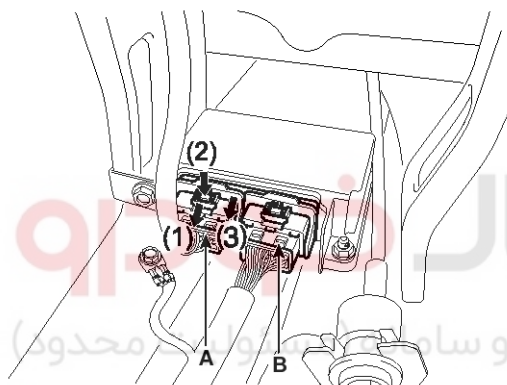

SSLRT0011D

7. Remove the SRSCM mounting nuts(3EA) from the SRSCM, then remove the SRSCM.

CAUTION


You must remove or install SRSCM at the ignition switch OFF because SRSCM has overturn sensing function. SAB, CAB, BPT may be deployed if you shake SRSCM at the direction of up and down or right and left at the ignition switch ON.

Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
3. Install the SRSCM with the SRSCM mounting nuts.

Tightening torque :

6.8 ~ 9.2 Nm (0.7 ~ 0.9 kgf.m, 5.0 ~ 6.8 lb.ft)

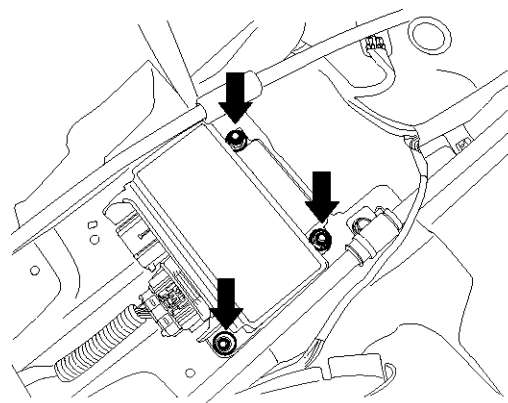

SLMRT0012D

NOTICE

Use new mounting bolts when replacing the SRSCM after a collision.

4. Connect the SRSCM harness connector.
5. Install the shift lever assembly. (Refer to the transaxle system group - shift lever)
6. Install the floor console upper cover. (Refer to the Body group - console)
7. Connect the DAB, PAB, SAB, CAB and BPT connectors.
8. Reconnect the battery negative cable.
9. After installing the SRSCM, confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

CAUTION

SRSCM is sensing the vehicle rollover. SAB, CAB, BPT will be able to expance if mechanic moves the SRSCM on vehicle during IGN ON state. For this reason, turn the IGN OFF surely and then remove the SRSCM from vehicle.

RT-18

Restraint

Variant coding

After replacing the SRSCM with a new one, must be performed the "Variant Coding" procedure.

NOTICE

1. On SRSCM variant coding mode, the airbag warning lamp is periodically blinking (ON: 0.5sec., OFF: 0.5sec.) until the coding is normally completed.
2. If the variant coding is failed, DTC B1762 (ACU Coding Error) will be displayed and the warning lamp will be turned on.

In this case, perform the variant coding procedure again after confirming the cause in "DTC Fault State Information".

Variant Coding can be performed up to 255 times, but if the number of coding work exceeds 255 times, DTC B1683 (Exceed Maximum coding Number) will be displayed and SRSCM must be replaced.

3. If the battery voltage is low (less than 9V), DTC B1102 will be displayed. In this case, charge the battery before anything else, and then perform the variant coding procedure.

DTC B1762 (ACU Coding Error) and B1102 (Battery Voltage Low) may be displayed simultaneously.

Variant coding Procedure

■ On-Line type on GDS

1. Ignition "OFF", connect GDS.
2. Ignition "ON" & Engine "OFF" select vehicle name and airbag system.
3. Select Variant coding mode.
4. Follow steps on the screen as below.

1) Initial ACU Variant Coding screen

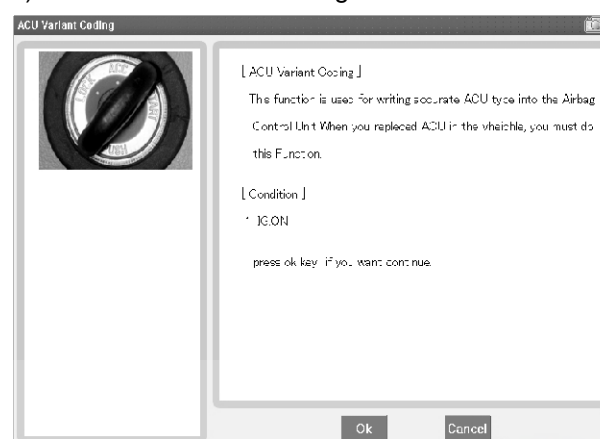


Fig.1

SBKRT9526L

2) VIN Code entering screen

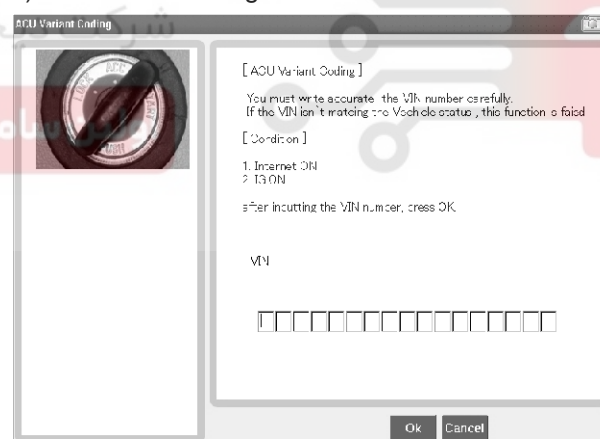


Fig.2

SBKRT9527L

SRSCM

RT-19

3) Variant coding's proceeding screen-1

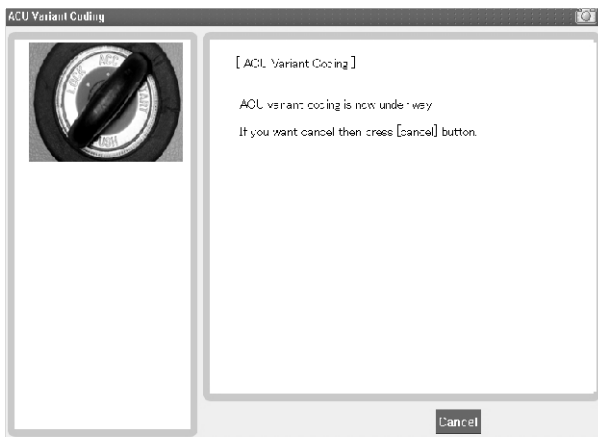


Fig.3

SBKRT9528L

4) Variant coding's proceeding screen-2

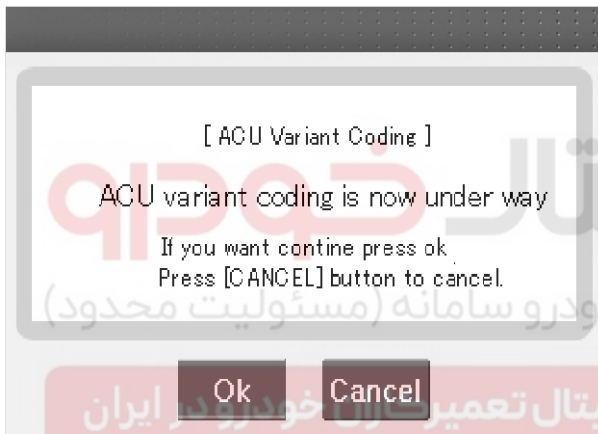


Fig.4

SBKRT9529L

5) Variant coding is completed

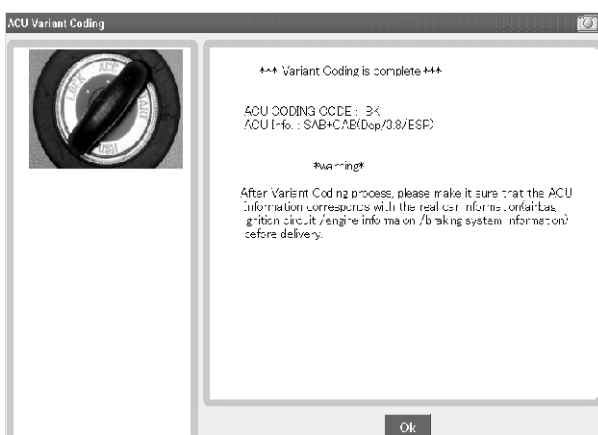


Fig.5

SBKRT9565N

NOTICE

1) This screen is opened when you try the variant coding again on the SRSCM which has been performed variant coding.

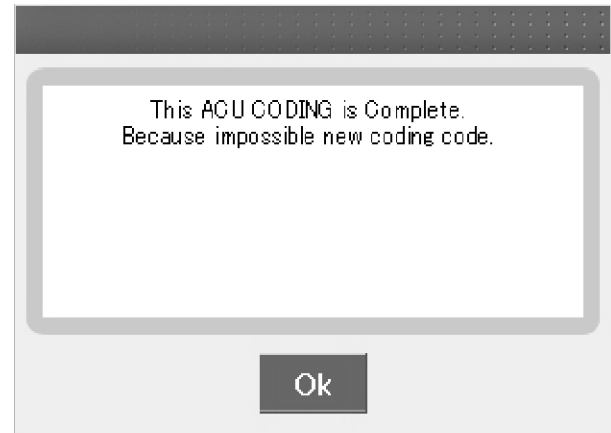


Fig.6

SBKRT9531L

2) Screen of communication failure



Fig.7

SBKRT9532L

RT-20

Restraint

■ Off-line type on GDS (This can be used when not connecting to internet)

1) Initial ACU Variant Coding screen

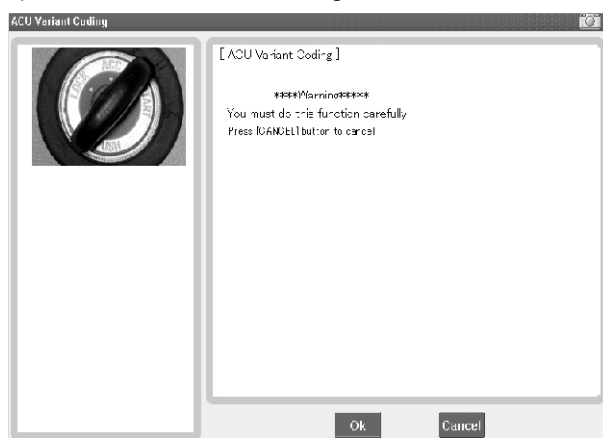


Fig.1

SBKRT9533L

2) ACU Coding Code entering screen

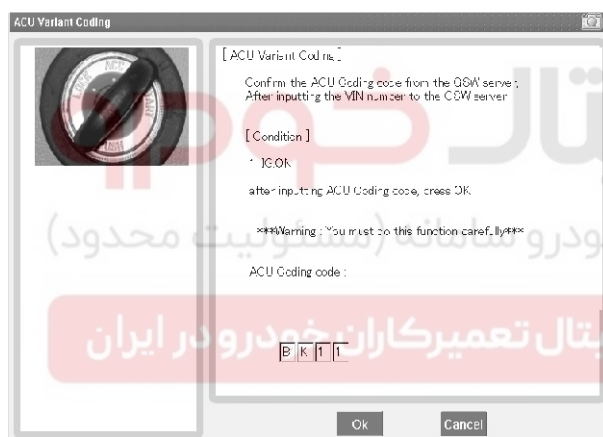


Fig.2

SBKRT9563N

3) Screen of rechecking ACU Coding code's entering

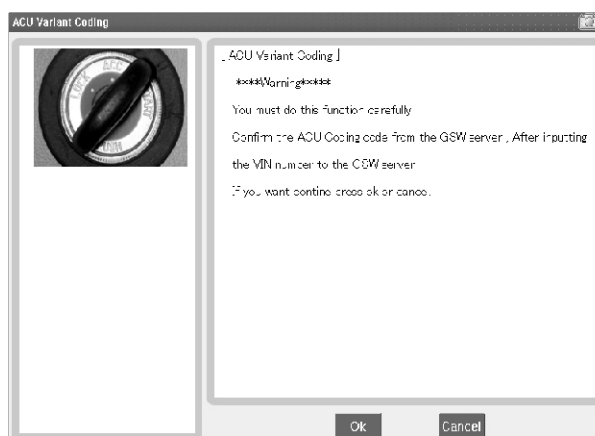


Fig.3

SBKRT9535L

4) Variant coding's proceeding screen-1



Fig.4

SBKRT9536L

SRSCM

RT-21

5) Variant coding's proceeding screen-2

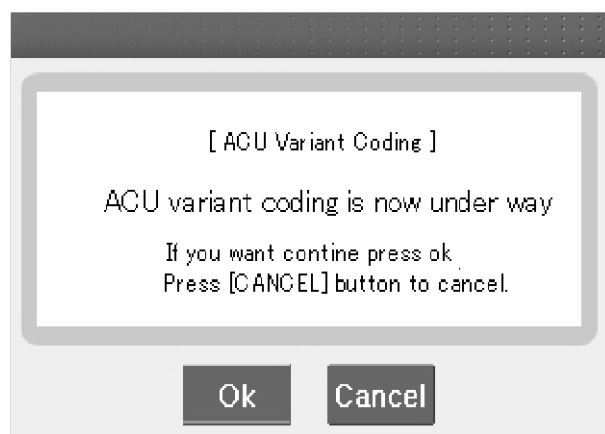


Fig.5

SBKRT9537L

6) Variant coding is completed

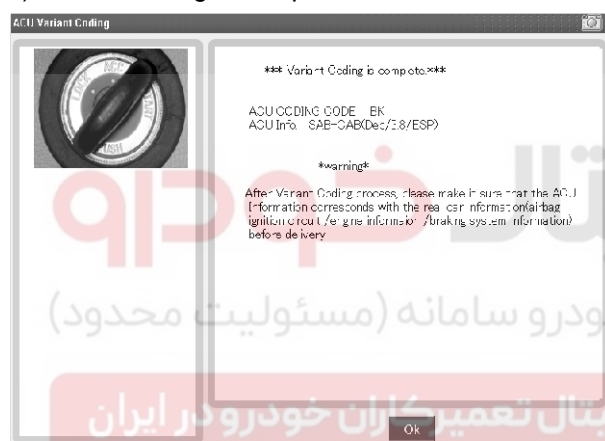


Fig.6

SBKRT9564N

NOTICE

1) This screen is opened when you try the variant coding again on the SRSCM which has been performed variant coding.

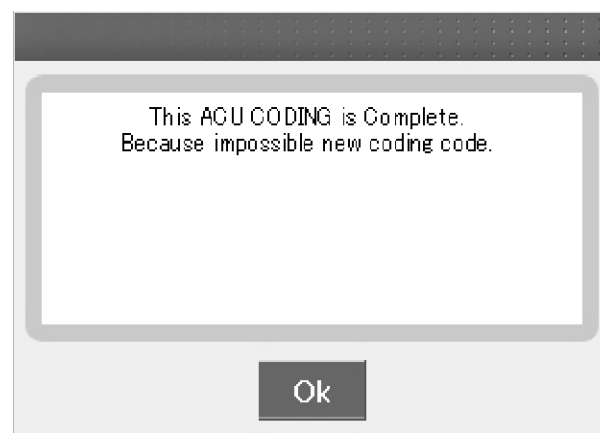


Fig.7

SBKRT9539L

RT-22


Restraint

Front Impact Sensor (FIS)

Description

The front impact sensor (FIS) is installed in the Front End Module (FEM). They are remote sensors that detect acceleration due to a collision at its mounting location. The primary purpose of the Front Impact Sensor (FIS) is to provide an indication of a collision. The Front Impact Sensor (FIS) sends acceleration data to the SRSCM.

Components

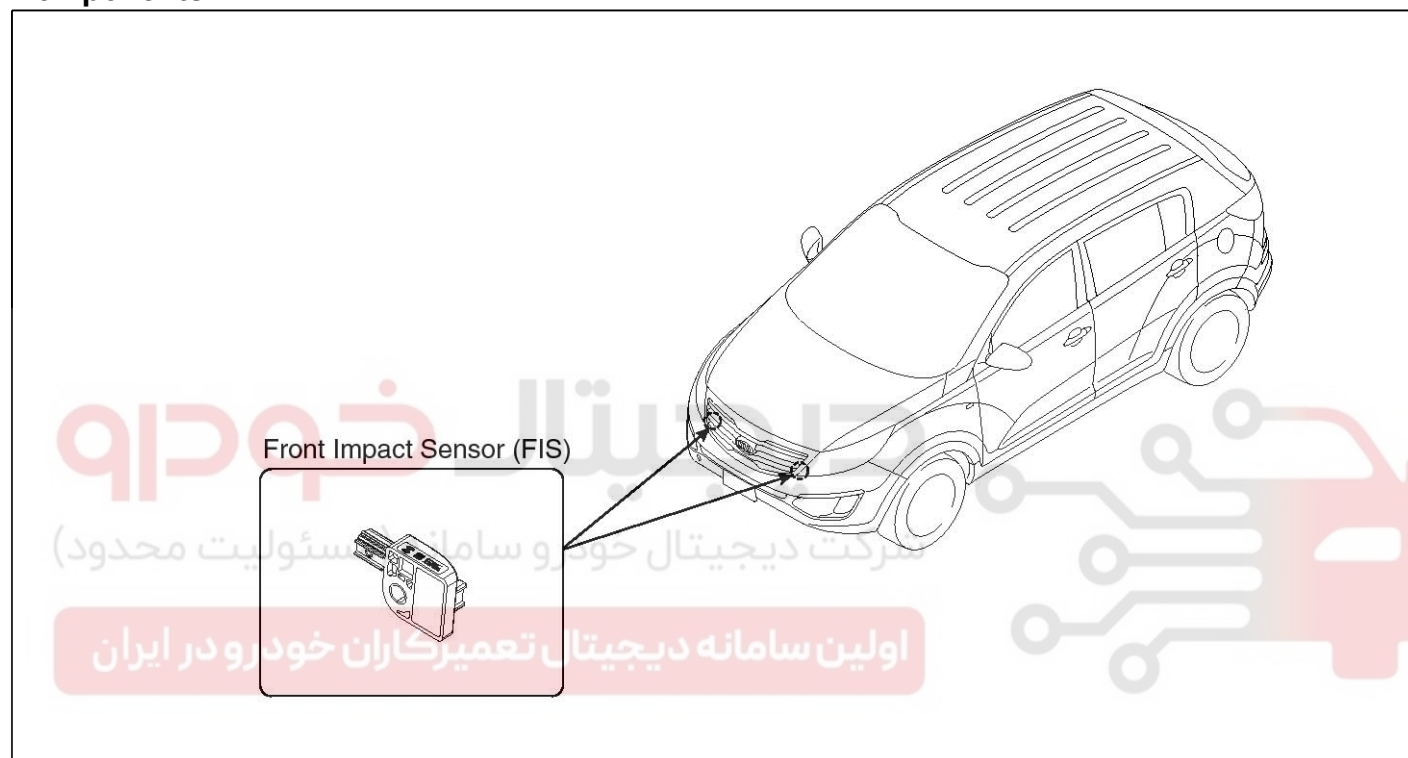

SSLRT1030N


SRSCM

RT-23

Removal


⚠ CAUTION

- Removal of the airbag must be performed according to the precautions/ procedures described previously.
 - Before disconnecting the front impact sensor connector, disconnect the front airbag connector(s).
 - Do not turn the ignition switch ON and do not connect the battery cable while replacing the front impact sensor.
1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
 2. Remove the air duct (A) and air cleaner assembly (B). (Driver front impact sensor only)

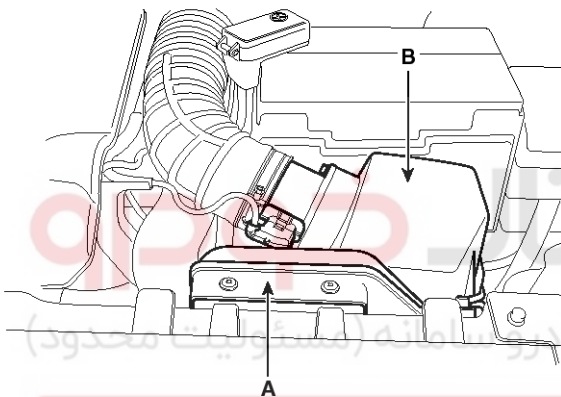

SSLRT0031D

3. Disconnect the front impact sensor connector (A).

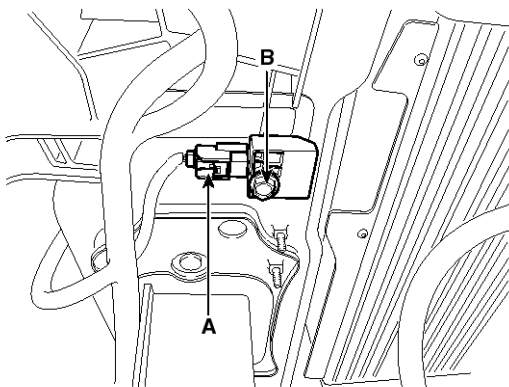

SSLRT0032D

4. Remove the front impact sensor mounting bolt (B).
5. Remove the front impact sensor.

Installation

⚠ CAUTION

- Do not turn the ignition switch ON and do not contact the battery cable while replacing the front impact sensor.

1. Install the new front impact sensor.
2. Tighten the front impact sensor mounting nut.

Tightening torque:

7.0 ~ 9.0 Nm (0.7 ~ 0.9 kgf.m, 5.1 ~ 6.6 lb.ft)

3. Connect the front impact sensor connector.
4. Install the air duct and air cleaner assembly. (Driver front impact sensor only)
5. Reconnect the battery negative cable.
6. After installing the Front Impact Sensor, confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

RT-24

Restraint


Side Impact Sensor (SIS)

Description

The Side Impact Sensor (SIS) system consists of two front SIS which are installed inside the Center Pillar (LH and RH).

They are remote sensors that detect acceleration due to collision at their mounting locations. The primary purpose of the Side Impact Sensor (SIS) is to provide an indication of a collision. The Side Impact Sensor (SIS) sends acceleration data to the SRSCM.

Components

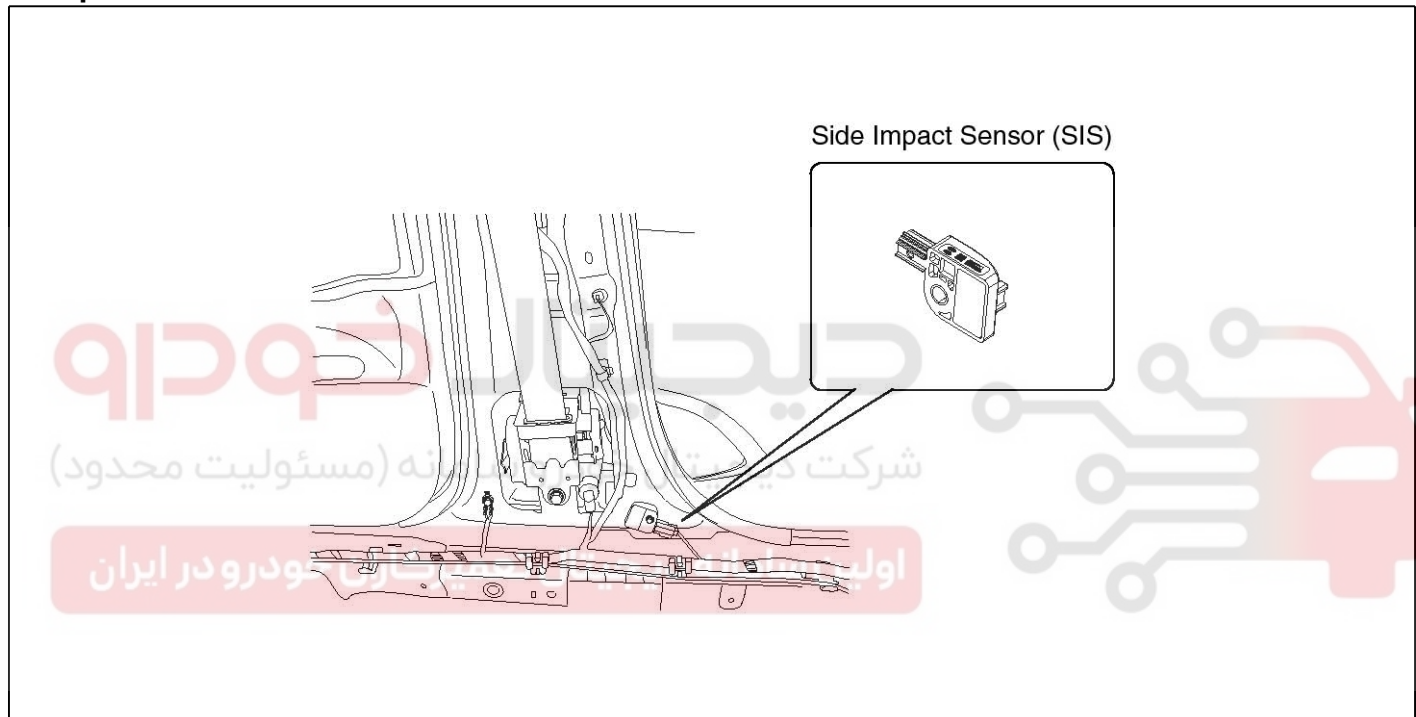


SLMRT0050L

SRSCM

RT-25


Removal

1. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
2. Remove the lower anchor bolt. (Except anchor pretensioner)
3. Remove the seat belt after pushing the lock pin (A). (Anchor pretensioner only)

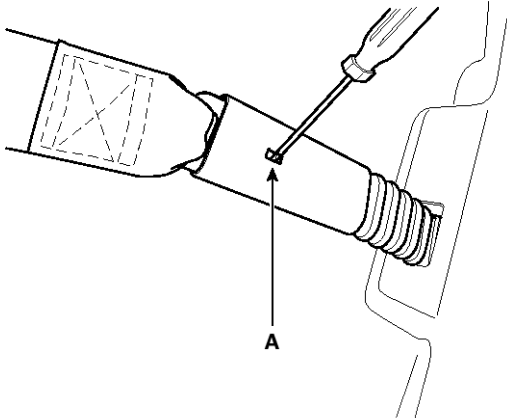

SLMRT0361L

4. Remove the door scuff trim. (Refer to the Body group - Interior trim)
5. Remove the center pillar trim. (Refer to the Body group - Interior trim)
6. Disconnect the side impact sensor connector.

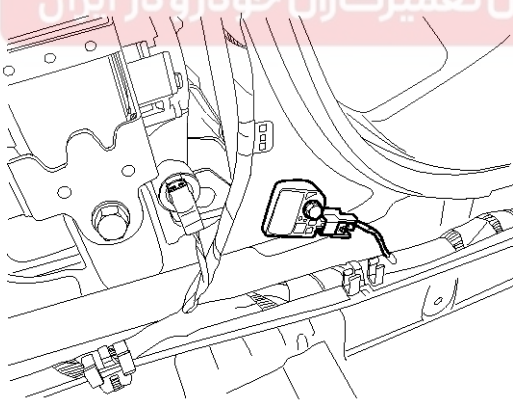

SLMRT0051D

7. Loosen the rear side impact sensor mounting bolt and remove the side impact sensor.

Installation

Side Impact Sensor

⚠ CAUTION

- Do not turn the ignition switch ON and do not connect the battery cable while replacing the side impact sensor.

1. Install the new side impact sensor with the bolt then connect the side impact sensor connector.

Tightening torque :

7.0 ~ 9.0 N.m (0.7 ~ 0.9 kgf.m, 5.1 ~ 6.6 lb-ft)

2. Install the center pillar trim (Refer to the Body group - Interior trim)
3. Install the door scuff trim. (Refer to the Body group - Interior trim)
4. Install the lower anchor bolts. (Except anchor pretensioner)

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

5. Insert the seat belt to the anchor pretensioner. (Anchor pretensioner only)
6. Reconnect the battery negative cable.
7. After installing the Side Impact Sensor, confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

RT-26

Restraint


PAB ON/OFF Switch

Description

Driver can control the passenger airbag operating Condition (Enable or Disable) by using this PAB ON/OFF switch.

Passenger Airbag (PAB) ON/OFF Switch is installed in the crash pad side cover.

Components

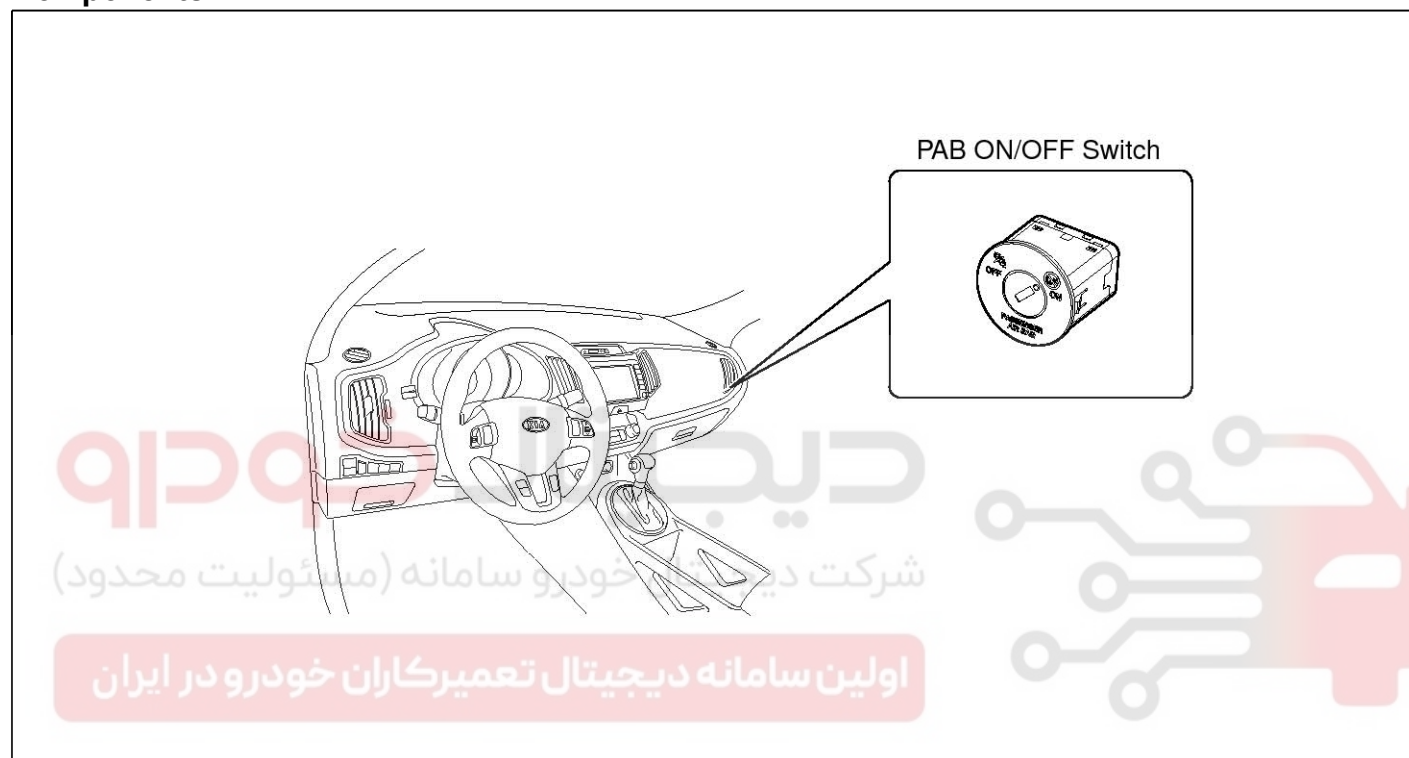


SSLRT1170L

SRSCM

RT-27

Removal

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
3. Remove the crash pad side cover. (Refer to the Body group – crash pad)
4. Disconnect the PAB ON/OFF switch connector.

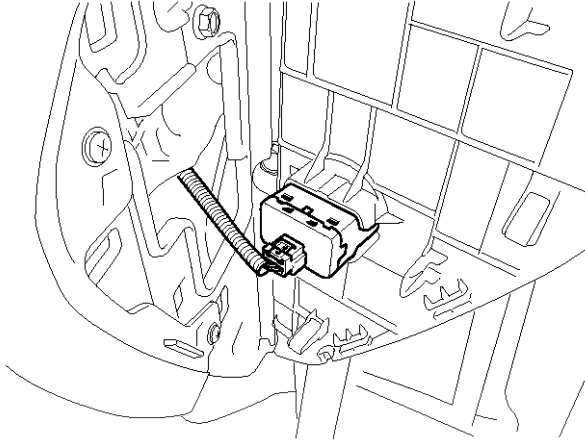

SSLRT1171L

5. Remove the PAB ON/OFF switch.

Installation


1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
3. Install the PAB ON/OFF switch to the crash pad side cover.
4. Connect the PAB ON/OFF switch connector to the crash pad side cover.
5. Install the crash pad side cover. (Refer to the Body group – crash pad)
6. After installing the SRSCM, confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.



RT-28

Restraint

Circuit Diagram (1)

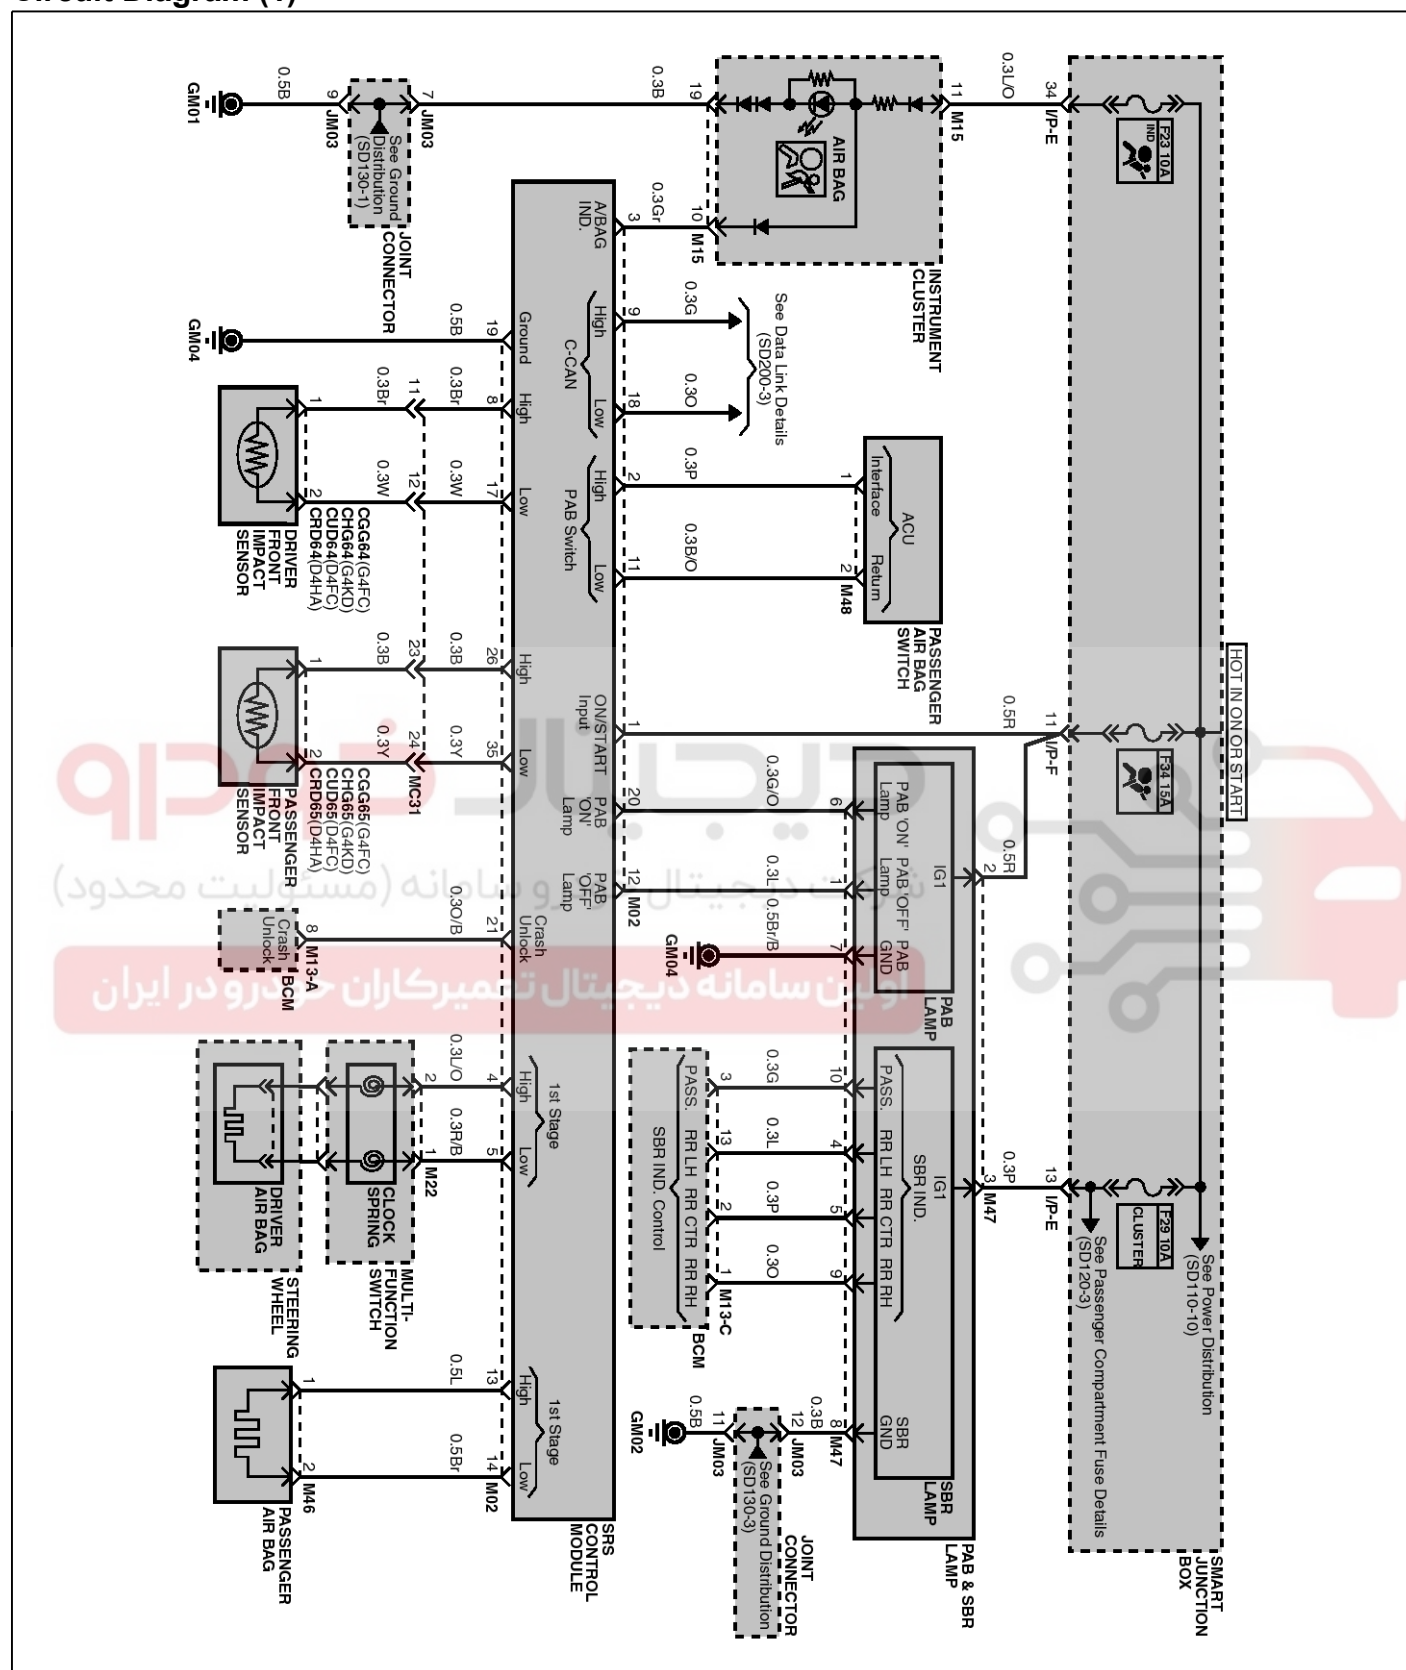


SSLRT1005L

SRSCM

RT-29


Circuit Diagram (2)

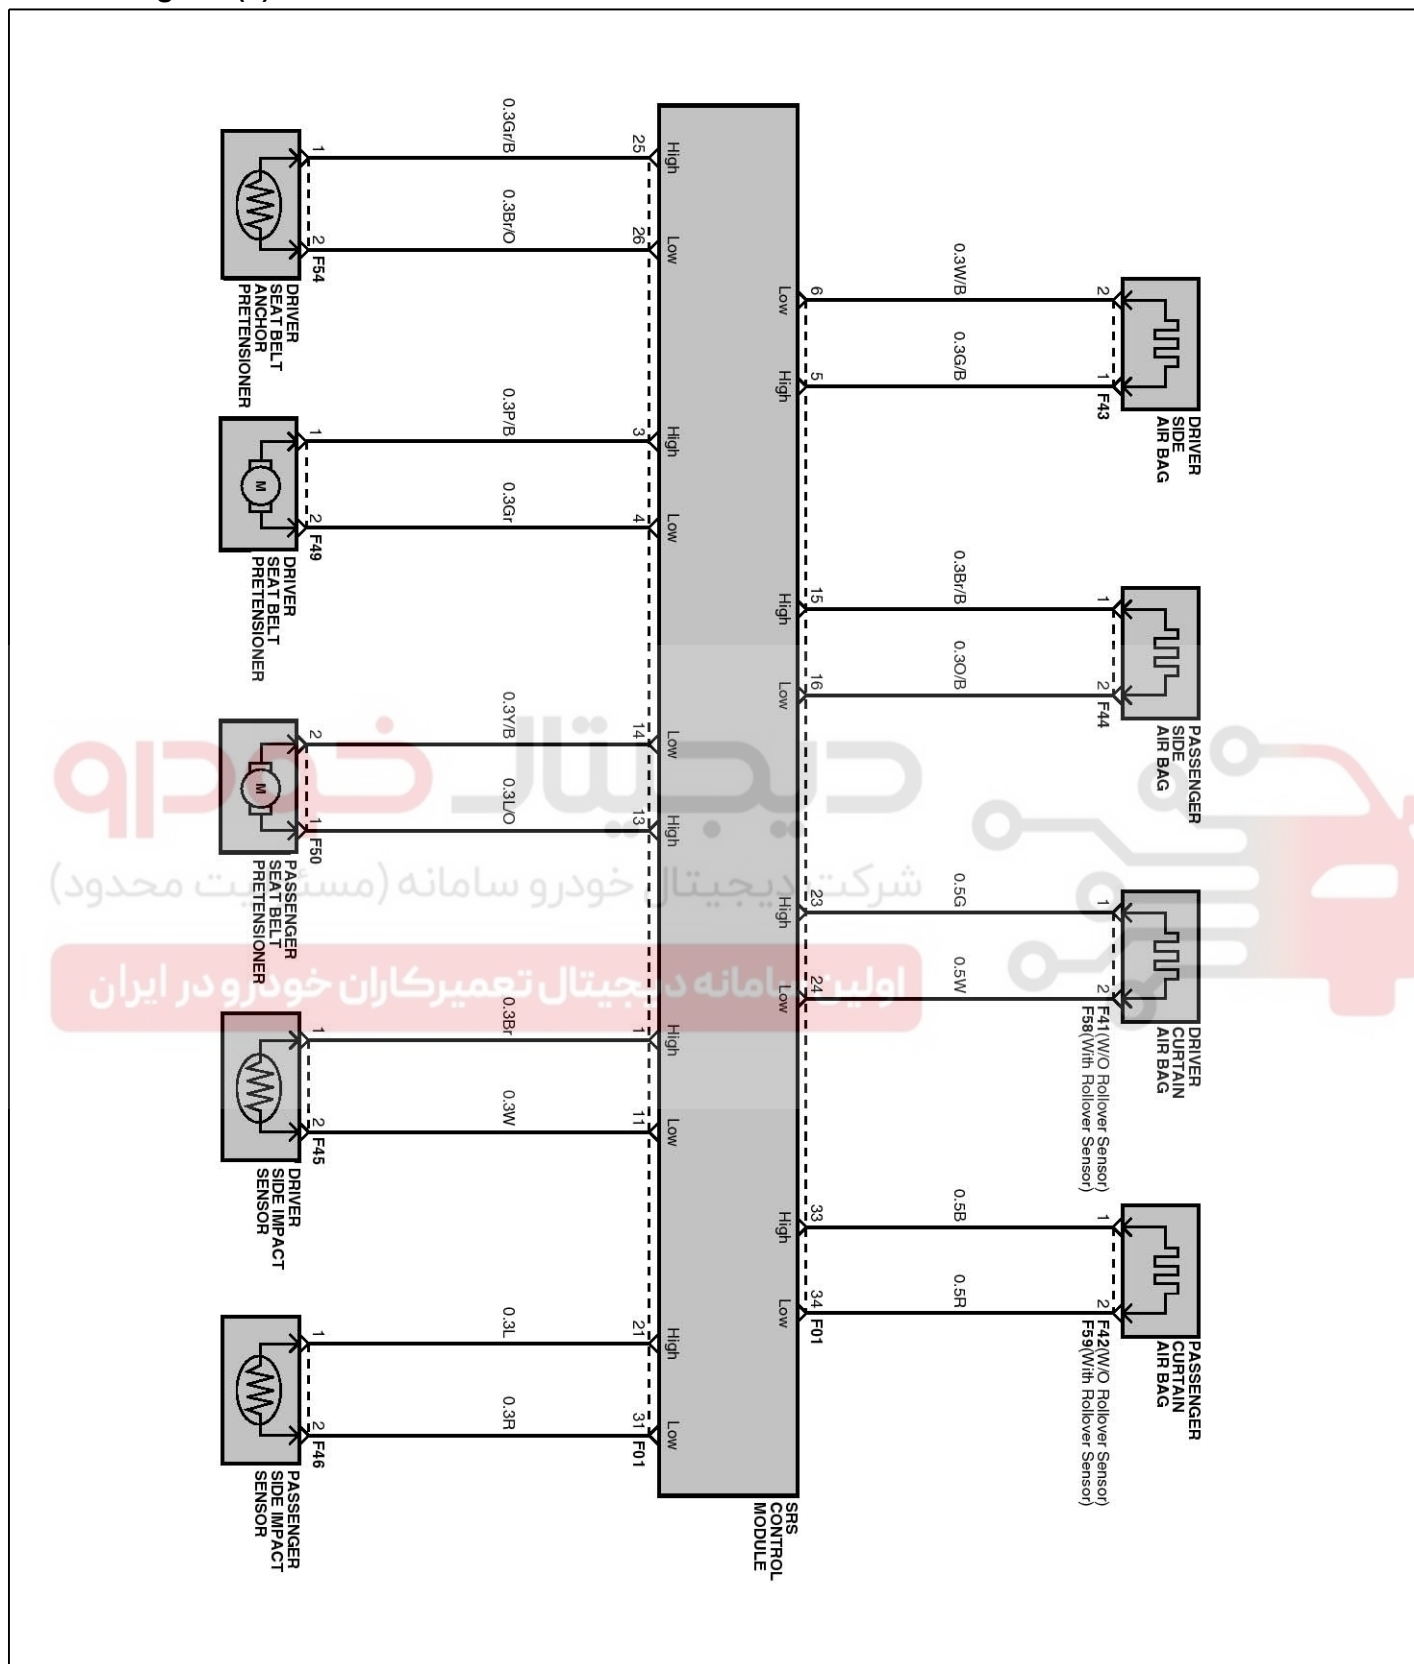


SSLRT1006L

RT-30

Restraint

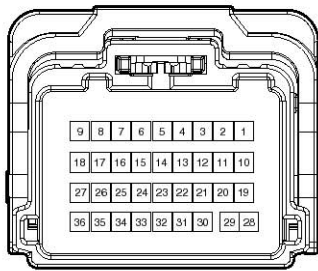SRSCM Connector terminal
Harness Connector

Connector A

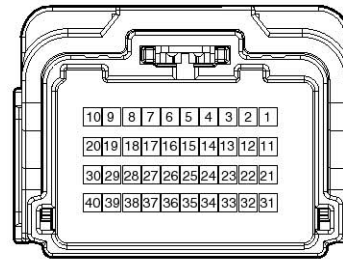

Connector B

SLMRT0006N

Pin	Function (Connector A)	Pin	Function (Connector A)
1	Ignition	1	Side impact sensor [Driver] High
2	PAB ON/OFF Switch High	2	-
3	Airbag warning lamp	3	Seat belt pretensioner [Driver] High
4	Driver airbag High	4	Seat belt pretensioner [Driver] Low
5	Driver airbag Low	5	Side airbag [Driver] High
6	-	6	Side airbag [Driver] Low
7	-	7	-
8	Front impact sensor [Driver] High	8	-
9	CAN_High	9	-
10	-	10	-
11	PAB ON/OFF Switch Low	11	Side impact sensor [Driver] Low
12	PAB OFF lamp	12	-
13	Passenger airbag High	13	Seat belt pretensioner [Passenger] High
14	Passenger airbag Low	14	Seat belt pretensioner [Passenger] Low
15	-	15	Side airbag [Passenger] High
16	-	16	Side airbag [Passenger] Low
17	Front impact sensor [Driver] Low	17	-
18	CAN_Low	18	-
19	Ground	19	-
20	PAB ON lamp	20	-
21	Crash Output	21	Side impact sensor [Passenger] High
22	-	22	-
23	-	23	Curtain airbag [Driver] High

SRSCM

RT-31

Pin	Function (Connector A)	Pin	Function (Connector A)
24	-	24	Curtain airbag [Driver] Low
25	-	25	Anchor pretensioner [Driver] High
26	Front impact sensor [Passenger] High	26	Anchor pretensioner [Driver] Low
27	-	27	-
28	Shorting Bar	28	-
29	Shorting Bar	29	-
30	-	30	-
31	-	31	Side impact sensor [Passenger] Low
32	-	32	-
33	-	33	Curtain airbag [Passenger] High
34	-	34	Curtain airbag [Passenger] Low
35	Front impact sensor [Passenger] Low	35	-
36	-	36	-
		37	-
		38	-
		39	-
		40	-

شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

RT-32

Restraint

Airbag Module

Driver Airbag (DAB) Module and Clock Spring


Description

Driver Airbag (DAB) is installed in the steering wheel and electrically connected to SRSCM via the clock spring. It protects the driver by deploying the airbag when frontal crash occurs. The SRSCM determines deployment of the Driver Airbag (DAB).

⚠ CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

Components

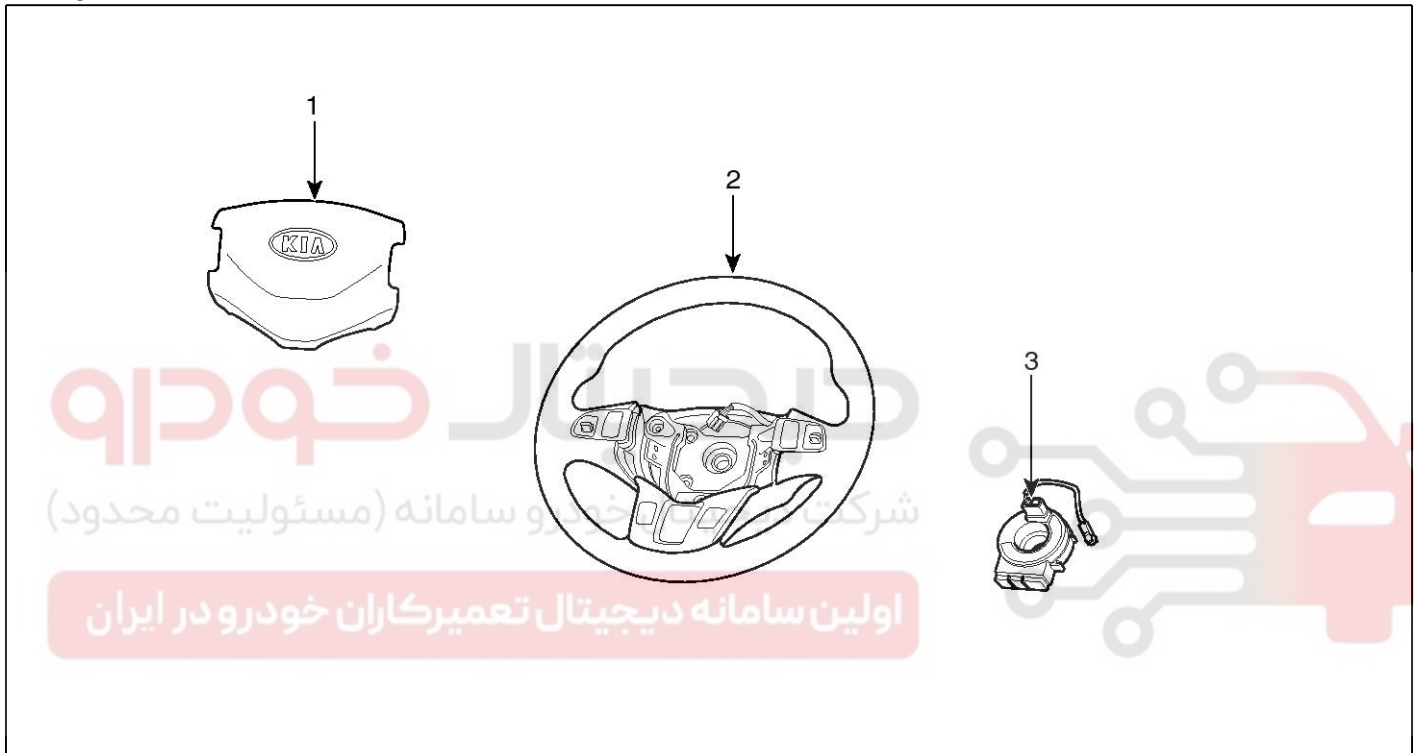

SSLRT0200D


1. Driver Airbag (DAB)
2. Steering Wheel
3. Clock Spring

Airbag Module

RT-33


Removal

1. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
2. Remove the airbag module mounting bolts (2EA).

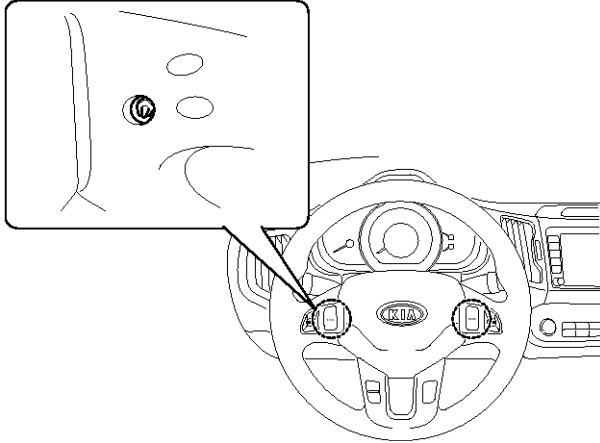

SSLRT0201D

3. Remove the wiring fixing clip(C) and then, release the connector locking pin, then disconnect the driver airbag module connector(B).

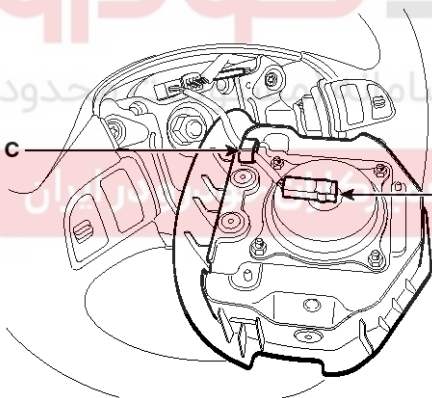


SSLRT0202D

⚠ CAUTION


The removed airbag module should be stored in a clean, dry place with the pad cover facing up.

4. Remove the steering wheel and steering wheel column cover. (Refer to the Steering System group-Steering Column and Shaft)

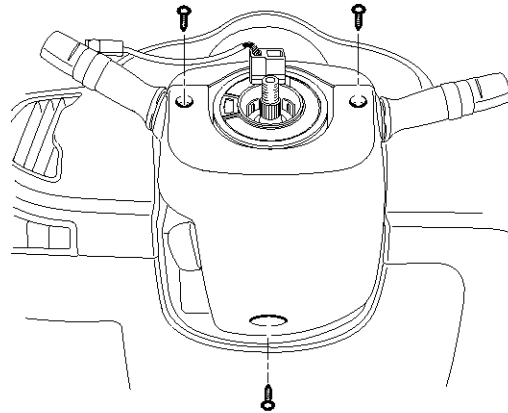

SSLRT0203D

5. Disconnect the clock spring and horn connector, then remove the clock spring.

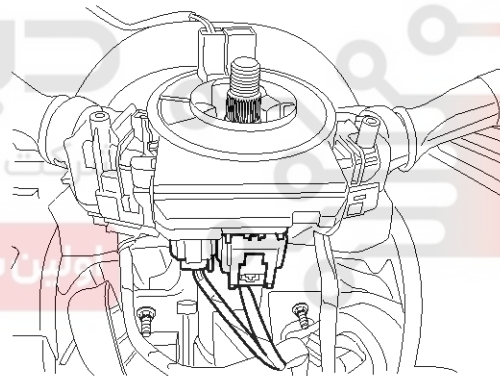

SLMRT0204N

RT-34

Restraint

Inspection


Driver Airbag (DAB)

If any improper parts are found during the following inspection, replace the airbag module with a new one.

⚠ CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

1. Check pad cover for dents, cracks or deformities.
2. Check the airbag module for denting, cracking or deformation.
3. Check hooks and connectors for damage, terminals for deformities, and harness for binds.
4. Check airbag inflator case for dents, cracks or deformities.

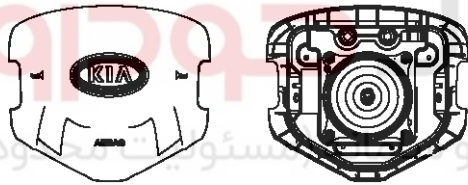


SSLRT0206D

5. Install the airbag module to the steering wheel to check for fit or alignment with the wheel.

Clock Spring

1. If, as a result of the following checks, even one abnormal point is discovered, replace the clock spring with a new one.
2. Check connectors and protective tube for damage, and terminals for deformities.

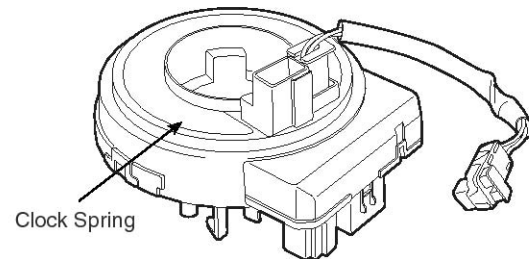


SHMRT9003L

Airbag Module

RT-35

Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable from battery and wait for at least three minutes before beginning work.
3. Connect the clock spring harness connector and horn harness connector to the clock spring.
4. Set the center position by setting the marks between the clock spring and the cover into line. Make an array the mark (►◄) by turning the clock spring clockwise to the stop and then 2.0 revolutions counterclockwise.

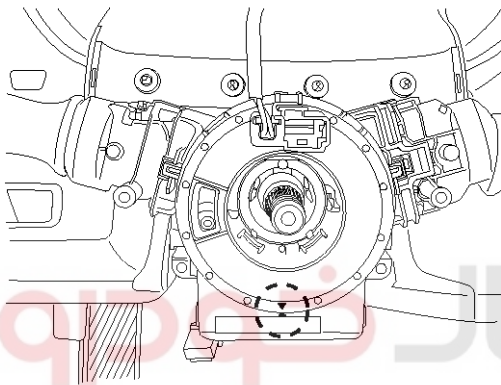


SLMRT0205D

5. Install the steering wheel column cover and the steering wheel. (Refer to the Steering System group-Steering Column and Shaft)
6. Connect the Driver Airbag (DAB) module connector, and then install the Driver Airbag (DAB) module on the steering wheel.

7. Secure the Driver Airbag (DAB) with the new mounting bolts.

Tightening torque :

7.8 ~ 10.8 Nm (0.8 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb.ft)

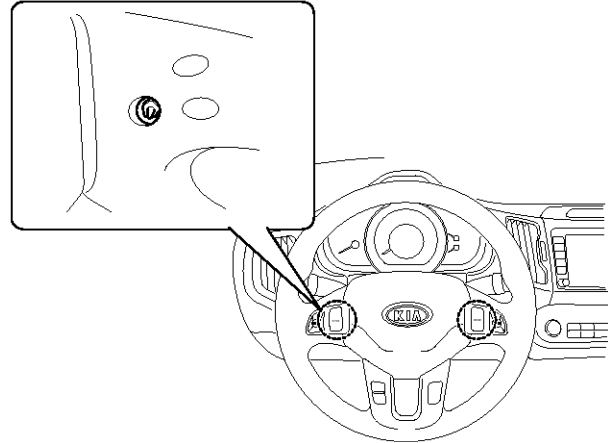

SSLRT0201D

8. Connect the battery negative cable.
9. After installing the airbag, confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.
 - Make sure horn button works.

RT-36

Restraint

Passenger Airbag (PAB) Module


Description

The passenger airbag (PAB) is installed inside the crash pad and protects the front passenger in the event of a frontal crash. The SRSCM determines if and when to deploy the PAB.

⚠ CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

Components

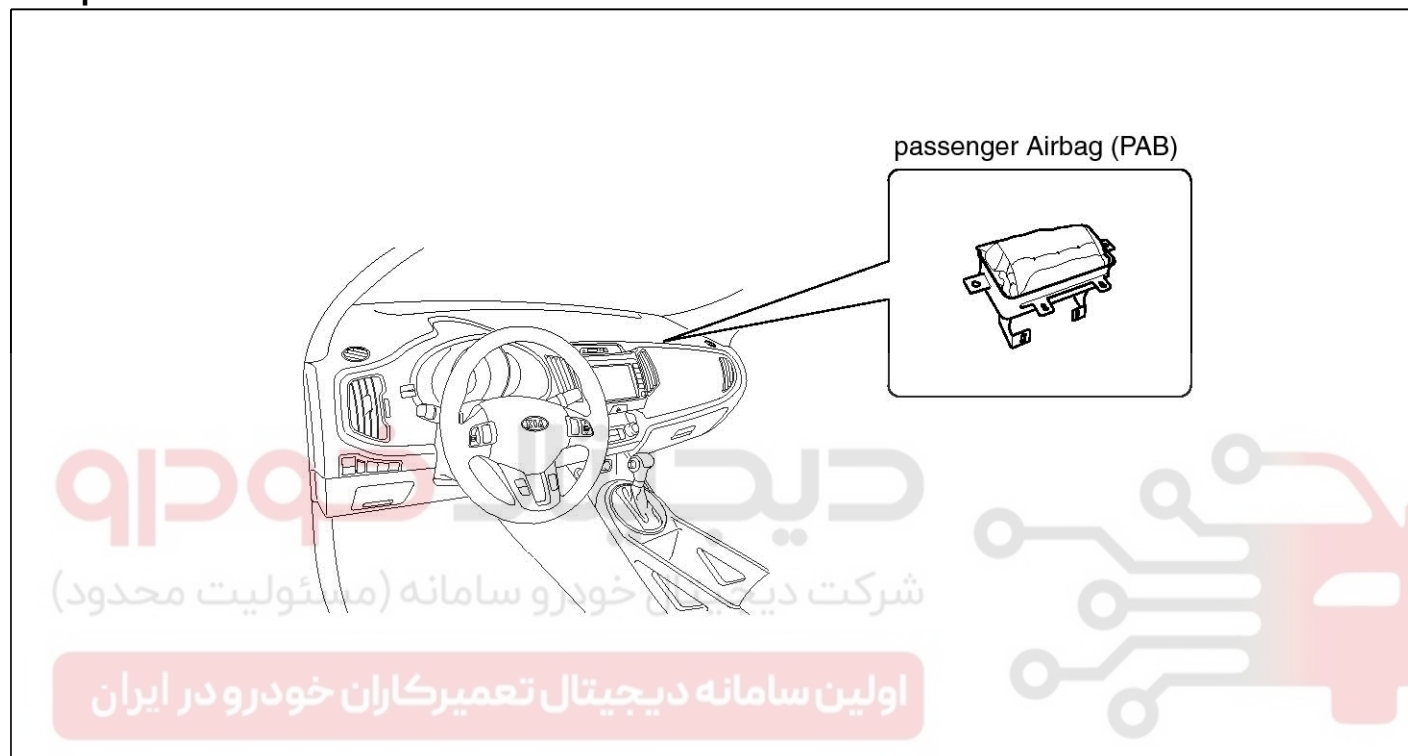


SSLRT1220L

Airbag Module

RT-37

Removal

1. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
2. Remove the crash pad garnish. (Refer to the Body group- crash pad).
3. Disconnect the passenger airbag connector (A) and remove the PAB mounting bolt (B).

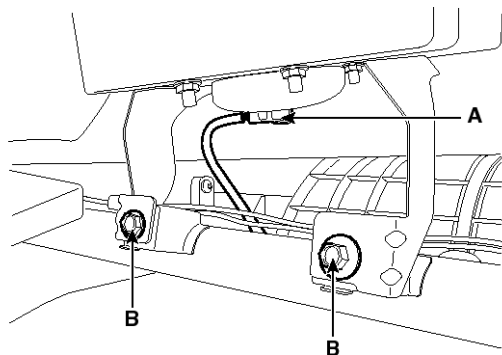

SSLRT0221D

4. Remove the crash pad. (Refer to the Body group- crash pad).

NOTICE

Replace the crash pad which is damaged while PAB is deployed.

5. Remove the heater duct from the crash pad.
6. Remove the mounting nuts(4EA) from the crash pad. Then remove the passenger airbag.

CAUTION


The removed airbag module should be stored in a clean, dry place with the airbag cushion up.

Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable from battery and wait for at least three minutes before beginning work.
3. Place a passenger airbag on the crash pad and tighten the passenger airbag mounting nuts.

Tightening torque:

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)

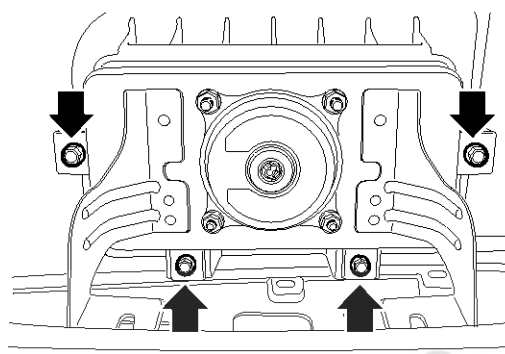

SSLRT0222D

4. Install the heater duct to the crash pad.
5. Install the crash pad. (Refer to the Body group- crash pad)
6. Tighten the passenger airbag mounting bolt.

Tightening torque:

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)

7. Connect the passenger airbag harness connector to the SRS main harness connector.
8. Reinstall the crash pad garnish. (Refer to the Body group- crash pad)
9. Reconnect the battery negative cable.
10. After installing the passenger airbag (PAB), confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

RT-38

Restraint

Side Airbag (SAB) Module

Description

The Side Airbags (SAB) are installed inside the front seat and protects the driver and passenger from danger when side crash occurs. The SRSCM determines deployment of side airbag by using Side Impact Sensor (SIS) signal.

⚠ CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

Components



SSLRT1240N

Airbag Module

RT-39

Removal

NOTICE

The side airbag cannot be disassembled from the seat back assembly, so replace assembly when replacing the side airbag.

1. Disconnect the battery negative cable and wait for at least 3 minutes before beginning work.
2. Remove the front seat assembly. (Refer to the Body group- Seat)
3. Remove the seat back assembly. (Refer to the Body group- Seat)


Installation

CAUTION

Be sure to install the harness wires not to be pinched or interfered with other parts.

NOTICE

- Do not open the lid of the side airbag cover.
 - Make sure that the airbag assembly cover is installed properly. Improper installation may prevent the proper deployment.
1. Remove the ignition key from the vehicle.
 2. Disconnect the battery negative cable and wait for at least three minutes.
 3. Install the new seat back assembly. (Refer to the Body group- Seat)
 4. Install the front seat assembly. (Refer to the Body group- Seat)
 5. Recline and slide the front seat forward fully, make sure the harness wires are not pinched or interfering with other parts.
 6. Reconnect the battery negative cable.
 7. After installing the side airbag (SAB), confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

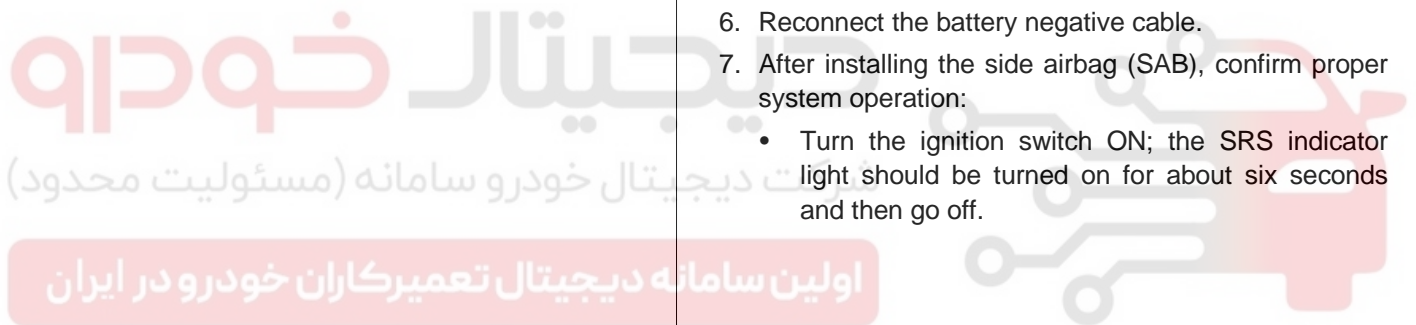

RT-40

Restraint

Curtain Airbag (CAB) Module


Description

Curtain airbags are installed inside the headliner (LH and RH) and protect the driver and passenger from danger when side crash occurs. The SRSCM determines deployment of curtain airbag by using side impact sensor (SIS) signal.

⚠ CAUTION

Never attempt to measure the circuit resistance of the airbag module even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

Components

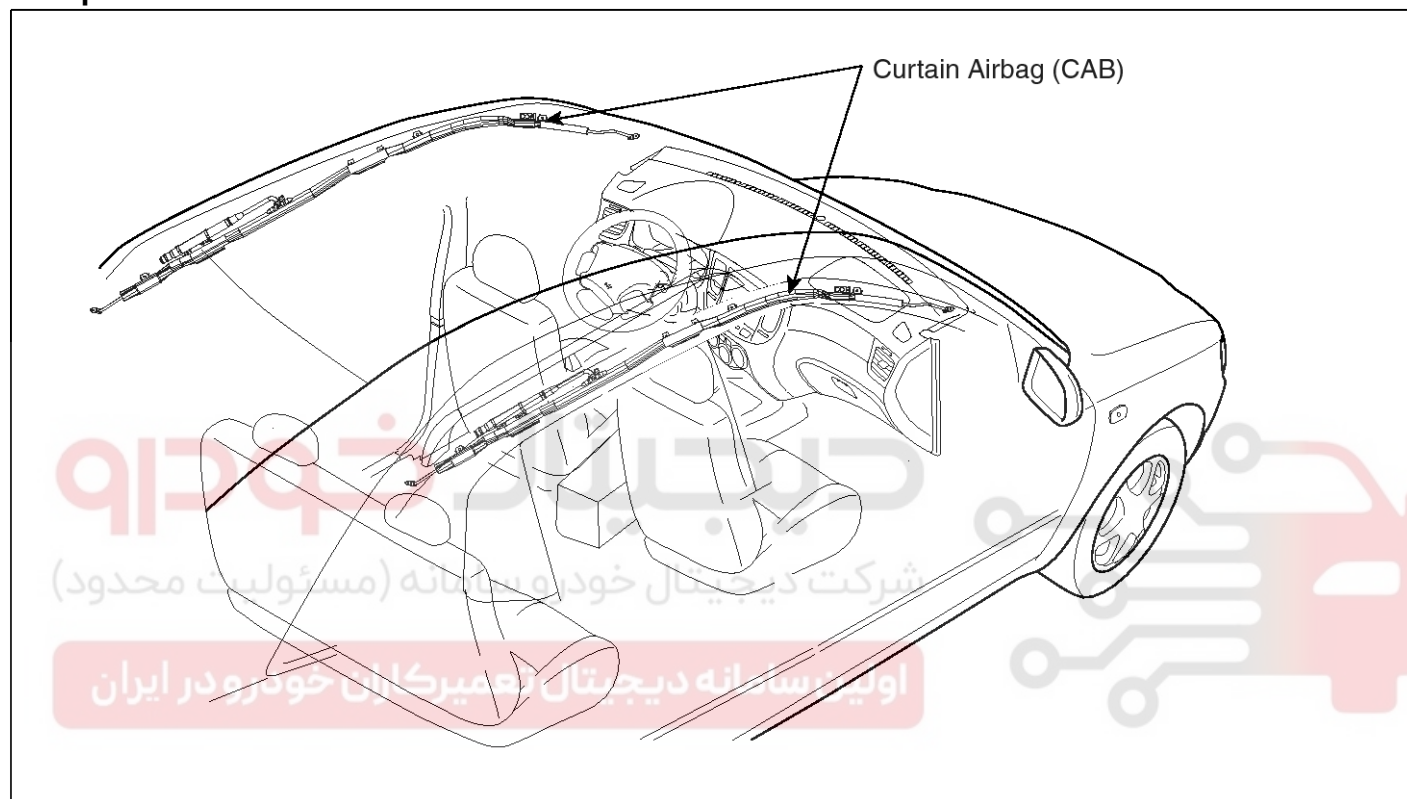


SXMRT0260L

Airbag Module

RT-41

Removal

1. Disconnect the battery negative cable and wait for at least 3 minutes before beginning work.
2. Remove the roof trim. (Refer to the Body group-Interior)
3. Disconnect the curtain airbag harness connector (A).

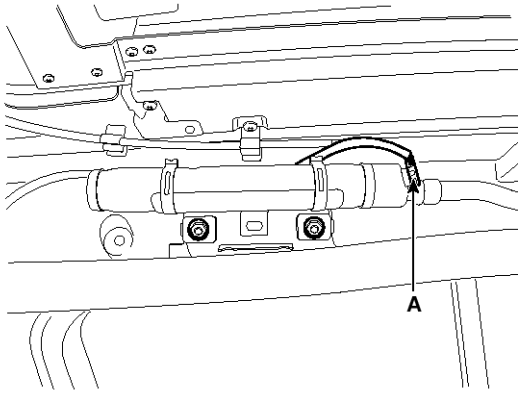

SSLRT0261D

4. After loosening the mounting bolts and nuts remove the curtain airbag.

Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes.
3. Tighten the curtain airbag mounting bolts.

Tightening torque:

7.0 ~ 9.0 N.m (0.7 ~ 0.9 kgf.m, 5.1 ~ 6.6 lb-ft)

⚠ CAUTION

- **Never twist the airbag module when installing it. If the module is twisted, airbag module may operate abnormally.**
4. Connect the curtain airbag connector.
 5. Install the roof trim. (Refer to the Body group-Interior)
 6. Reconnect the battery negative cable.
 7. After installing the curtain airbag (CAB), confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.



RT-42

Restraint

Airbag Module Disposal

Airbag Disposal

Special Tool Required

Deployment tool 0957A-34100A

Before scrapping any airbags or side airbags (including those in a whole vehicle to be scrapped), the airbags or side airbags must be deployed. If the vehicle is still within the warranty period, before deploying the airbags or side airbags, the Technical Manager must give approval and/or special instruction. Only after the airbags or side airbags have been deployed (as the result of vehicle collision, for example), can they be scrapped. If the airbags or side airbags appear intact (not deployed), treat them with extreme caution. Follow this procedure.

Deploying Airbags In The Vehicle

If an SRS equipped vehicle is to be entirely scrapped, its airbags or side airbags should be deployed while still in the vehicle. The airbags or side airbags should not be considered as salvageable parts and should never be installed in another vehicle.

1. Turn the ignition switch OFF, and disconnect the battery negative cable and wait at least three minutes.
2. Confirm that each airbag or side airbag is securely mounted.
3. Confirm that the special tool is functioning properly by following the check procedure.
 - 1) Driver's Airbag :
 - Remove the driver's airbag and install the SST (0957A-38500).
 - Install the driver's airbag on the steering wheel.
 - 2) Front Passenger's Airbag :
 - Remove the glove box housing, and then disconnect the connector between the front passenger's airbag and SRS main harness.
 - Install the SST(0957A-3S100).
 - 3) Side Airbag :
 - Disconnect the 2P connector between the side airbag and wire harness.
 - Install the SST (0957A-3F100).

4) Curtain Airbag :

- Disconnect the 2P connector between the curtain airbag and wire harness.
- Install the SST (0957A-3S100).

5) Seat Belt Pretensioner :

- Disconnect the 2P connector from the seat belt pretensioner.
- Install the SST (0957A-38500).

6) Anchor Pretensioner :

- Disconnect the 2P connector from the anchor pretensioner.
- Install the SST (0957A-38500).

4. Place the deployment tool at least thirty feet (10meters) away from the airbag.
5. Connect a 12 volt battery to the tool.
6. Push the tool's deployment switch. The airbag should deploy (deployment is both highly audible and visible: a loud noise and rapid inflation of the bag, followed by slow deflation)
7. Dispose of the complete airbag. No parts can be reused. Place it in a sturdy plastic bag and seal it securely.

Deploying the Airbag Out of the Vehicle

If an intact airbag has been removed from a scrapped vehicle, or has been found defective or damage during transit, storage or service, it should be deployed as follows:

1. Confirm that the special is functioning properly by following the check procedure on this page.
2. Position the airbag face up, outdoors on flat ground at least thirty feet (10meters) from any obstacles or people.

Disposal of Damaged Airbag

1. If installed in a vehicle, follow the removal procedure of driver's airbag front passenger's and side airbag.
2. In all cases, make a short circuit by twisting together the two airbag inflator wires.
3. Package the airbag in exactly the same packing that the new replacement part come in.

Seat Belt Pretensioner

RT-43

Seat Belt Pretensioner

Seat Belt Pretensioner (BPT)

Description



The Seat Belt Pretensioners (BPT) are installed inside Center Pillar (LH & RH). When a vehicle crashes with a certain degree of frontal impact, the pretensioner seat belt helps to reduce the severity of injury to the front seat occupants by retracting the seat belt webbing. This prevents the front occupants from thrusting forward and hitting the steering wheel or the instrument panel when the vehicle crashes.

⚠ CAUTION

Never attempt to measure the circuit resistance of the Seat Belt Pretensioner (BPT) even if you are using the specified tester. If the circuit resistance is measured with a tester, the pretensioner will be ignited accidentally. This will result in serious personal injury.

Components

Seat Belt Pretensioner (BPT)

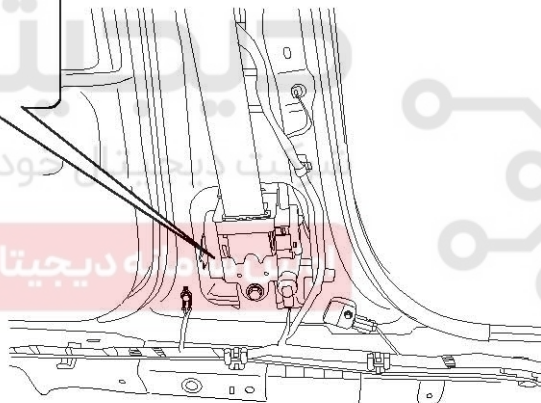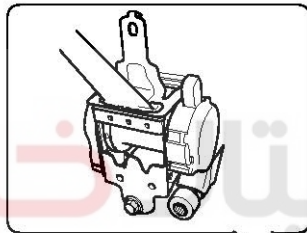


SLMRT0340L

RT-44

Restraint


Removal

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the lower anchor bolt. (Except anchor pretensioner)
3. Remove the seat belt after pushing the lock pin (A). (Anchor pretensioner only)

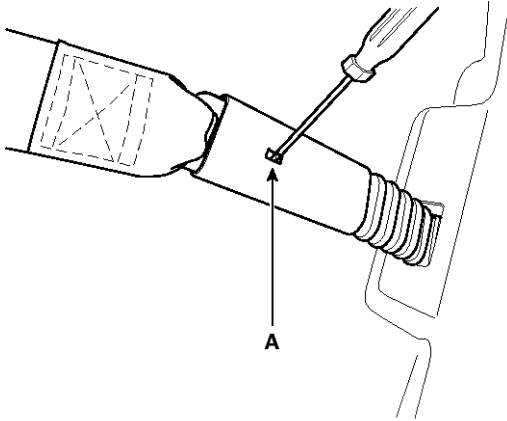

SLMRT0361L

4. Remove the following parts. (Refer to the Body group- Interior trim)
 - Door scuff trim
 - Center pillar trim
5. Remove the upper anchor bolt.
6. Disconnect the Seat Belt Pretensioner connector.

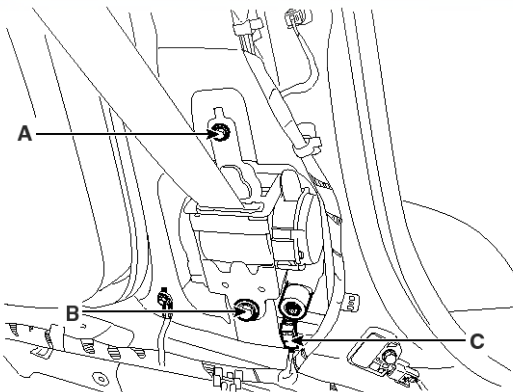

SLMRT0341D

7. Loosen the seat belt pretensioner mounting bolt and remove the seat belt pretensioner.

Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes.
3. Install the Seat Belt Pretensioner (BPT) with a bolt.

Tightening torque:

Bolt B: 39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

4. Connect the Seat Belt Pretensioner (BPT) connector.
5. Install the upper anchor bolts.

Tightening torque:

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

6. Install the following parts. (Refer to the Body group- Interior trim)
 - Center pillar trim
 - Door scuff trim
7. Install the lower anchor bolts. (Except anchor pretensioner)

Tightening torque:

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

8. Insert the seat belt to the anchor pretensioner. (Anchor pretensioner only)
9. Reconnect the battery negative cable.
10. After installing the Seat Belt Pretensioner (BPT), confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

Seat Belt Pretensioner

RT-45

Anchor Pretensioner


Description

Driver Anchor Pretensioner operates as well as Belt Pretensioner at the same time. If it gets into its deploy condition after a collision, it is located at near anchor on driver seat and it is an equipment to make up for the existing short stroke. Driver Anchor Pretensioner is supported by two cables and it is an auxiliary equipment to prevent a driver from breaking away doubly as seat belt is being pulled toward anchor side after a collision.

⚠ CAUTION

Never measure resistance of Anchor Pretensioner front-Driver directly, Current of measuring device may cause unexpected airbag deploy.

Components

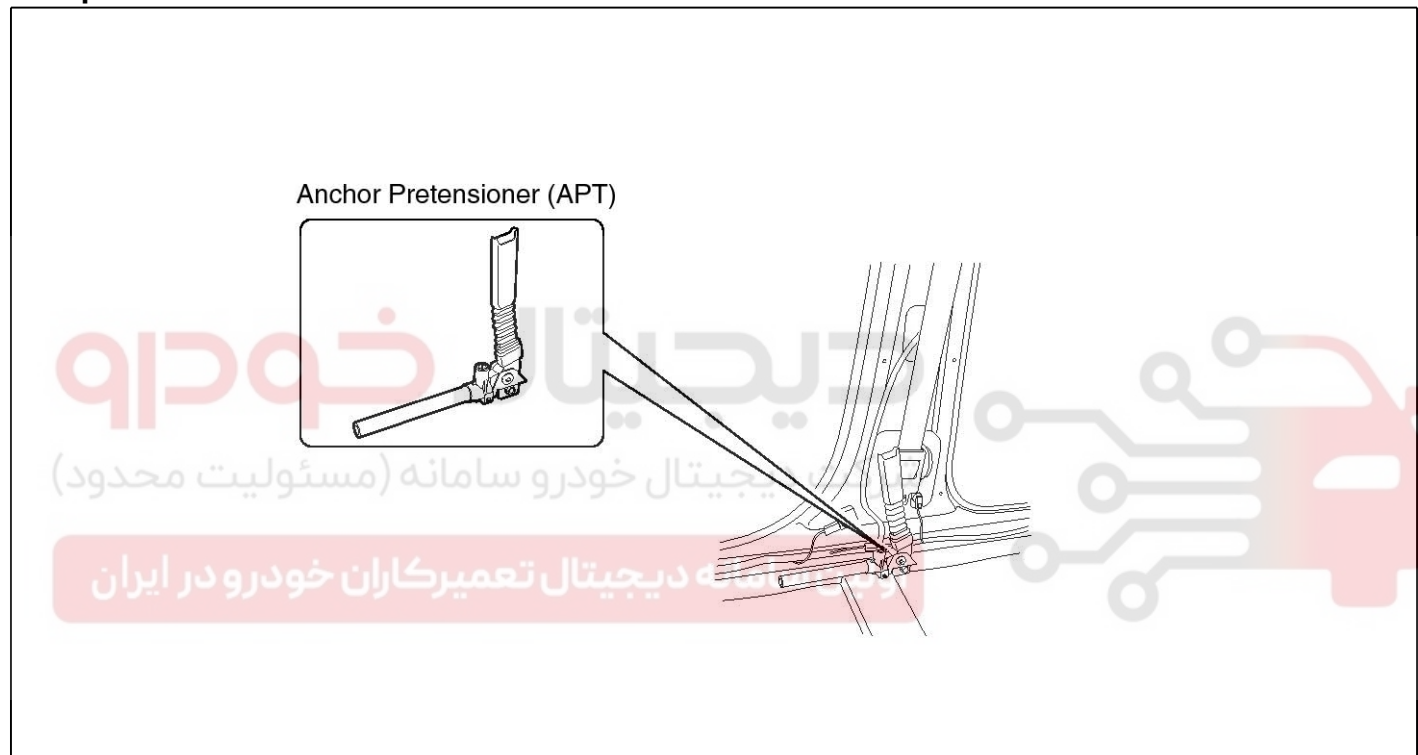


SSLRT1360L

RT-46

Restraint


Removal

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the seat belt after pushing the lock pin (A).

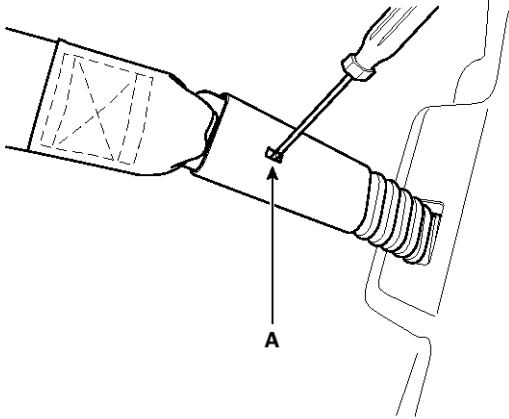

SLMRT0361L

3. Remove the following parts. (Refer to the Body group-Interior trim)
 - Door scuff trim
 - Center pillar trim
4. Disconnect the anchor pretensioner connector (A).

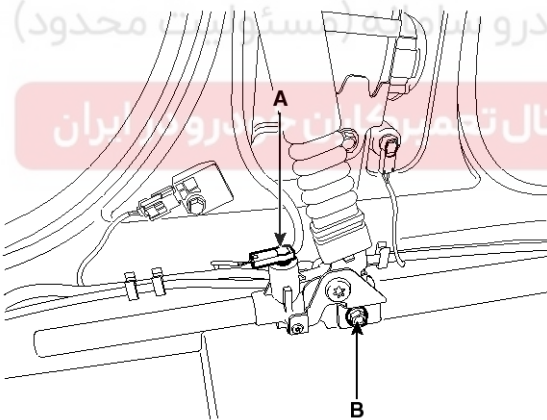

SSLRT1362L

5. Loosen the anchor pretensioner mounting bolt (B) and remove the anchor pretensioner.

Installation

1. Remove ignition key from the vehicle.
2. Disconnect the negative (-) cable from battery and wait for at least three minutes.
3. Install the anchor pretensioner with a bolt.

Tightening torque :

39.2 ~ 53.9 N.m(4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

4. Connect the anchor pretensioner connector.
5. Install the following parts. (Refer to the Body group - Interior trim)
 - Center pillar trim
 - Door scuff trim
6. Insert the seat belt to the anchor pretensioner.

NOTICE*Make sure the lock pin is connected in properly.*

7. Reconnect the battery negative cable.
8. After installing the anchor pretensioner, confirm proper system operation:
 - Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.