

# Automatic Transaxle

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



AT -2

AUTOMATIC TRANSAXLE

**DTC P0560 SYSTEM VOLTAGE****COMPONENT LOCATION** E85AA3A1

KKQE001D

**GENERAL DESCRIPTION** E56BC01C

TCM saves "LEARNING VALUE" and keeps it at certain value. Through this process, the "LEARNING VALUE" is protected from being erased at disconnecting Battery cable and maintaining related components.

**DTC DESCRIPTION** EEB05337

The TCM is detected an unexpected communication error with "EEPROM", the TCM sets this code.

**DTC DETECTING CONDITION** E20771F9

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check Voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Faulty TCM</li> <li>Fault in harness</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Ne is normal</li> <li>Ne 400rpm</li> <li>Vb(Backup-line) 9V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Backup-line 7 Volt</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>10 Sec</li> </ul>	
<b>Fail Safe</b>		

**POWER SUPPLY CIRCUIT INSPECTION**


E5D60902

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "C136-2" of TCM connector.
3. Measure the voltage between terminal "8" of the "C136-2" of TCM harness connector and chassis ground.

---

 Specification : Approx. B+
 

---

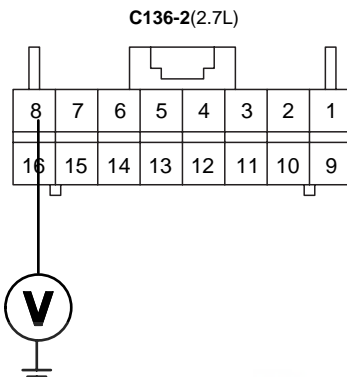

4. Is voltage within specifications?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM's connector or was repaired and TCM memory was not cleared. And Go to Component Inspection procedure.

**NO**

Check the ECU Fuse 10A is installed or not blown.

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**COMPONENT INSPECTION**

EF703ABA

1. Connect scantool to data link connector.
2. Ignition "ON" & Engine "OFF".
3. Monitor the "DTC".
4. Is DTC Re-displayed?

**YES**

Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Go to "Verification of Vehicle Repair" procedure.

## AT -4

## AUTOMATIC TRANSAXLE

## VERIFICATION OF VEHICLE REPAIR E60B29BE

After a repair, it is essential to verify that the fault has been corrected.

1. Connect scan tool and select "Diagnostic Trouble Codes(DTCs)" mode.
2. Using a scantool, Clear DTC.
3. Operate the vehicle within DTC Enable conditions in General information.
4. Are any DTCs present ?

**YES**

Go to the applicable troubleshooting procedure.

**NO**

System performing to specification at this time.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران





## DTC P0605 INTERNAL CONTROL MODULE READ ONLY MEMORY(ROM) ERROR

### COMPONENT LOCATION E7C3E8BA

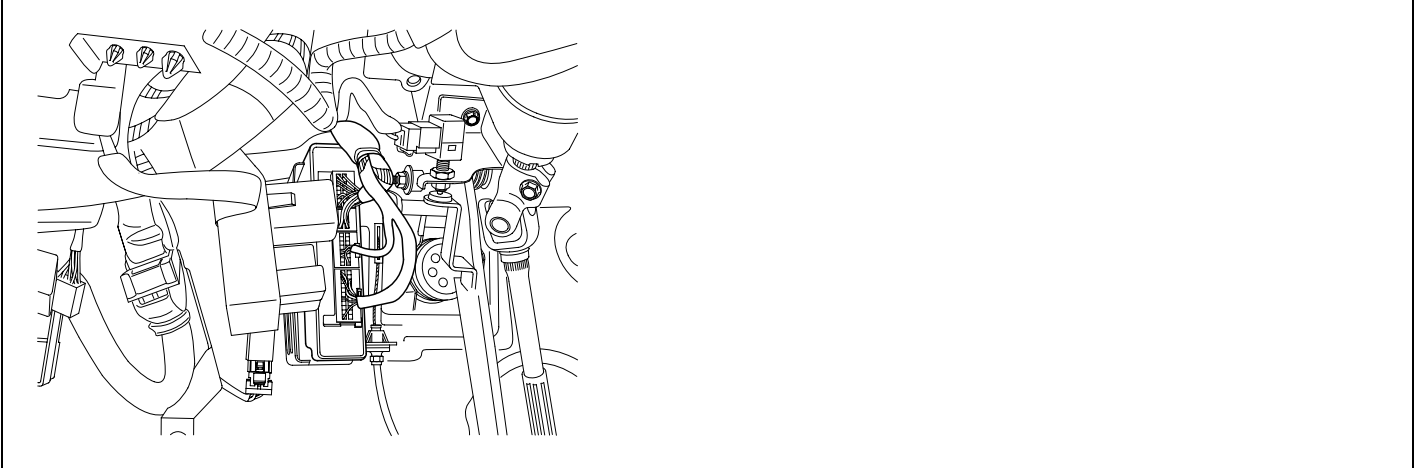

KKQE001D

### GENERAL DESCRIPTION E660E5ED

Refer to DTC P0560.

### DTC DETECTING CONDITION E081EC2C

Item	Detecting Condition & Fail Safe	Possible Cause
DTC Strategy	• Check COMMUNICATION	• Faulty TCM
Enable Conditions	• COMMUNICATION ERROR WITH "EEPROM"	
Threshold Value	• Communication fail	
Diagnostic Time		
Fail safe		

## AT -6

## AUTOMATIC TRANSAXLE

**COMPONENT INSPECTION**

E32AF27E

1. Ignition "ON" & Engine "OFF".
2. Connect scan tool and select "Diagnostic Trouble Codes(DTCs)" mode.
3. Using a scantool, Clear DTC.
4. Using a "SCAN TOOL", Operate "LEARNING " Reset.
5. Perform the "LEARNING"
6. IG OFF IG ON (Repeat 2~3times), and then Monitor the "DTC"
7. Is DTC Re-displayed ?

**YES**

Substitute with a known-good TCM and check for proper operation. If the problem is corrected, replace TCM as necessary and then Go to "Verification of Vehicle Repair" procedure.

**NO**

Fault is intermittent caused by poor contact in the sensor's and/or TCM's connector or was repaired and TCM memory was not cleared. And Go to Component Inspection procedure.

**METHOD OF LEARNING RESET**


IT IS NECESSARY TO LEARNING RESET, AFTER REPLACED TRANSMISSION

1. ERASING CONDITION
  - 1) SELECT LEVER POSITION IS "P" OR "N"
  - 2) VEHICLE SPEED = 0km/h
  - 3) IGNITION "ON" ; ENGINE "OFF"
2. USING A SCAN TOOL, OPERATE "LEARNING" RESET
3. IG "ON" IG "OFF"(2~3 TIMES), AFTER ERASE

**VERIFICATION OF VEHICLE REPAIR**

EA495875

Refer to DTC P0560.

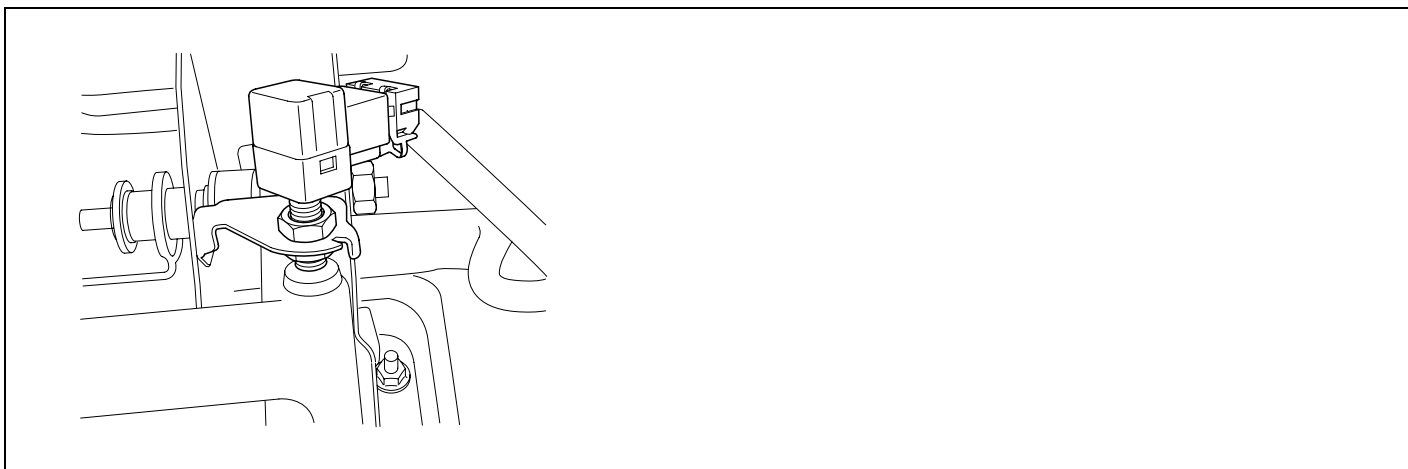**DTC P0703 BRAKE S/W MALFUNCTION****COMPONENT LOCATION** E0EF58DA

EKKE148A

**GENERAL DESCRIPTION** ECBA8599

The HIVEC Automatic Transmission's function, of intelligence control, is based on the Fuzzy Control System. The Fuzzy Control System determines optimal gear positions as related to driver's intention and current driving conditions. The Brake Switch provides important information by deciding whether the vehicle is decelerating by the depression of the brake pedal, or if the speed is decreasing because the vehicle is running on the uphill.

**DTC DESCRIPTION** E5E2BCEA

The TCM(PCM) sets this code if a Brake Switch signal is input continuously, for an extended period of time, when the vehicle is supposed to be running (moving).

**DTC DETECTING CONDITION** E027128C


Item		Detecting Condition & Fail Safe	Possible cause
Case 1	DTC Strategy	• check for Short to Battery	<ul style="list-style-type: none"> <li>• Short to battery in circuit</li> <li>• Faulty Brake SWITCH Adjustment</li> <li>• Faulty Brake SWITCH</li> <li>• Faulty PCM</li> </ul>
	Enable Conditions	• No(Output Speed Sensor) 240rpm • Brake Switch "ON"	
	Threshold value	• Short to Battery	
	Diagnostic Time	• More than 5 min.	
Case 2	DTC Strategy	• check for Voltage range	
	Enable Conditions	• 2.24 V Input voltage 2.76 V	
	Threshold value	• Open	
	Diagnostic Time	• More than 5 min.	
Fail safe		• Intelligent-Shift is inhibited	

AT -8

AUTOMATIC TRANSAXLE

## SCHEMATIC DIAGRAM

E64116F1

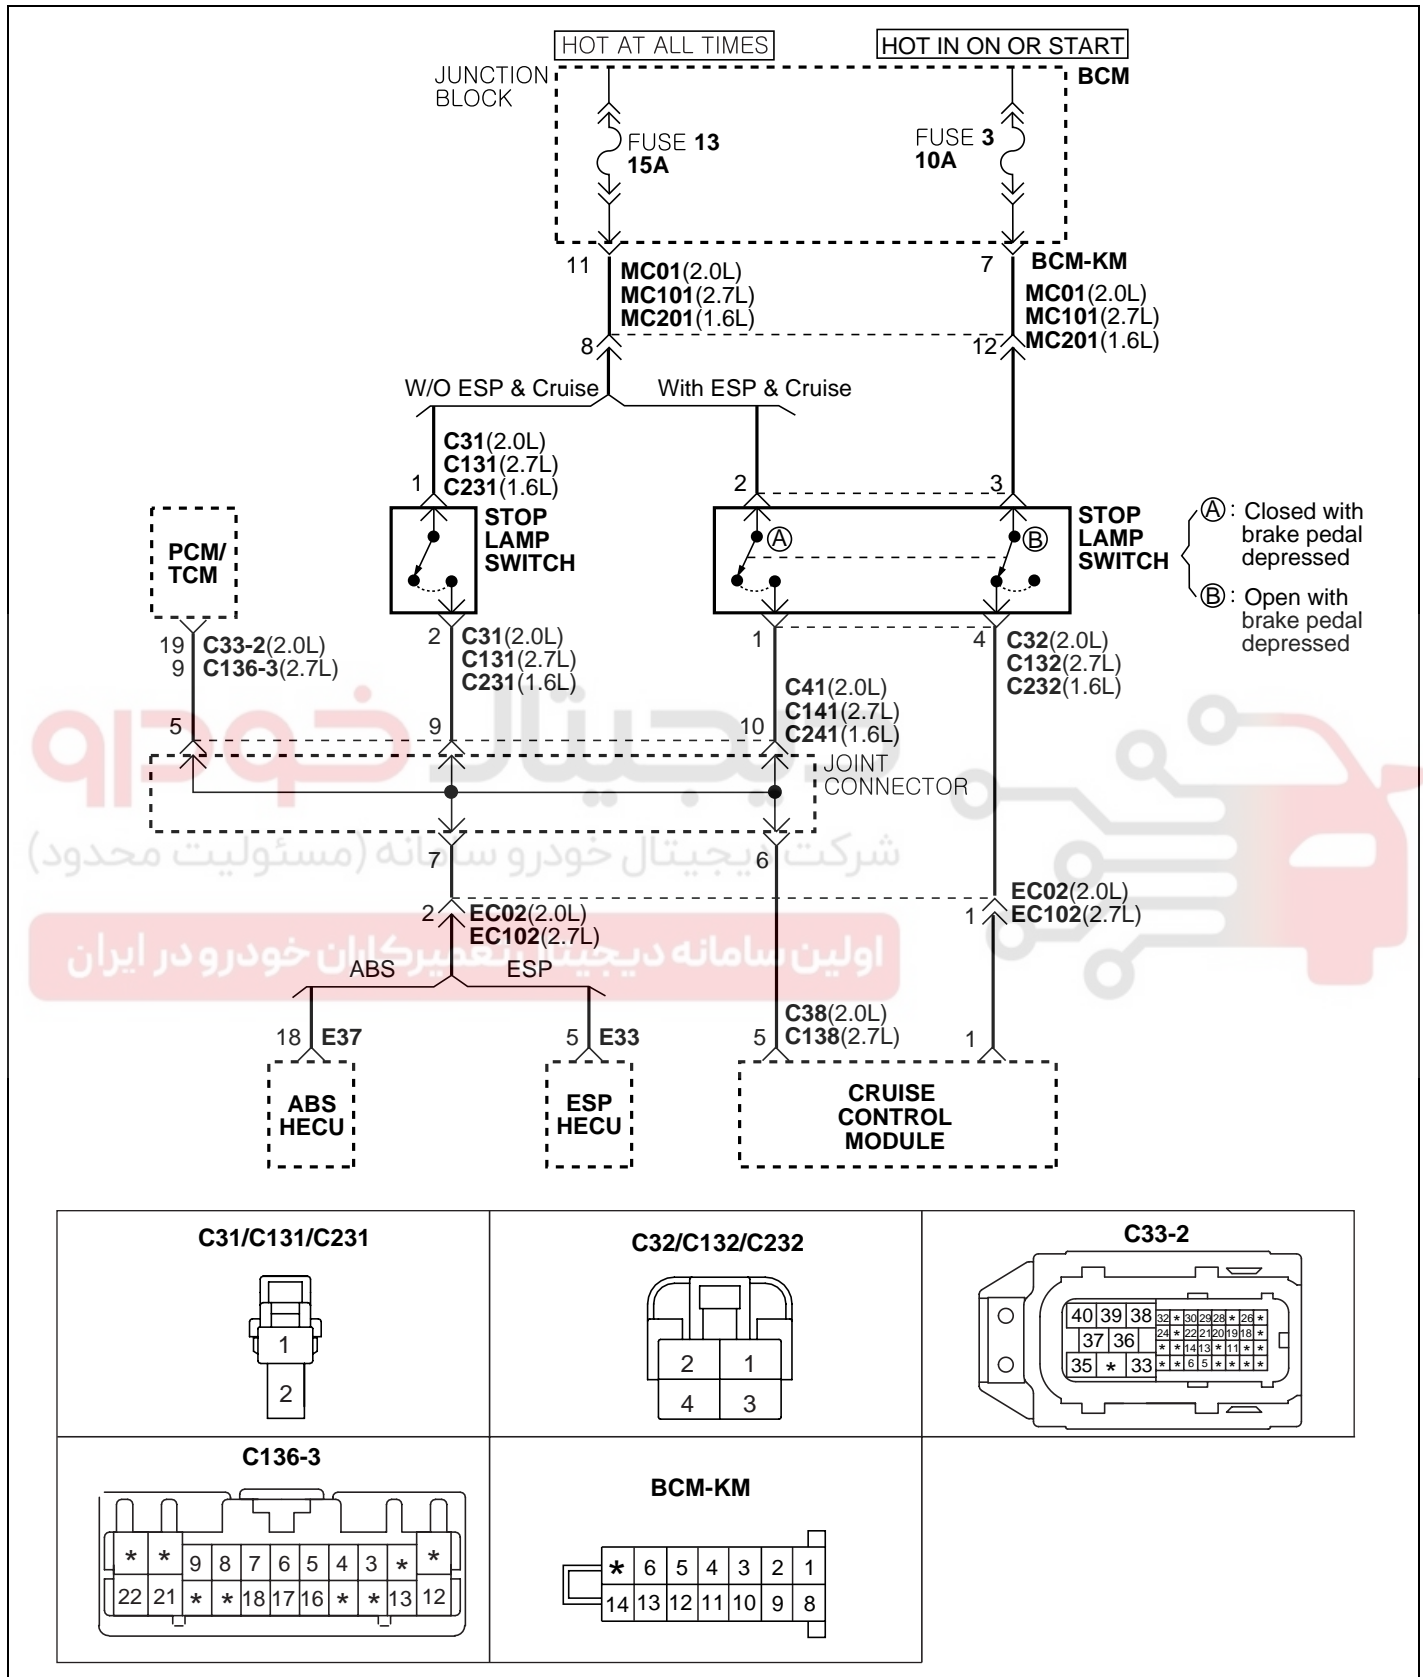

EKOF002A

**MONITOR SCANTOOL DATA** E8F8DE91

1. Connect scantool to data link connector(DLC).
2. Ignition "ON" & Engine "OFF".
3. Monitor the "BRAKE LAMP SWITCH" parameter on the scantool.
4. Depress and release Foot Brake.

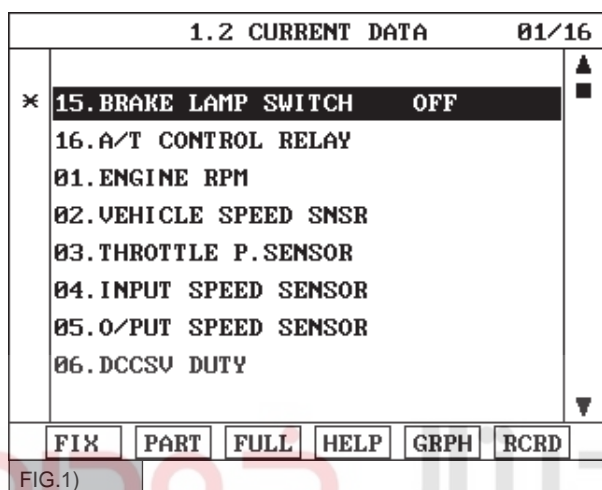


FIG.1)

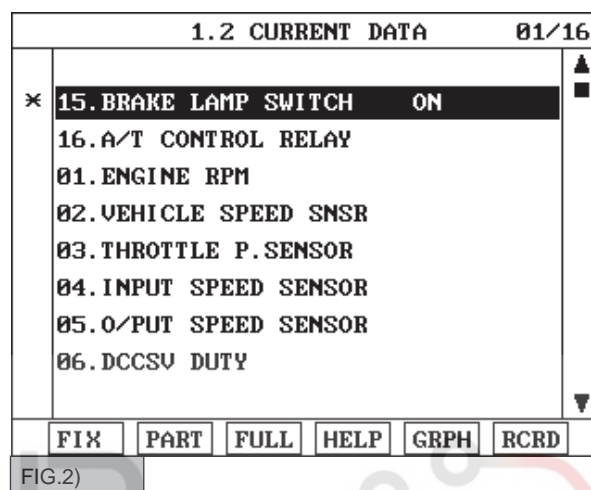


FIG.2)

FIG1) Release foot brake status.

FIG2) Depress foot brake status.

5. Does "STOP LAMP SWITCH" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "TERMINAL & CONNECTOR INSPECTION" procedure.

ELQE001A

## AT -10

## AUTOMATIC TRANSAXLE

## TERMINAL &amp; CONNECTOR INSPECTION

E80346C0

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.


## SIGNAL CIRCUIT INSPECTION

ED8473AB


1. Ignition "ON" & Engine "OFF".
2. Disconnect "BRAKE LAMP SWITCH" connector.
3. Measure voltage between terminal "1" of the sensor harness connector and chassis ground.

Specification : 0V

Without ESP

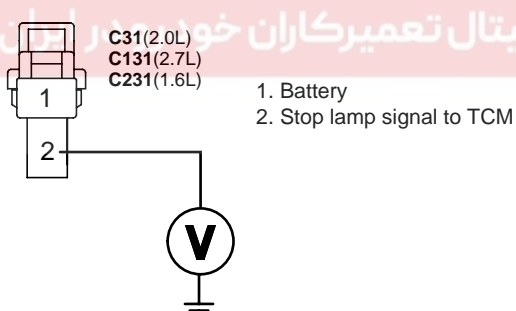

With ESP

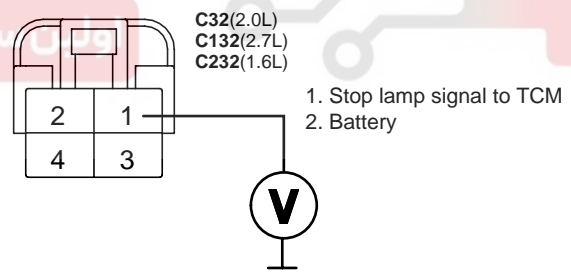

EKOF002B

4. Is voltage within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for Short to power circuit in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.


**COMPONENT INSPECTION**

ECE892FD


## 1. Check "STOP LAMP SWITCH".

- 1) Ignition "OFF".
- 2) Disconnect "STOP LAMP SWITCH" connector and Remove "STOP LAMP SWITCH".
- 3) Measure resistance between terminal "1" and "2" of the STOP LAMP SWITCH when plunger of the STOP LAMP SWITCH is pushed in.

Specification : Infinite

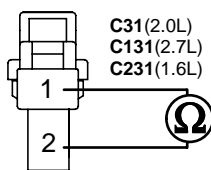**Without ESP**

1. Battery
2. Stop lamp signal to TCM

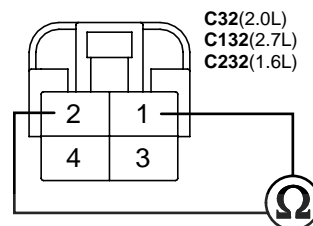**With ESP**

1. Stop lamp signal to TCM
2. Battery

EKOF002C

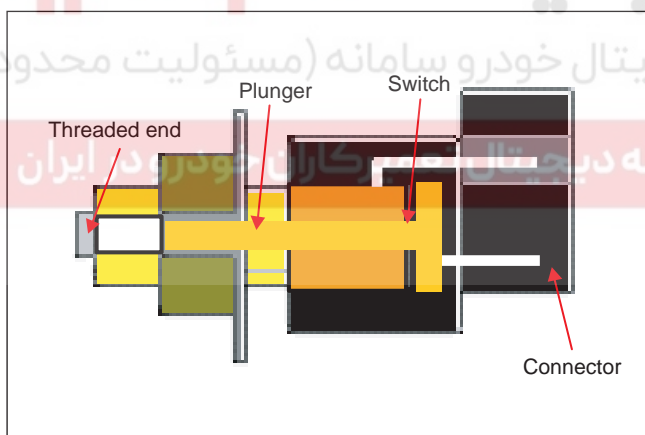


FIG.1)

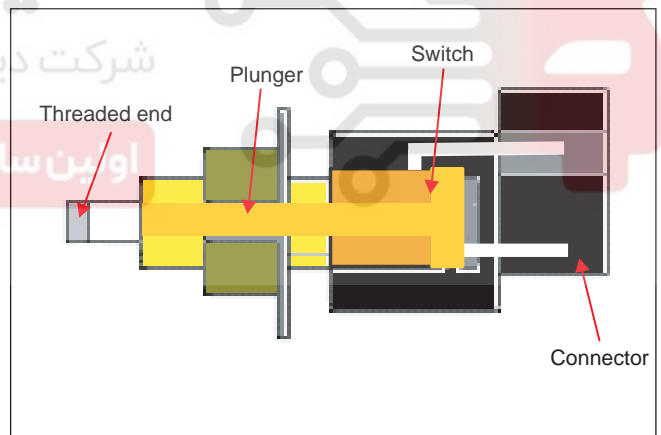


FIG.2)

FIG.1) Brake pedal is released- $\infty\Omega$ FIG.2) Brake pedal is depressed- $0\Omega$ 

ELQE004A

## 4) Is resistance within specifications?

**YES**

Go to "Adjust STOP LAMP SWITCH" as below.

**NO**

Replace "STOP LAMP SWITCH" as necessary and Go to "Verification Vehicle Repair" procedure.

## AT -12

## AUTOMATIC TRANSAXLE

2. Adjust "STOP LAMP SWITCH" Clearance.
  - 1) Ignition "OFF".
  - 2) Reinstall "STOP LAMP SWITCH".
  - 3) Adjust "STOP LAMP SWITCH" Clearance as below.

Specification : 0.9mm(0.04In)

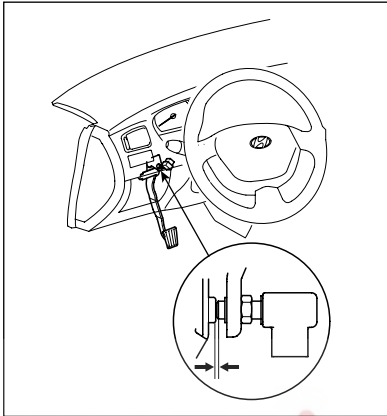


FIG.1)

FIG 1)method of adjust : Screw in the "STOP LAMP SWITCH" until its plunger is fully de-pressed(threaded end (A) touching the pad (B) on the pedal arm). Then back off the switch 3/4 turn to make 0.9mm(0.04In) of clearance between the threaded end and pad Tighten the locknut firmly. Connect the "STOP LAMP SWITCH" connector. Make sure that the stop lamp goes off when the pedal is released.

- 4) After Adjusting, Has problem been solved?

**YES**

Go to "Verification Vehicle Repair" procedure.

**NO**

Substitute with a known-good TCM/PCM and check for proper operation. If the problem is corrected, replace TCM/PCM as necessary and go to "Verification Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR

E1DC157C

Refer to DTC P0560.



## DTC P0707 TRANSAXLE RANGE SWITCH - LOW INPUT

### COMPONENT LOCATION ED6808B0



EKKE108A

### GENERAL DESCRIPTION EF5EB3A8

The Transaxle Range Switch sends the shift lever position information to the TCM(PCM) using a 12V (battery voltage) signal. When the shift lever is in the D (Drive) position the output signal of Transaxle Range Switch is 12V and in all other positions the voltage is 0V. The TCM(PCM) judges the shift lever position by reading all signals, for the Transaxle Range Switch, simultaneously.

### DTC DESCRIPTION EE17C0F4

The TCM(PCM) sets this code when the Transaxle Range Switch has no output signal for more than 30 seconds.

### DTC DETECTING CONDITION E15A117A

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check for No signal</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty TRANSAXLE RANGE SWITCH</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Ne 400rpm and TPS 10%</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>No signal detected</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 30sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Recognition as previous signal               <ul style="list-style-type: none"> <li>When P-D or R-D or D-R SHIFT is detected, it is regarded as N-D or N-R though "N" signal is not detected.</li> <li>When sports mode S/W is ON without P,R,N, D-RANGE signals, it is regarded sports mode.(DTC is not set)</li> </ul> </li> </ul>	


AT -14

AUTOMATIC TRANSAXLE






## SCHEMATIC DIAGRAM

E68D5BFA

## &lt;2.0L Gasoline&gt;

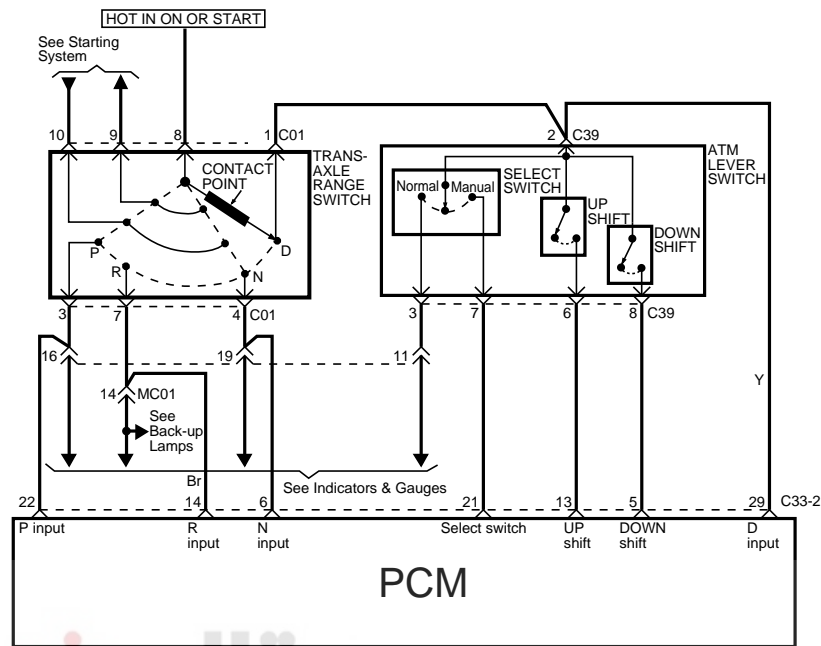


## &lt;2.7L Gasoline&gt;

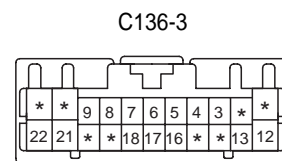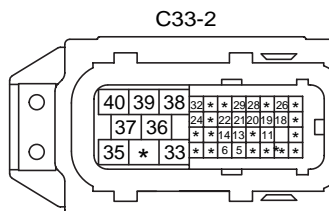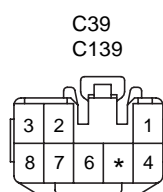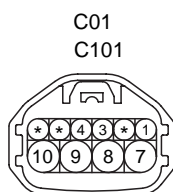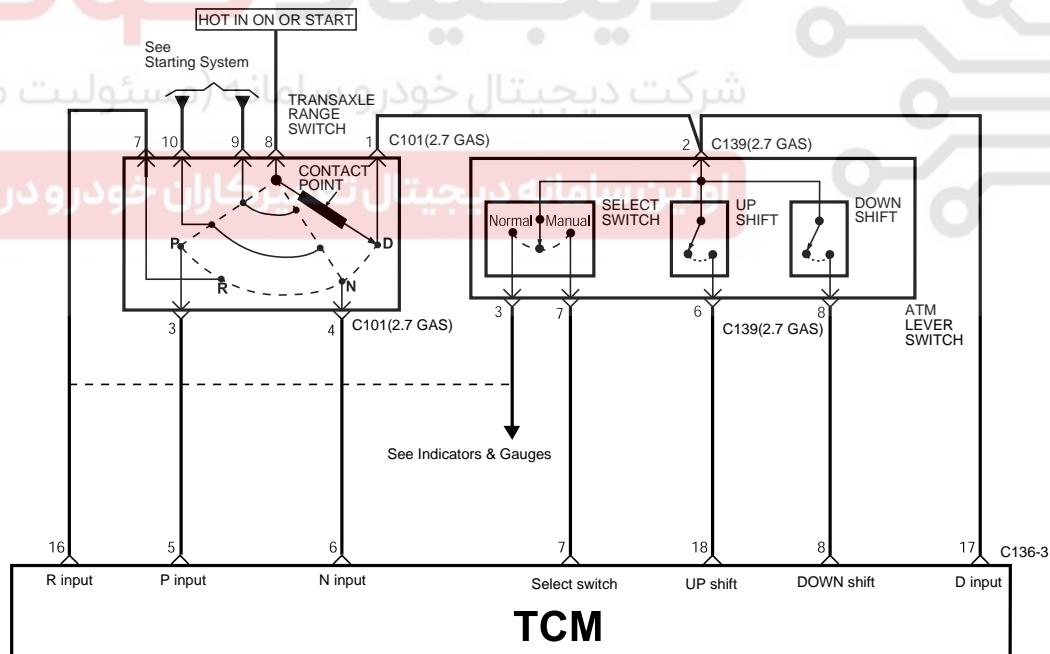

EKOF003A

**MONITOR SCANTOOL DATA** EDBD3894

1. Connect scantool to data link connector(DLC).
2. Ignition "ON" & Engine "OFF".
3. Monitor the "TRANSAXLE RANGE SWITCH" parameter on the scantool.
4. Move selector lever from "P" range to other range.

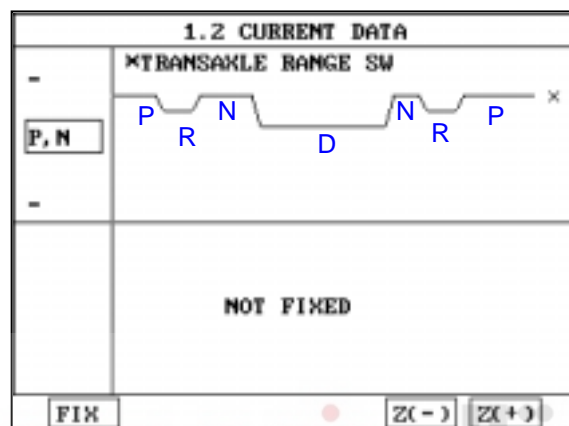

5. Does "TRANSAXLE RANGE SWITCH" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "TERMINAL & CONNECTOR INSPECTION" procedure.

**TERMINAL & CONNECTOR INSPECTION** E475601E

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.

**NO**

Go to "Power Supply circuit inspection" procedure.

## AT -16


## AUTOMATIC TRANSAXLE

## POWER SUPPLY CIRCUIT INSPECTION EB7D4BEE

## 1. CHECK POWER TO RANGE SWITCH

- 1) Disconnect "TRANSAXLE RANGE SWITCH" connector.
- 2) Ignition "ON" & Engine "OFF".
- 3) Measure voltage between terminal "8" of the sensor harness connector and chassis ground.

Specification : approx. B+

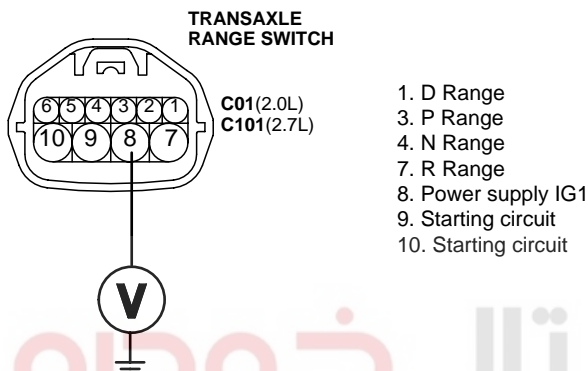

4) Is voltage within specifications?

**YES**

Go to "Signal circuit inspection" procedure.

**NO**

Check that Fuse 24-10A is installed or not blown.

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## SIGNAL CIRCUIT INSPECTION EA4C8EBC

1. Ignition "OFF".
2. Disconnect "TRANSAXLE RANGE SWITCH" and "TCM(PCM)" connector.
3. Measure resistance between each terminal of the sensor harness connector and TCM(PCM)harness connector as below.

Specification :


< 2.0L >

Pin No of "TRANSAXLE RANGE SWITCH"	C01 No1	C01 No3	C01 No4	C01 No7
Pin No of "TCM(PCM)" harness	C33-2 No29	C33-2 No22	C33-2 No6	C33-2 No14
Specification	0	0	0	0

## &lt; 2.7L &gt;

Pin No of "TRANSAXLE RANGE SWITCH"	C101 No1	C101 No3	C101 No4	C101 No7
Pin No of "TCM(PCM)" harness	C136-3 No17	C136-3 No5	C136-3 No6	C136-3 No16
Specification	0	0	0	0


## &lt;2.0L&gt;

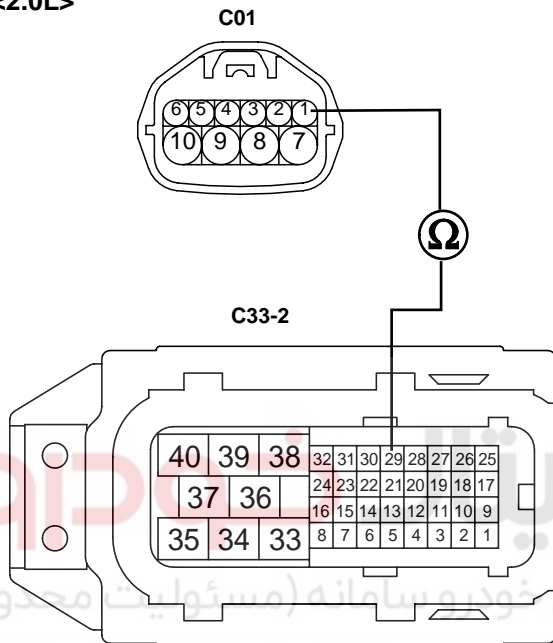

- 1. D Range
- 3. P Range
- 4. N Range
- 7. R Range
- 8. Power supply IG1
- 9. Starting circuit
- 10. Starting circuit

- 22. P Range
- 6. N Range
- 14. R Range
- 29. D Range

## &lt;2.7L&gt;

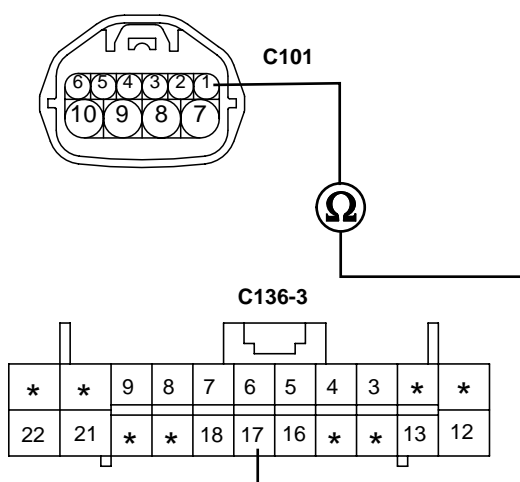

- 1. D Range
- 3. P Range
- 4. N Range
- 7. R Range
- 8. Power supply IG1
- 9. Starting circuit
- 10. Starting circuit

- 5. P Range
- 6. N Range
- 16. R Range
- 17. D Range

EKOF003C

4. Is resistance within specifications?

**YES**

Go to "Component inspection" procedure.

## AT -18

## AUTOMATIC TRANSAXLE


**NO**

Check for Open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**COMPONENT INSPECTION** E17B04EE

1. Ignition "OFF".
2. Remove "TRANSAXLE RANGE SWITCH".
3. Measure the resistance between each terminal of the sensor.

Specification : approx. 0

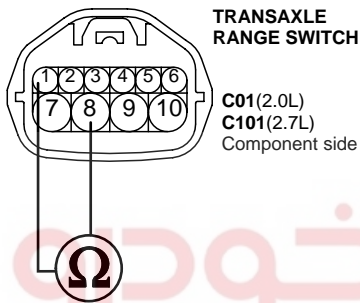

1. D Range
3. P Range
4. N Range
7. R Range
8. Power supply IG1
9. Starting circuit
10. Starting circuit

Range	Terminal Number									
	1	2	3	4	5	6	7	8	9	10
P			○	—				○	○	○
R							○	○		
N				○	—			○	○	○
D	○	—						○		
3					○	—		○		
2		○	—					○		
L					○	—		○		

[ RANGE SWITCH continuity check table (Case of SPORTS MODE vehicle has no 3,2,L range) ]

EKO003E

4. Is resistance within specifications?

**YES**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Replace "TRANSAXLE RANGE SWITCH" as necessary and Go to "Verification Vehicle Repair" procedure.

VERIFICATION OF VEHICLE REPAIR EEA47EE3

Refer to DTC P0560.

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



AT -20

AUTOMATIC TRANSAXLE

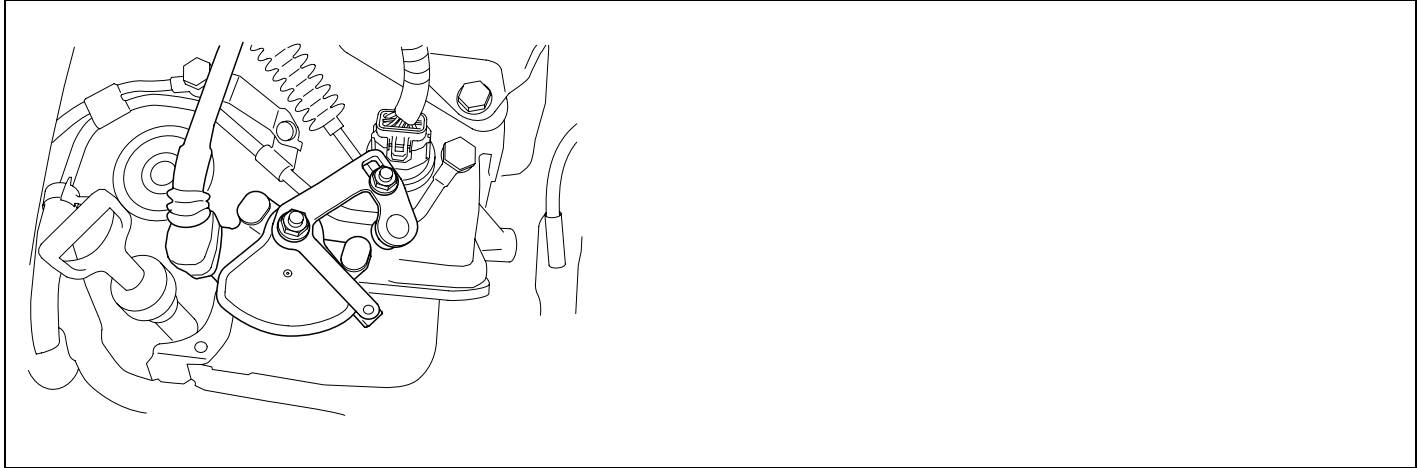**DTC P0708 TRANSAXLE RANGE SWITCH - HIGH INPUT****COMPONENT LOCATION** EABAA8DF

EKKE108A

**GENERAL DESCRIPTION** E9D24013

Refer to DTC P0707.

**DTC DESCRIPTION** E62DFB79

Refer to DTC P0707.

**DTC DETECTING CONDITION** E7C2A1AF

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check for multiple signals</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in TRANSAXLE RANGE SWITCH</li> <li>Faulty TRANSAXLE RANGE SWITCH</li> <li>Faulty PCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Always</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Multiple signal</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.5 sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Recognition as previous signal               <ul style="list-style-type: none"> <li>When signal is input "D" and "N" at the same time, TCM(PCM) regards it as "N" RANGE.</li> <li>After TCM(PCM) Reset, If the if the TCM(PCM) detects multiple signal or no signal, then it holds the 3rd gear position.</li> </ul> </li> </ul>	

**SCHEMATIC DIAGRAM** E72647BC


Refer to DTC P0707.

**MONITOR SCANTOOL DATA** EB050FA5

1. Connect scantool to data link connector(DLC).
2. Ignition "ON" & Engine "OFF".



3. Monitor the "TRANSAXLE RANGE SWITCH" parameter on the scantool.
4. Move selector lever from "P" range to "L" range.

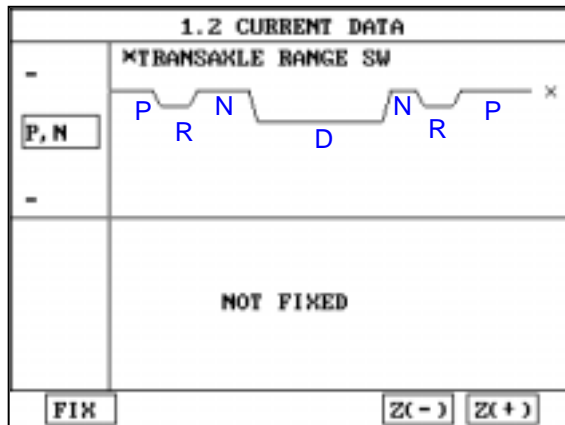

ELQE006A

5. Does "TRANSAXLE RANGE SWITCH" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "TERMINAL & CONNECTOR INSPECTION" procedure.

## TERMINAL & CONNECTOR INSPECTION EFDFOB1D

Refer to DTC P0707.

## POWER SUPPLY CIRCUIT INSPECTION EDB3C3EB


1. Disconnect "TRANSAXLE RANGE SWITCH" connector.
2. Ignition "ON" & Engine "OFF".
3. Measure voltage between each terminal of the sensor harness connector and chassis ground.

Specification :

TERMINAL	1	3	4	7	8	9	10
SPECIFICATION	0V	12V(PULL UP)	12V(PULL UP)	0V	12V	0V	0V

## AT -22

## AUTOMATIC TRANSAXLE

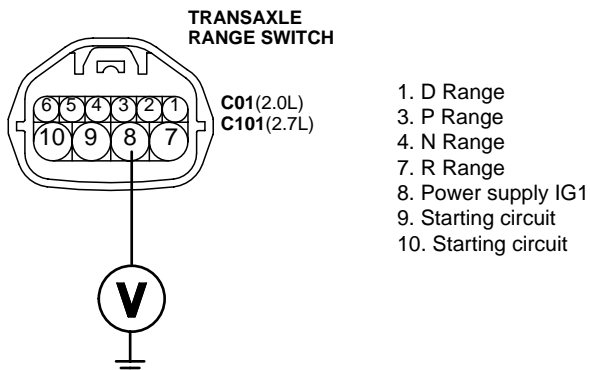

EKOF003B

4. Is voltage within specifications?

**YES**

Go to "Signal circuit inspection" procedure.

**NO**


Check for Short in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

### SIGNAL CIRCUIT INSPECTION

E27FE90D

1. Ignition "OFF".
2. Disconnect "TRANSAXLE RANGE SWITCH" and "TCM(PCM)" connector.
3. Measure resistance between each terminals of the sensor harness to check for Short.

Specification : Infinite

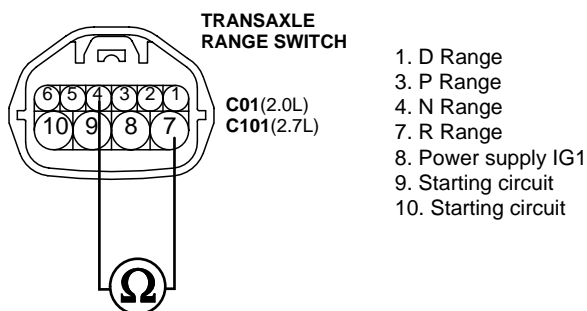

EKOF004B

4. Is resistance within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for Open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**COMPONENT INSPECTION** EA4774CE

Refer to DTC P0707.

**VERIFICATION OF VEHICLE REPAIR** E977C25A

Refer to DTC P0560.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




AT -24

AUTOMATIC TRANSAXLE

**DTC P0711 TRANSAXLE FLUID TEMPERATURE SENSOR RATIONALITY****COMPONENT LOCATION**

EE518085

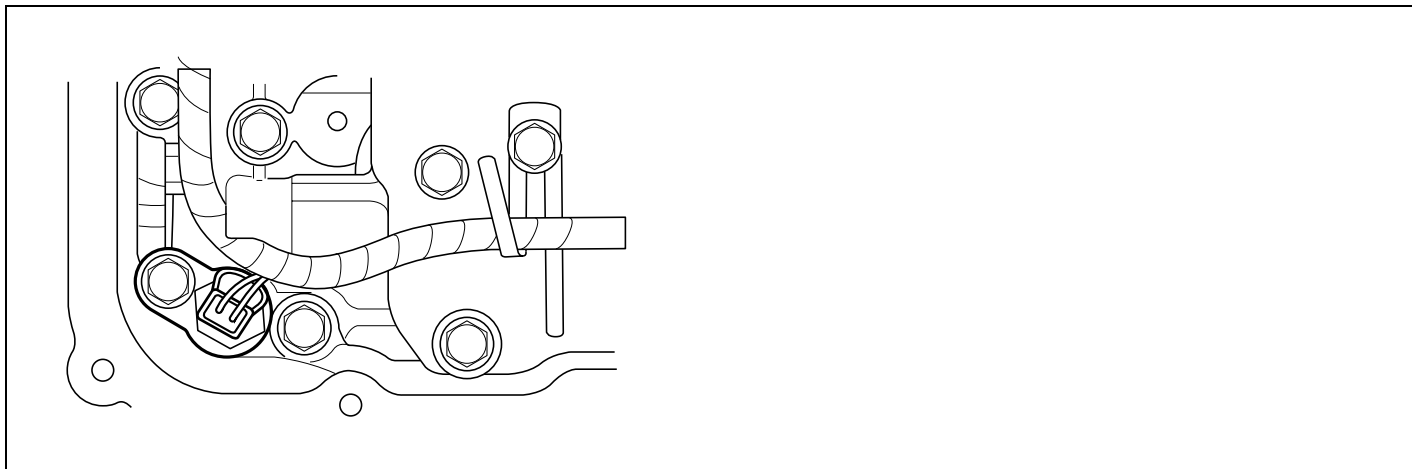

ELQE043A

**GENERAL DESCRIPTION**

EDAE3CF6

The automatic TRANSAXLE fluid(ATF) temperature sensor is installed in the Valve Body. This sensor uses a thermistor whose resistance changes according to the temperature changes. The TCM supplies a 5V reference voltage to the sensor, and the output voltage of the sensor changes when the ATF temperature varies. The automatic TRANSAXLE fluid(ATF) temperature provides very important data for the TCM's control of the Torque Converter Clutch, and is also used for many other purposes.

**DTC DESCRIPTION**

EE6EFE6A

This DTC code is set when the ATF temperature output voltage is lower than a value generated by thermistor resistance, in a normal operating range, for approximately 1 second or longer. The TCM regards the ATF temperature as fixed at a value of 80°C(176°F).

## DTC DETECTING CONDITION

ECFC51C7

[2.0L]

Item		Detecting Condition & Fail Safe	Possible cause
DTC Strategy		<ul style="list-style-type: none"> <li>Check rationality</li> </ul>	<ul style="list-style-type: none"> <li>Sensor signal circuit is short to ground</li> <li>Faulty sensor</li> <li>Faulty PCM</li> </ul>
Enable Conditions	Case 1	<ul style="list-style-type: none"> <li>Ne 1000rpm and No 1000rpm for 5min cumulative and</li> <li>Engine coolant temperature has changed by more than 40°C since start up</li> <li>Other OTS related error is not detected</li> <li>-7°C &lt; A/T oil temp. at start-up and ambient temp. &lt; 50°C OR A/T oil temp. at start-up &lt; 30°C</li> </ul> <p>In condition that Oil TEMP is not changed more than 2°C</p>	
	Case 2	<ul style="list-style-type: none"> <li>OTS output at IG-OFF 50°C</li> <li>The engine coolant temperature at IG-OFF 73.5°C</li> <li>The engine coolant temperature have decreased over 34°C from IG-OFF of the previous driving</li> <li>Intake air temperature &lt; 35°C</li> </ul> <p>In condition that OTS TEMP is not changed morethan 2°C.</p>	
	Case 3	<ul style="list-style-type: none"> <li>No 1000rpm, Ne 1000rpm for 5min cumulative</li> <li>The engine coolant temperature 73.5°C</li> </ul> <p>In condition that OTS output -23.5°C</p>	
Threshold value		<ul style="list-style-type: none"> <li>-</li> </ul>	
Diagnostic Time		<ul style="list-style-type: none"> <li>-</li> </ul>	
Fail Safe		<ul style="list-style-type: none"> <li>Learning control and Intelligent shift are inhibited</li> <li>Fluid temperature is regarded as 80°C</li> </ul>	

## AT -26

## AUTOMATIC TRANSAXLE

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check for ground short</li> </ul>	<ul style="list-style-type: none"> <li>Sensor signal circuit is short to ground</li> <li>Faulty sensor</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions 1) JUMP</b>	<ul style="list-style-type: none"> <li>-4 °F OIL TEMP 248 °F, In condition that Oil TEMP is changed over 10 degrees during 10 sec</li> </ul>	
<b>Enable Conditions 2) STUCK ON HIGH TEMP</b>	<ul style="list-style-type: none"> <li>OIL TEMP 86°F and In case of OIL TEMP is higher 15 degrees than WATER TEMP</li> </ul>	
<b>Enable Conditions 3) STUCK ON LOW TEMP</b>	<ul style="list-style-type: none"> <li>OIL TEMP 86 °F</li> <li>Ne 1000rpm</li> <li>Maintenance time : 10minutes</li> </ul> <p>In condition that OIL TEMP is changed less than 5 degrees</p>	
<b>Threshold value</b>		
<b>Diagnostic Time</b>		
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Learning control and Intelligent shift are inhibited</li> <li>Fluid temperature is regarded as 80°C(176°F)</li> </ul>	

## SPECIFICATION

E0BAFCB2

Temp.[°C(°F)]	Resistance(k )	Temp.[°C(°F)]	Resistance(k )
-40(-40)	139.5	80(176)	1.08
-20(-4)	47.7	100(212)	0.63
0(32)	18.6	120(248)	0.38
20(68)	8.1	140(284)	0.25
40(104)	3.8	160(320)	0.16
60(140)	1.98		

**MONITOR SCANTOOL DATA** EFE17BFD

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "TRANSAXLE FLUID TEMPERATURE SENSOR" parameter on the scantool.

Specification : Increasing Gradually

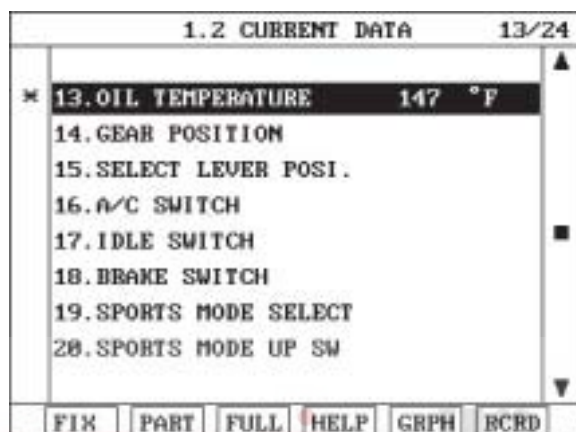


FIG.1)

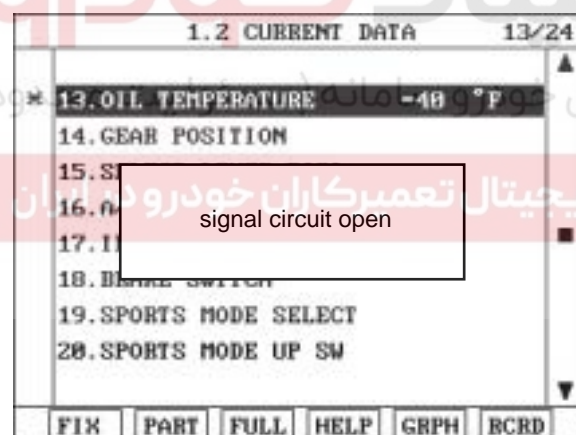


FIG.2)

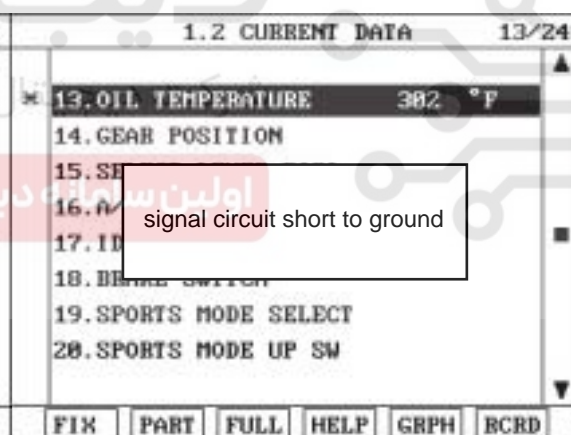


FIG.3)

FIG.1) Normal

FIG.2) Signal harness Open

FIG.3) Signal harness Short

ELQE013A

4. Does "TRANSAXLE FLUID TEMPERATURE SENSOR " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "TERMINAL & CONNECTOR INSPECTION" procedure.

## AT -28

## AUTOMATIC TRANSAXLE

## TERMINAL &amp; CONNECTOR INSPECTION

E9559BCF

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.

**NO**

Go to "Component inspection" procedure.


## COMPONENT INSPECTION

EACAD285

1. CHECK "TRANSAXLE FLUID TEMPERATURE SENSOR"

- 1) Ignition "OFF".
- 2) Disconnect the "TRANSAXLE FLUID TEMPERATURE SENSOR" connector.
- 3) Measure the resistance between terminals "1" and "2" of the "TRANSMISSION FLUID TEMPERATURE SENSOR".

Specification : Refer to " Reference data"

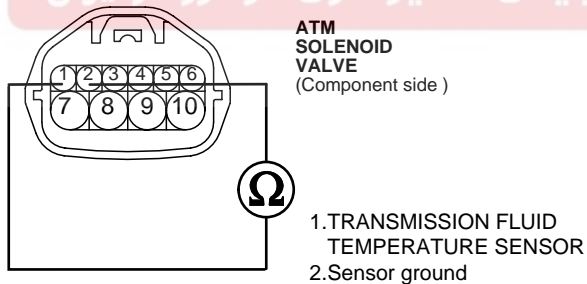

EKOF005A

## [REFERENCE DATA]

Temp.[°C(°F)]	Resistance(k )	Temp.[°C(°F)]	Resistance(k )
-40(-40)	139.5	80(176)	1.08
-20(-4)	47.7	100(212)	0.63
0(32)	18.6	120(248)	0.38
20(68)	8.1	140(284)	0.25
40(104)	3.8	160(320)	0.16
60(140)	1.98		



- 4) Is resistance within specifications?

**YES**

Go to "CHECK PCM/TCM " as below.

**NO**

Replace "TRANSAXLE FLUID TEMPERATURE SENSOR" as necessary and Go to "Verification Vehicle Repair" procedure.

## 2. CHECK TCM

- 1) Ignition "ON" & Engine "OFF".
- 2) Connect "TRANSAXLE FLUID TEMPERATURE SENSOR" connector.
- 3) Install scantool and select a SIMU-SCAN.
- 4) Simulate voltage (0 5V) to "TRANSMISSION FLUID TEMPERATURE SENSOR" signal circuit.

1.7 SIMU-SCAN				1.7 SIMU-SCAN					
12. RED SV DUTY	0.0 %	▲		12. RED SV DUTY	0.0 %	▲			
13. OIL TEMPERATURE	215 °F	■		13. OIL TEMPERATURE	154 °F	■			
14. GEAR POSITION	N, P, R	▼		14. GEAR POSITION	N, P, R	▼			
15. SELECT LEVER POSI.	P, N			15. SELECT LEVER POSI.	P, N				
SIMULATION OF VOLTAGE				SIMULATION OF VOLTAGE					
1.02 V				2.02 V					
( CH B ONLY )				( CH B ONLY )					
METR	SIML	+	-	FIX	METR	SIML	+	-	FIX
FIG.1)					FIG.2)				

FIG.1) INPUT 1.02V → 215°F

FIG.2) INPUT 2.02V → 154°F

※ The values are subject to change according to vehicle model or conditions.

ELQE016A

- 5) Is FLUID TEMP. SENSOR signal value changed according to simulation voltage?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.


## VERIFICATION OF VEHICLE REPAIR

EA11FB15

Refer to DTC P0560.

AT -30

AUTOMATIC TRANSAXLE

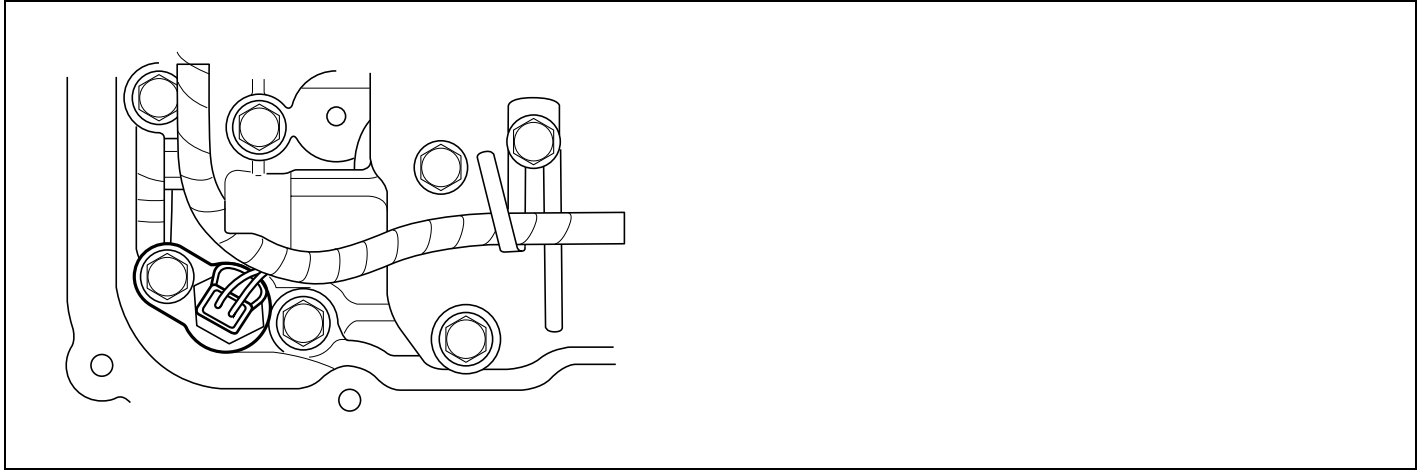**DTC P0712 FLUID(OIL) TEMPERATURE SENSOR CIRCUIT - LOW****COMPONENT LOCATION** E65EF967

ELQE043A

**GENERAL DESCRIPTION** E5A9E11C

Refer to DTC P0711.

**DTC DESCRIPTION** E8F829E9

Refer to DTC P0711.

**DTC DETECTING CONDITION** E7C607BD

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	• Check for Voltage range	<ul style="list-style-type: none"> <li>• Sensor signal circuit is short to ground</li> <li>• Faulty sensor</li> <li>• Faulty PCM</li> </ul>
<b>Enable Conditions</b>	• Always	
<b>Threshold value</b>	• Voltage < 0.05V	
<b>Diagnostic Time</b>	• More than 1sec	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>• Learning control and Intelligent shift are inhibited</li> <li>• Fluid temperature is regarded as 80°C</li> </ul>	

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	• Check for ground short	<ul style="list-style-type: none"> <li>• Sensor signal circuit is short to ground</li> <li>• Faulty sensor</li> <li>• Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	• Continuous	
<b>Threshold value</b>	• Voltage < 0.49V	
<b>Diagnostic Time</b>	• More than 1sec	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>• Learning control and Intelligent shift are inhibited</li> <li>• Fluid temperature is regarded as 80°C(176°F)</li> </ul>	

**SPECIFICATION** EE4469B6

Refer to DTC P0711.

**MONITOR SCANTOOL DATA** EFCDD6B1

Refer to DTC P0711.

**TERMINAL & CONNECTOR INSPECTION** E70141DB

1. Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.


**NO**

Go to "Signal circuit inspection" procedure.

**SIGNAL CIRCUIT INSPECTION** E9A139B4

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "TRANSAXLE FLUID TEMPERATURE SENSOR" connector.
3. Measure the voltage between terminal "1" of the "TRANSMISSION FLUID TEMPERATURE SENSOR" harness connector and chassis ground.

Specification : Approx. 5V

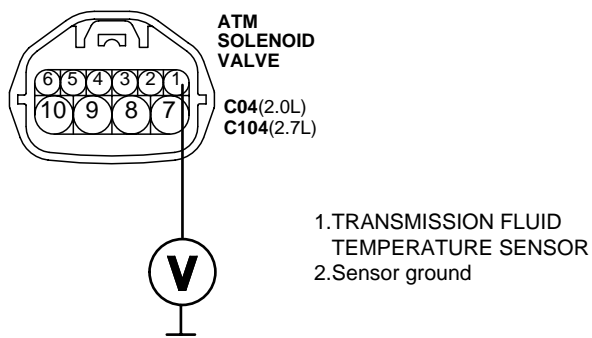

EKO005B

**AT -32****AUTOMATIC TRANSAXLE**

4. Is voltage within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for short to ground in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure .

**COMPONENT INSPECTION** E0AFC479

Refer to DTC P0711.

**VERIFICATION OF VEHICLE REPAIR** E628E699


Refer to DTC P0560.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

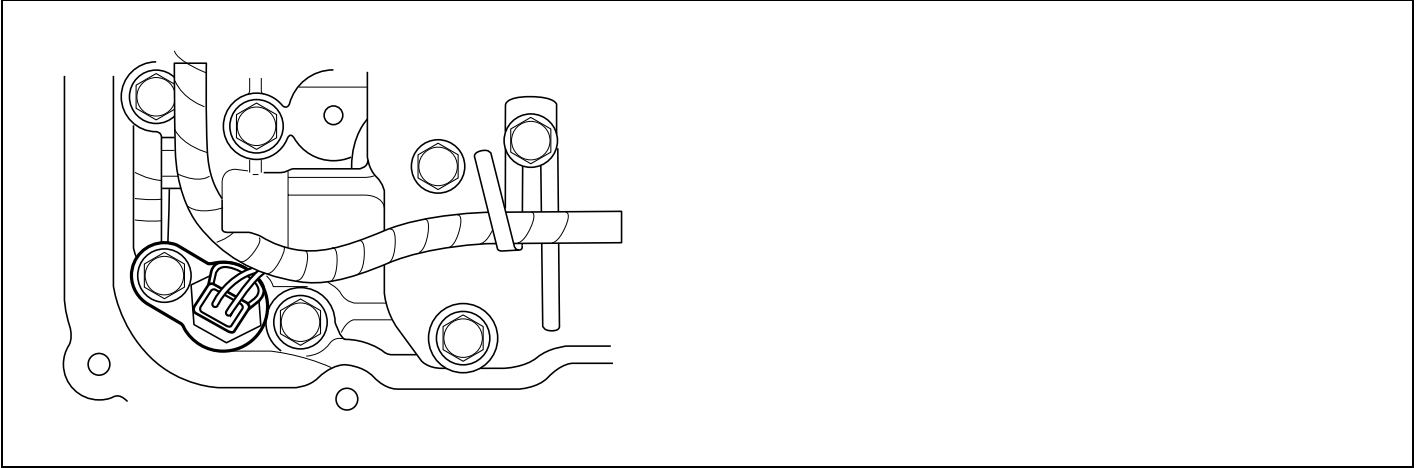

**DTC P0713 FLUID(OIL) TEMPERATURE SENSOR CIRCUIT - HIGH****COMPONENT LOCATION** E8274A08

ELQE043A

**GENERAL DESCRIPTION** E3E17A5E

Refer to DTC P0711.

**DTC DESCRIPTION** E7EA3A9F

Refer to DTC P0711.

**DTC DETECTING CONDITION** EBF7953

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check for Voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Sensor signal circuit is short to ground</li> <li>Faulty sensor</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Always</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Voltage 4.9V</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Learning control and Intelligent shift are inhibited</li> <li>Fluid temperature is regarded as 80°C(176°F)</li> </ul>	

## AT -34

## AUTOMATIC TRANSAXLE

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open in circuit</li> <li>Faulty sensor</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions (1)</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 2000rpm</li> <li>Output speed &gt; 1000rpm</li> <li>Accumulated time in above condition : 10 min</li> </ul>	
<b>Enable Conditions (2)</b>	<ul style="list-style-type: none"> <li>Enable Conditions(1) or</li> <li>Engine speed &gt; 700rpm</li> <li>Engine Coolant Temperature &gt; 35°C</li> <li>Accumulated time in above condition : 60 sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Voltage &gt; 4.5V</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Learning control and Intelligent shift are inhibited.</li> <li>Fluid temperature is regarded as 80°C(176°F)</li> </ul>	

## SPECIFICATION

ECFF1A3F

Refer to DTC P0711.

## MONITOR SCANTOOL DATA

E44E8984

Refer to DTC P0711.

## TERMINAL &amp; CONNECTOR INSPECTION

E4D4DAAF

- Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
- Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.

**SIGNAL CIRCUIT INSPECTION**


EE47F3F4

1. Ignition "OFF".
2. Disconnect the "TRANSAXLE FLUID TEMPERATURE SENSOR" connector.
3. Measure the voltage between terminal "1" of the "TRANSMISSION FLUID TEMPERATURE SENSOR" harness connector and chassis ground.

---

 Specification : Approx. 5V
 

---

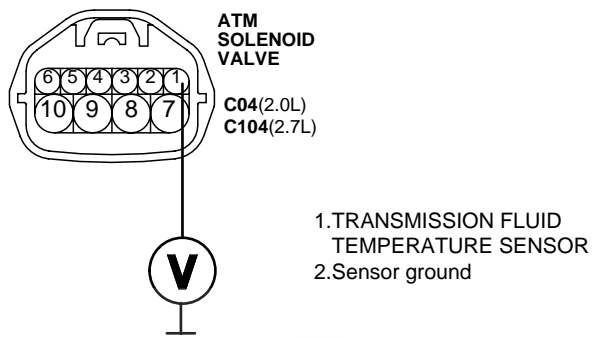

4. Is voltage within specifications?

**YES**

Go to "Ground circuit inspection" procedure.

**NO**

Check for short to ground in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**GROUND CIRCUIT INSPECTION**


EA5EEF12

1. Ignition "OFF".
2. Disconnect the "TRANSAXLE FLUID TEMPERATURE SENSOR" connector.
3. Measure the resistance between terminal "2" of the "TRANSMISSION FLUID TEMPERATURE SENSOR" harness connector and chassis ground.

---

 Specification : Approx. 0
 

---

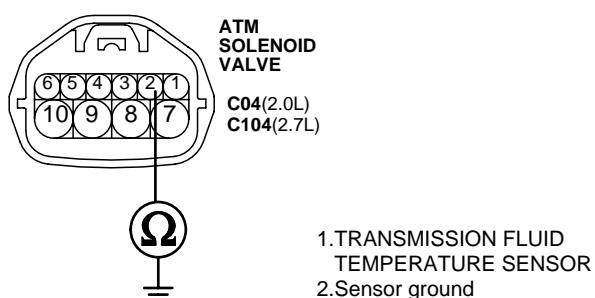

EKOF005D

## AT -36

## AUTOMATIC TRANSAXLE

4. Is resistance within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**


Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## COMPONENT INSPECTION EAE90048

1. CHECK "TRANSAXLE FLUID TEMPERATURE SENSOR"

- 1) Ignition "OFF".
- 2) Disconnect the "TRANSAXLE FLUID TEMPERATURE SENSOR" connector.
- 3) Measure the resistance between terminals "1" and "2" of the "TRANSMISSION FLUID TEMPERATURE SENSOR".

Specification : Refer to " Reference data"

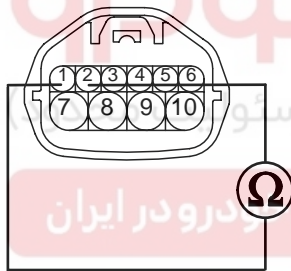

ATM  
SOLENOID  
VALVE  
(Component side)

- 1.TRANSMISSION FLUID  
TEMPERATURE SENSOR
- 2.Sensor ground

EKOF005C

### [REFERENCE DATA]

Temp.[°C(°F)]	Resistance(k )	Temp.[°C(°F)]	Resistance(k )
-40(-40)	139.5	80(176)	1.08
-20(-4)	47.7	100(212)	0.63
0(32)	18.6	120(248)	0.38
20(68)	8.1	140(284)	0.25
40(104)	3.8	160(320)	0.16
60(140)	1.98		

4) Is resistance within specifications?

**YES**

Go to "CHECK PCM/TCM " as below.

**NO**

Replace OIL TEMPERATURE SENSOR as necessary and Go to "Verification Vehicle Repair" procedure.



## 2. CHECK TCM

- 1) Ignition "ON" & Engine "OFF".
- 2) Connect "TRANSAXLE FLUID TEMPERATURE SENSOR" connector.
- 3) Install scantool and select a SIMU-SCAN.
- 4) Simulate voltage (0 ~ 5V) to OIL TEMPERATURE SENSOR signal circuit.

1.7 SIMU-SCAN				1.7 SIMU-SCAN					
12. RED SV DUTY	0.0	%	▲  ■  ▼	12. RED SV DUTY	0.0	%	▲  ■  ▼		
13. OIL TEMPERATURE	215	°F		13. OIL TEMPERATURE	154	°F			
14. GEAR POSITION	N, P, R			14. GEAR POSITION	N, P, R				
15. SELECT LEVER POSI.	P, N			15. SELECT LEVER POSI.	P, N				
SIMULATION OF VOLTAGE				SIMULATION OF VOLTAGE					
1.02 V				2.02 V					
( CH B ONLY )				( CH B ONLY )					
METR	SIML	+	-	FIX	METR	SIML	+	-	FIX

FIG.1)

FIG.2)

FIG.1)

FIG.2)

FIG.1) INPUT 1.02V → 215°F

FIG.2) INPUT 2.02V → 154°F

※ The values are subject to change according to vehicle model or conditions.

ELQE016A

5) Is FLUID TEMP. SENSOR signal value changed according to simulation voltage?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**


Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR** EAACBD5F

Refer to DTC P0560.

AT -38

AUTOMATIC TRANSAXLE

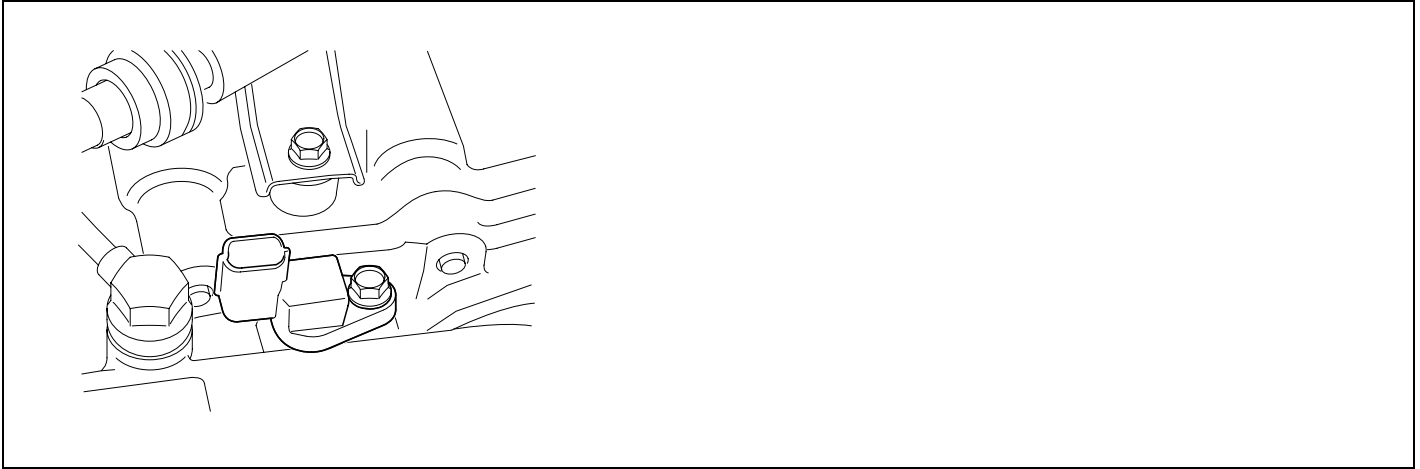**DTC P0715 INPUT SPEED SENSOR CIRCUIT****COMPONENT LOCATION** ED9AC529

BKQE004A

**GENERAL DESCRIPTION** EDB33347

The input(turbine) speed sensor outputs pulse-signals according to the revolutions of the input shaft of the transmission. The TCM determines the input shaft speed by counting the frequency of the pulses. This value is mainly used to control the optimum fluid pressure during shifting.

**DTC DESCRIPTION** EAFC99B9

The TCM sets this code if an output pulse-signal is not detected from the input speed sensor, when the vehicle is running faster than 30 km/h. The Fail-Safe function will be set by the TCM if this code is detected.

**DTC DETECTING CONDITION** E6E7389B

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty INPUT SPEED SENSOR</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed is over 19 Mile/h(30 Km/h) in D,3,2,L(A/T range switch) and SP(SPORTS MODE)</li> <li>But do not check the DTC in below condition               <ul style="list-style-type: none"> <li>A/T oil temp sensor voltage &gt; 4.5 V</li> <li>Engine revolution &lt; 2600 rpm</li> </ul> </li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>No signal</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd or 2nd gear</li> <li>Manual shifting is possible (2 nd 3 rd ,3 rd 2 nd)</li> </ul>	


**SPECIFICATION** E8C4C0FE

Input shaft & Output shaft speed sensor

Type : Hall sensor

Current consumption : 22mA(MAX)

sensor body and sensor connector have been unified as one.

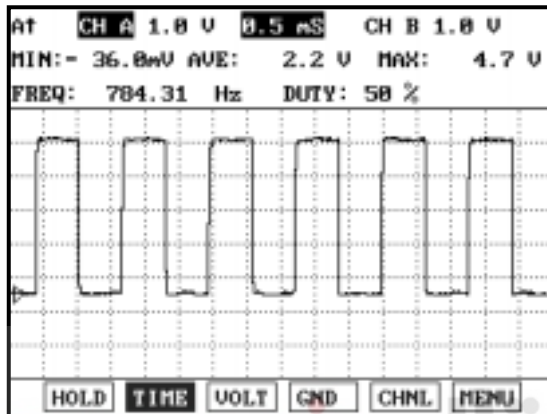**SIGNAL WAVEFORM** EB90CED4**MONITOR SCANTOOL DATA** EDFA484F

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "INPUT SPEED SENSOR" parameter on the scantool.
4. Driving at speed of over 19 Mile/h(30 Km/h).

Specification : Increasing Gradually

## AT -40

## AUTOMATIC TRANSAXLE

1.2 CURRENT DATA		
✖ CRK POSITION SNSR	983 rpm	
✖ INPUT SPEED SNSR	918 rpm	
✖ OUTPUT SPEED SNSR	321 rpm	
✖ VEHICLE SPEED	8 Km/h	
✖ SHIFT POSITION	1	
TCC SLIP(AMOUNT)	49 rpm	
A/T RELAY VOLT	14.3 V	
TRANSAXLE RANGE SW	D	
<div> <div>FIX</div> <div>SCRN</div> <div>FULL</div> <div>PART</div> <div>GRPH</div> <div>HELP</div> </div>		

FIG.1)



1.2 CURRENT DATA		
✖ CRK POSITION SNSR	2082 rpm	
✖ INPUT SPEED SNSR	1957 rpm	
✖ OUTPUT SPEED SNSR	2152 rpm	
✖ VEHICLE SPEED	72 Km/h	
✖ SHIFT POSITION	4	
TCC SLIP(AMOUNT)	105 rpm	
A/T RELAY VOLT	14.3 V	
TRANSAXLE RANGE SW	D	
<div> <div>FIX</div> <div>SCRN</div> <div>FULL</div> <div>PART</div> <div>GRPH</div> <div>HELP</div> </div>		

FIG.2)

FIG.1) Idling

FIG.2) Accelerating

ELQE018A

5. Does "input speed sensor " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector inspection" procedure.

**TERMINAL & CONNECTOR INSPECTION**

EBB9CCCF

- Many malfunctions in the electrical system may be caused from poor harness and terminals. These faults can be caused by interference from other electrical systems and mechanical or chemical damage.
- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
- Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.

**NO**

Go to "Signal Supply circuit inspection" procedure.


**SIGNAL CIRCUIT INSPECTION**

E08B23B9

- Ignition "ON" & Engine "OFF".
- Disconnect the "INPUT SPEED SENSOR" connector.

3. Measure voltage between terminal "2" of the INPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. 5V

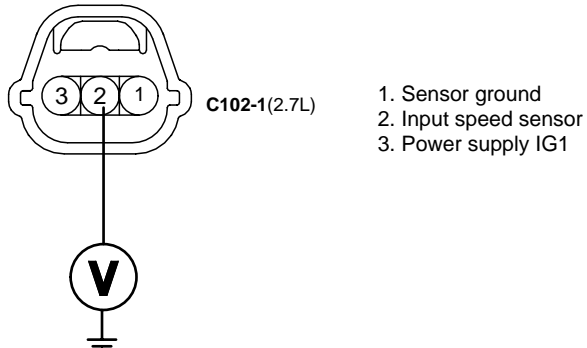

EKOF005E

4. Is voltage within specification?

**YES**

Go to "Power Supply circuit Inspection" procedure.


**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure  
If signal circuit in harness is OK, Go to "Check PCM/TCM" of the "Component Inspection" procedure.

## POWER SUPPLY CIRCUIT INSPECTION E95A2290

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "INPUT SPEED SENSOR" connector.
3. Measure voltage between terminal "3" of the INPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. B+

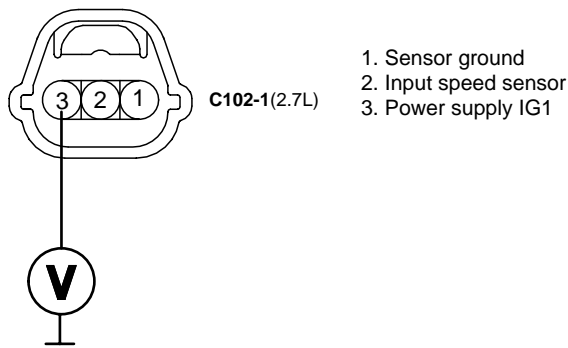

EKOF005F

## AT -42

## AUTOMATIC TRANSAXLE

4. Is voltage within specification ?

**YES**

Go to "Ground circuit inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**GROUND CIRCUIT INSPECTION**


ED42990D

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "INPUT SPEED SENSOR" connector.
3. Measure resistance between terminal "1" of the INPUT SPEED SENSOR harness connector and chassis ground.

---

Specification : approx. 0

---

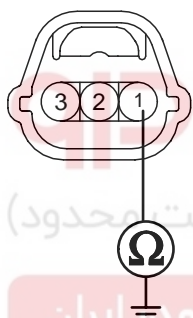

C102-1(2.7L)

1. Sensor ground
2. Input speed sensor
3. Power supply IG1



EKOF005G

4. Is resistance within specification ?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

If ground circuit in harness is OK, Go to "Check PCM/TCM" of the "Component Inspection" procedure.


**COMPONENT INSPECTION**

E2BDCA98

## 1. Check "INPUT SPEED SENSOR"

- 1) Ignition "OFF".
- 2) Disconnect the "INPUT SPEED SENSOR" connector.
- 3) Measure resistance between terminal "1","2" and "2","3" and "1","3" of the "INPUT SPEED SENSOR" connector.

Specification : Refer to " Reference data"

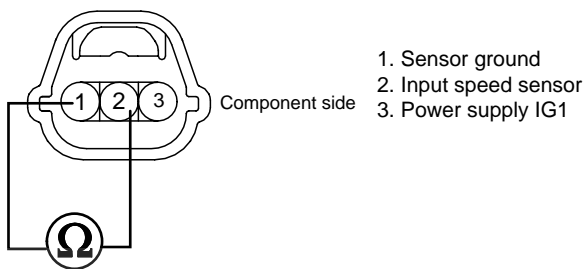

EKO005H

- 4) Is resistance within specifications?

**[REFERENCE DATA]**

Data	Reference Data	
Current	22 mA	
Air Gap	Input sensor	1.3 mm
	Output sensor	0.85 mm
Resistance	Input sensor	Above 4 M
	Output sensor	Above 4 M
Voltage	High	4.8 ~ 5.2V
	Low	Below 0.8V

**YES**

Go to "CHECK PCM/TCM " as below.

**NO**

Replace "INPUT SPEED SENSOR" as necessary and Go to "Verification Vehicle Repair" procedure.

## AT -44

## AUTOMATIC TRANSAXLE

## 2. CHECK PCM/TCM

- 1) Ignition "ON" & Engine "OFF".
- 2) Connect "INPUT SPEED SENSOR" connector.
- 3) Install scantool and select a SIMU-SCAN.
- 4) Simulate frequency to INPUT SPEED SENSOR signal circuit.

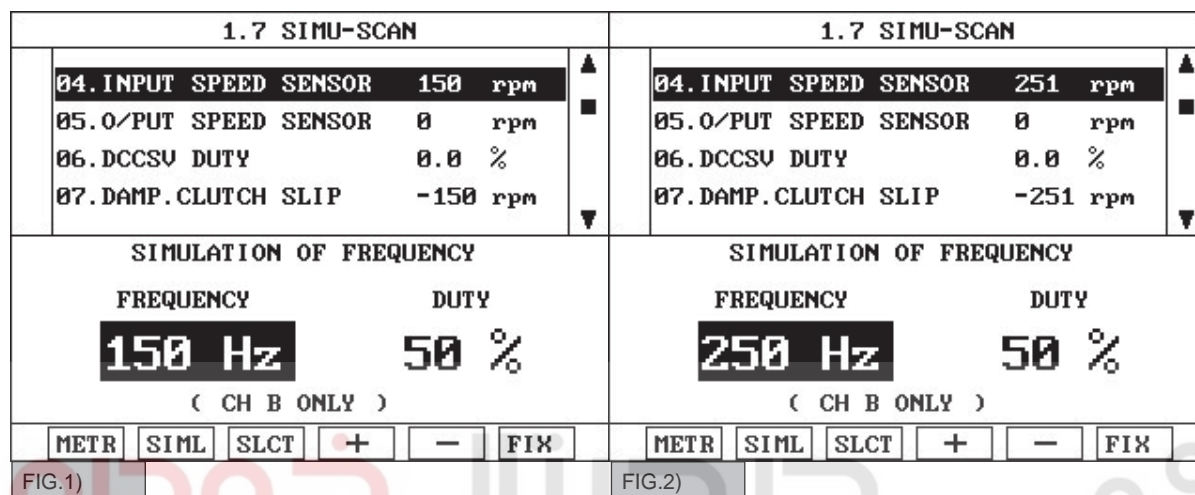


FIG.1) INPUT 150Hz → 150rpm

FIG.2) INPUT 250Hz → 250rpm

※ The values are subject to change according to vehicle model or condition.

ELQE024A

- 5) Is "INPUT SPEED SENSOR" signal value changed according to simulation frequency?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR

ECE43E2B

Refer to DTC P0560.



## DTC P0717 INPUT SPEED SENSOR CIRCUIT - NO SIGNAL

### COMPONENT LOCATION E7A90BF2



BKQE004A

### GENERAL DESCRIPTION E900EADB

The input(turbine) speed sensor outputs pulse-signals according to the revolutions of the input shaft of the transmission. The TCM(PCM) determines the input shaft speed by counting the frequency of the pulses. This value is mainly used to control the optimum fluid pressure during shifting.

### DTC DESCRIPTION EE9E2ACC

Refer to DTC P0715.

### DTC DETECTING CONDITION E72FD23E

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty INPUT SPEED SENSOR</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed is over 19 Mile/h(30 Km/h) and Ne 2000rpm in D,3,2,L(A/T range swhitch) and SP(SPORTS MODE)</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>No signal</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd or 2nd gear</li> <li>Manual shifting is possible (2 nd 3 rd ,3 rd 2 nd)</li> </ul>	

### SPECIFICATION E14E6162

Refer to DTC P0715.

### SIGNAL WAVEFORM EAD70FE0

Refer to DTC P0715.

## AT -46

## AUTOMATIC TRANSAXLE

## MONITOR SCANTOOL DATA E75AF7FA

Refer to DTC P0715.

## TERMINAL &amp; CONNECTOR INSPECTION E75AF7FA

Refer to DTC P0715.


## SIGNAL CIRCUIT INSPECTION E04B2D62

Refer to DTC P0715.

## POWER SUPPLY CIRCUIT INSPECTION E05CB819

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "INPUT SPEED SENSOR" connector.
3. Measure voltage between terminal "3" of the INPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. B+

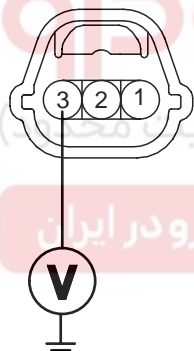

C02-1(2.0L)  
C102-1(2.7L)

1. Sensor ground
2. Input speed sensor
3. Power supply IG1



EKOF006B

4. Is voltage within specification ?

**YES**

Go to "Ground circuit inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**GROUND CIRCUIT INSPECTION** E3E4ED2B

Refer to DTC P0715.

**COMPONENT INSPECTION** E1B62CA6

Refer to DTC P0715.

**VERIFICATION OF VEHICLE REPAIR** EA3D7D1D

Refer to DTC P0560.

# دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



AT -48

AUTOMATIC TRANSAXLE

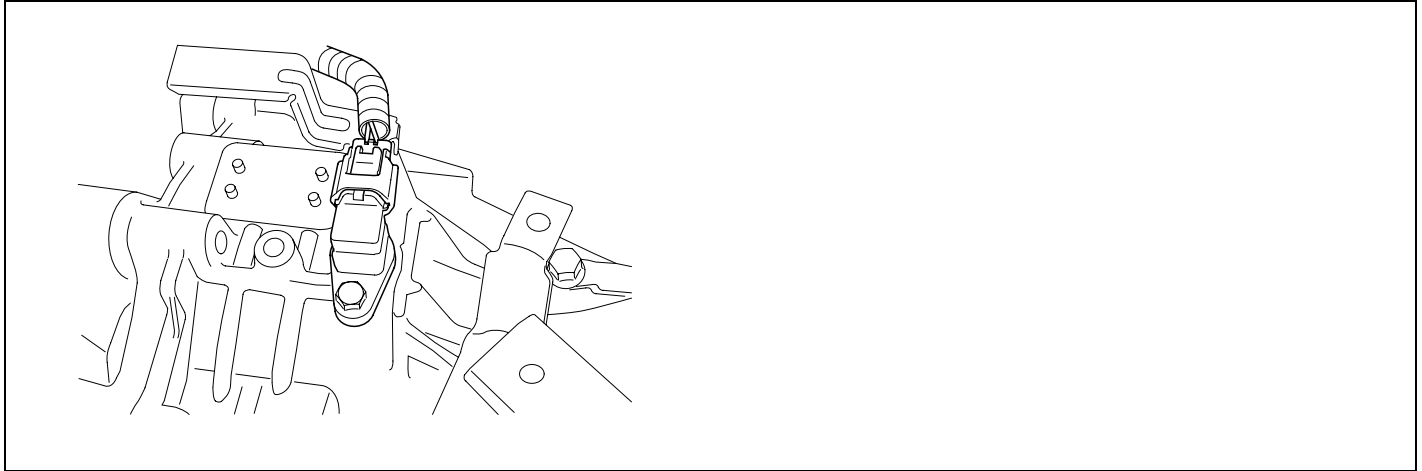**DTC P0720 OUTPUT SPEED SENSOR CIRCUIT****COMPONENT LOCATION** E56F8ED0

BKQE005A

**GENERAL DESCRIPTION** EC8A28C6

The Output Speed Sensor outputs pulse-signals according to the revolutions of the output shaft of the transmission. The Output Speed Sensor is installed in front of the Transfer Drive Gear to determine the Transfer Drive Gear rpms by counting the frequency of the pulses. This value, together with the throttle position data, is mainly used to decide the optimum gear position.

**DTC DESCRIPTION** E3F92066

The TCM sets this code if the calculated value of the pulse-signal is noticeably different from the value calculated, using the Vehicle Speed Sensor output, when the vehicle is running faster than 30 km/h. The TCM will initiate the fail safe function if this code is detected.

**DTC DETECTING CONDITION** E619D0B4

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty OUTPUT SPEED SENSOR</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed is over 19 Mile/h(30 Km/h) in D,3,2,L(A/T range switch) and SP(SPORTS MODE)</li> <li>But do not check the DTC in below condition               <ul style="list-style-type: none"> <li>A/T oil temp sensor voltage &gt; 4.5 V</li> <li>Engine revolution &lt; 2600 rpm</li> </ul> </li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>If the output from the output speed sensor is continuously 50% lower than the value calculated by vehicle speed sensor</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd or 2nd gear</li> <li>Apply an electric current to Solenoid valve</li> <li>Manual shifting is possible (2 nd 3 rd ,3 rd 2 nd)</li> </ul>	

**SPECIFICATION** E2ED7F85

Refer to DTC P0715.

**SIGNAL WAVEFORM** E0F5CB30

Refer to DTC P0715.

**MONITOR SCANTOOL DATA** EEAD1DF3

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "OUTPUT SPEED SENSOR" parameter on the scantool.
4. Driving at speed of over 19 Mile/h(30 Km/h).

Specification : Increasing Gradually

1.2 CURRENT DATA		
× CRK POSITION SNSR	1146 rpm	▲
× INPUT SPEED SNSR	1143 rpm	■
× OUTPUT SPEED SNSR	408 rpm	
× VEHICLE SPEED	11 Km/h	
× SHIFT POSITION	1	
TCC SLIP(AMOUNT )	49 rpm	
A/T RELAY VOLT	14.2 V	
TRANSAXLE RANGE SW	D	▼
FIX	SCRN	FULL PART GRPH HELP

FIG.1)

1.2 CURRENT DATA		
× CRK POSITION SNSR	1684 rpm	▲
× INPUT SPEED SNSR	1684 rpm	■
× OUTPUT SPEED SNSR	2247 rpm	
× VEHICLE SPEED	78 Km/h	
× SHIFT POSITION	4	
TCC SLIP(AMOUNT )	84 rpm	
A/T RELAY VOLT	14.2 V	
TRANSAXLE RANGE SW	D	▼
FIX	SCRN	FULL PART GRPH HELP

FIG.2)

FIG.1) Low-speed

FIG.2) High-speed

ELQE025A

5. Does "Output speed sensor" follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector inspection" procedure.

## AT -50

## AUTOMATIC TRANSAXLE

## TERMINAL &amp; CONNECTOR INSPECTION

E8F7A0BA

1. Many malfunctions in the electrical system may be caused from poor harness and terminals. These faults can be caused by interference from other electrical systems and mechanical or chemical damage.
2. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
3. Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.

**NO**


Go to "Signal circuit inspection" procedure.

## SIGNAL CIRCUIT INSPECTION

E1AFA6A7

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "OUTPUT SPEED SENSOR" connector.
3. Measure voltage between terminal "2" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. 5V

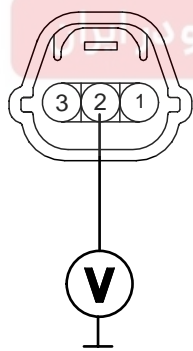

C102-2(2.7L)

1. Sensor ground
2. Output speed sensor
3. Power supply IG1

EKOF006E

4. Is voltage within specification?

**YES**

Go to "Power Supply circuit Inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure  
If signal circuit in harness is OK, Go to "Check PCM/TCM" of the "Component Inspection" procedure.


## POWER SUPPLY CIRCUIT INSPECTION

EC55FA81

1. Ignition "ON" & Engine "OFF".

2. Disconnect the "OUTPUT SPEED SENSOR" connector.
3. Measure voltage between terminal "3" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. B+

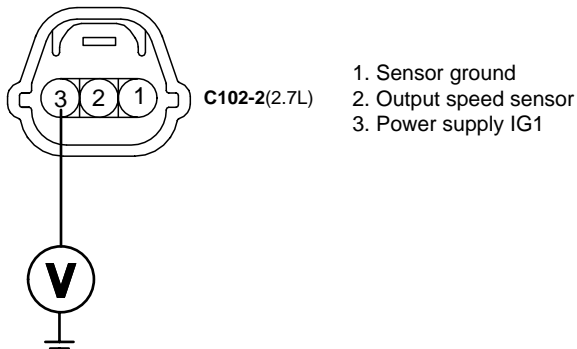

EKOF006F

4. Is voltage within specification?

**YES**

Go to "Ground circuit inspection" procedure.

**NO**


Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## GROUND CIRCUIT INSPECTION

E7EFA966

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "OUTPUT SPEED SENSOR" connector.
3. Measure resistance between terminal "1" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. 0

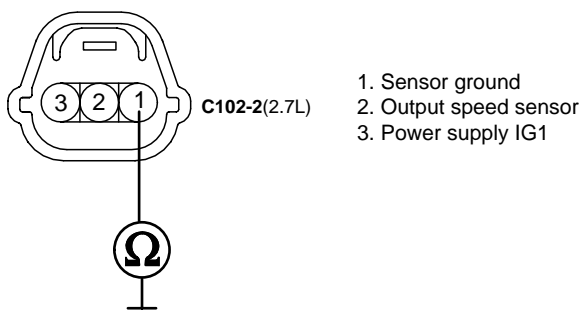

EKOF006G

4. Is resistance within specification?

**YES**

Go to "Component Inspection" procedure.

## AT -52

## AUTOMATIC TRANSAXLE

**NO**


Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.  
If ground circuit in harness is OK, Go to "Check PCM/TCM" of the "Component Inspection" procedure.

**COMPONENT INSPECTION** EDDCD7CF

## 1. Check "OUTPUT SPEED SENSOR"

- 1) Ignition "OFF".
- 2) Disconnect the "OUTPUT SPEED SENSOR" connector.
- 3) Measure resistance between terminal "1","2" and "2","3" and "1","3" of the "OUTPUT SPEED SENSOR" connector.

Specification : Refer to " Reference data"

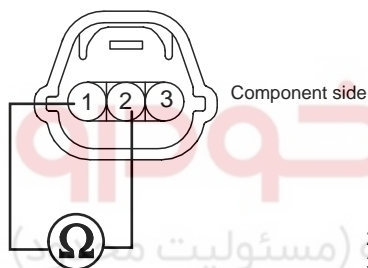

1. Sensor ground
2. Output speed sensor
3. Power supply IG1



EKO006H

- 4) Is resistance within specifications?

**[REFERENCE DATA]**

Data	Reference Data	
Current	22 mA	
Air Gap	Input sensor	1.3 mm
	Output sensor	0.85 mm
Resistance	Input sensor	Above 4 M
	Output sensor	Above 4 M
Voltage	High	4.8 ~ 5.2V
	Low	Below 0.8V

**YES**

Go to "CHECK PCM/TCM " as below.

**NO**

Replace "OUTPUT SPEED SENSOR" as necessary and Go to "Verification Vehicle Repair" procedure.

## 2. CHECK PCM/TCM



- 1) Ignition "ON" & Engine "OFF".
- 2) Connect "OUTPUT SPEED SENSOR" connector.
- 3) Install scantool and select a SIMU-SCAN.
- 4) Simulate frequency to OUTPUT SPEED SENSOR signal circuit.

1.7 SIMU-SCAN				1.7 SIMU-SCAN			
05.0/PUT SPEED SENSOR 150 rpm				05.0/PUT SPEED SENSOR 251 rpm			
06.DCCSV DUTY 0.0 %				06.DCCSV DUTY 0.0 %			
07.DAMP.CLUTCH SLIP 0 rpm				07.DAMP.CLUTCH SLIP 0 rpm			
08.L&R SV DUTY 0.0 %				08.L&R SV DUTY 100.0%			
SIMULATION OF FREQUENCY				SIMULATION OF FREQUENCY			
FREQUENCY		DUTY		FREQUENCY		DUTY	
150 Hz		50 %		250 Hz		50 %	
( CH B ONLY )				( CH B ONLY )			
METR	SIML	SLCT	+	METR	SIML	SLCT	+
-				-			
FIX				FIX			

FIG.1)

FIG.2)

FIG.1)

FIG.2)

FIG.1) OUTPUT 150Hz → 150rpm  
 FIG.2) OUTPUT 250Hz → 250rpm

※ The values are subject to change according to vehicle model or condition.

ELQE030A

- 5) Is "OUTPUT SPEED SENSOR" signal value changed according to simulation frequency?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.


## VERIFICATION OF VEHICLE REPAIR

EF2E85C1

Refer to DTC P0560.

AT -54

AUTOMATIC TRANSAXLE

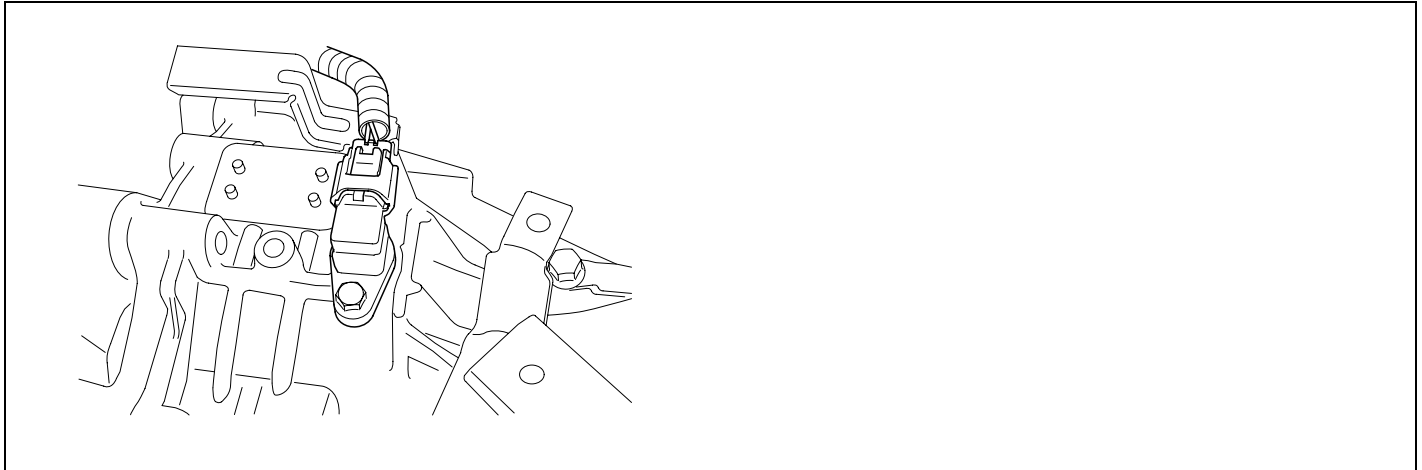**DTC P0721 OUTPUT SPEED SENSOR CIRCUIT RANGE/PERFORMANCE****COMPONENT LOCATION** E5155666

BKQE005A

**GENERAL DESCRIPTION** E9EBB507

Refer to DTC P0720.

**DTC DESCRIPTION** EB24F56D

Refer to DTC P0720.

**DTC DETECTING CONDITION** E88922F3

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty OUTPUT SPEED SENSOR</li> <li>Faulty PCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed is over 31 Mile/h(50 Km/h) in D,3,2,L(A/T range switch) and SP(SPORTS MODE)</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>If the output from the output speed sensor is continuously 50% lower or higher than the value calculated by vehicle speed sensor</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd or 2nd gear</li> <li>Apply an electric current to Solenoid valve</li> <li>Manual shifting is possible (2 nd 3 rd ,3 rd 2 nd)</li> </ul>	

**SPECIFICATION** EA2BE8E5

Refer to DTC P0715.

**SIGNAL WAVEFORM** E7EFF21F

Refer to DTC P0715.

**MONITOR SCANTOOL DATA** EA6DFD54

Refer to DTC P0720.

**TERMINAL & CONNECTOR INSPECTION** E569A2FB

Refer to DTC P0720.


**SIGNAL CIRCUIT INSPECTION** EDE0D7CC

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "OUTPUT SPEED SENSOR" connector.
3. Measure voltage between terminal "2" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

---

Specification : approx. 5V

---

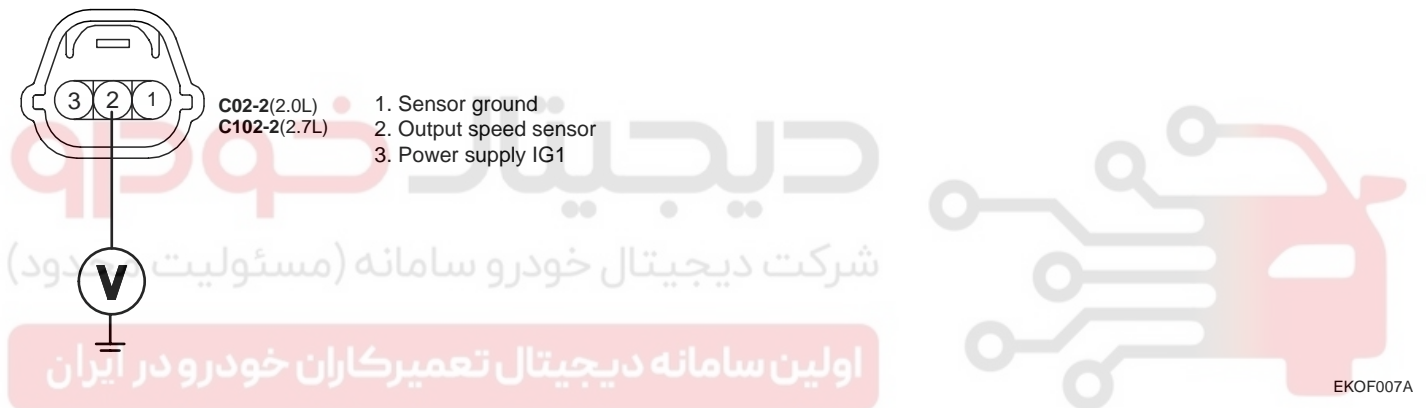

4. Is voltage within specification?

**YES**

Go to "Power Supply circuit Inspection" procedure.

**NO**

Check for open or short in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure  
If signal circuit in harness is OK, Go to "Check TCM(PCM)" of the "Component Inspection" procedure.

## AT -56


## AUTOMATIC TRANSAXLE

## POWER SUPPLY CIRCUIT INSPECTION

EE1AB347

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "OUTPUT SPEED SENSOR" connector.
3. Measure voltage between terminal "3" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

Specification : approx. B+

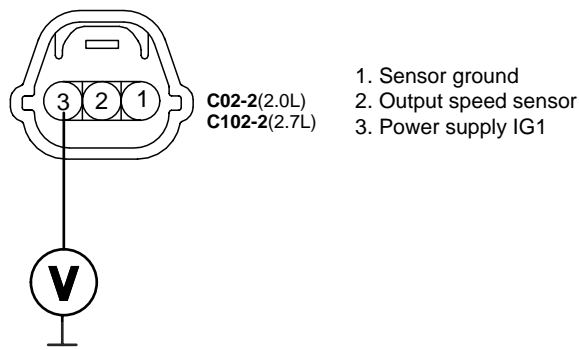

EKOF007B

4. Is voltage within specification?

**YES**

Go to "Ground circuit inspection" procedure.


**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## GROUND CIRCUIT INSPECTION

E66BD3EC

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "OUTPUT SPEED SENSOR" connector.
3. Measure resistance between terminal "1" of the OUTPUT SPEED SENSOR harness connector and chassis ground.

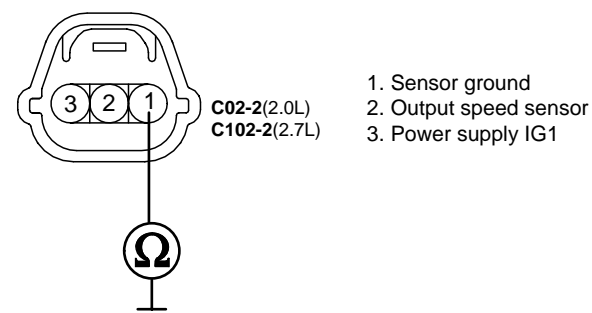

EKOF007C

4. Is resistance within specification?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.  
If ground circuit in harness is OK, Go to "Check TCM(PCM)" of the "Component Inspection" procedure.

## COMPONENT INSPECTION EF87BC4C

Refer to DTC P0720.

## VERIFICATION OF VEHICLE REPAIR EA4FEC78

Refer to DTC P0560.

دیجیتال خودرو


شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



AT -58

AUTOMATIC TRANSAXLE

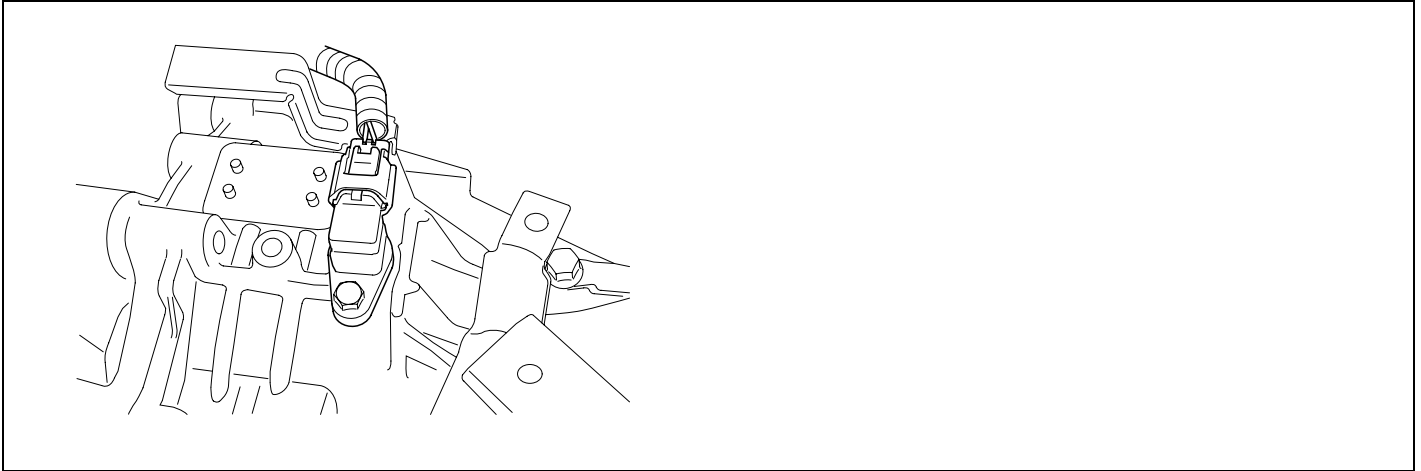**DTC P0722 OUTPUT SPEED SENSOR CIRCUIT - NO SIGNAL****COMPONENT LOCATION** E1F674E2

BKQE005A

**GENERAL DESCRIPTION** E44164D3

Refer to DTC P0720.

**DTC DESCRIPTION** EA7FA935

Refer to DTC P0720.

**DTC DETECTING CONDITION** E2DF0970

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Speed rationality check</li> </ul>	<ul style="list-style-type: none"> <li>Signal circuit is open or short</li> <li>Sensor power circuit is open</li> <li>Sensor ground circuit is open</li> <li>Faulty OUTPUT SPEED SENSOR</li> <li>Faulty PCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Vehicle speed is over 19 Mile/h(30 Km/h) and Ne 2000rpm in D,3,2,L(A/T range switch) and SP(SPORTS MODE)</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>No signal</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd or 2nd gear</li> <li>Apply an electric current to Solenoid valve</li> <li>Manual shifting is possible (2 nd 3 rd ,3 rd 2 nd)</li> </ul>	

**SPECIFICATION** E10578FB

Refer to DTC P0715.

**SIGNAL WAVEFORM** E3D5FFDF

Refer to DTC P0715.

**MONITOR SCANTOOL DATA** E5EA2EBC

Refer to DTC P0720.

**TERMINAL & CONNECTOR INSPECTION** EEF0BF0C

Refer to DTC P0720.

**SIGNAL CIRCUIT INSPECTION** E341C450

Refer to DTC P0721.

**POWER SUPPLY CIRCUIT INSPECTION** E67D0E14

Refer to DTC P0721.

**GROUND CIRCUIT INSPECTION** E6BFA101

Refer to DTC P0721.

**COMPONENT INSPECTION** E12C40DD

Refer to DTC P0720.

**VERIFICATION OF VEHICLE REPAIR** E7BBD20

Refer to DTC P0560.




AT -60

AUTOMATIC TRANSAXLE

**DTC P0731 GEAR 1 INCORRECT RATIO****COMPONENT LOCATION**

E1421F45

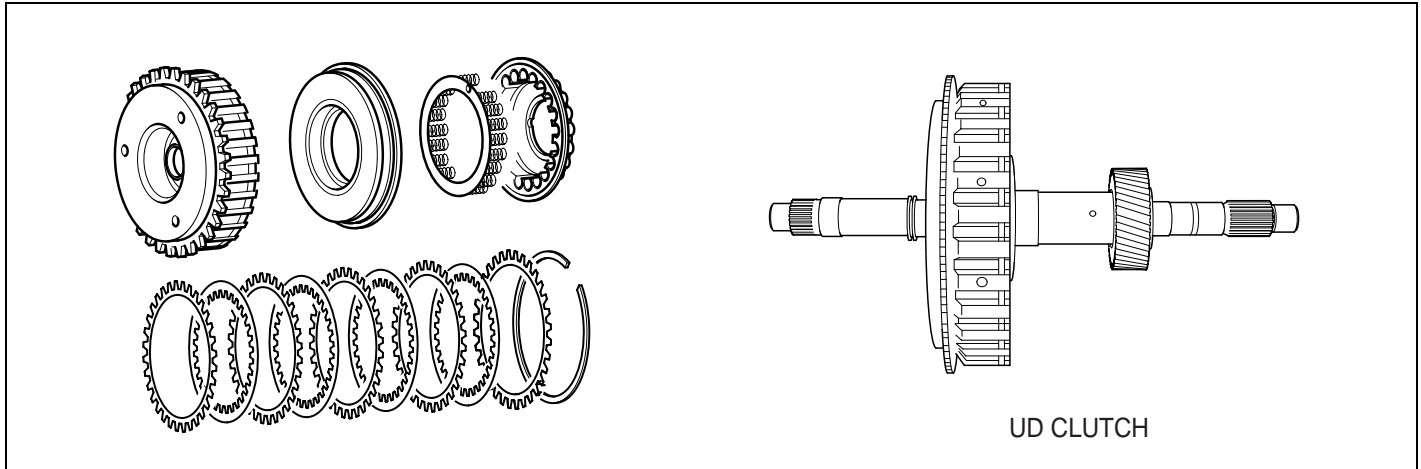

UD CLUTCH

BKQE006A

**GENERAL DESCRIPTION**

E5D0B2F5

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 1st gear ratio, while the transaxle is engaged in the 1st gear. For example, if the output speed is 1000 rpm and the 1st gear ratio is 2.842, then the input speed is 2,842 rpm.

**DTC DESCRIPTION**

E323F0FE

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 1st gear ratio, while the transaxle is engaged in 1st gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION**

E2AD4ACA

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>1st gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty Input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty UD clutch or LR brake or Oneway clutch</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 450rpm</li> <li>Output speed &gt; 350rpm</li> <li>Shift stage 1st. gear</li> <li>Input speed &gt; 0rpm</li> <li>A/T oil temp output -23°C</li> <li>Voltage of Battery &gt; 10V</li> <li>Time after shift changing finish &gt; 2secs</li> <li>A/T range switch: Only one signal</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Output speed &lt; (input speed-200rpm) /1st. gear ratio</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd gear. (If diagnosis code P0731 is output four times, the transaxle is locked into 3rd gear)</li> </ul>	



## SIGNAL WAVEFORM

E615DCD3

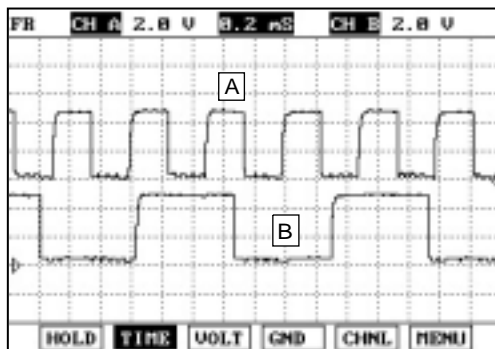


FIG.1)

A : INPUT SPEED SENSOR  
B : OUTPUT SPEED SENSOR

ELQE031A

## MONITOR SCANTOOL DATA

E9D1F0D8

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "ENGINE SPEED, INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, GEAR POSITION" parameter on the scantool.
4. Perform the "STALL TEST" with gear position "1"

Specification : 2000~2700 engine rpm

1.2 CURRENT DATA		
* CRK POSITION SNSR	2329 rpm	
* INPUT SPEED SNSR	0 rpm	
* OUTPUT SPEED SNSR	0 rpm	
* SHIFT POSITION	1	
THROTTLE P. SENSOR	39.2 %	
FLUID TEMP. SENSOR	86 °C	
VEHICLE SPEED	0 Km/h	
L&RSV DUTY	0.0 %	

ELQE032A

## AT -62

## AUTOMATIC TRANSAXLE

## OPERATING ELEMENT OF EACH SHIFTING RANGE

	UD/C	OD/C	REV/C	2ND/B	LR/B	OWC
P						
R						
N						
D1						
D2						
D3						
D4						

Low & Reverse Brake is released When the Vehicle speed over the 5 MPH(7Km/h).

**Stall test procedure in D1 and reason****Procedure**

1. Warm up the engine
2. After positioning the select lever in "D" , depress the foot brake pedal fully. After that, depress the accelerator pedal to the maximum

\* The slippage of 1st gear operating parts can be detected by stall test in D

**Reason for stall test**

1. If there is no mechanical defaults in A/T, every slippage occur in torque converter.
2. Therefore, engine revolution is output, but input and output speed revolution must be "zero" due to wheel's lock.
3. If 1st gear operating part has faults, input speed revolution will be out of specification.
4. If output speed revolution is output. It means that the foot brake force is not applied fully. Remeasuring is required.

5. Is "STALL TEST " within specification?

**YES**

Go to "Signal Circuit Inspection" procedure.

**NO**

Go to "Component inspection" procedure.

**CAUTION**

**Do not let anybody stand in front of or behind the vehicle while this test is being carried out.  
Check the A/T fluid level and temperature and the engine coolant temperature.**

- **Fluid level : At the hot mark on the oil level gauge.**
- **Fluid temperature : 176 °F~ 212 °F (80~100 °C).**
- **Engine coolant temperature : 176 °F~ 212 °F (80~100 °C).**

**Chock both rear wheel(left and right).**

**Pull the parking brake lever on with the brake pedal fully depressed.**

**The throttle should not be left fully open for more than eight second.**

**If carrying out the stall test two or more time, move the select lever to the "N" position and run the engine at 1,000 rpm to let the A/T fluid cool down before carrying out subsequent.**

**SIGNAL CIRCUIT INSPECTION**

EB848CCE

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.
4. Accelerate the Engine speed until about 2000 rpm in the 1st gear.

---

Specification : INPUT SPEED - (OUTPUT SPEED × GEAR RATIO)    200 RPM

---

1.2 CURRENT DATA	
* ENGINE RPM	2127 rpm
* INPUT SPEED	2856 rpm
* OUTPUT SPEED	738 rpm
* SHIFT POSITION	1 GEAR
* SELECT LEVER SW.	L
HIVEC MODE	MODE F
VEHICLE SPEED	22 MPH
THROTTLE P. SENSOR	14.1 %
<div> <div>FIX</div> <div>SCRM</div> <div>FULL</div> <div>PART</div> <div>GRPH</div> <div>HELP</div> </div>	

5. Are "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or Replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and Go to "Verification Vehicle Repair" procedure.




ELQE033A

## AT -64

## AUTOMATIC TRANSAXLE

## COMPONENT INSPECTION

E468C6EC

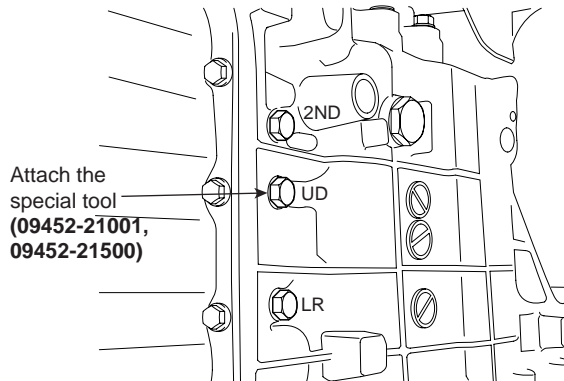

EKKD053A

1. Connect Oil pressure gauge to "UD" and "L/R" port.
2. Engine "ON".
3. Drive a car with gear position 1 in "SPORTS MODE".
4. Compare it with reference data as below.

Specification : shown below

Measurement condition			Standard hydraulic pressure kPa (psi)					
Selector lever position	Shift position	Engine speed (rpm)	Under drive clutch pressure	Reverse clutch pressure	Overdrive clutch pressure	Low and reverse brake pressure	Second brake pressure	Torque converter pressure
P	-	2,500	-	-	-	310-390 (45-56)	-	250-350 (36-56)
R	Reverse	2,500	-	1,270-1,770 (185-256)	-	1,270-1,770 (185-256)	-	500-700 (185-256)
N	2,500	-	-	-	-	310-390 (45-56)	-	250-390 (36-56)
D	1st gear	2,500	1,010-1,050 (146-152)	-	-	1,010-1,050 (146-152)	-	500-700 (73-101)
	2nd gear	2,500	1,010-1,050 (146-152)	-	-	-	1,010-1,050 (146-152)	500-700 (73-101)
	3rd gear	2,500	590-690 (85-100)	-	590-690 (85-100)	-	-	450-650 (65-94)
	4th gear	2,500	-	-	590-690 (85-100)	-	590-690 (85-100)	450-650 (65-94)

The values are subject to change according to vehicle model or condition

5. Is oil pressure value within specification?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification Vehicle Repair" Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and Go to "Verification Vehicle Repair " procedure.

## VERIFICATION OF VEHICLE REPAIR EFDA5EFA

Refer to DTC P0560.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




AT -66

AUTOMATIC TRANSAXLE

**DTC P0732 GEAR 2 INCORRECT RATIO****COMPONENT LOCATION**

EEB686B9

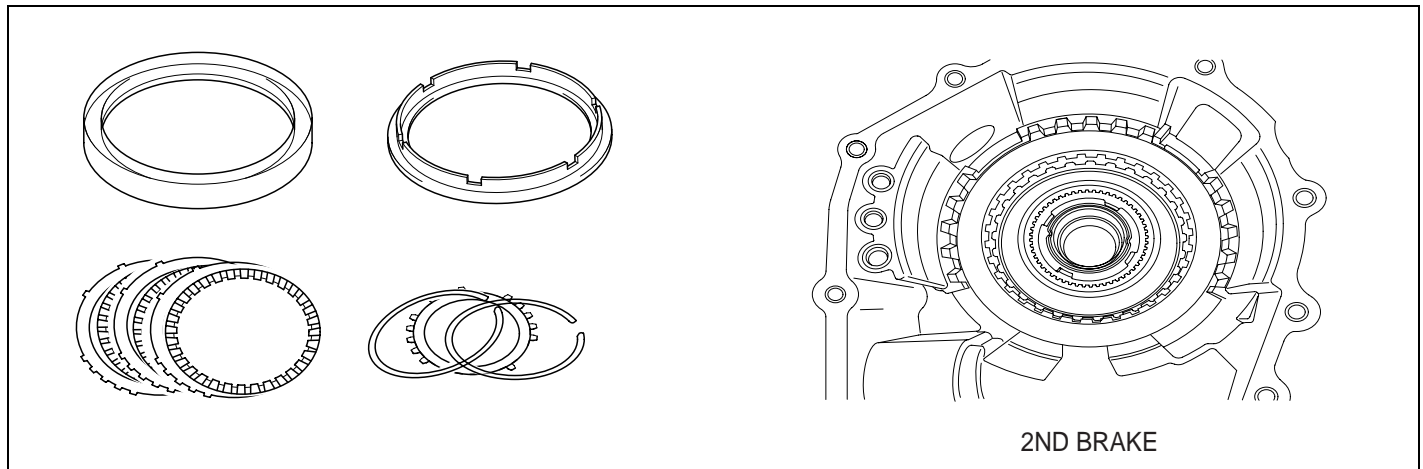

BKQE007A

**GENERAL DESCRIPTION**

E1A8749F

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 2nd gear ratio, while the transaxle is engaged in the 2nd gear. For example, if the output speed is 1000 rpm and the 2nd gear ratio is 1.529, then the input speed is 1,529 rpm.

**DTC DESCRIPTION**

E096CBA2

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 2nd gear ratio, while the transaxle is engaged in 2nd gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION**

EC4928D5

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>2nd gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty Input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty UD clutch or 2nd brake</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 450rpm</li> <li>Output speed &gt; 500rpm</li> <li>Shift stage 2nd. gear</li> <li>Input speed &gt; 0rpm</li> <li>A/T oil temp output -23</li> <li>Voltage of Battery &gt; 10V</li> <li>Time after shift changing finish &gt; 2secs</li> <li>A/T range switch: Only one signal</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Output speed &gt; (input speed+200rpm)/2nd. gear ratio OR output speed &lt; (input speed-200rpm)/2nd. gear ratio</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3 rd gear. (If diagnosis code P0732 is output four times, the transaxle is locked into 3rd gear)</li> </ul>	

**SIGNAL WAVEFORM** E0EFFECC

Refer to DTC P0731.

**MONITOR SCANTOOL DATA** E0BED0A1

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "ENGINE SPEED, INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, GEAR POSITION" parameter on the scantool.
4. Perform the "STALL TEST" with gear position "2".

Specification : 2000~2700 engine rpm

1.2 CURRENT DATA		
* CRK POSITION SNSR	2310	rpm
* INPUT SPEED SNSR	0	rpm
* OUTPUT SPEED SNSR	0	rpm
* SHIFT POSITION	2	
THROTTLE P.SENSOR	36.5	%
FLUID TEMP.SENSOR	88	°C
VEHICLE SPEED	0	Km/h
L&RSV DUTY	100.0	%
<div> <div>FIX</div> <div>SCRN</div> <div>FULL</div> <div>PART</div> <div>GRPH</div> <div>HELP</div> </div>		

ELQE034A

**OPERATING ELEMENT OF EACH SHIFTING RANGE**

	UD/C	OD/C	REV/C	2ND/B	LR/B	OWC
P						
R						
N						
D1						
D2						
D3						
D4						

Low & Reverse Brake is released When the Vehicle speed over the 5 MPH(7Km/h).

**Stall test procedure in D2 and reason****Procedure**

1. Warm up the engine
2. After positioning the select lever in "D" , depress the foot brake pedal fully after that, depress the accelerator pedal to the maximum

\* The slippage of 1st gear operating parts can be detected by stall test in D2

## AT -68

## AUTOMATIC TRANSAXLE

Reason for stall test

1. If there is are mechanical defaults in A/T, all slippage occurs in the torque converter.
  2. Therefore, engine revolution is output, but input and output speed revolution must be "zero" due to wheel's lock.
  3. If 2nd brake system(2nd gear operating part) has faults, input speed revolution will be out of specification.
  4. If wheels pin occurs, the applied brake force is not adequate. Retry using more brake force.
5. Is "STALL TEST " within specification?

**YES**

Go to "Signal Circuit Inspection" procedure.

**NO**

Go to "Component Inspection" procedure.

**CAUTION**

**Do not let anybody stand in front of or behind the vehicle while this test is being carried out.**

**Check the A/T fluid level and temperature and the engine coolant temperature.**

- **Fluid level : At the hot mark on the oil level gauge.**
- **Fluid temperature : 176 °F~ 212 °F (80~100 °C).**
- **Engine coolant temperature : 176 °F~ 212 °F (80~100 °C).**

**Chock both rear wheel(left and right).**

**Pull the parking brake lever on with the brake pedal fully depressed.**

**The throttle should not be left fully open for more than eight second.**

**If carrying out the stall test two or more time, move the select lever to the "N" position and run the engine at 1,000 rpm to let the A/T fluid cool down before carrying out subsequent.**

**SIGNAL CIRCUIT INSPECTION**


E929A9A6

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.



4. Accelerate the Engine speed until about 2000 rpm in the 2nd gear.

Specification :  $\text{INPUT SPEED} - (\text{OUTPUT SPEED} \times \text{GEAR RATIO})$  200 RPM

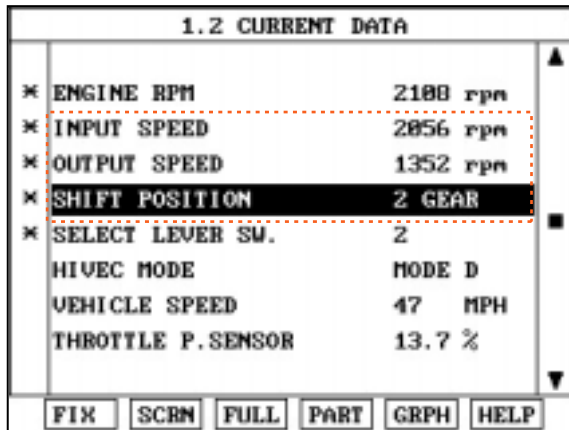

ELQE035A

5. Are "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**


Go to "Component Inspection" procedure.

**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or Replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## COMPONENT INSPECTION

E62CF87A

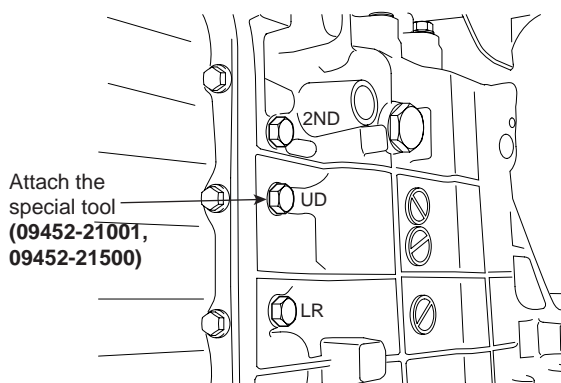

EKKD053A

1. Connect Oil pressure gauge to "UD" and "2ND" port.
2. Engine "ON".
3. Drive a car with gear position 2 in "SPORTS MODE".

## AT -70

## AUTOMATIC TRANSAXLE

4. Compare it with reference data as below.

Specification : shown below

Measurement condition			Standard hydraulic pressure kPa (psi)					
Selector lever position	Shift position	Engine speed (rpm)	Under drive clutch pressure	Reverse clutch pressure	Overdrive clutch pressure	Low and reverse brake pressure	Second brake pressure	Torque converter pressure
P	-	2,500	-	-	-	310-390 (45-56)	-	250-350 (36-56)
R	Reverse	2,500	-	1,270-1,770 (185-256)	-	1,270-1,770 (185-256)	-	500-700 (73-101)
N	2,500	-	-	-	-	310-390 (45-56)	-	250-390 (36-56)
D	1st gear	2,500	1,010-1,050 (146-152)	-	-	1,010-1,050 (146-152)	-	500-700 (73-101)
	2nd gear	2,500	1,010-1,050 (146-152)	-	-	-	1,010-1,050 (146-152)	500-700 (73-101)
	3rd gear	2,500	590-690 (85-100)	-	590-690 (85-100)	-	-	450-650 (65-94)
	4th gear	2,500	-	-	590-690 (85-100)	-	590-690 (85-100)	450-650 (65-94)

The values are subject to change according to vehicle model or condition

5. Is oil pressure value within specification?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification Vehicle Repair" Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and Go to "Verification Vehicle Repair" procedure.


## VERIFICATION OF VEHICLE REPAIR

E96CAF6C

Refer to DTC P0560.

**DTC P0733 GEAR 3 INCORRECT RATIO****COMPONENT LOCATION**

E81CE23D

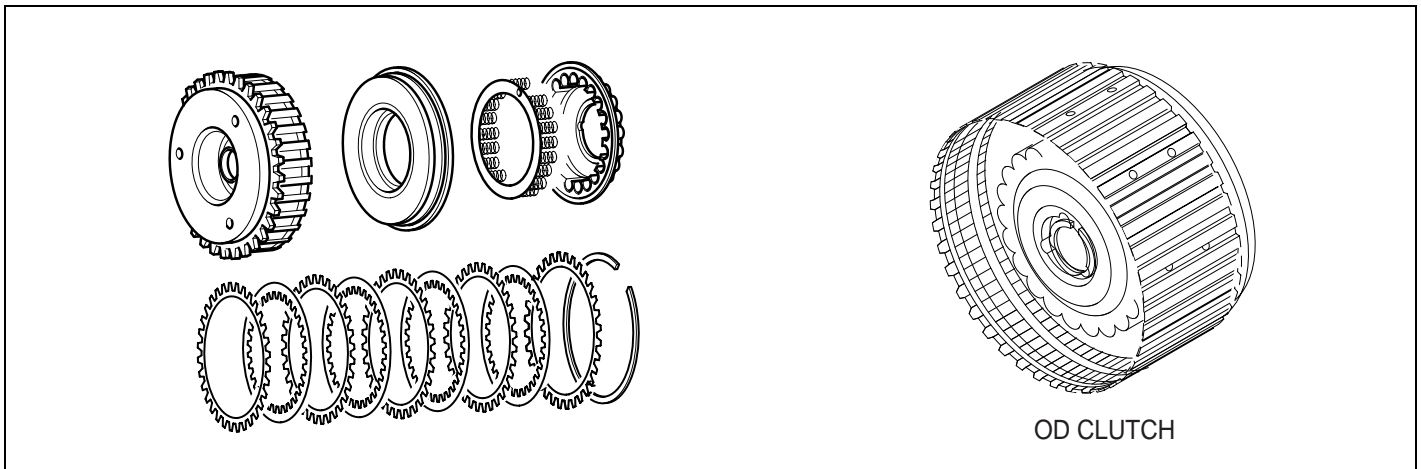

BKQE008A

**GENERAL DESCRIPTION**

EDBF3B4A

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 3rd gear ratio, while the transaxle is engaged in the 3rd gear. For example, if the output speed is 1,000 rpm and the 3rd gear ratio is 1.000, then the input speed is 1,000 rpm.

**DTC DESCRIPTION**

E1BF7CC6

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 3rd gear ratio, while the transaxle is engaged in 3rd gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION**

EB2DE13F

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>3rd gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty Input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty UD clutch or OD clutch</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 450rpm</li> <li>Output speed &gt; 900rpm</li> <li>Shift stage 3rd. gear</li> <li>Input speed &gt; 0rpm</li> <li>A/T oil temp output -23</li> <li>Voltage of Battery &gt; 10V</li> <li>Time after shift changing finish &gt; 2secs</li> <li>A/T range switch: Only one signal</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Output speed &gt; (input speed+200rpm)/3rd. gear ratio OR output speed &lt; (input speed-200rpm)/3rd. gear ratio</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd gear. (If diagnosis code P0733 is output four times, the transaxle is locked into 3rd gear)</li> </ul>	

## AT -72

## AUTOMATIC TRANSAXLE

## SIGNAL WAVEFORM

ED8D641E


Refer to DTC P0731.

## MONITOR SCANTOOL DATA

EFBCB361

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "ENGINE SPEED, INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, GEAR POSITION" parameter on the scantool.
4. Disconnect the solenoid valve connector and perform the "STALL TEST".

Specification : 2000~2700 engine rpm

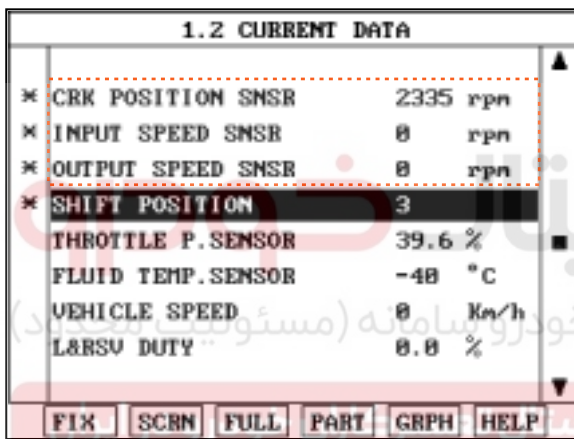

ELQE036A

## OPERATING ELEMENT OF EACH SHIFTING RANGE

	UD/C	OD/C	REV/C	2ND/B	LR/B	OWC
P						
R						
N						
D1						
D2						
D3						
D4						

Low & Reverse Brake is released When the Vehicle speed over the 5 MPH(7Km/h).

## Stall test procedure in D3 and reason

## Procedure

1. Warm up the engine
2. After making 3rd gear hold by disconnecting the solenoid connector, and Then depress the foot brake pedal fully After that, step on the accelerator pedal to the maximum

\* The slippage of 3rd gear operating parts can be detected by stall test in D3

Reason for stall test

1. If there is no mechanical defaults in A/T, all slippage occurs in torque converter.
2. Therefore, engine revolution is output, but input and output speed revolution must be "zero" due to wheel's lock.
3. If OD clutch system(3rd gear operating part) has faults, input speed revolution will be out of specification.
4. If output speed revolution is output. It means that the foot brake force is not applied fully. Retesting using greater braking force is required.

5. Is "STALL TEST " within specification?

**YES**

Go to "Signal Circuit Inspection" procedure.

**NO**

Go to "Component Inspection" procedure.



#### CAUTION

**Do not let anybody stand in front of or behind the vehicle while this test is being carried out.**

**Check the A/T fluid level and temperature and the engine coolant temperature.**

- **Fluid level : At the hot mark on the oil level gauge.**
- **Fluid temperature : 176 °F~ 212 °F (80~100 °C).**
- **Engine coolant temperature : 176 °F~ 212 °F (80~100 °C).**

**Chock both rear wheel(left and right).**

**Pull the parking brake lever on with the brake pedal fully depressed.**

**The throttle should not be left fully open for more than eight seconds.**

**If carrying out the stall test two or more times, move the select lever to the "N" position and run the engine at 1,000 rpm to let the A/T fluid cool down before carrying out subsequent tests.**

## SIGNAL CIRCUIT INSPECTION EC0EB16F

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.

## AT -74

## AUTOMATIC TRANSAXLE

4. Accelerate the Engine speed until about 2000 rpm in the 3rd gear.

Specification :  $\text{INPUT SPEED} - (\text{OUTPUT SPEED} \times \text{GEAR RATIO})$  200 RPM

1.2 CURRENT DATA	
* ENGINE RPM	2110 rpm
* INPUT SPEED	2056 rpm
* OUTPUT SPEED	2054 rpm
* SHIFT POSITION	3 GEAR
* SELECT LEVER SW.	3
HIVEC MODE	MODE F
VEHICLE SPEED	67 MPH
THROTTLE P.SENSOR	14.1 %
<div> <div>FIX</div> <div>SCRN</div> <div>FULL</div> <div>PART</div> <div>GRPH</div> <div>HELP</div> </div>	

ELQE037A

5. Are "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**



Go to "Component Inspection" procedure.

**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or Replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## COMPONENT INSPECTION

E54C62A8

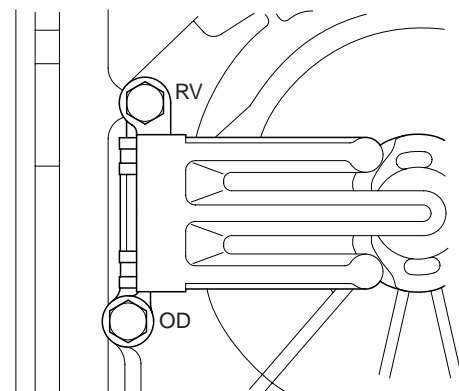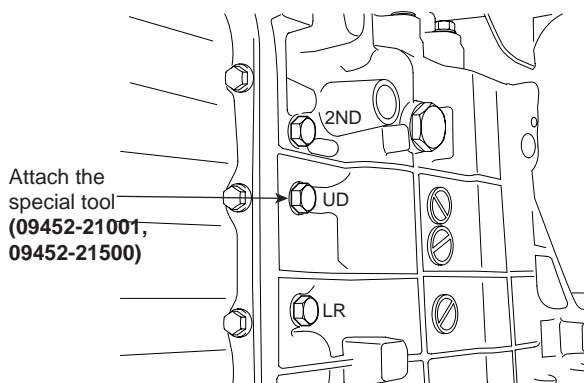

BKQE009A

1. Connect Oil pressure gauge to "UD" and "OD" port.
2. Engine "ON".
3. Drive a car with gear position 3 in fail mode.

4. Compare it with reference data as below.

Specification : shown below

Measurement condition			Standard hydraulic pressure kPa (psi)					
Selector lever position	Shift position	Engine speed (rpm)	Under drive clutch pressure	Reverse clutch pressure	Overdrive clutch pressure	Low and reverse brake pressure	Second brake pressure	Torque converter pressure
P	-	2,500	-	-	-	310-390 (45-56)	-	250-350 (36-56)
R	Reverse	2,500	-	1,270-1,770 (185-256)	-	1,270-1,770 (185-256)	-	500-700 (73-101)
N	2,500	-	-	-	-	310-390 (45-56)	-	250-390 (36-56)
D	1st gear	2,500	1,010-1,050 (146-152)	-	-	1,010-1,050 (146-152)	-	500-700 (73-101)
	2nd gear	2,500	1,010-1,050 (146-152)	-	-	-	1,010-1,050 (146-152)	500-700 (73-101)
	3rd gear	2,500	590-690 (85-100)	-	590-690 (85-100)	-	-	450-650 (65-94)
	4th gear	2,500	-	-	590-690 (85-100)	-	590-690 (85-100)	450-650 (65-94)

The values are subject to change according to vehicle model or condition

5. Is oil pressure value within specification?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification Vehicle Repair" Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and Go to "Verification Vehicle Repair" procedure.


## VERIFICATION OF VEHICLE REPAIR EEDFC7BC

Refer to DTC P0560.



AT -76

AUTOMATIC TRANSAXLE

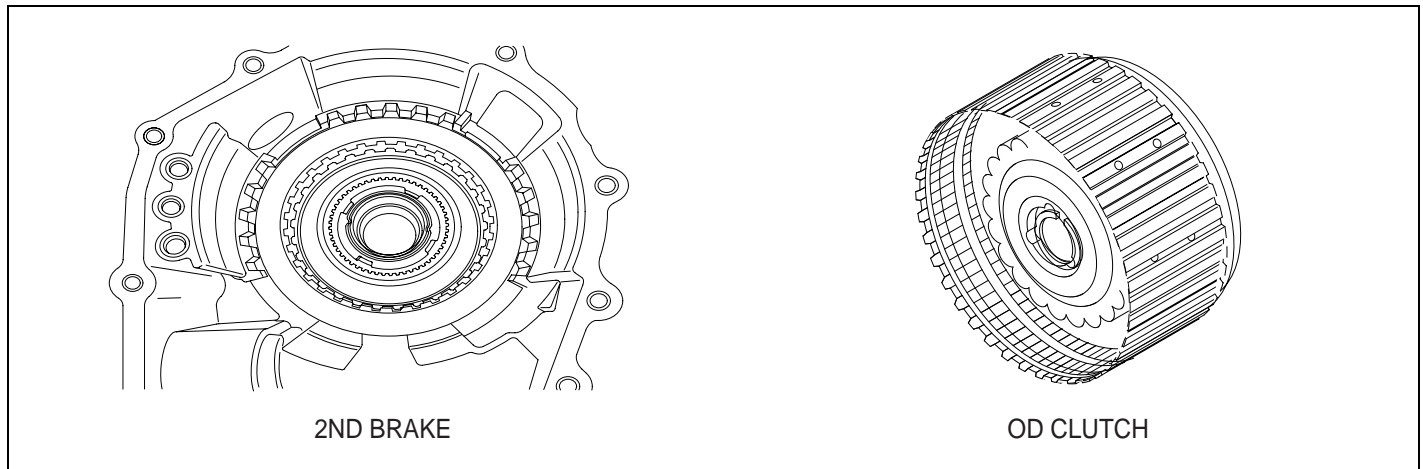**DTC P0734 GEAR 4 INCORRECT RATIO****COMPONENT LOCATION** EF70CBFF

2ND BRAKE

OD CLUTCH

BKQE010A

**GENERAL DESCRIPTION** E81D5EF6

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the 4th gear ratio, while the transaxle is engaged in the 4th gear. For example, if the output speed is 1,000 rpm and the 4th gear ratio is 0.712, then the input speed is 712 rpm.

**DTC DESCRIPTION** E538CBB4

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the 4th gear ratio, while the transaxle is engaged in 4th gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION** E20227C4

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>4th gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty Input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty UD clutch or 2nd brake</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 450rpm</li> <li>Output speed &gt; 900rpm</li> <li>Shift stage 4th. gear</li> <li>Input speed &gt; 0rpm</li> <li>A/T oil temp output -23</li> <li>Voltage of Battery &gt; 10V</li> <li>Time after shift changing finish &gt; 2secs</li> <li>A/T range switch: Only one signal</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>output speed &gt; (input speed+200rpm)/4th. gear ratio OR output speed &lt; (input speed-200rpm)/4th. gear ratio</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd gear. (If diagnosis code P0734 is output four times, the transaxle is locked into 3rd gear)</li> </ul>	



**SIGNAL WAVEFORM** EF8B215A

Refer to DTC P0731.

**MONITOR SCANTOOL DATA** E004DB2E

It is difficult to "STALL TEST" in 4th gear, therefore Go to "W/Harness Inspection" procedure.

**OPERATING ELEMENT OF EACH SHIFTING RANGE**

	UD/C	OD/C	REV/C	2ND/B	LR/B	OWC
P						
R						
N						
D1						
D2						
D3						
D4						

Low & Reverse Brake is released When the Vehicle speed over the 5 MPH(7Km/h).

**SIGNAL CIRCUIT INSPECTION** E897CDE8

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.
4. Accelerate the Engine speed until about 2000 rpm in the 4th gear.

Specification : INPUT SPEED - (OUTPUT SPEED × GEAR RATIO) 200 RPM

1.2 CURRENT DATA	
× ENGINE RPM	2133 rpm
× INPUT SPEED	2856 rpm
× OUTPUT SPEED	2911 rpm
× SHIFT POSITION	4 GEAR
× SELECT LEVER SW.	D
2ND SOLENOID DUTY	0.0 %
OD SOLENOID DUTY	0.0 %
OIL TEMPERATURE	156 °F
<div> FIX SCRN FULL PART GRPH HELP </div>	

## AT -78

## AUTOMATIC TRANSAXLE

5. Does "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**



Go to "Component Inspection" procedure.

**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or Replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## COMPONENT INSPECTION

E5245408

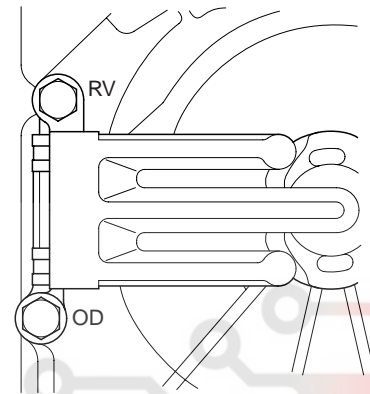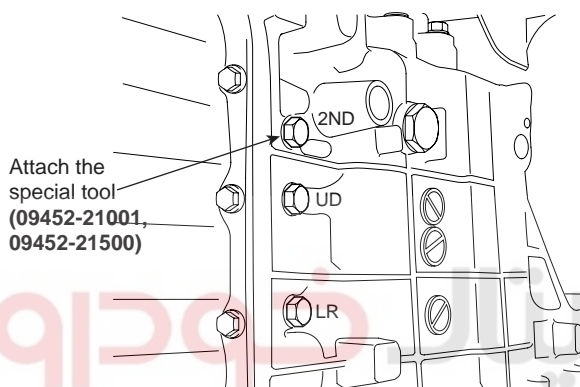

EKOF007E

1. Connect Oil pressure gauge to "OD" and "2nd" port.
2. Engine "ON".
3. Drive a car with gear position "4".

4. Compare it with reference data as below.

Specification : shown below

Measurement condition			Standard hydraulic pressure kPa (psi)					
Selector lever position	Shift position	Engine speed (rpm)	Under drive clutch pressure	Reverse clutch pressure	Overdrive clutch pressure	Low and reverse brake pressure	Second brake pressure	Torque converter pressure
P	-	2,500	-	-	-	310-390 (45-56)	-	250-350 (36-56)
R	Reverse	2,500	-	1,270-1,770 (185-256)	-	1,270-1,770 (185-256)	-	500-700 (73-101)
N	2,500	-	-	-	-	310-390 (45-56)	-	250-390 (36-56)
D	1st gear	2,500	1,010-1,050 (146-152)	-	-	1,010-1,050 (146-152)	-	500-700 (73-101)
	2nd gear	2,500	1,010-1,050 (146-152)	-	-	-	1,010-1,050 (146-152)	500-700 (73-101)
	3rd gear	2,500	590-690 (85-100)	-	590-690 (85-100)	-	-	450-650 (65-94)
	4th gear	2,500	-	-	590-690 (85-100)	-	590-690 (85-100)	450-650 (65-94)

The values are subject to change according to vehicle model or condition

5. Is oil pressure value within specification?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification Vehicle Repair" Repair" procedure.

**NO**


Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and Go to "Verification Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR E1CEE0EF

Refer to DTC P0560.

AT -80

AUTOMATIC TRANSAXLE

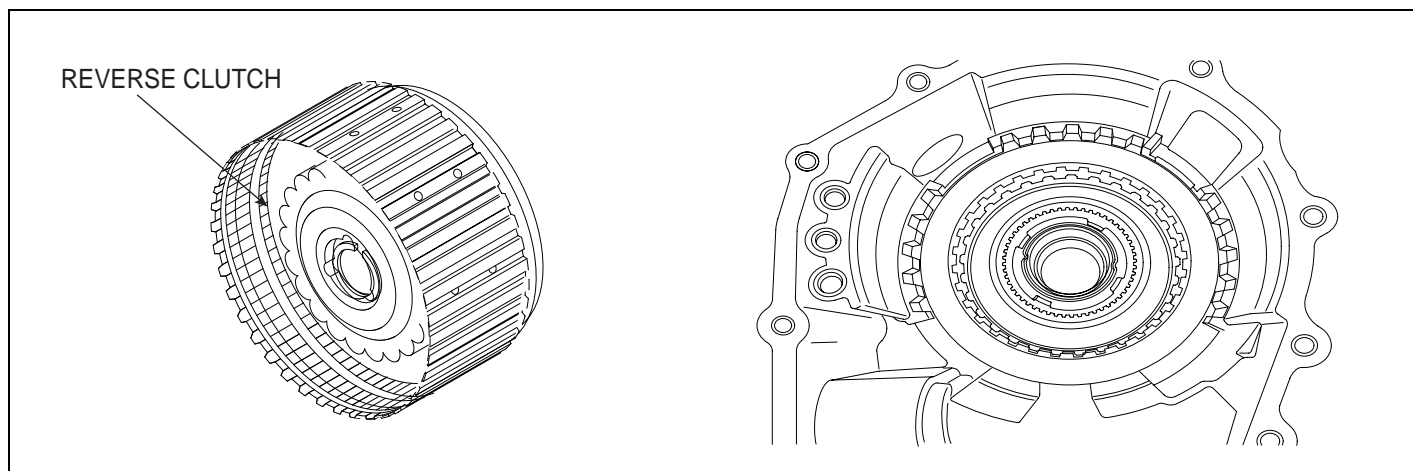**DTC P0736 REVERSE GEAR INCORRECT RATIO****COMPONENT LOCATION** E09ECDB6

BKQE012A

**GENERAL DESCRIPTION** EE1F4D82

The value of the input shaft speed should be equal to the value of the output shaft speed, when multiplied by the reverse gear ratio, while the transaxle is engaged in the reverse gear. For example, if the output speed is 1,000 rpm and the reverse gear ratio is 2.480, then the input speed is 2,480 rpm.

**DTC DESCRIPTION** E173CE3C

This code is set if the value of input shaft speed is not equal to the value of the output shaft, when multiplied by the reverse gear ratio, while the transaxle is engaged in reverse gear. This malfunction is mainly caused by mechanical troubles such as control valve sticking or solenoid valve malfunctioning rather than an electrical issue.

**DTC DETECTING CONDITION** E795162D

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Reverse gear incorrect ratio</li> </ul>	<ul style="list-style-type: none"> <li>Faulty Input speed sensor</li> <li>Faulty output speed sensor</li> <li>Faulty RVS clutch or L/R brak</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Engine speed &gt; 450rpm</li> <li>Output speed &gt; 100rpm</li> <li>Shift stage Rev. gear</li> <li>Input speed &gt; 0rpm</li> <li>A/T oil temp output -23</li> <li>Voltage of Battery &gt; 10V</li> <li>Time after shift changing finish &gt; 2secs</li> <li>A/T range switch: Only one signal</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Output speed &gt; (input speed+200rpm)/Rev. gear ratio OR output speed &lt; (input speed-200rpm)/Rev. gear ratio</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked into 3rd gear. (If diagnosis code P0736 is output four times, the transaxle is locked into 3rd gear)</li> </ul>	


**SIGNAL WAVEFORM** ECFBEC82

Refer to DTC P0731.

**MONITOR SCANTOOL DATA** EEEEC4467

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "ENGINE SPEED, INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, GEAR POSITION" parameter on the scantool.
4. Perform the "STALL TEST" with gear position "R".

Specification : 2000~2700 engine rpm

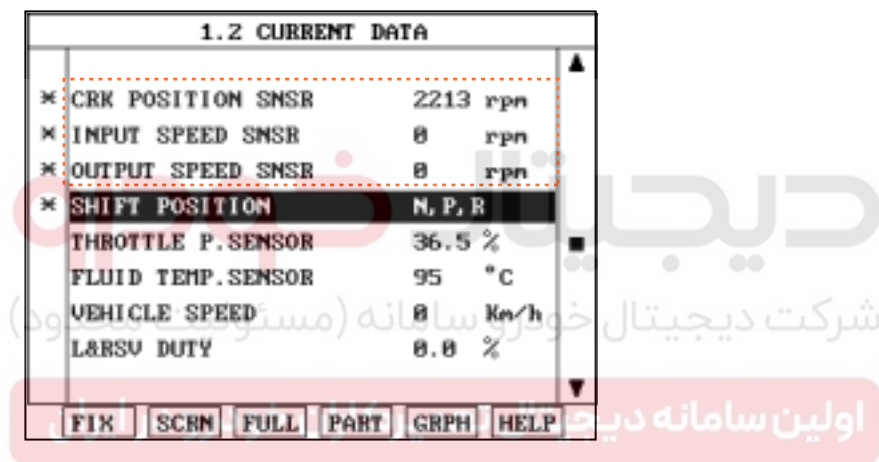

ELQE039A

**OPERATING ELEMENT OF EACH SHIFTING RANGE**

	UD/C	OD/C	REV/C	2ND/B	LR/B	OWC
P						
R						
N						
D1						
D2						
D3						
D4						

Low & Reverse Brake is released When the Vehicle speed over the 5 MPH(7Km/h).

**Stall test procedure in Reverse and reason**

Procedure

1. Warm up the engine
2. After positioning the select lever in "R" range, Depress the foot brake pedal fully after that, depress the accelerator pedal to the maximum

## AT -82

## AUTOMATIC TRANSAXLE

\* The slippage of REVERSE clutch and L/R brake can be detected by stall test in R range

Reason for stall test

1. If there is no mechanical defaults in A/T, all slippage occurs in the torque converter.
  2. Therefore, engine revolution is output, but input and output speed revolution must be "zero" due to wheel's lock.
  3. If reverse clutch and L/R brake system(reverse gear operating parts) has faults, input speed revolution will be out of specification.
  4. If output speed revolution is output. It means that the foot brake force is not applied fully. Remeasuring is required.
5. Is "STALL TEST " within specification?

**YES**

Go to "Signal Circuit Inspection" procedure.

**NO**

Go to "Component Inspection" procedure.



**CAUTION**

*Do not let anybody stand in front of or behind the vehicle while this test is being carried out.*

*Check the A/T fluid level and temperature and the engine coolant temperature.*

- *Fluid level : At the hot mark on the oil level gauge.*
- *Fluid temperature : 80~100 .*
- *Engine coolant temperature : 80~100 .*

*Chock both rear wheel(left and right).*

*Pull the parking brake lever on with the brake pedal fully depressed.*

*The throttle should not be left fully open for more than eight seconds.*

*If carrying out the stall test two or more time, move the select lever to the "N" position and run the engine at 1,000 rpm to let the A/T fluid cool down before carrying out subsequent tests.*

## SIGNAL CIRCUIT INSPECTION

E0DC9FED

1. Connect Scantool.
2. Engine "ON".
3. Monitor the "INPUT & OUTPUT SPEED SENSOR" parameter on the scantool.

4. Accelerate the Engine speed until about 2000 rpm in the "R" gear.

Specification :  $\text{INPUT SPEED} - (\text{OUTPUT SPEED} \times \text{GEAR RATIO})$  200 RPM

1.2 CURRENT DATA	
* ENGINE RPM	2127 rpm
* INPUT SPEED	2856 rpm
* OUTPUT SPEED	828 rpm
* SHIFT POSITION	R GEAR
* SELECT LEVER SW.	L
HIVEC MODE	MODE F
VEHICLE SPEED	22 MPH
THROTTLE P.SENSOR	14.1 %
<div> <div>FIX</div> <div>SCRN</div> <div>FULL</div> <div>PART</div> <div>GRPH</div> <div>HELP</div> </div>	

ELQE040A

5. Are "INPUT & OUTPUT SPEED SENSOR" within specifications?

**YES**



Go to "Component Inspection" procedure.

**NO**

Check for electrical noise of circuit in INPUT & OUTPUT SPEED SENSOR or Replace INPUT & OUTPUT SPEED SENSOR. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## COMPONENT INSPECTION

E76C5E92

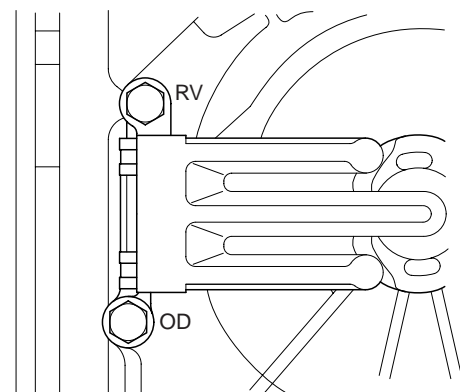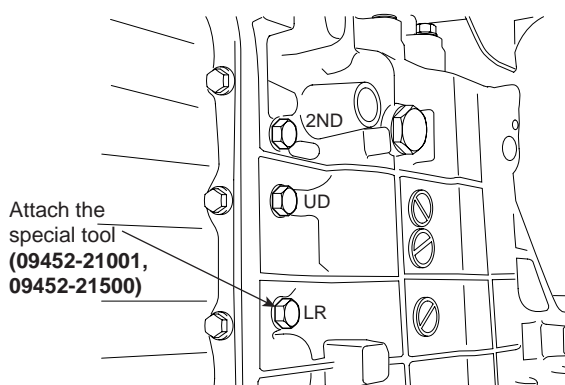

EKOF007F

1. Connect Oil pressure gauge to "RVS" and "LR" port.
2. Engine "ON".
3. Drive a car with gear position R.



## AT -84

## AUTOMATIC TRANSAXLE

4. Compare it with reference data as below.

Specification : shown below

Measurement condition			Standard hydraulic pressure kPa (psi)					
Selector lever position	Shift position	Engine speed (rpm)	Under drive clutch pressure	Reverse clutch pressure	Overdrive clutch pressure	Low and reverse brake pressure	Second brake pressure	Torque converter pressure
P	-	2,500	-	-	-	310-390 (45-56)	-	250-350 (36-56)
R	Reverse	2,500	-	1,270-1,770 (185-256)	-	1,270-1,770 (185-256)	-	500-700 (73-101)
N	2,500	-	-	-	-	310-390 (45-56)	-	250-390 (36-56)
D	1st gear	2,500	1,010-1,050 (146-152)	-	-	1,010-1,050 (146-152)	-	500-700 (73-101)
	2nd gear	2,500	1,010-1,050 (146-152)	-	-	-	1,010-1,050 (146-152)	500-700 (73-101)
	3rd gear	2,500	590-690 (85-100)	-	590-690 (85-100)	-	-	450-650 (65-94)
	4th gear	2,500	-	-	590-690 (85-100)	-	590-690 (85-100)	450-650 (65-94)

The values are subject to change according to vehicle model or condition

5. Is oil pressure value within specification?

**YES**

Repair AUTO TRANSAXLE(Clutch or Brake) as necessary and Go to "Verification Vehicle Repair" Repair" procedure.

**NO**

Replace AUTO TRANSAXLE (BODY CONTROL VALVE faulty) as necessary and Go to "Verification Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR

EAB60F6E

Refer to DTC P0560.



## DTC P0741 TORQUE CONVERTER CLUTCH CIRCUIT - STUCK OFF

### GENERAL DESCRIPTION EF781BCE

The PCM/TCM controls the locking and unlocking of the Torque Converter Clutch (or Damper Clutch), to the input shaft of the transmission, by applying hydraulic pressure. The main purpose of T/C clutch control is to save fuel by decreasing the hydraulic load inside the T/C. The PCM/TCM outputs duty pulses to control the Damper Clutch Control Solenoid Valve(DCCSV) and hydraulic pressure is applied to the DC according to the DCC duty ratio value. When the duty ratio is high, high pressure is applied and the Damper Clutch is locked. The normal operating range of the Damper Clutch Control duty ratio value is from 30%(unlocked) to 85%(locked).

### DTC DESCRIPTION EE0F54F4

The PCM/TCM increases the duty ratio to engage the Damper Clutch by monitoring slip rpms (difference value between engine speed and turbine speed). To decrease the slip of the Damper Clutch, the PCM/TCM increases the duty ratio by applying more hydraulic pressure. When slip rpm does not drop under some value with 100% duty ratio, the PCM/TCM determines that the Torque Converter Clutch is stuck OFF and sets this code.

### DTC DETECTING CONDITION ED24A875

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Stuck "OFF"</li> </ul>	TORQUE CONVERTER(DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Faulty TCC or oil pressure system</li> <li>Faulty TCC solenoid valve</li> <li>Faulty body control valve</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>During the connect control</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Detect 2 times the Lock-up clutch control duty=100% for 2sec</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>1 event</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Damper clutch abnormal system (If diagnosis code P0741 is output four times, TORQUE CONVERTER(DAMPER) CLUTCH is not controlled by TCM(PCM))</li> </ul>	

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Stuck "ON"</li> </ul>	TORQUE CONVERTER(DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Faulty TCC or oil pressure system</li> <li>Faulty TCC solenoid valve</li> <li>Faulty body control valve</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Throttle position &gt; 1.5V</li> <li>Output speed &gt; 1000rpm</li> <li>Solenoid status OFF</li> <li>A/T range switch D,SP</li> <li>Time after TCC release &gt; 5secs</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>(rationality-low) Calculated slip (engine speed-input speed) &lt; 5rpm or (rationality-high) Calculated slip &gt; -5rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Damper clutch abnormal system (If diagnosis code P0741 is output four times, TORQUE CONVERTER(DAMPER) CLUTCH is not controlled by TCM(PCM))</li> </ul>	


## AT -86

## AUTOMATIC TRANSAXLE

## MONITOR SCANTOOL DATA ECE73067

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Select "D RANGE" and drive vehicle.
4. Monitor the "TORQUE CONVERTER(DAMPER) CLUTCH" parameter on the scantool.

Specification : TCC SLIP < 160RPM(In condition that TCC SOL. DUTY > 80% )

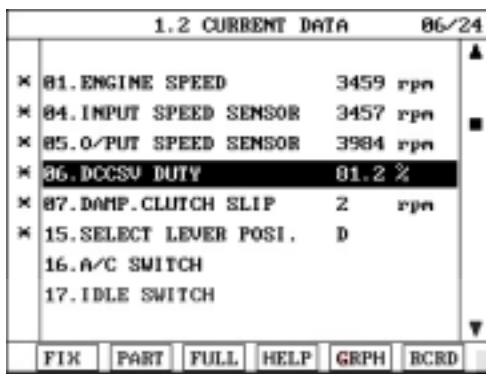

1.2 CURRENT DATA		86/24
✖ 01. ENGINE SPEED	3459 rpm	
✖ 04. INPUT SPEED SENSOR	3457 rpm	
✖ 05. OUTPUT SPEED SENSOR	3984 rpm	
✖ 06. DCCSV DUTY	81.2 %	
✖ 07. DAMP. CLUTCH SLIP	2 rpm	
✖ 15. SELECT LEVER POSI.	D	
16. A/C SWITCH		
17. IDLE SWITCH		

FIG.1)

FIG.1) : Normal status

5. Are "TCC SOLENOID DUTY and TCC SLIP" within specifications?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Component Inspection" procedure.

## COMPONENT INSPECTION E9670B9D

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE
  - 1) Connect scantool to data link connector(DLC).
  - 2) Ignition "ON" & Engine "OFF".
  - 3) Select A/T Solenoid valve Actuator test and Operate Actuator test.

- 4) Can you hear operating sound for using TCC SOLENOID VALVE Actuator Testing Function?



**YES**

Go to "CHECK OIL PRESSURE" as below.

**NO**

Replace "TCC SOLENOID VALVE" as necessary and Go to "Verification Vehicle Repair" procedure.

## 2. CHECK OIL PRESSURE

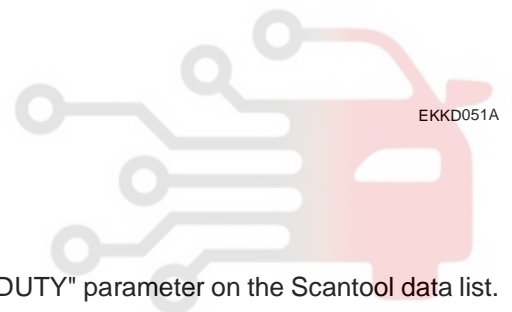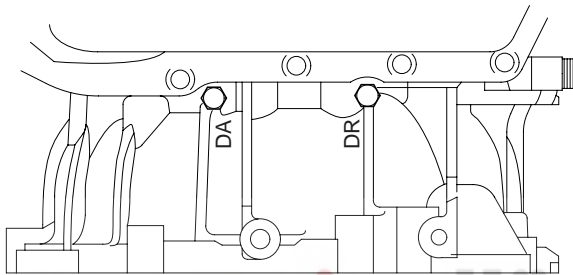

EKKD051A

- 1) Connect Oil pressure gauge to "DA" port.
- 2) Engine "ON".
- 3) After connecting Scantool and monitor the "TCC SOLENIOD VALVE DUTY" parameter on the Scantool data list.
- 4) Operate vehicle with 3rd or 4th gear and operate the "TCC SOLENIOD VALVE DUTY" more than 85%.

Specification : Oil pressure gauge approx 735.4960KPa(7.5kg/cm<sup>2</sup>)-(In condition that TCC SOL. DUTY > 85%)

- 5) Is oil pressure value within specification?

**YES**

Repair TORQUE CONVERTER CLUTCH(REPLACE Torque Converter ) as necessary and Go to "Verification Vehicle Repair " procedure.

**NO**

Replace A/T ass'y (possible to BODY CONTROL VALVE faulty) as necessary and Go to "Verification Vehicle Repair " procedure.

## VERIFICATION OF VEHICLE REPAIR

EBF2758E

Refer to DTC P0560.

AT -88

AUTOMATIC TRANSAXLE

**DTC P0742 TORQUE CONVERTER CLUTCH CIRCUIT - STUCK ON****GENERAL DESCRIPTION** ED83D3CF

Refer to DTC P0741.

**DTC DESCRIPTION** EBFF5EBA

The PCM/TCM increases the duty ratio to engage the Damper Clutch by monitoring the slip rpms (difference value between engine speed and turbine speed). If a very small amount of slip rpm is maintained though the TCM applies 0% duty ratio value, then the TCM determines that the Torque Converter Clutch is stuck ON and sets this code.

**DTC DETECTING CONDITION** EB724954


Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Stuck "ON"</li> </ul>	TORQUE CONVERTER(DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Faulty TCC or oil pressure system</li> <li>Faulty TCC solenoid valve</li> <li>Faulty body control valve</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Throttle position &gt; 1.5V</li> <li>Output speed &gt; 1000rpm</li> <li>Solenoid status OFF</li> <li>A/T range switch D,SP</li> <li>Time after TCC release &gt; 5secs</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>(rationality-low) Calculated slip (engine speed-input speed) &lt; 5rpm or (rationality-high) Calculated slip &gt; -5rpm</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 5sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Damper clutch abnormal system (If diagnosis code P0741 is output four times, TORQUE CONVERTER(DAMPER) CLUTCH is not controlled by TCM(PCM))</li> </ul>	

**MONITOR SCANTOOL DATA** ED388BB7

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Select "D RANGE" and drive vehicle.

4. Monitor the "TORQUE CONVERTER(DAMPER) CLUTCH" parameter on the scantool.

Specification : TCC SLIP > 5RPM

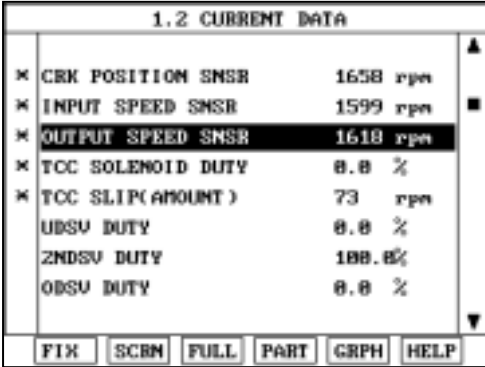

× CRK POSITION SNSR	1658 rpm
× INPUT SPEED SNSR	1599 rpm
× OUTPUT SPEED SNSR	1618 rpm
× TCC SOLENOID DUTY	8.8 %
× TCC SLIP(AMOUNT)	73 rpm
UBSV DUTY	8.8 %
2NDSV DUTY	188.8%
OBSV DUTY	8.8 %

FIG.1)

FIG.1) : Normal status

ELQE042A

5. Are "TCC SOLENOID DUTY and TCC SLIP" within specifications?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Component Inspection" procedure.

## COMPONENT INSPECTION EBE280D9

1. CHECK TORQUE CONVERTER CLUTCH SOLENOID VALVE


- 1) Connect scantool to data link connector(DLC).
- 2) Ignition "ON" & Engine "OFF".
- 3) Select A/T Solenoid valve Actuator test and Operate Actuator test.
- 4) Can you hear operating sound for using TCC SOLENOID VALVE Actuator Testing Function?

**YES**

Go to "CHECK OIL PRESSURE" as below.

**NO**

Replace "TCC SOLENOID VALVE" as necessary and Go to "Verification Vehicle Repair" procedure.

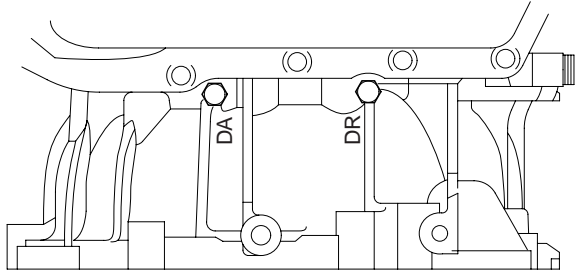**AT -90****AUTOMATIC TRANSAXLE****2. CHECK OIL PRESSURE**

EKKD051A

- 1) Connect Oil pressure gauge to "DR" port.
- 2) Ignition "ON" & Engine "OFF".
- 3) After connecting Scantool and monitor the "TCC SOLENIOD VALVE DUTY" parameter on the Scantool data list.
- 4) Select 1st gear and accelerate Engine speed to 2500 rpm.
- 5) Measure oil pressure.

Specification : approx. 6.1kg/cm<sup>2</sup>

- 6) Is oil pressure value within specification?

**YES**

Repair TORQUE CONVERTER CLUTCH(REPLACE Torque Converter ) as necessary and Go to "Verification Vehicle Repair " procedure.

**NO**

Replace A/T ass'y (possible to BODY CONTROL VALVE faulty) as necessary and Go to "Verification Vehicle Repair " procedure.

**VERIFICATION OF VEHICLE REPAIR**


E392C01A

Refer to DTC P0560.

## DTC P0743 TORQUE CONVERTER CLUTCH CIRCUIT - ELECTRICAL

### COMPONENT LOCATION

ECBAFFD7

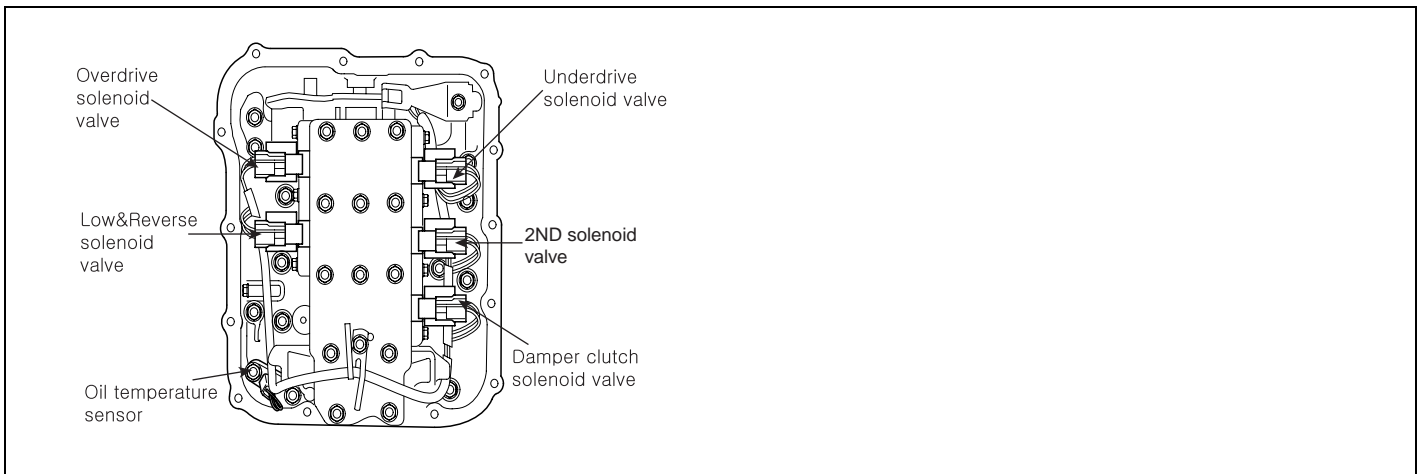

BKQE013A

### GENERAL DESCRIPTION

EFB3318A

Refer to DTC P0741.

### DTC DESCRIPTION

E95EA735

The TCM(PCM) checks the Damper Clutch Control Signal by monitoring the feedback signal from the solenoid valve drive circuit. If an unexpected signal is monitored (for example, high voltage is detected when low voltage is expected, or low voltage is detected when high voltage is expected) the TCM(PCM) judges that DCCSV circuit is malfunctioning and sets this code.

### DTC DETECTING CONDITION

E6DD6509

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	TORQUE CON- VERTER(DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty TCC SOLENOID VALVE</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>10V &lt; Voltage Battery &lt; 16V</li> <li>In gear state(no gear shifting) 500msec is passed from turn on the relay</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Feedback voltage from DCC control solenoid &gt; Voltage Battery-2V and DCC control duty is 100%</li> <li>Feedback voltage from DCC control solenoid 5.5V and DCC control duty is 0%</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.3 sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in 3rd gear.(Control relay off)</li> </ul>	



## AT -92

## AUTOMATIC TRANSAXLE

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	TORQUE CON- VERTER(DAMPER) CLUTCH : TCC <ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty TCC SOLENOID VALVE</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Solenoid status Either solid ON or OFF</li> <li>Voltage of Battery &gt; 10V</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Voltage &lt; 3V</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 320 ms</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in 3 rd gear.(Control relay off)</li> </ul>	

## SPECIFICATION ED6CB889

Solenoid Valve for Pressure Control

- Sensor type : Normal open 3-way
- Operating temperature : -22~266°F(-30°C 130°C)
- Frequency :
  - LR, 2ND, UD, OD, RED : 61.27Hz (at the ATF temp. -20°C above)
  - DCC : 30.64Hz
  - KM series : 35Hz

- Internal resistance : 2.7~3.4 (68°F or 20°C)
- Surge voltage : 56 V

## MONITOR SCANTOOL DATA EA7BDE56

- Connect scantool to data link connector(DLC)
- Engine "ON".
- Monitor the "TCC SOL. VALVE" parameter on the scantool
- Select "D RANGE" and Operate "TCC SOLENOID DUTY" more than 85%



1.2 CURRENT DATA 06/24	
✖ 01.ENGINE SPEED	3459 rpm
✖ 04.INPUT SPEED SENSOR	3457 rpm
✖ 05.O/PUT SPEED SENSOR	3984 rpm
✖ 06.DCCSV DUTY	01.2 %
✖ 07.DAMP.CLUTCH SLIP	2 rpm
✖ 15.SELECT LEVER POSI.	D
16.A/C SWITCH	
17.IDLE SWITCH	
FIX PART FULL HELP GRPH BCRD	

FIG.1)

FIG.1) : Normal status

ELQE041A



5. Does "TCC SOLENOID DUTY " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector Inspection " procedure.

## TERMINAL & CONNECTOR INSPECTION EB84AE32

- Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
- Has a problem been found?

**YES**

Repair as necessary and then go to "Verification of Vehicle Repair" procedure.


**NO**

Go to "Power Supply Circuit Inspection" procedure.

## POWER SUPPLY CIRCUIT INSPECTION E3A785A9

- Disconnect "A/T SOLENOID VALVE" connector.
- Measure voltage between terminal "10" of the sensor harness connector and chassis ground.
- Turn ignition switch OFF      ON

Specification: 12V is measured only for approx. 0.5sec

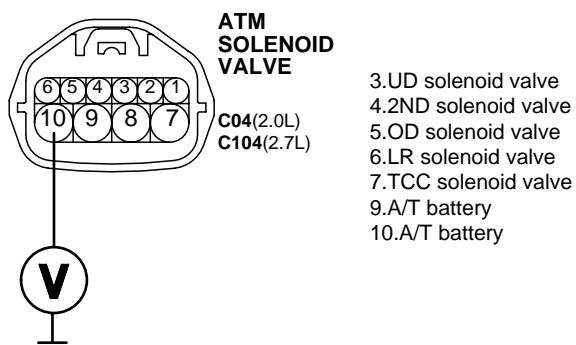

EKOF008A

## AT -94

## AUTOMATIC TRANSAXLE

4. Is voltage within specifications?

**YES**

Go to "Signal circuit inspection" procedure.

**NO**

Check that A/T-30A Fuse in engine room junction is installed or not blown.

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## SIGNAL CIRCUIT INSPECTION

E509EA6D

1. Check signal circuit open inspection.

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector.
- 3) Measure resistance between terminal "7" of the ATM SOLENOID VALVE harness connector and terminal "15" of the TCM harness connector.

Specification: approx. 0

[2.0L]



3. UD solenoid valve  
4. 2ND solenoid valve  
5. OD solenoid valve  
6. LR solenoid valve  
7. TCC solenoid valve  
9. A/T battery  
10. A/T battery

38. LR UD solenoid valve control  
40. UD solenoid valve control  
39. 2ND solenoid valve control  
33. OD solenoid valve control  
35. TCC solenoid valve control

[2.7L]

3. UD solenoid valve  
4. 2ND solenoid valve  
5. OD solenoid valve  
6. LR solenoid valve  
7. TCC solenoid valve  
9. A/T battery  
10. A/T battery

1. UD solenoid valve control  
16. 2ND solenoid valve control  
12. LR solenoid valve control  
14. OD solenoid valve control  
15. TCC solenoid valve control

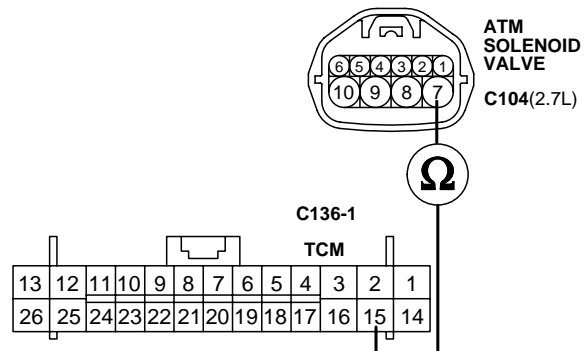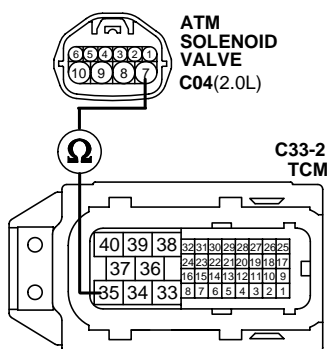

EKO008B

- 4) Is resistance within specifications?

**YES**

Go to "Check signal circuit short Inspection" procedure.


**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

2. Check signal circuit short inspection

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector
- 3) Measure resistance between terminal "7" of the ATM SOLENOID VALVE harness and chassis ground.

Specification: Infinite

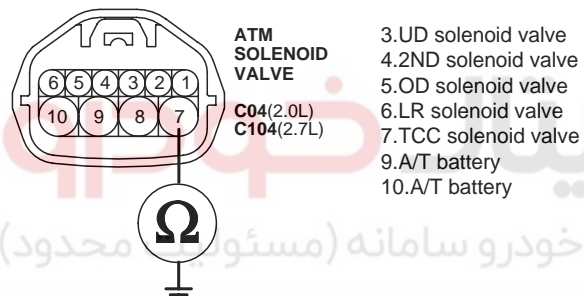

- 4) Is resistance within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for short to ground in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**COMPONENT INSPECTION** E6CEE8AA

1. CHECK SOLENOID VELVE


- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector.

## AT -96

## AUTOMATIC TRANSAXLE

- 3) Measure resistance between terminal "7" and terminal "10" of the ATM SOLENOID VALVE harness connector.

Specification: Approximately 2.7~3.4 (20°C)

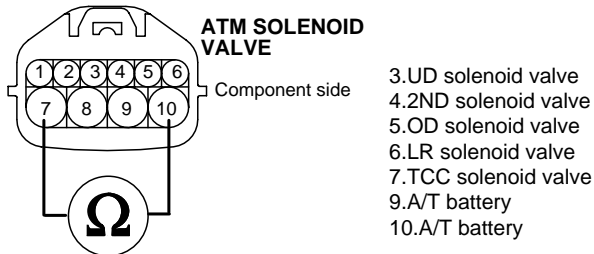

EKO008D

- 4) Is resistance within specification?

**YES**

Go to "CHECK PCM/TCM" as below.

**NO**

Replace TCC SOLENOID VALVE as necessary and go to "Verification Vehicle Repair" procedure.

## 2. CHECK PCM/TCM

- 1) Connect scantool to data link connector(DLC).
- 2) Ignition "ON" & Engine "OFF".
- 3) Select A/T Solenoid valve Actuator test and Operate Actuator test.
- 4) Can you hear operating sound for TCC SOLENOID VALVE Actuator Testing Function?

**YES**

Go to "Verification Vehicle Repair" procedure.

**NO**

Replace PCM/TCM as necessary and Go to "Verification Vehicle Repair" procedure

### ACTUATOR TEST CONDITION

1. IG SWITCH ON
2. TRANSAXLE RANGE SWITCH is normal
3. P RANGE
4. Vehicle Speed 0km/h
5. Throttle position sensor < 1V
6. IDLE SWITCH ON
7. ENGINE RPM 0

## VERIFICATION OF VEHICLE REPAIR


E209896E

Refer to DTC P0560.

## DTC P0750 SHIFT CONTROL SOLENOID VALVE A CIRCUIT MALFUNCTION

### COMPONENT LOCATION

E1C181F7

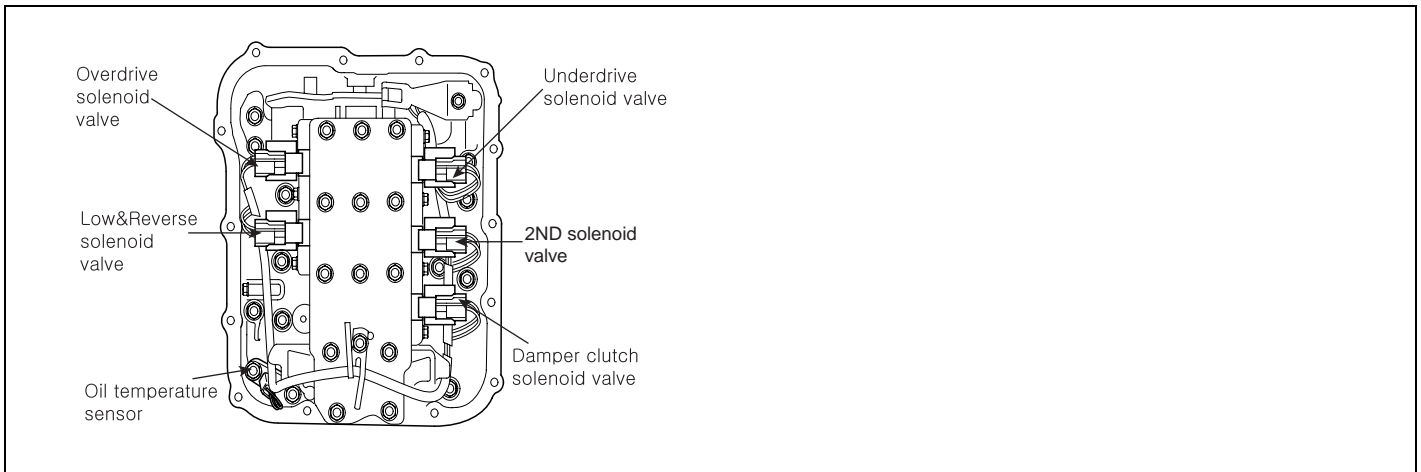

BKQE013A

### GENERAL DESCRIPTION

EA7823EF

The Automatic Transmission changes the gear position of the transmission by utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. The HIVEC Automatic Transmission consists of a: LR ( Low and Reverse Brake ), 2ND ( 2nd Brake ), UD ( Under Drive Clutch ), OD ( Over Drive Clutch ), REV ( Reverse Clutch ), and a RED ( Reduction Brake, only for 5 speed transmissions). The LR Brake is engaged in the 1st gear and reverse gear positions.

### DTC DESCRIPTION

E2CD7361

The TCM checks the Low and Reverse Control Signal by monitoring the feedback signal from the solenoid valve drive circuit. If an unexpected signal is monitored (for example, high voltage is detected when low voltage is expected, or low voltage is detected when high voltage is expected), the TCM judges that the Low and Reverse control solenoid circuit is malfunctioning and sets this code.

### DTC DETECTING CONDITION

ECFF4EC6

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty LR SOLENOID VALVE</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>16V &gt; Voltage Battery &gt; 10V</li> <li>In gear state(no gear shifting) 500msec is passed from turn on the relay</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Feedback voltage from LR control solenoid &gt; Vb-2V and LR control duty is 0%</li> <li>Feedback voltage from LR control solenoid 5.5V and LR control duty is 100%</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>More than 0.3s</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in 3rd gear.(Control relay off)</li> </ul>	

## AT -98

## AUTOMATIC TRANSAXLE

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	• Check voltage range	<ul style="list-style-type: none"> <li>• Open or short in circuit</li> <li>• Faulty LR SOLENOID VALVE</li> <li>• Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>• Solenoid status Either solid ON or OFF</li> <li>• Voltage of Battery &gt; 10V</li> </ul>	
<b>Threshold value</b>	• Voltage < 3V	
<b>Diagnostic Time</b>	• More than 320 ms	
<b>Fail Safe</b>	• Locked in 3rd gear.(Control relay off)	

## SPECIFICATION

ECF6DB8B

Solenoid Valve for Pressure Control

- Sensor type : Normal open 3-way
- Operating temperature : -22~266°F(-30°C 130°C)
- Frequency :
  - LR, 2ND, UD, OD, RED : 61.27Hz (at the ATF temp. -20°C above)
  - DCC : 30.64Hz

- Internal resistance : 2.7~3.4 (68°F or 20°C)
- Surge voltage : 56 V

## MONITOR SCANTOOL DATA

EAF6FF03

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "LR SOL. VALVE" parameter on the scantool.
4. Shift gear position 1st to 2nd.

Specification: 1st 0%, 2nd 100%

1.2 CURRENT DATA	
* L&RSV DUTY	0.0 %
* UDSV DUTY	0.0 %
* 2NDSV DUTY	100.0%
* ODSV DUTY	100.0%
* TRANSAXLE RANGE SW	D
THROTTLE P.SENSOR	12.9 %
FLUID TEMP.SENSOR	66 °C
CRK POSITION SNSR	807 rpm

FIG.1)

1.2 CURRENT DATA	
* L&RSV DUTY	100.0%
* UDSV DUTY	0.0 %
* 2NDSV DUTY	0.0 %
* ODSV DUTY	100.0%
* SHIFT POSITION	2
THROTTLE P.SENSOR	12.9 %
FLUID TEMP.SENSOR	71 °C
CRK POSITION SNSR	835 rpm

FIG.2)

FIG. 1) 1st gear

FIG. 2) 2nd gear

ELQE045A

5. Does "LR SOLENOID DUTY " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector Inspection " procedure.

## TERMINAL & CONNECTOR INSPECTION EBBE52DE

- Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
- Has a problem been found?

**YES**

Repair as necessary and then go to "Verification of Vehicle Repair" procedure.


**NO**

Go to "Power Supply Circuit Inspection" procedure.

## POWER SUPPLY CIRCUIT INSPECTION E37EEA2B

- Disconnect "A/T SOLENOID VALVE" connector.
- Measure voltage between terminal "10" of the sensor harness connector and chassis ground.
- Turn ignition switch OFF      ON.

Specification: 12V is measured only for approx. 0.5sec

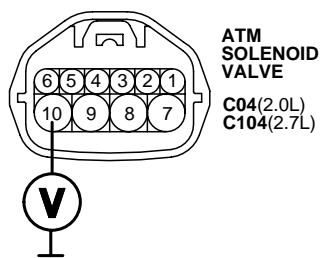

- UD solenoid valve
- 2ND solenoid valve
- OD solenoid valve
- LR solenoid valve
- TCC solenoid valve
- A/T battery
- A/T battery

EKOF009A

4. Is voltage within specifications?

**YES**

Go to "Signal circuit inspection" procedure.



## AT -100

## AUTOMATIC TRANSAXLE

**NO**

Check that A/T-30A Fuse in engine room junction is installed or not blown.

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**SIGNAL CIRCUIT INSPECTION**

E3F94B5D

## 1. Check signal circuit open inspection

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector.
- 3) Measure resistance between terminal "6" of the ATM SOLENOID VALVE harness connector and terminal "12" of the PCM/TCM harness connector

Specification: approx. 0

[2.7L Gasoline]



3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery

1.UD solenoid valve control  
16.2ND solenoid valve control  
12.LR solenoid valve control  
14.OD solenoid valve control  
15.TCC solenoid valve control

[2.0L Gasoline]

3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery

38.LR solenoid valve control  
40. LR solenoid valve control  
39. LR solenoid valve control  
33. LR solenoid valve control  
35. LR solenoid valve control

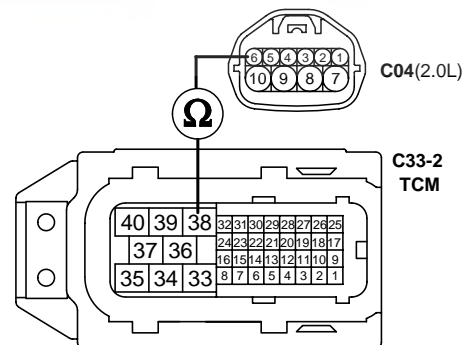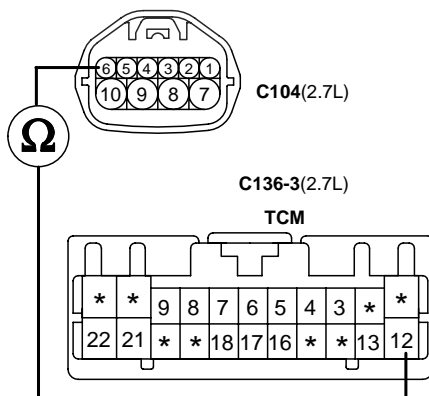

EKOF009B

## 4) Is resistance within specifications?

**YES**

Go to "Check signal circuit short Inspection" procedure.

**NO**


Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.



## 2. Check signal circuit short inspection

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector.
- 3) Measure resistance between terminal "6" of the ATM SOLENOID VALVE harness and chassis ground.

Specification: Infinite

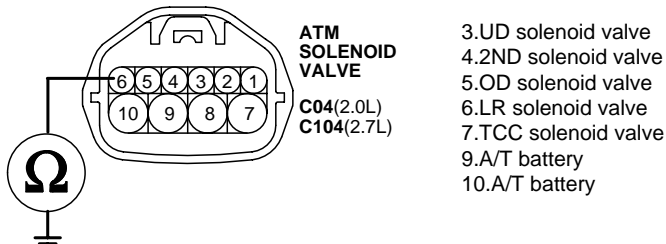

EKOF009C

## 4) Is resistance within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for short to ground in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.


## COMPONENT INSPECTION

E2C335F5

## 1. CHECK SOLENOID VELVE

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector.
- 3) Measure resistance between terminal "6" and terminal "10" of the ATM SOLENOID VALVE component.

Specification: Approximately 2.7~3.4 (20°C)

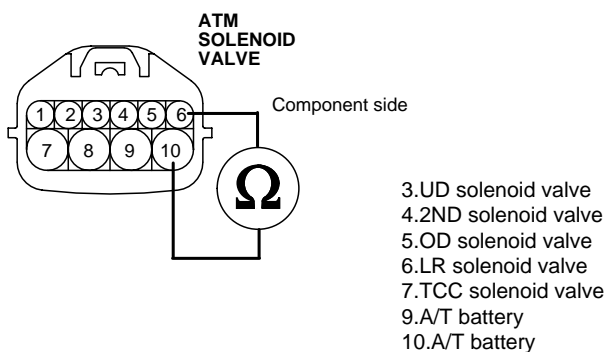

EKOF009D

## AT -102

## AUTOMATIC TRANSAXLE

- 4) Is resistance within specification?

**YES**

Go to "CHECK PCM/TCM" as below.

**NO**

Replace LR SOLENOID VALVE as necessary and go to "Verification Vehicle Repair" procedure.

2. CHECK PCM/TCM

- 1) Connect scantool to data link connector(DLC).
- 2) Ignition "ON" & Engine "OFF".
- 3) Select A/T Solenoid valve Actuator test and Operate Actuator test.
- 4) Can you hear operating sound for LR SOLENOID VALVE Actuator Testing Function?

**YES**

Go to "Verification Vehicle Repair" procedure.

**NO**

Replace PCM/TCM as necessary and Go to "Verification Vehicle Repair" procedure.

**ACTUATOR TEST CONDITION**

1. IG SWITCH ON
2. TRANSAXLE RANGE SWITCH is normal
3. P RANGE
4. Vehicle Speed 0km/h
5. Throttle position sensor < 1V
6. IDLE SWITCH ON
7. ENGINE RPM 0


**VERIFICATION OF VEHICLE REPAIR**

E7F6FAEC

Refer to DTC P0560.

**DTC P0755 SHIFT CONTROL SOLENOID VALVE B CIRCUIT MALFUNCTION****COMPONENT LOCATION**

ECD8DFFC

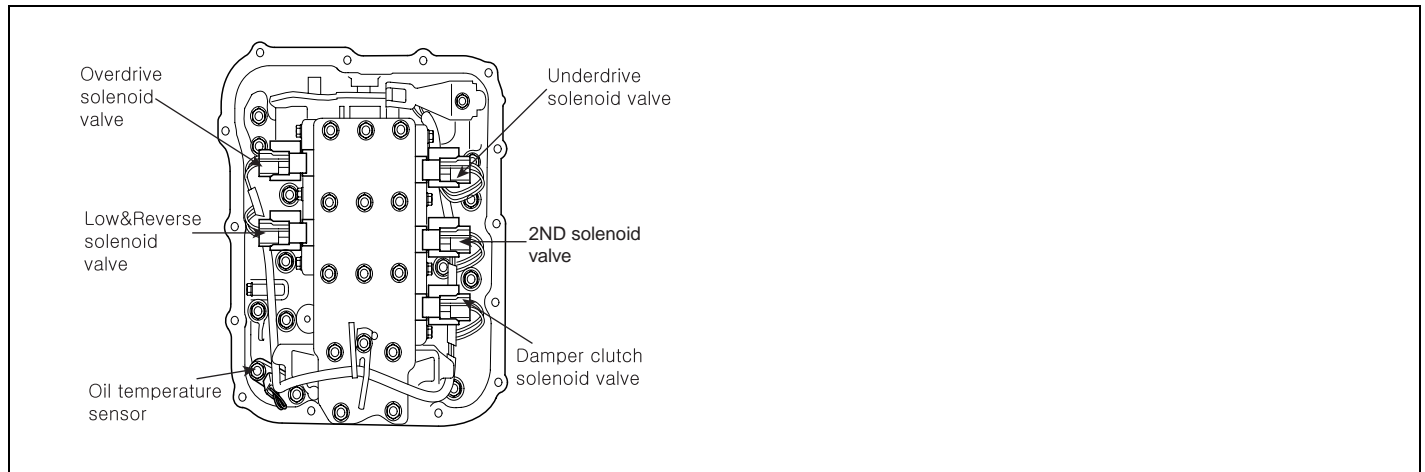

BKQE013A

**GENERAL DESCRIPTION**

EA47FA24

The Automatic Transmission changes the gear position of the transmission by utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. The HIVEC Automatic Transmission consists of a: LR ( Low and Reverse Brake ), 2ND ( 2nd Brake ), UD ( Under Drive Clutch ), OD ( Over Drive Clutch ), REV ( Reverse Clutch ), and a RED ( Reduction Brake, only for 5 speed transmissions). The LR Brake is engaged in the 1st gear and reverse gear positions.

**DTC DESCRIPTION**

EC2176FE

Refer to DTC P0750.

**DTC DETECTING CONDITION**

E22AA3D5

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty UD SOLENOID VALVE</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>16V &gt; Voltage Battery &gt; 10V</li> <li>In gear state(no gear shifting) 500msec is passed from turn on the relay</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Feedback voltage from UD control solenoid &gt; Vb-2V and UD control duty is 0%</li> <li>Feedback voltage from UD control solenoid 5.5V and UD control duty is 100%</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 0.3s</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in 3rd gear.(Control relay off)</li> </ul>	

## AT -104

## AUTOMATIC TRANSAXLE

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	• Check voltage range	<ul style="list-style-type: none"> <li>• Open or short in circuit</li> <li>• Faulty UD SOLENOID VALVE</li> <li>• Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>• Solenoid status Either solid ON or OFF</li> <li>• Voltage of Battery &gt; 10V</li> </ul>	
<b>Threshold value</b>	• Voltage < 3V	
<b>Diagnostic Time</b>	• More than 320 ms	
<b>Fail Safe</b>	• Locked in 3rd gear.(Control relay off)	

## SPECIFICATION E0D8C5EF

Refer to DTC P0750.

## MONITOR SCANTOOL DATA EC3D8C7A

1. Connect scantool to data link connector(DLC)
2. Engine "ON".
3. Monitor the "UD SOL. VALVE" parameter on the scantool.
4. Shift gear position "N" to "D".

Specification: P/N 100%, D 0.0%

1.2 CURRENT DATA		
* TCC SOLENOID DUTY	0.0 %	
* LR SOLENOID DUTY	0.0 %	
* UD SOLENOID DUTY	100.0%	
* 2ND SOLENOID DUTY	100.0%	
* OD SOLENOID DUTY	100.0%	
* SHIFT POSITION	-	
* SELECT LEVER SW.	P, N	
ENGINE TORQUE	14.9 %	

FIG.1)

1.2 CURRENT DATA		
* L&RSV DUTY	0.0 %	
* UDSV DUTY	0.0 %	
* 2NDSV DUTY	100.0%	
* ODSV DUTY	100.0%	
* TRANSAXLE RANGE SW	D	
THROTTLE P.SENSOR	12.9 %	
FLUID TEMP.SENSOR	66 °C	
CRK POSITION SNSR	807 rpm	

FIG.2)

FIG. 1) P/N Range

FIG. 2) D Range

ELQE046A

5. Does "UD SOLENOID DUTY " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector Inspection " procedure.


## TERMINAL & CONNECTOR INSPECTION ECBC9106

Refer to DTC P0750.

## POWER SUPPLY CIRCUIT INSPECTION EF7B799D

1. Disconnect "A/T SOLENOID VALVE" connector.
2. Measure voltage between terminal "9" of the sensor harness connector and chassis ground.
3. Turn ignition switch OFF ON

Specification: 12V is measured only for approx. 0.5sec

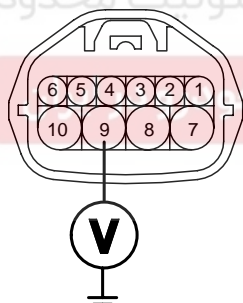

ATM  
SOLENOID  
VALVE  
C04(2.0L)  
C104(2.7L)

- 3.UD solenoid valve
- 4.2ND solenoid valve
- 5.OD solenoid valve
- 6.LR solenoid valve
- 7.TCC solenoid valve
- 9.A/T battery
- 10.A/T battery

EKOF009E

4. Is voltage within specifications?

**YES**

Go to "Signal circuit inspection" procedure.

**NO**

Check that A/T-30A Fuse in engine room junction is installed or not blown.  
Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## AT -106

## AUTOMATIC TRANSAXLE

## SIGNAL CIRCUIT INSPECTION

EDFE1438

## 1. Check signal circuit open inspection


- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector
- 3) Measure resistance between terminal "3" of the ATM SOLENOID VALVE harness connector and terminal "1" of the PCM/TCM harness connector

Specification: approx. 0

[2.7L Gasoline]

3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery


1.UD solenoid valve control  
16.2ND solenoid valve control  
14.OD solenoid valve control  
15.TCC solenoid valve control

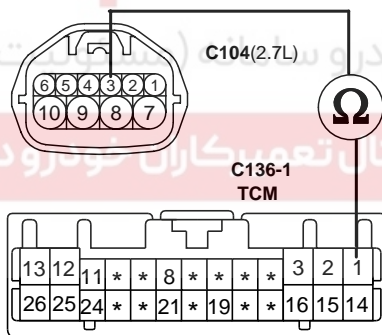

[2.0L Gasoline]

3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery

40.UD solenoid valve control  
39.2ND solenoid valve control  
33.OD solenoid valve control  
35.TCC solenoid valve control

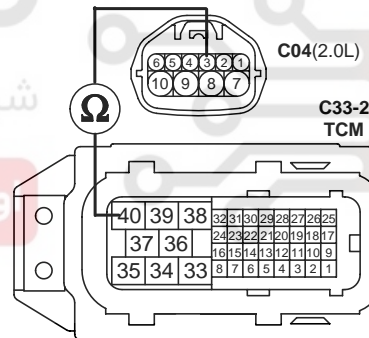

EKOF009F

## 4) Is resistance within specifications?

**YES**

Go to "Check signal circuit short Inspection" procedure.


**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## 2. Check signal circuit short inspection

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector.
- 3) Measure resistance between terminal "3" of the ATM SOLENOID VALVE harness and chassis ground.

Specification: Infinite

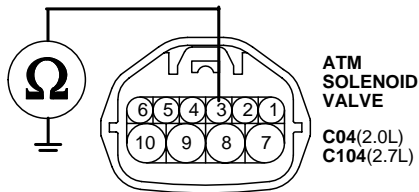

- 3.UD solenoid valve
- 4.2ND solenoid valve
- 5.OD solenoid valve
- 6.LR solenoid valve
- 7.TCC solenoid valve
- 9.A/T battery
- 10.A/T battery

EKO009G

## 4) Is resistance within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**


Check for short to ground in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**COMPONENT INSPECTION**

E1FB2037

## 1. CHECK SOLENOID VELVE

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector.
- 3) Measure resistance between terminal "3" and terminal "9" of the ATM SOLENOID VALVE component.

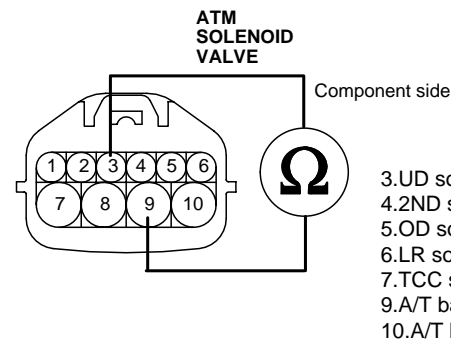

- 3.UD solenoid valve
- 4.2ND solenoid valve
- 5.OD solenoid valve
- 6.LR solenoid valve
- 7.TCC solenoid valve
- 9.A/T battery
- 10.A/T battery

EKO009H

## AT -108

## AUTOMATIC TRANSAXLE

- 4) Is resistance within specification?

**YES**

Go to "CHECK PCM/TCM" as below.

**NO**

Replace UD SOLENOID VALVE as necessary and go to "Verification Vehicle Repair" procedure.

2. CHECK PCM/TCM

- 1) Connect scantool to data link connector(DLC)
- 2) Ignition "ON" & Engine "OFF".
- 3) Select A/T Solenoid valve Actuator test and Operate Actuator test.
- 4) Can you hear operating sound for UD SOLENOID VALVE Actuator Testing Function?

**YES**

Go to "Verification Vehicle Repair" procedure.

**NO**

Replace PCM/TCM as necessary and Go to "Verification Vehicle Repair" procedure.

**ACTUATOR TEST CONDITION**

1. IG SWITCH ON
2. TRANSAXLE RANGE SWITCH is normal
3. P RANGE
4. Vehicle Speed 0km/h
5. Throttle position sensor < 1V
6. IDLE SWITCH ON
7. ENGINE RPM 0


**VERIFICATION OF VEHICLE REPAIR** EE70BCDF

Refer to DTC P0560.



**DTC P0760 SHIFT CONTROL SOLENOID VALVE C CIRCUIT MALFUNCTION****COMPONENT LOCATION**

E632D90E

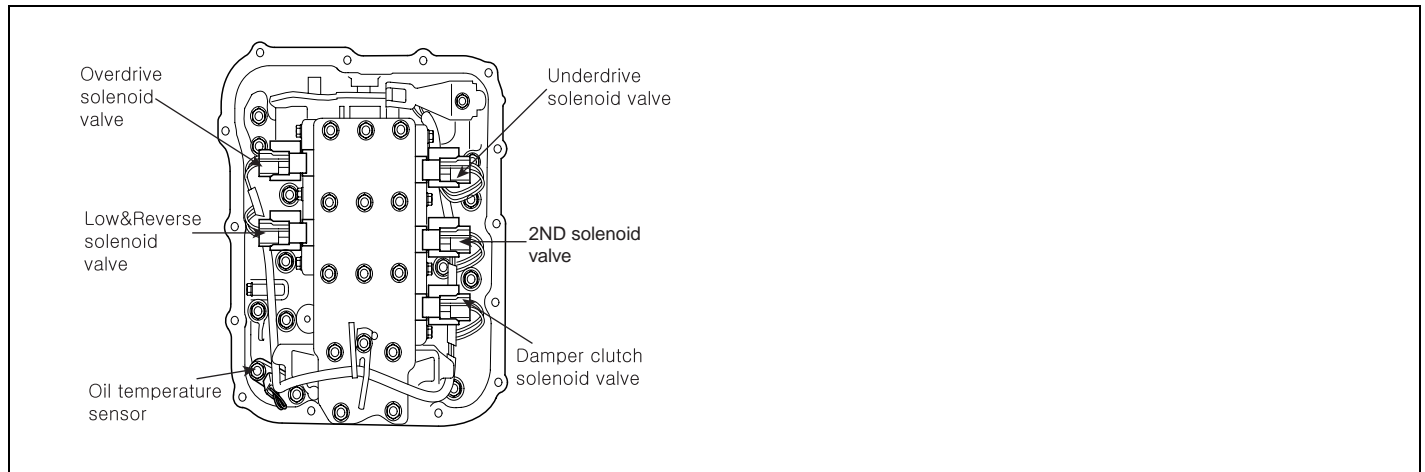

BKQE013A

**GENERAL DESCRIPTION**

ED3ADF2F

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. The HIVEC Automatic Transmission consists of a: LR ( Low and Reverse Brake ), 2ND ( 2nd Brake ), UD ( Under Drive Clutch ), OD ( Over Drive Clutch ), REV ( Reverse Clutch ), and RED ( Reduction Brake, only for 5 speed transmissions). The 2ND Brake is engaged in the 2nd gear and 4th gear positions.

**DTC DESCRIPTION**

EBEA6BE9

The TCM checks the Under Drive Clutch Control Signal by monitoring the feedback signal from the solenoid valve drive circuit .If an unexpected signal is monitored, ( For example, high voltage is detected when low voltage is expected or low voltage is detected when high voltage is expected) the TCM judges that 2nd Brake drive control solenoid circuit is malfunctioning and sets this code.

**DTC DETECTING CONDITION**

EF4ED764

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty 2nd SOLENOID VALVE</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>16V &gt; Voltage Battery &gt; 10V</li> <li>In gear state(no gear shifting) 500msec is passed from turn on the relay</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Feedback voltage from 2nd control solenoid &gt; Vb-2V and 2nd control duty is 0%</li> <li>Feedback voltage from 2nd control solenoid 5.5V and 2nd control duty is 100%</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>more than 0.3s</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in 3rd gear.(Control relay off)</li> </ul>	

## AT -110

## AUTOMATIC TRANSAXLE

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	• Check voltage range	<ul style="list-style-type: none"> <li>• Open or short in circuit</li> <li>• Faulty 2nd SOLENOID VALVE</li> <li>• Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>• Solenoid status Either solid ON or OFF</li> <li>• Voltage of Battery &gt; 10V</li> </ul>	
<b>Threshold value</b>	• Voltage < 3V	
<b>Diagnostic Time</b>	• More than 320 ms	
<b>Fail Safe</b>	• Locked in 3rd gear.(Control relay off)	


## SPECIFICATION E79DA29A

Refer to DTC P0750.

## MONITOR SCANTOOL DATA E4FA2FC9


1. Connect scantool to data link connector(DLC)
2. Engine "ON".
3. Monitor the "2nd SOL. VALVE" parameter on the scantool.
4. Shift gear position 1st to 2nd.

Specification: 1st gear 100%, 2nd gear 0.0%

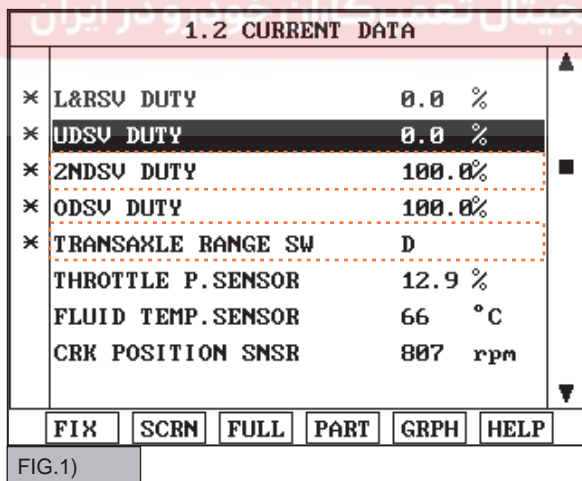

1.2 CURRENT DATA		
* L&RSV DUTY	0.0 %	
* UDSV DUTY	0.0 %	
* 2NDSV DUTY	100.0%	
* ODSV DUTY	100.0%	
* TRANSAXLE RANGE SW	D	
THROTTLE P.SENSOR	12.9 %	
FLUID TEMP.SENSOR	66 °C	
CRK POSITION SNSR	807 rpm	
FIX	SCRN	FULL PART GRPH HELP

FIG.1)

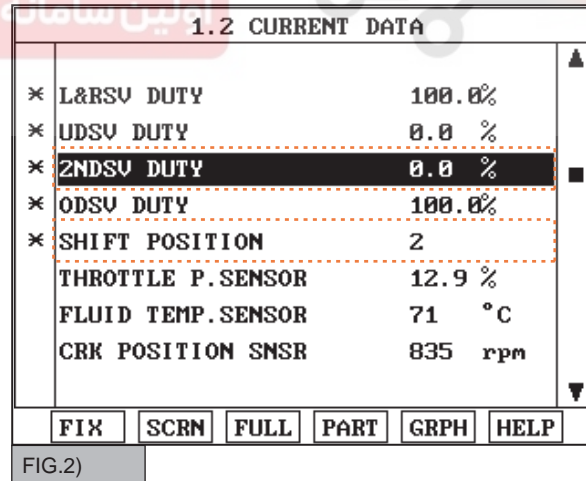

1.2 CURRENT DATA		
* L&RSV DUTY	100.0%	
* UDSV DUTY	0.0 %	
* 2NDSV DUTY	0.0 %	
* ODSV DUTY	100.0%	
* SHIFT POSITION	2	
THROTTLE P.SENSOR	12.9 %	
FLUID TEMP.SENSOR	71 °C	
CRK POSITION SNSR	835 rpm	
FIX	SCRN	FULL PART GRPH HELP

FIG.2)

FIG. 1) 1st gear  
FIG. 2) 2nd gear

ELQE047A

5. Does "2nd SOLENOID DUTY " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector Inspection " procedure.

## TERMINAL & CONNECTOR INSPECTION EDB558B8

Refer to DTC P0750.

## POWER SUPPLY CIRCUIT INSPECTION E30E3D30

Refer to DTC P0755.

## SIGNAL CIRCUIT INSPECTION EDB4CD56


1. Check signal circuit open inspection
  - 1) Ignition "OFF".
  - 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector
  - 3) Measure resistance between terminal "4" of the ATM SOLENOID VALVE harness connector and terminal "16" of the PCM/TCM harness connector

Specification: approx. 0

[2.7L Gasoline]

3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery


1.UD solenoid valve control  
16.2ND solenoid valve control  
14.OD solenoid valve control  
15.TCC solenoid valve control

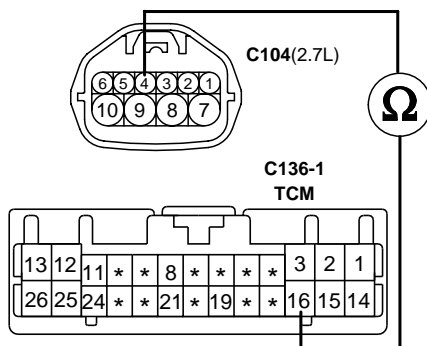

[2.0L Gasoline]

3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery

40.UD solenoid valve control  
39.2ND solenoid valve control  
33.OD solenoid valve control  
35.TCC solenoid valve control

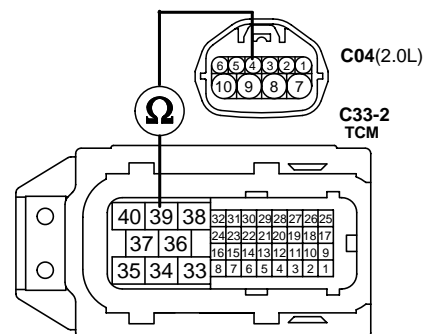

EKOF009I

## AT -112

## AUTOMATIC TRANSAXLE

- 4) Is resistance within specifications?

**YES**

Go to "Check signal circuit short Inspection" procedure.


**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

2. Check signal circuit short inspection

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector.
- 3) Measure resistance between terminal "4" of the ATM SOLENOID VALVE harness and chassis ground.

Specification: Infinite

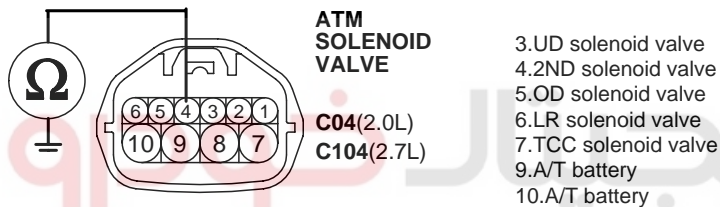

- 4) Is resistance within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for short to ground in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

**COMPONENT INSPECTION**


ECA08CAF

1. CHECK SOLENOID VELVE

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector.

- 3) Measure resistance between terminal "4" and terminal "9" of the ATM SOLENOID VALVE component.

Specification: Approximately 2.7~3.4 (20°C)

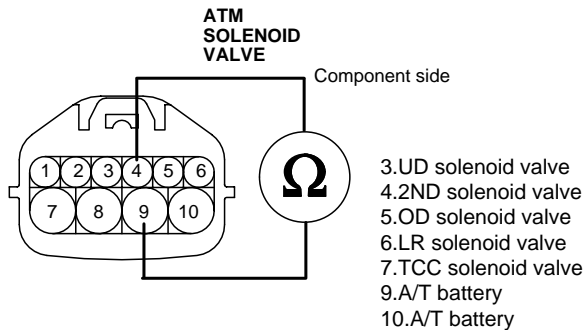

EKO009K

- 4) Is resistance within specification?

**YES**

Go to "CHECK PCM/TCM" as below.

**NO**

Replace 2nd SOLENOID VALVE as necessary and go to "Verification Vehicle Repair" procedure.

## 2. CHECK PCM/TCM

- 1) Connect scantool to data link connector(DLC)
- 2) Ignition "ON" & Engine "OFF".
- 3) Select A/T Solenoid valve Actuator test and Operate Actuator test.
- 4) Can you hear operating sound for LR SOLENOID VALVE Actuator Testing Function?

**YES**

Go to "Verification Vehicle Repair" procedure.

**NO**

Replace PCM/TCM and Go to "Verification Vehicle Repair" procedure.

## ACTUATOR TEST CONDITION

1. IG SWITCH ON
2. TRANSAXLE RANGE SWITCH is normal
3. P RANGE
4. Vehicle Speed 0km/h
5. Throttle position sensor < 1V
6. IDLE SWITCH ON
7. ENGINE RPM 0

## VERIFICATION OF VEHICLE REPAIR

E71DA6FA


Refer to DTC P0560.

AT -114

AUTOMATIC TRANSAXLE

**DTC P0765 SHIFT CONTROL SOLENOID VALVE D CIRCUIT MALFUNCTION****COMPONENT LOCATION**

EF042F75

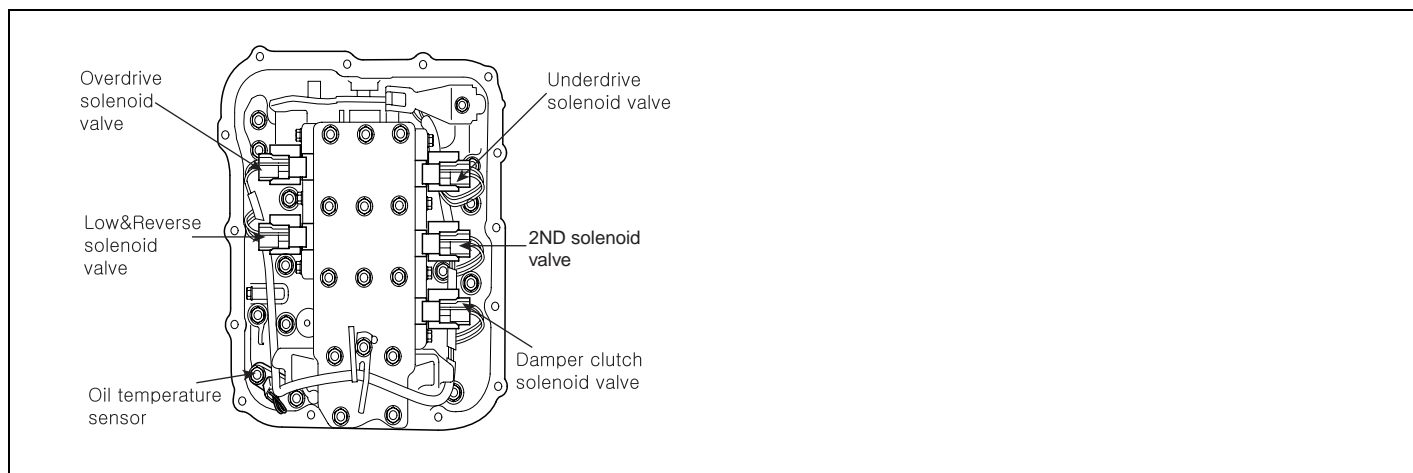

BKQE013A

**GENERAL DESCRIPTION**

E4FD6BD3

The Automatic Transmission changes the gear position of the transmission utilizing a combination of Clutches and Brakes, which are controlled by solenoid valves. The HIVEC Automatic Transmission consists of a: LR ( Low and Reverse Brake ), 2ND ( 2nd Brake ), UD ( Under Drive Clutch ), OD ( Over Drive Clutch ), REV ( Reverse Clutch ), and RED ( Reduction Brake, only for 5 speed transmissions). The OD Clutch is engaged in the 3rd gear and 4th gear positions.

**DTC DESCRIPTION**

EA3719FE

The TCM checks the Under Drive Clutch Control Signal by monitoring the feedback signal from the solenoid valve drive circuit. If an unexpected signal is monitored (for example, high voltage is detected when low voltage is expected or low voltage is detected when high voltage is expected), the TCM judges that the OVER DRIVE CLUTCH drive control solenoid circuit is malfunctioning and sets this code.

## DTC DETECTING CONDITION

E38C6FBE

[2.0L]

Item		Detecting Condition & Fail Safe	Possible cause
DTC Strategy		<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty OD SOLENOID VALVE</li> <li>Faulty TCM(PCM)</li> </ul>
Enable Conditions	Case1	<ul style="list-style-type: none"> <li>16V &gt; Voltage Battery &gt; 10V</li> <li>In gear state(no gear shifting) 500msec is passed from turn on the relay</li> </ul>	
	Case2	<ul style="list-style-type: none"> <li>Voltage Battery &gt; 10V</li> <li>OIL TEMP. -23°C</li> <li>2nd gear and not under the down shifting</li> <li>Engine speed 450rpm</li> <li>Output speed &gt; 500rpm</li> <li>Input speed &gt; 0rpm</li> <li>Time after shift changing finish &gt; 2secs</li> </ul>	
Threshold value	Case1	<ul style="list-style-type: none"> <li>Feedback voltage from 2nd control solenoid &gt; Vb-2V and 2nd control duty is 0%</li> <li>Feedback voltage from 2nd control solenoid 5.5V and 2nd control duty is 100%</li> </ul>	
	Case2	<ul style="list-style-type: none"> <li>Output speed &gt; (input speed-50rpm) / 3rd. gear ratio AND Output speed &lt; (input speed-50rpm) / 3rd. gear ratio</li> </ul>	
Diagnostic Time	Case1	<ul style="list-style-type: none"> <li>More than 0.3s</li> </ul>	
	Case2	<ul style="list-style-type: none"> <li>More than 1 sec</li> </ul>	
Fail Safe		<ul style="list-style-type: none"> <li>Locked in 3 rd gear.(Control relay off)</li> </ul>	

[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
DTC Strategy	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty OD SOLENOID VALVE</li> <li>Faulty TCM(PCM)</li> </ul>
Enable Conditions	<ul style="list-style-type: none"> <li>Solenoid status Either solid ON or OFF</li> <li>Voltage of Battery &gt; 10V</li> </ul>	
Threshold value	<ul style="list-style-type: none"> <li>Voltage &lt; 3V</li> </ul>	
Diagnostic Time	<ul style="list-style-type: none"> <li>More than 320 ms</li> </ul>	
Fail Safe	<ul style="list-style-type: none"> <li>Locked in 3rd gear.(Control relay off)</li> </ul>	

## SPECIFICATION

EC0705F5

Refer to DTC P0750.



## AT -116

## AUTOMATIC TRANSAXLE

## MONITOR SCANTOOL DATA E0745EA2

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "OD SOL. VALVE" parameter on the scantool.
4. Shift gear position 2nd to 3rd.

Specification: 2nd gear 100%, 3rd gear 0.0%

1.2 CURRENT DATA		
* TCC SOLENOID DUTY	0.0 %	
* LR SOLENOID DUTY	100.0%	
* UD SOLENOID DUTY	0.0 %	
* 2ND SOLENOID DUTY	0.0 %	
* OD SOLENOID DUTY	100.0%	
* SHIFT POSITION	2 GEAR	
* SELECT LEVER SW.	D	
ENGINE TORQUE	14.9 %	

FIG.1)

FIG. 1) 2nd gear

1.2 CURRENT DATA		
* L&RSV DUTY	100.0%	
* UDSV DUTY	0.0 %	
* 2NDSV DUTY	100.0%	
* ODSV DUTY	0.0 %	
* SHIFT POSITION	3	
THROTTLE P.SENSOR	16.1 %	
FLUID TEMP.SENSOR	72 °C	
CRK POSITION SNSR	1789 rpm	

FIG.2)

FIG. 2) 3rd gear

ELQE048A

Does "OD SOLENOID DUTY " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector Inspection " procedure.

## TERMINAL &amp; CONNECTOR INSPECTION E13BF397

Refer to DTC P0750.

## POWER SUPPLY CIRCUIT INSPECTION EDE57B62

Refer to DTC P0755.

## SIGNAL CIRCUIT INSPECTION ED3B6A78

1. Check signal circuit open inspection



- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector.
- 3) Measure resistance between terminal "5" of the ATM SOLENOID VALVE harness connector and terminal "14" of the PCM/TCM harness connector

Specification: approx. 0

[2.7L Gasoline]


3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery

1.UD solenoid valve control  
16.2ND solenoid valve control  
14.OD solenoid valve control  
15.TCC solenoid valve control

[2.0L Gasoline]

3.UD solenoid valve  
4.2ND solenoid valve  
5.OD solenoid valve  
6.LR solenoid valve  
7.TCC solenoid valve  
9.A/T battery  
10.A/T battery

40.UD solenoid valve control  
39.2ND solenoid valve control  
33.OD solenoid valve control  
35.TCC solenoid valve control

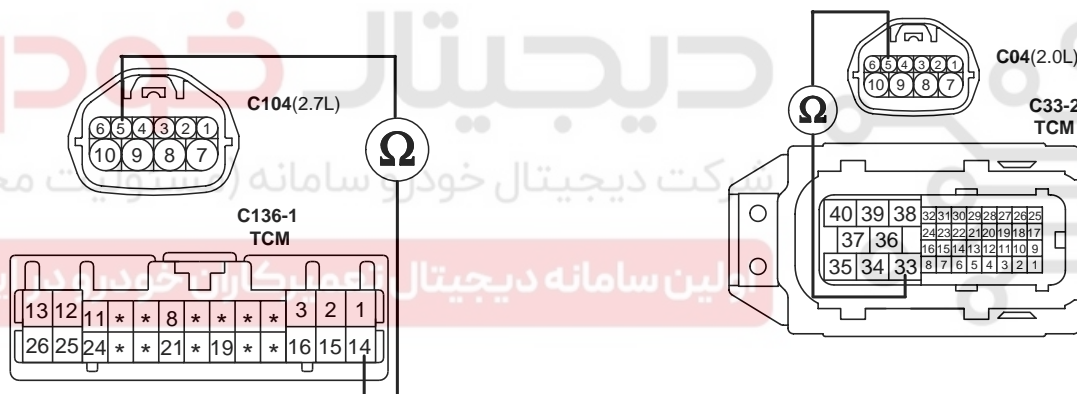

EKOF009L

Is resistance within specifications?

**YES**

Go to "Check signal circuit short Inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.


## 2. Check signal circuit short inspection

- 1) Ignition "OFF" & Engine "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector and "PCM/TCM" connector.
- 3) Measure resistance between terminal "5" of the ATM SOLENOID VALVE harness and chassis ground.

Specification: Infinite

## AT -118

## AUTOMATIC TRANSAXLE

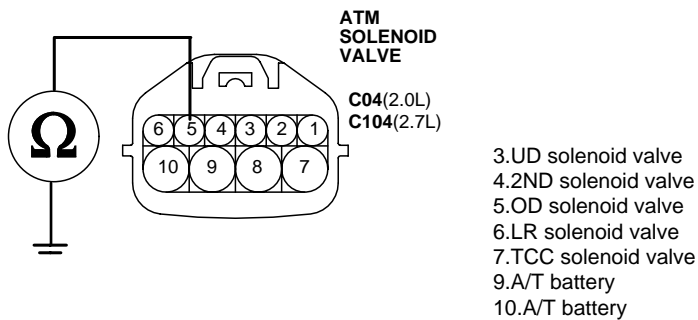

EKOF009M

4) Is resistance within specifications?

**YES**

Go to "Component Inspection" procedure.

**NO**

Check for short to ground in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.


## COMPONENT INSPECTION

EA5C5BCB

### 1. CHECK SOLENOID VALVE

- 1) Ignition "OFF".
- 2) Disconnect "A/T SOLENOID VALVE" connector.
- 3) Measure resistance between terminal "5" and terminal "9" of the ATM SOLENOID VALVE component.

Specification: Approximately 2.7~3.4 (20°C)

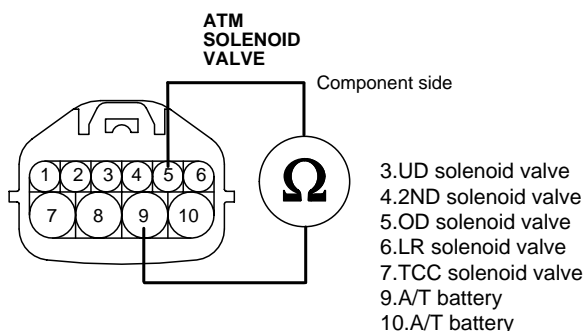

EKOF009N

4) Is resistance within specification?

**YES**

Go to "CHECK PCM/TCM" as below.

**NO**

Replace OD SOLENOID VALVE as necessary and go to "Verification Vehicle Repair" procedure.

## 2. CHECK PCM/TCM

- 1) Connect scantool to data link connector(DLC).
- 2) Ignition "ON" & Engine "OFF".
- 3) Select A/T Solenoid valve Actuator test and Operate Actuator test.
- 4) Can you hear operating sound for LR SOLENOID VALVE Actuator Testing Function?

**YES**

Go to "Verification Vehicle Repair" procedure.

**NO**

Replace PCM/TCM and Go to "Verification Vehicle Repair" procedure.

### ACTUATOR TEST CONDITION

1. IG SWITCH ON
2. TRANSAXLE RANGE SWITCH is normal
3. P RANGE
4. Vehicle Speed 0km/h
5. Throttle position sensor < 1V
6. IDLE SWITCH ON
7. ENGINE RPM 0

### VERIFICATION OF VEHICLE REPAIR


E47E89A8

Refer to DTC P0560.



AT -120

AUTOMATIC TRANSAXLE

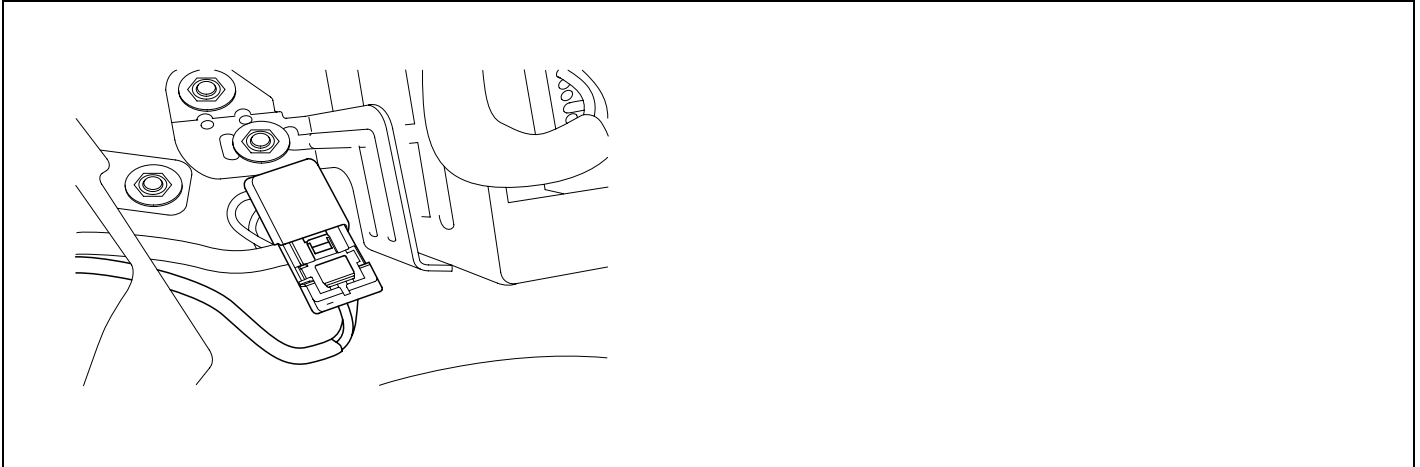**DTC P0885 A/T RELAY CIRCUIT MALFUNCTION****COMPONENT LOCATION** EEA6CFFE

BKQE024A

**GENERAL DESCRIPTION** E6D1EEA8

The HIVEC Automatic Transmission supplies the power to the solenoid valves by way of a control relay. When the TCM sets the relay to ON, the relay operates and the battery power is supplied to all the solenoid valves. When the TCM sets the relay to OFF, all solenoid valve power is shut off and the transmission is held in the 3rd gear position. (Fail Safe Mode)

**DTC DESCRIPTION** EF11DF02

The TCM checks the A/T control relay signal by monitoring the control signal. If, after the ignition key is turned on, an unexpected voltage value, which is quite a bit lower than battery voltage is detected, the TCM sets this code.

**DTC DETECTING CONDITION** E2ABA4AA

[2.0L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty A/T control relay</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>22V &gt; Ignition key input voltage &gt; 9V</li> <li>Time after TCM(PCM) turns on &gt; 0.5sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Voltage &lt; 7V or Voltage &gt; 24.5V</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>0.1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in 3rd gear.(Control relay off)</li> </ul>	


[2.7L]

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check voltage range</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in circuit</li> <li>Faulty A/T control relay</li> <li>Faulty TCM(PCM)</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Voltage of Battery &gt; 9V</li> <li>Time after TCM(PCM) turns on &gt; 0.5sec</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>Voltage &lt; 7V</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>0.1sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>Locked in 3rd gear.(Control relay off)</li> </ul>	

**MONITOR SCANTOOL DATA** E4BE0CAA

1. Connect scantool to data link connector(DLC).
2. Ignition "ON" & Engine "OFF".
3. Monitor the "A/T CON. RELAY VOLT" parameter on the scantool.

Specification : Approx. B+

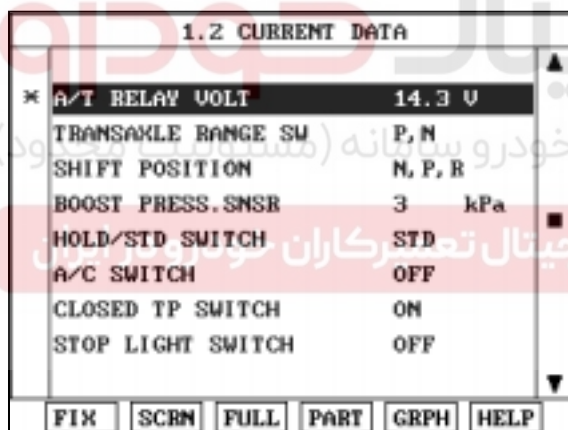

ELQE049A

4. Is A/T RELAY VOLT within specifications?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector Inspection" procedure.

## AT -122

## AUTOMATIC TRANSAXLE

## TERMINAL &amp; CONNECTOR INSPECTION

ED9A2BC6


Refer to DTC P0750.

## POWER SUPPLY CIRCUIT INSPECTION

E1BDFFE8

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "A/T CONTROL RELAY" connector.
3. Measure the voltage between terminal "1" of the "A/T CONTROL RELAY" harness connector and chassis ground.

Specification : Approx. B+

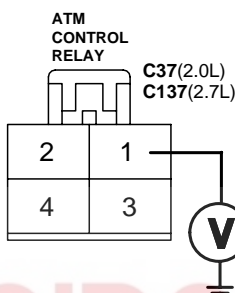

1. Battery
2. Ground
3. Supplying Power to solenoid valve
4. A/T control relay

4. Is voltage within specifications?


**YES**

Go to "Signal circuit inspection" procedure.

**NO**

Check that A/T-30A Fuse in engine room junction is installed or not blown.

Check for Open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

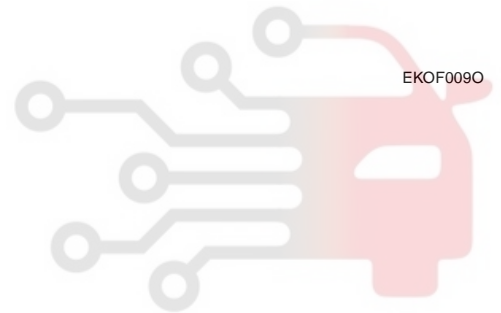


**SIGNAL CIRCUIT INSPECTION**

E6FE9916

## 1. CHECK A/T control relay harness

- 1) Ignition "OFF".
- 2) Disconnect the "A/T CONTROL RELAY" connector.
- 3) Measure the voltage between terminal "4" of the "A/T CONTROL RELAY" harness connector and chassis ground.
- 4) Turn ignition switch OFF      ON.

Specification: 12V is measured only for approx. 0.5sec

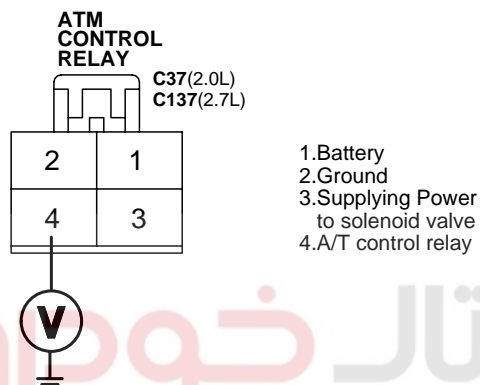

5) Is voltage within specifications?

**YES**

Go to "Check Supplying Power to solenoid valve" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure

If signal circuit is OK, Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM and then go to "Verification of Vehicle Repair" procedure.



## AT -124

## AUTOMATIC TRANSAXLE

## 2. CHECK Supplying Power to solenoid valve harness

- 1) Ignition "OFF".
- 2) Disconnect the "A/T CONTROL RELAY" and PCM/TCM connector.
- 3) Measure the resistance between terminal "3" of the "A/T CONTROL RELAY" harness connector and terminal "32, 36" of the PCM/TCM harness connector.

Specification : Approx. 0

[2.7L Gasoline]



1. Battery  
2. Ground  
3. Supplying Power to solenoid valve  
4. A/T control relay

2. Battery voltage  
3. Battery voltage

[2.0L Gasoline]

1. Battery  
2. Ground  
3. Supplying Power to solenoid valve  
4. A/T control relay

36. Battery voltage

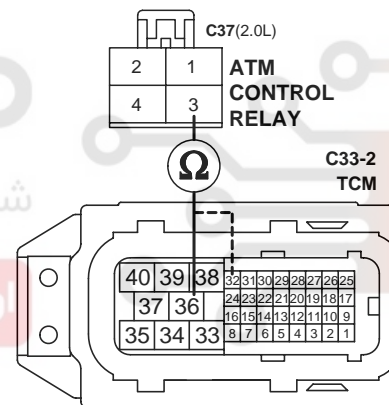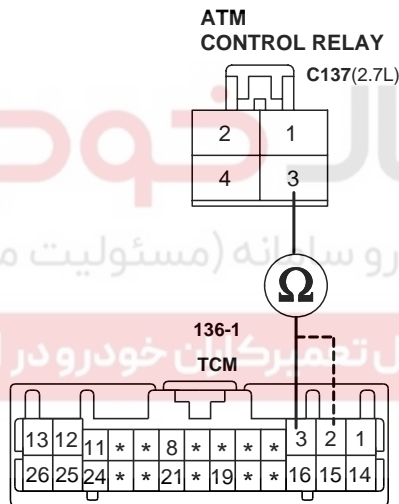

EKOF009Q

## 4) Is resistance within specifications?

**YES**

Go to "Ground circuit inspection" procedure.

**NO**

Check for Open in C-41 joint connector .

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.



**GROUND CIRCUIT INSPECTION**


E3ECDE5E

1. Ignition "OFF".
2. Connect the "A/T CONTROL RELAY" connector.
3. Measure the resistance between terminal "2" of the "A/T CONTROL RELAY" harness connector and chassis ground.

---

 Specification : Approx. 0
 

---

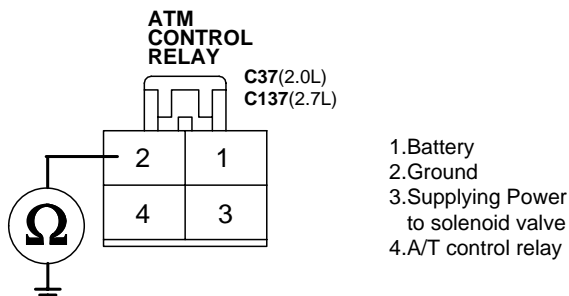

EKOF009R

4. Is resistance within specifications?

**YES**

Go to "Component inspection" procedure.

**NO**

Check for open in harness. Repair as necessary and Go to "Verification Vehicle Repair" procedure.

## AT -126

## AUTOMATIC TRANSAXLE


## COMPONENT INSPECTION

E0D3479E

1. Ignition "OFF".
2. Remove "A/T CONTROL RELAY"
3. Measure the resistance between each terminal of the sensor.

Specification:

Item	Terminal No	
Resistance	1(red) - 3(pink)	INFINITE
	2(black) - 4(pink)	
supply(B+) to number 4 and supply (B-) to number 2.	1(red) - 3(pink)	0

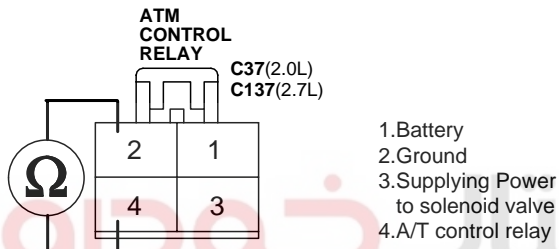

4. Is resistance with in specification?

**YES**

Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.


**NO**

Replace ATM CONTROL RELAY and then go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR

E9B3CDDE

Refer to DTC P0560.

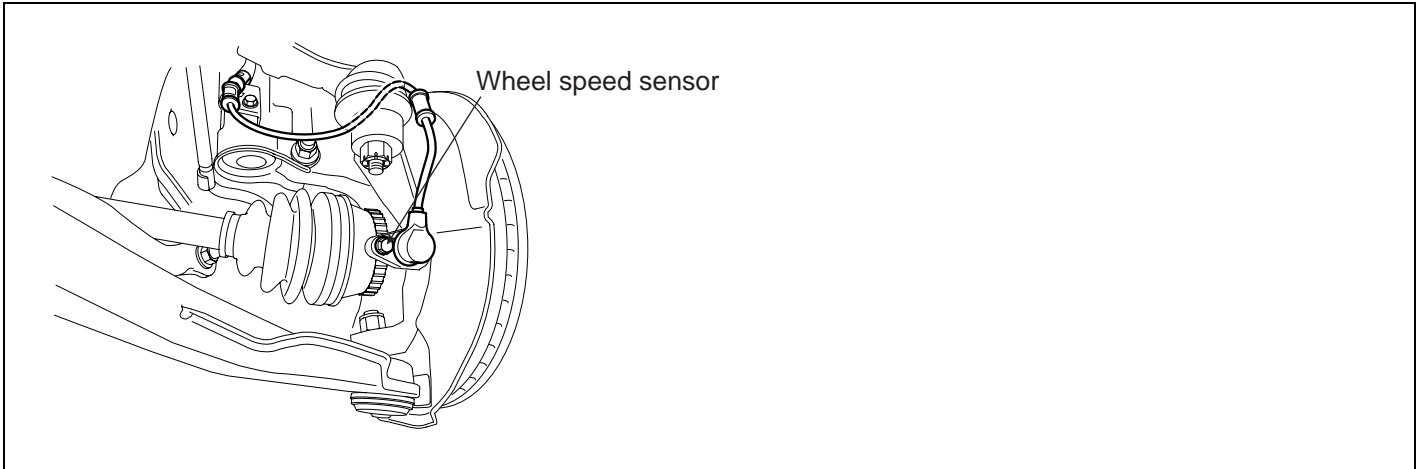**DTC P1500 VEHICLE SPEED SENSOR****COMPONENT LOCATION** E15A5513

ELQE501E

**GENERAL DESCRIPTION** EFA49682

The vehicle speed sensor outputs pulse-signals according to the revolutions of the output shaft of the transmission. The TCM determines the vehicle speed by counting the frequency of the pulses. This value is mainly used, by the TCM, as comparison data for determining malfunctions of the OUTPUT SPEED SENSOR.

**DTC DESCRIPTION** E0AE3FAE

The TCM calculates the vehicle speed based on the frequency of the pulses. If the calculated value from this sensor does not agree with the value determined by the OUTPUT SPEED SENSOR(PGB) , the TCM sets this code.

AT -128

AUTOMATIC TRANSAXLE


## DTC DETECTING CONDITION

E3BC5B2D

Item		Detecting Condition & Fail Safe	Possible cause
Case 1	DTC Strategy	<ul style="list-style-type: none"> <li>Plausibility check</li> </ul>	<ul style="list-style-type: none"> <li>Open or short in harness</li> <li>Contact resistance in connectors</li> <li>Faulty wheel speed sensor</li> </ul>
	Enable Conditions	<ul style="list-style-type: none"> <li>Engine speed &gt; 2100rpm</li> <li>Engine load &gt; 250 mg/rev</li> <li>Coolant temperature &gt; 60°C(140°F)</li> <li>10V &lt; Battery voltage &lt; 16V</li> <li>No fuel shut-off</li> </ul>	
	Threshold value	<ul style="list-style-type: none"> <li>Vehicle speed=0 with high engine speed and engine load</li> </ul>	
	Diagnostic Time	<ul style="list-style-type: none"> <li>60 seconds</li> </ul>	
Case 2	DTC Strategy	<ul style="list-style-type: none"> <li>Electrical check</li> </ul>	
	Enable Conditions	<ul style="list-style-type: none"> <li>Vehicle speed &gt; 0</li> <li>10V &lt; Battery voltage &lt; 16V</li> </ul>	
	Threshold value	<ul style="list-style-type: none"> <li>PCM detects abnormal input voltage of the signal circuit</li> </ul>	
	Diagnostic Time	<ul style="list-style-type: none"> <li>10 seconds</li> </ul>	

REFER TO ECM DAIGNOSIS PROCEDURE.

ELQE501F

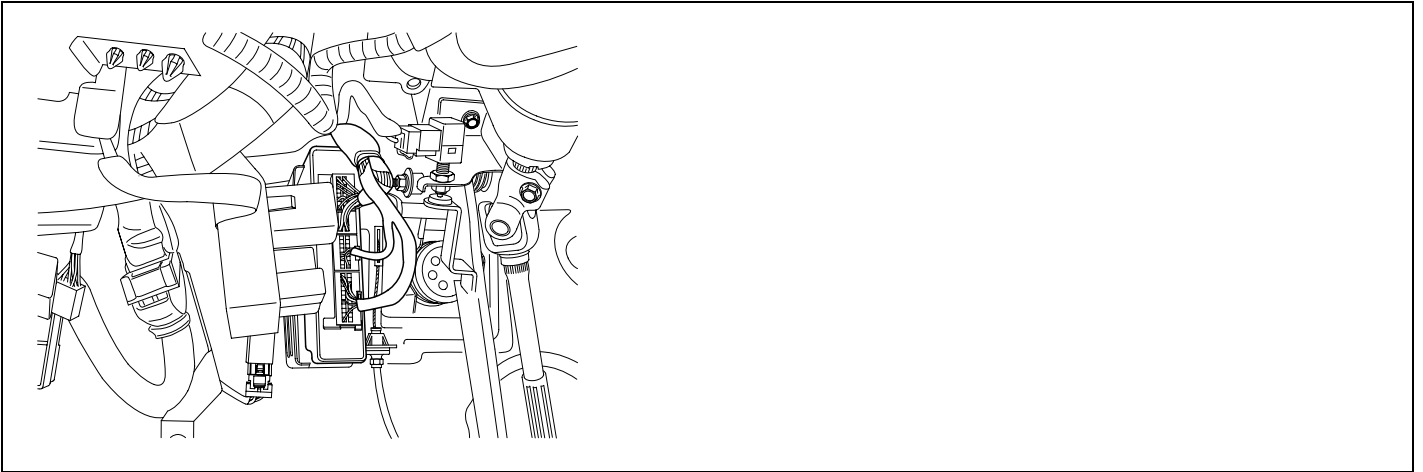**DTC U0001 CAN COMMUNICATION BUS OFF****COMPONENT LOCATION** EB48FD1D

KKQE001D

**GENERAL DESCRIPTION** EDDCE1F1

The TCM can either receive data from the Engine Control Module or ABS control module, or it can send data to the ECM and ABSM by using CAN communication. The CAN communication is one of the vehicle communications method, which is now widely used to transfer the vehicle data.

**DTC DESCRIPTION** EAB0BA6A

When the TCM cannot read the data from the ECM through the CAN-BUS line, the TCM sets this code. CAN-BUS circuit malfunctioning or ECM can be a possible cause of this DTC.

**DTC DETECTING CONDITION** E044D5CB

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check communication</li> </ul>	<ul style="list-style-type: none"> <li>Open or Short in CAN communication harness</li> <li>Faulty ECM</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Input speed 1000rpm and 5000msec passed from IG "on"</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>CAN message transfer error</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>0.5 sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>INTELLIGENT SHIFT is inhibited</li> <li>Learning for oil pressure control is inhibited</li> <li>Torque Retard requirement is inhibited</li> <li>Direct connection control of TCC is inhibited</li> </ul>	

**MONITOR SCANTOOL DATA** E0B3320A

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "CAN COMMUNICATION SERVICE DATA (ENGINE RPM, VEHICLE SPEED SENSOR, THROTTLE P. SENSOR)" parameters on the scantool.

## AT -130

## AUTOMATIC TRANSAXLE

4. Compare it with reference data as below.

1.2 CURRENT DATA		01/16
×	01.ENGINE RPM	1372 rpm
×	02.VEHICLE SPEED SNSR	18 km/h
×	03.THROTTLE P.SENSOR	15.7 %
	07.DAMP.CLUTCH SLIP	
	08.L&R SV DUTY	
	09.UD SV DUTY	
	10.2ND SV DUTY	
	11.OD SV DUTY	
FIX		PART FULL HELP GRPH RCRD

FIG.1)

FIG.1) Low-speed

1.2 CURRENT DATA		01/16
×	01.ENGINE RPM	5372 rpm
×	02.VEHICLE SPEED SNSR	158 km/h
×	03.THROTTLE P.SENSOR	41.2 %
	07.DAMP.CLUTCH SLIP	
	08.L&R SV DUTY	
	09.UD SV DUTY	
	10.2ND SV DUTY	
	11.OD SV DUTY	
FIX		PART FULL HELP GRPH RCRD

FIG.2)

FIG.2) High-speed

EKQE621A

5. Does "CAN BUS LINE DATA " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or PCM/TCM's connector or was repaired and PCM/TCM memory was not cleared. And go to Verification of Vehicle Repair procedure.


**NO**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

## VERIFICATION OF VEHICLE REPAIR

EFC0A6B7

Refer to DTC P0560.

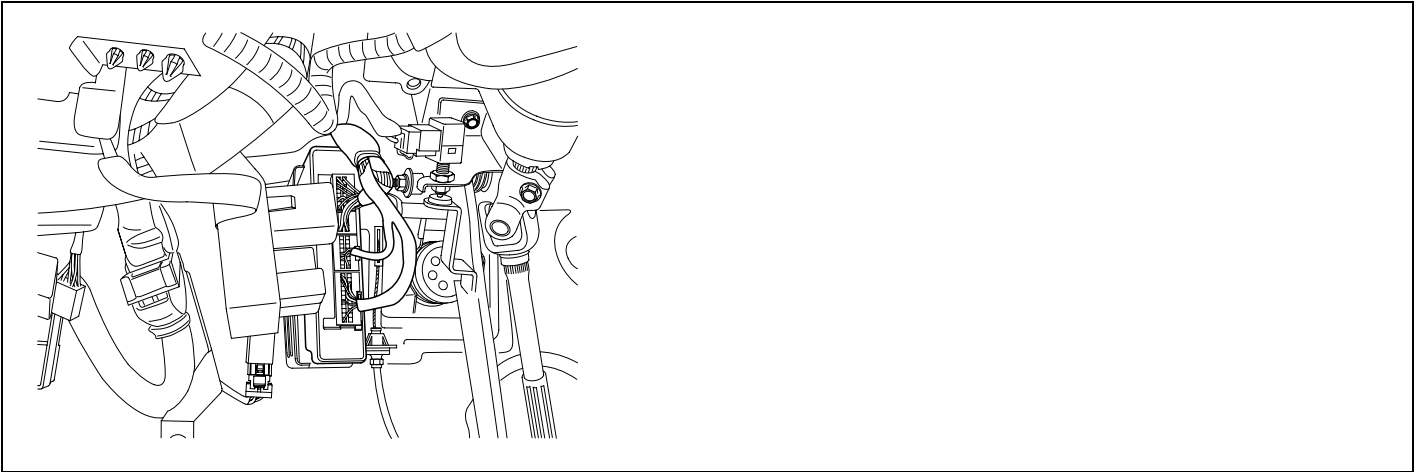**DTC U0100 CAN-TIME OUT ECU****COMPONENT LOCATION** E0DEF87C

KKQE001D

**GENERAL DESCRIPTION** EBB4FD11

Refer to DTC U0001.

**DTC DESCRIPTION** EDC9EECE

The TCM reads data on the CAN-BUS line and checks whether the data is equal to the data which the TCM sent before. If the data is not the same the TCM decides that either the CAN-BUS line or TCM are malfunctioning and sets this code.

**DTC DETECTING CONDITION** E50BFDA7

Item	Detecting Condition & Fail Safe	Possible cause
<b>DTC Strategy</b>	<ul style="list-style-type: none"> <li>Check communication</li> </ul>	<ul style="list-style-type: none"> <li>Open or Short in CAN communication harness</li> <li>Faulty ECM</li> <li>Faulty TCM</li> </ul>
<b>Enable Conditions</b>	<ul style="list-style-type: none"> <li>Input speed 1000rpm and 5000msec passed from IG "on"</li> </ul>	
<b>Threshold value</b>	<ul style="list-style-type: none"> <li>No message from ECM.</li> </ul>	
<b>Diagnostic Time</b>	<ul style="list-style-type: none"> <li>1.5 sec</li> </ul>	
<b>Fail Safe</b>	<ul style="list-style-type: none"> <li>INTELLIGENT SHIFT is inhibited</li> <li>Learning for oil pressure control is inhibited</li> <li>Torque Retard requirement is inhibited</li> <li>Direct connection control of TCC is inhibited</li> </ul>	

**MONITOR SCANTOOL DATA** E678173E

1. Connect scantool to data link connector(DLC).
2. Engine "ON".
3. Monitor the "CAN COMMUNICATION SERVICE DATA (ENGINE RPM, VEHICLE SPEED SENSOR, THROTTLE P. SENSOR)" parameters on the scantool.
4. Compare it with reference data as below.

## AT -132

## AUTOMATIC TRANSAXLE

1.2 CURRENT DATA		01/16
✖ 01. ENGINE RPM	1372 rpm	
✖ 02. VEHICLE SPEED SNSR	18 km/h	
✖ 03. THROTTLE P. SENSOR	15.7 %	
07. DAMP. CLUTCH SLIP		
08. L&R SV DUTY		
09. UD SV DUTY		
10. 2ND SV DUTY		
11. OD SV DUTY		
FIX PART FULL HELP GRPH RCRD		

FIG.1)

FIG.1) Low-speed

1.2 CURRENT DATA		01/16
✖ 01. ENGINE RPM	5372 rpm	
✖ 02. VEHICLE SPEED SNSR	158 km/h	
✖ 03. THROTTLE P. SENSOR	41.2 %	
07. DAMP. CLUTCH SLIP		
08. L&R SV DUTY		
09. UD SV DUTY		
10. 2ND SV DUTY		
11. OD SV DUTY		
FIX PART FULL HELP GRPH RCRD		

FIG.2)

FIG.2) High-speed

EKQE621A

5. Does "CAN BUS LINE DATA " follow the reference data?

**YES**

Fault is intermittent caused by poor contact in the sensor's and/or TCM(PCM)'s connector or was repaired and TCM(PCM) memory was not cleared. Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage. Repair or replace as necessary and go to "Verification Vehicle Repair" procedure.

**NO**

Go to "Terminal & Connector Inspection" procedure.

**TERMINAL & CONNECTOR INSPECTION**

E22A267C

- Many malfunctions in the electrical system are caused by poor harness and terminals. Faults can also be caused by interference from other electrical systems, and mechanical or chemical damage.
- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.
- Has a problem been found?

**YES**

Repair as necessary and go to "Verification vehicle Repair" procedure.

**NO**

Go to "Signal circuit inspection" procedure.



**SIGNAL CIRCUIT INSPECTION**


ED75A839

1. Ignition "ON" & Engine "OFF".
2. Disconnect the "PCM/TCM" connector.
3. Measure resistance between terminal "6" and "7" of the "PCM/TCM" harness connector.

---

 Specification : approx. 60
 

---

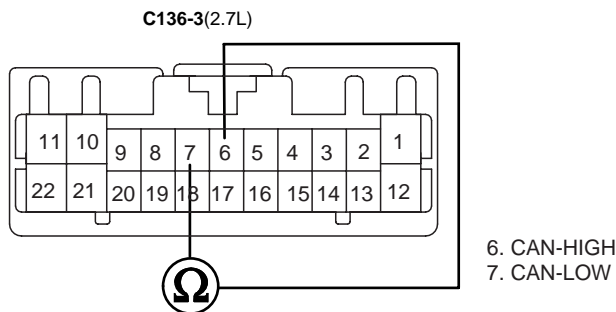

EKOF009T

4. Is measured resistance within specifications?

**YES**

Substitute with a known-good PCM/TCM and check for proper operation. If the problem is corrected, replace PCM/TCM as necessary and then go to "Verification of Vehicle Repair" procedure.

**NO**

Check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration or damage of ECM. and then Repair or replace Resistance for CAN communication as necessary and go to "Verification Vehicle Repair" procedure.

**VERIFICATION OF VEHICLE REPAIR**

EFFAAC7F

Refer to DTC P0560.