

# General Information

FL-3

## General Information

### Specifications

#### Fuel Delivery System

Items	Specification	
Fuel Tank	Capacity	82 lit. (86.6 U.S.qt., 72.1 Imp.qt.)
Fuel Filter	Type	High pressure type
Fuel Pressure Regulator	Regulated Fuel Pressure	380kPa (3.87kgf/cm <sup>2</sup> , 55.0psi)
Fuel Pump	Type	Electrical, in-tank type
	Driven by	Electric motor

### Sensors

#### Mass Air Flow Sensor (MAFS)

▷ Type: Hot-film type

▷ Specification

Air Flow (kg/h)	Frequency (Hz)
12.6	2,617
18.0	2,958
23.4	3,241
32.4	3,653
43.2	4,024
57.6	4,399
72.0	4,704
108.0	5,329
144.0	5,897
198.0	6,553
270.0	7,240
360.0	7,957
486.0	8,738
666.0	9,644
900.0	10,590

#### Intake Air Temperature Sensor (IATS)

▷ Type: Thermistor type

▷ Specification

Temperature		Resistance (kΩ)
°C	°F	
-40	-40	100.87
-20	-4	28.58
0	32	9.40
10	50	5.66
20	68	3.51
40	104	1.47
60	140	0.67
80	176	0.33

#### Manifold Absolute Pressure Sensor (MAPS)

▷ Type: Piezo-resistive pressure sensor

▷ Specification

Pressure (kPa)	Output Voltage (V)
20.0	0.79
46.66	1.84
101.32	4.0

## FL-4

## Fuel System

## Engine Coolant Temperature Sensor (ECTS)

▷ Type: Thermistor type

▷ Specification

Temperature		Resistance ( $k\Omega$ )
$^{\circ}\text{C}$	$^{\circ}\text{F}$	
-40	-40	48.14
-20	-4	14.13 ~ 16.83
0	32	5.79
20	68	2.31 ~ 2.59
40	104	1.15
60	140	0.59
80	176	0.32

## Throttle Position Sensor (TPS) [integrated into ETC Module]

▷ Type: Variable resistor type

▷ Specification

Throttle Angle( $^{\circ}$ )	Output Voltage(V)	
	TPS1	TPS2
0	0.0	5.0
10	0.5	4.5
20	0.9	4.1
30	1.4	3.6
40	1.8	3.2
50	2.3	2.7
60	2.7	2.3
70	3.2	1.8
80	3.6	1.4
90	4.1	0.9
100	4.5	0.5
110	5.0	0.0

Item	Sensor Resistance( $k\Omega$ )
TPS	1.6 ~ 2.4 [ $20^{\circ}\text{C}$ ( $68^{\circ}\text{F}$ )]

## Crankshaft Position Sensor (CKPS)

▷ Type: Magnetic field sensitive sensor

▷ Specification

Item	Specification
Coil Resistance ( $\Omega$ )	630 ~ 770 $\Omega$ [ $25^{\circ}\text{C}$ ( $77^{\circ}\text{F}$ )]
Air Gap (mm)	0.5 ~ 1.5

## Camshaft Position Sensor (CMPS)

▷ Type: Hall effect type

▷ Specification

Item	Specification
Output Voltage (V)	High: 5.0V
	Low: 0.7V
Air Gap (mm)	0.5 ~ 1.5

## Knock Sensor (KS)

▷ Type: Piezo-electricity type

▷ Specification

Item	Specification
Capacitance (pF)	1,480 ~ 2,220

## Heated Oxygen Sensor (HO2S)

▷ Type: Zirconia ( $\text{ZrO}_2$ ) Type

▷ Specification

A/F Ratio ( $\lambda$ )	Output Voltage(V)
RICH	0.75 ~ 0.92
LEAN	0.04 ~ 0.1

Item	Specification
Heater Resistance ( $\Omega$ )	8.1 ~ 11.1 $\Omega$ [ $21^{\circ}\text{C}$ ( $69.8^{\circ}\text{F}$ )]

# General Information

## FL-5

### CVVT Oil Temperature Sensor (OTS)

▷ Type: Thermistor type

▷ Specification

Temperature		Resistance (k $\Omega$ )
$^{\circ}\text{C}$	$^{\circ}\text{F}$	
-40	-40	52.15
-20	-4	16.52
0	32	6.0
20	68	2.45
40	104	1.11
60	140	0.54
80	176	0.29

### Accelerator Position Sensor (APS) [Non-Adjust type]

▷ Type: Potentiometer type

▷ Specification

Pedal Position	Output Voltage(V) [Vref = 5.0V]	
	APS1	APS2
Released	0.7 ~ 0.8	0.275 ~ 0.475
Fully depressed	3.8 ~ 4.4	1.75 ~ 2.35

### Accelerator Position Sensor (APS) [Adjust type]

▷ Type: Variable resistor type

▷ Specification

Accelerator Position	Output Voltage(V) [Vref = 5.0V]	
	APS1	APS2
C.T	0.7 ~ 0.8V	0.29 ~ 0.46V
W.O.T	3.85 ~ 4.35V	1.93 ~ 2.18V

Item	Sensor Resistance (k $\Omega$ )
APS1	0.7 ~ 1.3k $\Omega$ at 20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )
APS2	1.4 ~ 2.6k $\Omega$ at 20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )

### Actuators

#### Injector

▷ Specification

Item	Specification
Coil Resistance ( $\Omega$ )	11.4 ~ 12.6 [20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )]

#### ETC Motor [integrated into ETC Module]

▷ Specification

Item	Specification
Coil Resistance ( $\Omega$ )	1.275 ~ 1.725 [20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )]

#### Purge Control Solenoid Valve (PCSV)

▷ Specification

Item	Specification
Coil Resistance ( $\Omega$ )	19.0 ~ 22.0 [20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )]

#### CVVT Oil Control Valve (OCV)

▷ Specification

Item	Specification
Coil Resistance ( $\Omega$ )	6.7 ~ 7.7 [20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )]

#### Variable Intake Solenoid (VIS) Valve

▷ Specification

Item	Specification
Coil Resistance ( $\Omega$ )	30.0 ~ 35.0 [20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )]

#### Ignition Coil

▷ Type: Stick type

▷ Specification

Item	Specification
1st Coil Resistance ( $\Omega$ )	0.62 $\pm$ 10% [20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )]
2nd Coil Resistance (k $\Omega$ )	7.0 $\pm$ 15% [20 $^{\circ}\text{C}$ (68 $^{\circ}\text{F}$ )]

## FL-6

## Fuel System

## Service Standard

Item		Specification	
Ignition Timing (°)		BTDC 11 ± 5	
Idle Speed (rpm)	A/C OFF	Neutral, N, P-range	720 ± 100
		D-range	570 ± 100
	A/C ON	Neutral, N, P-range	720 ± 100
		D-range	630 ± 100

## Tightening Torques

## Engine Control System

Item	kgf.m	N.m	lb-ft
ECM installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
Mass air flow sensor installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Engine coolant temperature sensor installation	2.0 ~ 4.0	19.6 ~ 39.2	14.5 ~ 28.9
Manifold absolute pressure sensor installation bolt	0.9 ~ 1.2	8.8 ~ 11.8	6.5 ~ 8.7
Crankshaft position sensor installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Camshaft position sensor (Bank 1/Intake) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Camshaft position sensor (Bank 1/Exhaust) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Camshaft position sensor (Bank 2/Intake) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Camshaft position sensor (Bank 2/Exhaust) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Knock sensor #1 (Bank 1) installation bolt	1.6 ~ 2.4	15.7 ~ 23.5	11.6 ~ 17.4
Knock sensor #2 (Bank 2) installation bolt	1.6 ~ 2.4	15.7 ~ 23.5	11.6 ~ 17.4
Heated oxygen sensor (Bank 1 / sensor 1) installation	4.0 ~ 5.0	39.2 ~ 49.1	28.9 ~ 36.2
Heated oxygen sensor (Bank 1 / sensor 2) installation	4.0 ~ 5.0	39.2 ~ 49.1	28.9 ~ 36.2
Heated oxygen sensor (Bank 2 / sensor 1) installation	4.0 ~ 5.0	39.2 ~ 49.1	28.9 ~ 36.2
Heated oxygen sensor (Bank 2 / sensor 2) installation	4.0 ~ 5.0	39.2 ~ 49.1	28.9 ~ 36.2
CVVT oil temperature sensor installation	2.0 ~ 4.0	19.6 ~ 39.2	14.5 ~ 28.9
Electronic throttle body installation bolt	0.9 ~ 1.2	8.8 ~ 11.8	6.5 ~ 8.7
Purge control solenoid valve bracket installation bolt	0.9 ~ 1.2	8.8 ~ 11.8	6.5 ~ 8.7
CVVT oil control valve (Bank 1 / Intake) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
CVVT oil control valve (Bank 1 / Exhaust) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
CVVT oil control valve (Bank 2 / Intake) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
CVVT oil control valve (Bank 2 / Exhaust) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
Variable intake solenoid valve installation bolt	0.9 ~ 1.2	8.8 ~ 11.8	6.5 ~ 8.7
Ignition coil installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
Ignition coil condenser installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7



## General Information

FL-7

### Fuel Delivery System

Item	kgf.m	N.m	lb-ft
Fuel tank band installation nut	5.0 ~ 6.0	49.1 ~ 58.9	36.2 ~ 43.4
Fuel tank protector installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Fuel tank protector installation nut	0.7 ~ 1.1	6.9 ~ 10.8	5.1 ~ 8.0
Fuel pump installation bolt	0.2 ~ 0.3	2.0 ~ 2.9	1.4 ~ 2.2
Filler-neck assembly installation nut	0.7 ~ 1.1	6.9 ~ 10.8	5.1 ~ 8.0
Accelerator pedal module installation nut	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7
Accelerator pedal assembly installation nut	1.3 ~ 1.6	12.8 ~ 15.7	9.4 ~ 11.6

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)




اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



## FL-8

## Fuel System

## Special Service Tools

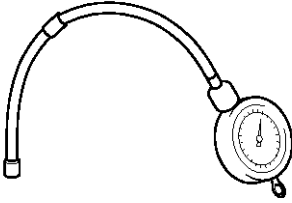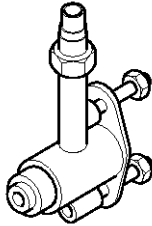

Tool (Number and Name)	Illustration	Application
Fuel Pressure Gauge (09353-24100)	 EFDA003A	Measuring the fuel line pressure
Fuel Pressure Gauge Adapter (09353-38000)	 BF1A025D	Connection between the delivery pipe and the fuel feed line
Fuel Pressure Gauge Connector (09353-24000)	 EFDA003C	Connection between the Fuel Pressure Gauge (09353-24100) and the Fuel Pressure Gauge Adapter (09353-38000)

# General Information

## FL-9

### Basic Troubleshooting

#### Basic Troubleshooting Guide

1	Bring Vehicle to Workshop
2	<b>Analyze Customer's Problem</b> <ul style="list-style-type: none"> <li>Ask the customer about the conditions and environment relative to the issue (Use CUSTOMER PROBLEM ANALYSIS SHEET).</li> </ul>
3	<b>Verify Symptom, and then Check DTC and Freeze Frame Data</b> <ul style="list-style-type: none"> <li>Connect Hi-Scan (Pro) to Diagnostic Link Connector (DLC).</li> <li>Record the DTC and freeze frame data.</li> </ul> <div>  <b>NOTE</b>            To erase DTC and freeze frame data, refer to Step 5.         </div>
4	<b>Confirm the Inspection Procedure for the System or Part</b> <ul style="list-style-type: none"> <li>Using the SYMPTOM TROUBLESHOOTING GUIDE CHART, choose the correct inspection procedure for the system or part to be checked.</li> </ul>
5	<b>Erase the DTC and Freeze Frame Data</b> <div>  <b>WARNING</b>  <b>NEVER erase DTC and freeze frame data before completing Step 2 MIL/DTC in "CUSTOMER PROBLEM ANALYSIS SHEET".</b> </div>
6	<b>Inspect Vehicle Visually</b> <ul style="list-style-type: none"> <li>Go to Step 11, if you recognize the problem.</li> </ul>
7	<b>Recreate (Simulate) Symptoms of the DTC</b> <ul style="list-style-type: none"> <li>Try to recreate or simulate the symptoms and conditions of the malfunction as described by customer.</li> <li>If DTC(s) is/are displayed, simulate the condition according to troubleshooting procedure for the DTC.</li> </ul>
8	<b>Confirm Symptoms of Problem</b> <ul style="list-style-type: none"> <li>If DTC(s) is/are not displayed, go to Step 9.</li> <li>If DTC(s) is/are displayed, go to Step 11.</li> </ul>
9	<b>Recreate (Simulate) Symptom</b> <ul style="list-style-type: none"> <li>Try to recreate or simulate the condition of the malfunction as described by the customer.</li> </ul>
10	<b>Check the DTC</b> <ul style="list-style-type: none"> <li>If DTC(s) does(do) not occur, refer to INTERMITTENT PROBLEM PROCEDURE in BASIC INSPECTION PROCEDURE.</li> <li>If DTC(s) occur(s), go to Step 11.</li> </ul>
11	<b>Perform troubleshooting procedure for DTC</b>
12	<b>Adjust or repair the vehicle</b>
13	<b>Confirmation test</b>
14	<b>END</b>

LW8F1001

## FL-10

## Fuel System

## Customer Problem Analysis Sheet

## 1. VEHICLE INFORMATION

VIN No.		Transmission	<input type="checkbox"/> M/T <input type="checkbox"/> A/T <input type="checkbox"/> CVT <input type="checkbox"/> etc.
Production date		Driving type	<input type="checkbox"/> 2WD (FF) <input type="checkbox"/> 2WD (FR) <input type="checkbox"/> 4WD
Odometer Reading	_____km/mile	CPF (Diesel Engine)	<input type="checkbox"/> With CPF <input type="checkbox"/> Without CPF

## 2. SYMPTOMS

<input type="checkbox"/> Unable to start	<input type="checkbox"/> Engine does not turn over <input type="checkbox"/> Incomplete combustion <input type="checkbox"/> Initial combustion does not occur
<input type="checkbox"/> Difficult to start	<input type="checkbox"/> Engine turns over slowly <input type="checkbox"/> Other_____
<input type="checkbox"/> Poor idling	<input type="checkbox"/> Rough idling <input type="checkbox"/> Incorrect idling <input type="checkbox"/> Unstable idling (High:_____ rpm, Low:_____ rpm) <input type="checkbox"/> Other_____
<input type="checkbox"/> Engine stall	<input type="checkbox"/> Soon after starting <input type="checkbox"/> After accelerator pedal depressed <input type="checkbox"/> After accelerator pedal released <input type="checkbox"/> During A/C ON <input type="checkbox"/> Shifting from N to D-range <input type="checkbox"/> Other_____
<input type="checkbox"/> Others	<input type="checkbox"/> Poor driving (Surge) <input type="checkbox"/> Knocking <input type="checkbox"/> Poor fuel economy <input type="checkbox"/> Back fire <input type="checkbox"/> After fire <input type="checkbox"/> Other_____

## 3. ENVIRONMENT

Problem frequency	<input type="checkbox"/> Constant <input type="checkbox"/> Sometimes (_____) <input type="checkbox"/> Once only <input type="checkbox"/> Other_____
Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Cloudy <input type="checkbox"/> Rainy <input type="checkbox"/> Snowy <input type="checkbox"/> Other_____
Outdoor temperature	Approx. _____ °C/°F
Place	<input type="checkbox"/> Highway <input type="checkbox"/> Suburbs <input type="checkbox"/> Inner City <input type="checkbox"/> Uphill <input type="checkbox"/> Downhill <input type="checkbox"/> Rough road <input type="checkbox"/> Other_____
Engine temperature	<input type="checkbox"/> Cold <input type="checkbox"/> Warming up <input type="checkbox"/> After warming up <input type="checkbox"/> Any temperature
Engine operation	<input type="checkbox"/> Starting <input type="checkbox"/> Just after starting (____min) <input type="checkbox"/> Idling <input type="checkbox"/> Racing <input type="checkbox"/> Driving <input type="checkbox"/> Constant speed <input type="checkbox"/> Acceleration <input type="checkbox"/> Deceleration <input type="checkbox"/> A/C switch ON/OFF <input type="checkbox"/> Other_____

## 4. MIL/DTC

MIL (Malfunction Indicator Lamp)		<input type="checkbox"/> Remains ON <input type="checkbox"/> Sometimes lights up <input type="checkbox"/> Does not light
DTC	Normal check (Pre-check)	<input type="checkbox"/> Normal <input type="checkbox"/> DTC (_____) <input type="checkbox"/> Freeze Frame Data
	Check mode	<input type="checkbox"/> Normal <input type="checkbox"/> DTC (_____) <input type="checkbox"/> Freeze Frame Data

## 5. ECM/PCM INFORMATION

ECM/PCM Part No.	
ROM ID	

SFDF28233L

# General Information

## FL-11

### Basic Inspection Procedure

#### Measuring Condition of Electronic Parts' Resistance

The measured resistance at high temperature after vehicle running may be high or low. So all resistance must be measured at ambient temperature (20°C, 68°F), unless stated otherwise.


#### NOTICE

The measured resistance in except for ambient temperature (20°C, 68°F) is reference value.

#### Intermittent Problem Inspection Procedure

Sometimes the most difficult case in troubleshooting is when a problem symptom occurs but does not occur again during testing. An example would be if a problem appears only when the vehicle is cold but has not appeared when warm. In this case, the technician should thoroughly make out a "Customer Problem Analysis Sheet" and recreate (simulate) the environment and condition which occurred when the vehicle was having the issue.

1. Clear Diagnostic Trouble Code (DTC).
2. Inspect connector connection, and check terminal for poor connections, loose wires, bent, broken or corroded pins, and then verify that the connectors are always securely fastened.

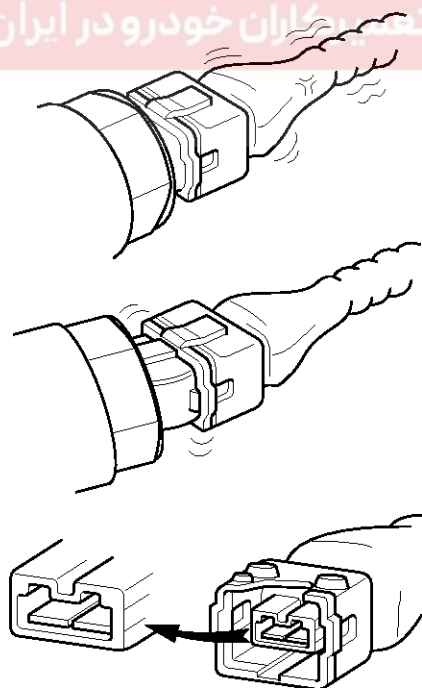

BFGE321A

3. Slightly shake the connector and wiring harness vertically and horizontally.
4. Repair or replace the component that has a problem.
5. Verify that the problem has disappeared with the road test.

#### ● Simulating Vibration

- a. Sensors and Actuators

: Slightly vibrate sensors, actuators or relays with finger.

#### ⚠ WARNING

**Strong vibration may break sensors, actuators or relays**

- b. Connectors and Harness

: Lightly shake the connector and wiring harness vertically and then horizontally.

#### ● Simulating Heat

- a. Heat components suspected of causing the malfunction with a hair dryer or other heat source.

#### ⚠ WARNING

- **DO NOT heat components to the point where they may be damaged.**
- **DO NOT heat the ECM directly.**

#### ● Simulating Water Sprinkling

- a. Sprinkle water onto vehicle to simulate a rainy day or a high humidity condition.

#### ⚠ WARNING

**DO NOT sprinkle water directly into the engine compartment or electronic components.**

#### ● Simulating Electrical Load

- a. Turn on all electrical systems to simulate excessive electrical loads (Radios, fans, lights, rear window defogger, etc.).


## FL-12

## Fuel System

## Connector Inspection Procedure


## 1. Handling of Connector

- a. Never pull on the wiring harness when disconnecting connectors.

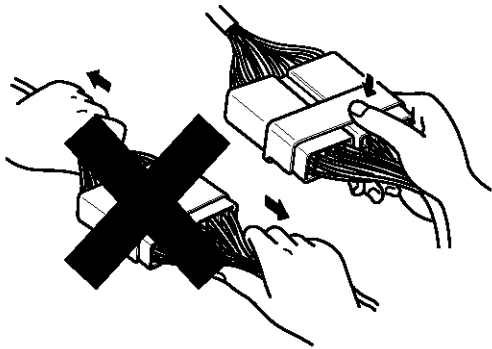


BFGE015F

- b. When removing the connector with a lock, press or pull locking lever.

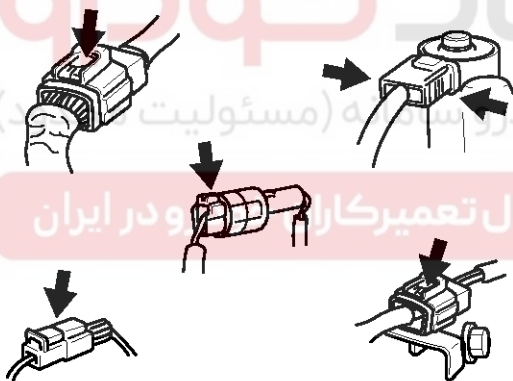


BFGE015G

- c. Listen for a click when locking connectors. This sound indicates that they are securely locked.

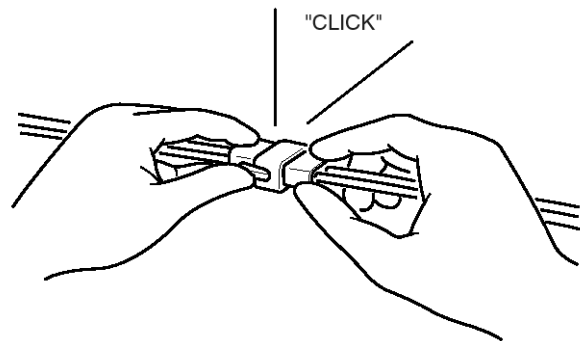

BFGE015H

- d. When a tester is used to check for continuity, or to measure voltage, always insert tester probe from wire harness side.

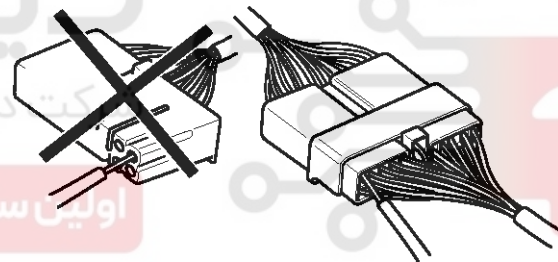


BFGE015I



## General Information

## FL-13

- e. Check waterproof connector terminals from the connector side. Waterproof connectors cannot be accessed from harness side.

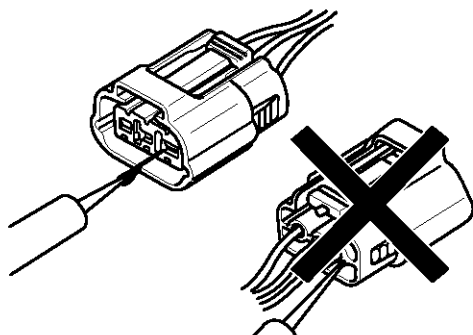

BFGE015J


### NOTICE

- Use a fine wire to prevent damage to the terminal.
- Do not damage the terminal when inserting the tester lead.

### 2. Checking Point for Connector

- While the connector is connected:  
Hold the connector, check connecting condition and locking efficiency.
- When the connector is disconnected:  
Check missed terminal, crimped terminal or broken core wire by slightly pulling the wire harness.  
Visually check for rust, contamination, deformation and bend.
- Check terminal tightening condition:  
Insert a spare male terminal into a female terminal, and then check terminal tightening conditions.

- d. Pull lightly on individual wires to ensure that each wire is secured in the terminal.

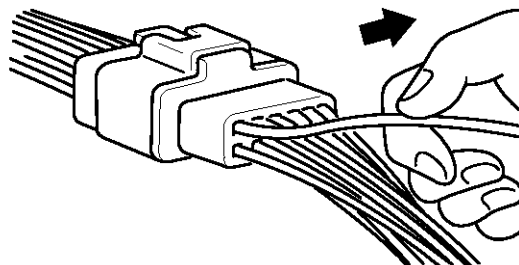

BFGE015K

### 3. Repair Method of Connector Terminal

- Clean the contact points using air gun and/or shop rag.

### NOTICE

Never use sand paper when polishing the contact points, otherwise the contact point may be damaged.

- In case of abnormal contact pressure, replace the female terminal.

### Wire Harness Inspection Procedure

- Before removing the wire harness, check the wire harness position and crimping in order to restore it correctly.
- Check whether the wire harness is twisted, pulled or loosened.
- Check whether the temperature of the wire harness is abnormally high.
- Check whether the wire harness is rotating, moving or vibrating against the sharp edge of a part.
- Check the connection between the wire harness and any installed part.
- If the covering of wire harness is damaged; secure, repair or replace the harness.



## FL-14

## Fuel System

## Electrical Circuit Inspection Procedure


## ● Check Open Circuit

## 1. Procedures for Open Circuit

- Continuity Check
- Voltage Check

If an open circuit occurs (as seen in [FIG. 1]), it can be found by performing Step 2 (Continuity Check Method) or Step 3 (Voltage Check Method) as shown below.

FIG 1

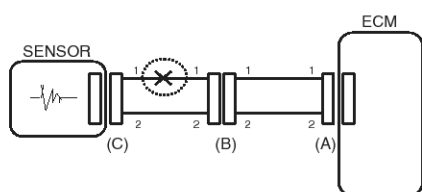

BFGE501A

## 2. Continuity Check Method

## NOTICE

When measuring for resistance, lightly shake the wire harness above and below or from side to side.

## Specification (Resistance)


$1\Omega$  or less → Normal Circuit

$1M\Omega$  or Higher → Open Circuit

- a. Disconnect connectors (A), (C) and measure resistance between connector (A) and (C) as shown in [FIG. 2].

In [FIG.2.] the measured resistance of line 1 and 2 is higher than  $1M\Omega$  and below  $1\Omega$  respectively. Specifically the open circuit is line 1 (Line 2 is normal). To find exact break point, check sub line of line 1 as described in next step.

FIG 2

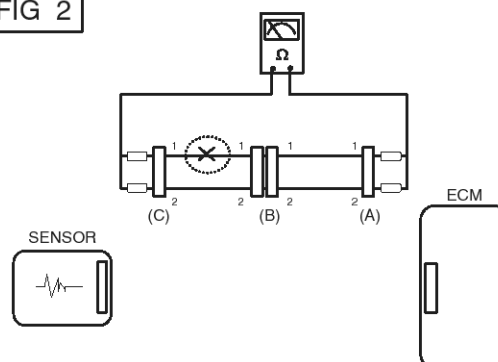


BFGE501B

- b. Disconnect connector (B), and measure for resistance between connector (C) and (B1) and between (B2) and (A) as shown in [FIG. 3].

In this case the measured resistance between connector (C) and (B1) is higher than  $1M\Omega$  and the open circuit is between terminal 1 of connector (C) and terminal 1 of connector (B1).

FIG 3

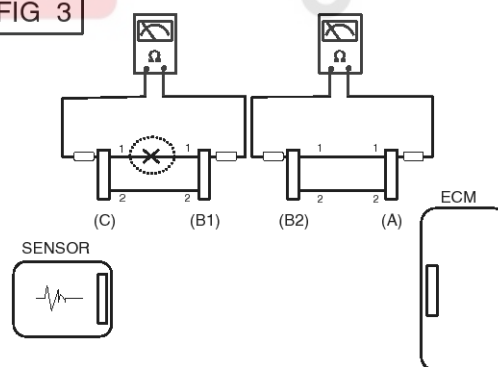

BFGE501C

## 3. Voltage Check Method


- a. With each connector still connected, measure the voltage between the chassis ground and terminal 1 of each connectors (A), (B) and (C) as shown in [FIG. 4].

## General Information

## FL-15

The measured voltage of each connector is 5V, 5V and 0V respectively. So the open circuit is between connector (C) and (B).

FIG 4

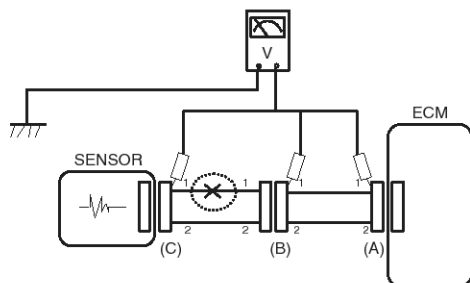

BFGE501D


### ● Check Short Circuit

#### 1. Test Method for Short to Ground Circuit

- Continuity Check with Chassis Ground

If short to ground circuit occurs as shown in [FIG. 5], the broken point can be found by performing Step 2 (Continuity Check Method with Chassis Ground) as shown below.

FIG 5

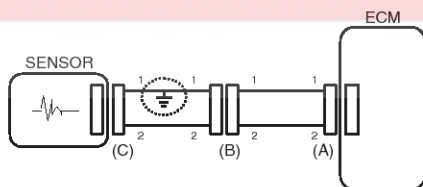

BFGE501E

#### 2. Continuity Check Method (with Chassis Ground)

#### NOTICE

Lightly shake the wire harness above and below, or from side to side when measuring the resistance.

#### Specification (Resistance)


1Ω or less → Short to Ground Circuit

1MΩ or Higher → Normal Circuit

- Disconnect connectors (A), (C) and measure for resistance between connector (A) and Chassis Ground as shown in [FIG. 6].

The measured resistance of line 1 and 2 in this example is below 1Ω and higher than 1MΩ respectively. Specifically the short to ground circuit is line 1 (Line 2 is normal). To find exact broken point, check the sub line of line 1 as described in the following step.

FIG 6

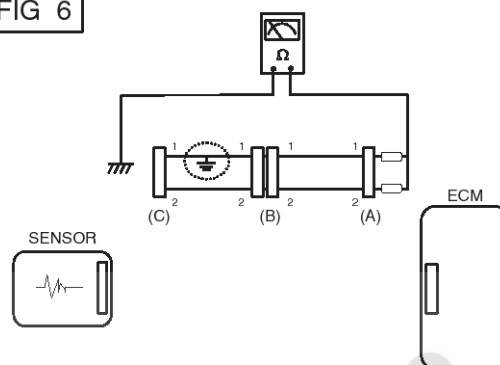


BFGE501F

- Disconnect connector (B), and measure the resistance between connector (A) and chassis ground, and between (B1) and chassis ground as shown in [FIG. 7].

The measured resistance between connector (B1) and chassis ground is 1Ω or less. The short to ground circuit is between terminal 1 of connector (C) and terminal 1 of connector (B1).

FIG 7

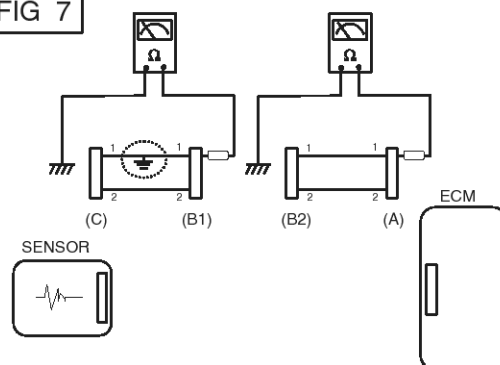

BFGE501G


## FL-16

## Fuel System

### ● Testing For Voltage Drop

This test checks for voltage drop along a wire, or through a connection or switch.

- Connect the positive lead of a voltmeter to the end of the wire (or to the side of the connector or switch) closest to the battery.
- Connect the negative lead to the other end of the wire. (or the other side of the connector or switch)
- Operate the circuit.
- The voltmeter will show the difference in voltage between the two points. A difference, or drop of more than 0.1 volts (50mV in 5V circuits), may indicate a problem. Check the circuit for loose or dirty connections.

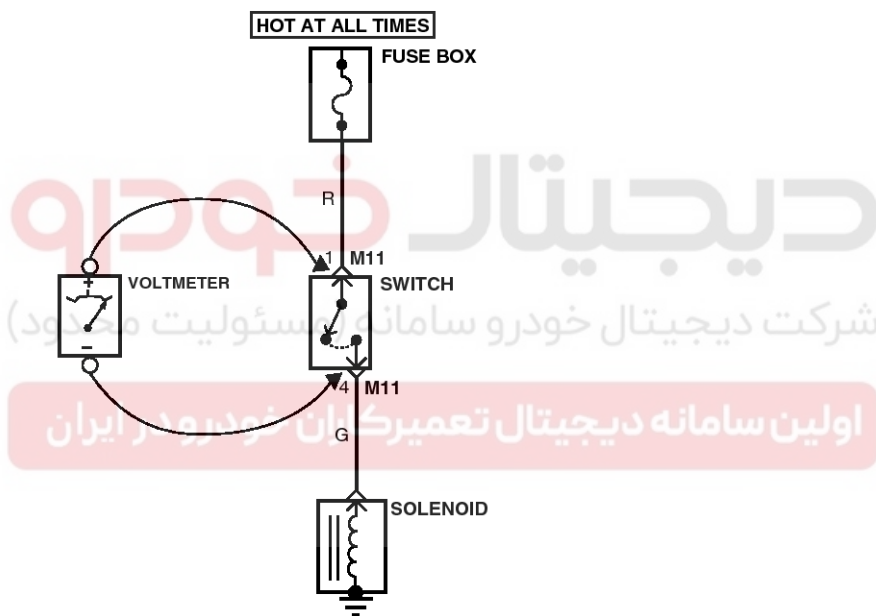

SHMFL9331N



# General Information

## FL-17

### Symptom Troubleshooting Guide Chart

Main symptom	Diagnostic procedure	Also check for
Unable to start (Engine does not turn over)	<ol style="list-style-type: none"> <li>1. Test the battery</li> <li>2. Test the starter</li> <li>3. Inhibitor switch (A/T) or clutch start switch (M/T)</li> </ol>	
Unable to start (Incomplete combustion)	<ol style="list-style-type: none"> <li>1. Test the battery</li> <li>2. Check the fuel pressure</li> <li>3. Check the ignition circuit</li> <li>4. Troubleshooting the immobilizer system (In case of immobilizer lamp flashing)</li> </ol>	<ul style="list-style-type: none"> <li>• DTC</li> <li>• Low compression</li> <li>• Intake air leaks</li> <li>• Slipped or broken timing belt</li> <li>• Contaminated fuel</li> </ul>
Difficult to start	<ol style="list-style-type: none"> <li>1. Test the battery</li> <li>2. Check the fuel pressure</li> <li>3. Check the ECT sensor and circuit (Check DTC)</li> <li>4. Check the ignition circuit</li> </ol>	<ul style="list-style-type: none"> <li>• DTC</li> <li>• Low compression</li> <li>• Intake air leaks</li> <li>• Contaminated fuel</li> <li>• Weak ignition spark</li> </ul>
Poor idling (Rough, unstable or incorrect Idle)	<ol style="list-style-type: none"> <li>1. Check the fuel pressure</li> <li>2. Check the Injector</li> <li>3. Check the long term fuel trim and short term fuel trim (Refer to CUSTOMER DATASTREAM)</li> <li>4. Check the idle speed control circuit (Check DTC)</li> <li>5. Inspect and test the Throttle Body</li> <li>6. Check the ECT sensor and circuit (Check DTC)</li> </ol>	<ul style="list-style-type: none"> <li>• DTC</li> <li>• Low compression</li> <li>• Intake air leaks</li> <li>• Contaminated fuel</li> <li>• Weak ignition spark</li> </ul>
Engine stall	<ol style="list-style-type: none"> <li>1. Test the Battery</li> <li>2. Check the fuel pressure</li> <li>3. Check the idle speed control circuit (Check DTC)</li> <li>4. Check the ignition circuit</li> <li>5. Check the CKPS Circuit (Check DTC)</li> </ol>	<ul style="list-style-type: none"> <li>• DTC</li> <li>• Intake air leaks</li> <li>• Contaminated fuel</li> <li>• Weak ignition spark</li> </ul>
Poor driving (Surge)	<ol style="list-style-type: none"> <li>1. Check the fuel pressure</li> <li>2. Inspect and test Throttle Body</li> <li>3. Check the ignition circuit</li> <li>4. Check the ECT Sensor and Circuit (Check DTC)</li> <li>5. Test the exhaust system for a possible restriction</li> <li>6. Check the long term fuel trim and short term fuel trim (Refer to CUSTOMER DATASTREAM)</li> </ol>	<ul style="list-style-type: none"> <li>• DTC</li> <li>• Low compression</li> <li>• Intake air leaks</li> <li>• Contaminated fuel</li> <li>• Weak ignition spark</li> </ul>
Knocking	<ol style="list-style-type: none"> <li>1. Check the fuel pressure</li> <li>2. Inspect the engine coolant</li> <li>3. Inspect the radiator and the electric cooling fan</li> <li>4. Check the spark plugs</li> </ol>	<ul style="list-style-type: none"> <li>• DTC</li> <li>• Contaminated fuel</li> </ul>
Poor fuel economy	<ol style="list-style-type: none"> <li>1. Check customer's driving habits               <ul style="list-style-type: none"> <li>• A/C on full time or the defroster mode on?</li> <li>• Are tires at correct pressure?</li> <li>• Is excessively heavy load being carried?</li> <li>• Is acceleration too much, too often?</li> </ul> </li> <li>2. Check the fuel pressure</li> <li>3. Check the injector</li> <li>4. Test the exhaust system for a possible restriction</li> <li>5. Check the ECT sensor and circuit</li> </ol>	<ul style="list-style-type: none"> <li>• DTC</li> <li>• Low compression</li> <li>• Intake air leaks</li> <li>• Contaminated fuel</li> <li>• Weak ignition spark</li> </ul>

## FL-18

## Fuel System

Main symptom	Diagnostic procedure	Also check for
Hard to refuel (Overflow during refueling)	<ol style="list-style-type: none"> <li>1. Test the canister close valve</li> <li>2. Inspect the fuel filler hose/pipe <ul style="list-style-type: none"> <li>· Pinched, kinked or blocked?</li> <li>· Filler hose is torn</li> </ul> </li> <li>3. Inspect the fuel tank vapor vent hose between the EVAP. canister and air filter</li> <li>4. Check the EVAP. canister</li> </ol>	<ul style="list-style-type: none"> <li>• Malfunctioning gas station filling nozzle (If this problem occurs at a specific gas station during refueling)</li> </ul>

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



# Engine Control System

FL-19

## Engine Control System

### Description

If the Gasoline Engine Control system components (sensors, ECM, injector, etc.) fail, interruption to the fuel supply or failure to supply the proper amount of fuel for various engine operating conditions will result. The following situations may be encountered.

1. Engine is hard to start or does not start at all.
2. Unstable idle.
3. Poor driveability

If any of the above conditions are noted, first perform a routine diagnosis that includes basic engine checks (ignition system malfunction, incorrect engine adjustment, etc.). Then, inspect the Gasoline Engine Control system components with the HI-SCAN (Pro).

### NOTICE

- Before removing or installing any part, read the diagnostic trouble codes and then disconnect the battery negative (-) terminal.
- Before disconnecting the cable from battery terminal, turn the ignition switch to OFF. Removal or connection of the battery cable during engine operation or while the ignition switch is ON could cause damage to the ECM.
- The control harnesses between the ECM and heated oxygen sensor are shielded with the shielded ground wires to the body in order to prevent the influence of ignition noises and radio interference. When the shielded wire is faulty, the control harness must be replaced.
- When checking the generator for the charging state, do not disconnect the battery '+' terminal to prevent the ECM from damage due to the voltage.
- When charging the battery with the external charger, disconnect the vehicle side battery terminals to prevent damage to the ECM.

### Malfunction Indicator Lamp (MIL)

#### [EOBD]

A malfunction indicator lamp illuminates to notify the driver that there is a problem with the vehicle. However, the MIL will go off automatically after 3 subsequent sequential driving cycles without the same malfunction. Immediately after the ignition switch is turned on (ON position - do not start), the MIL will illuminate continuously to indicate that the MIL operates normally.

Faults with the following items will illuminate the MIL.

- Catalyst
- Fuel system
- Mass Air Flow Sensor (MAFS)
- Intake Air Temperature Sensor (IATS)
- Engine Coolant Temperature Sensor (ECTS)
- Throttle Position Sensor (TPS)
- Upstream Oxygen Sensor
- Upstream Oxygen Sensor Heater
- Downstream Oxygen Sensor
- Downstream Oxygen Sensor Heater
- Injector
- Misfire
- Crankshaft Position Sensor (CKPS)
- Camshaft Position Sensor (CMPS)
- Evaporative Emission Control System
- Vehicle Speed Sensor (VSS)
- Idle Speed Control Actuator (ISCA)
- Power Supply
- ECM/ PCM
- MT/AT Encoding
- Acceleration Sensor
- MIL-on Request Signal
- Power Stage

### NOTICE

Refer to "Inspection Chart For Diagnostic Trouble Codes (DTC)" for more information.

## FL-20

## Fuel System

### [NON-EOBD]

A malfunction indicator lamp illuminates to notify the driver that there is a problem with the vehicle. However, the MIL will go off automatically after 3 subsequent sequential driving cycles without the same malfunction. Immediately after the ignition switch is turned on (ON position - do not start), the MIL will illuminate continuously to indicate that the MIL operates normally.

Faults with the following items will illuminate the MIL

- Heated oxygen sensor (HO2S)
- Mass Air Flow sensor (MAFS)
- Throttle position sensor (TPS)
- Engine coolant temperature sensor (ECTS)
- Idle speed control actuator (ISCA)
- Injectors
- ECM

### NOTICE

Refer to "Inspection Chart For Diagnostic Trouble Codes (DTC)" for more information.

### [INSPECTION]

1. After turning ON the ignition key, ensure that the light illuminates for about 5 seconds and then goes out.
2. If the light does not illuminate, check for an open circuit in the harness, a blown fuse or a blown bulb.


### Self-Diagnosis

The ECM monitors the input/output signals (some signals at all times and the others under specified conditions). When the ECM detects an irregularity, it records the diagnostic trouble code, and outputs the signal to the Data Link connector. The diagnosis results can be read with the MIL or HI-SCAN (Pro). Diagnostic Trouble Codes (DTC) will remain in the ECM as long as battery power is maintained. The diagnostic trouble codes will, however, be erased when the battery terminal or ECM connector is disconnected, or by the HI-SCAN (Pro).

### NOTICE

If a sensor connector is disconnected with the ignition switch turned on, the diagnostic trouble code (DTC) is recorded. In this case, disconnect the battery negative terminal (-) for 15 seconds or more, and the diagnosis memory will be erased.

### The relation between dtc and driving pattern in eobd system

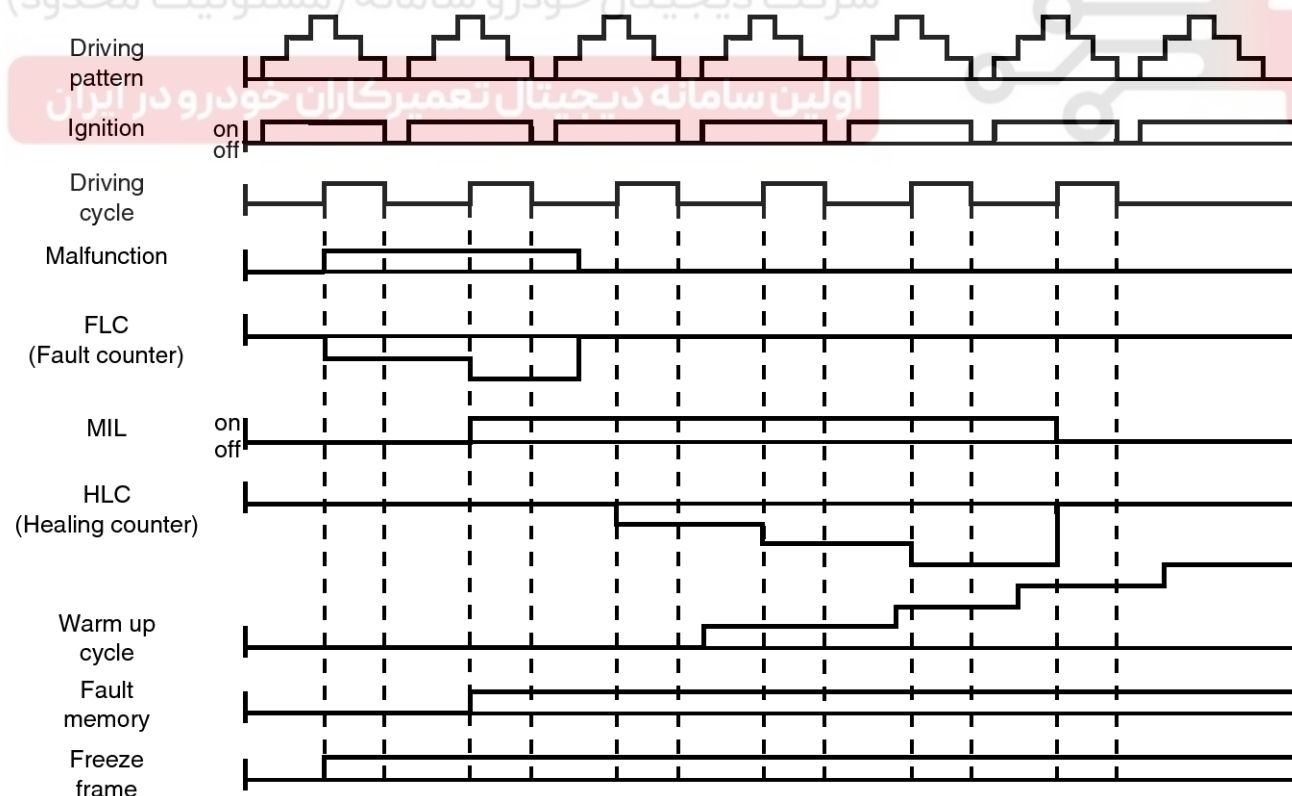

LGIF601Q



# Engine Control System

## FL-21

1. When the same malfunction is detected and maintained during two sequential driving cycles, the MIL will automatically illuminate.
2. The MIL will go off automatically if no fault is detected after 3 sequential driving cycles.
3. A Diagnostic Trouble Code(DTC) is recorded in ECM memory when a malfunction is detected after two sequential driving cycles. The MIL will illuminate when the malfunction is detected on the second driving cycle.

If a misfire is detected, a DTC will be recorded, and the MIL will illuminate, immediately after a fault is first detected.

4. A Diagnostic Trouble Code(DTC) will automatically erase from ECM memory if the same malfunction is not detected for 40 driving cycles.

### NOTICE

- A "warm-up cycle" means sufficient vehicle operation such that the coolant temperature has risen by at least 40 degrees Fahrenheit from engine starting and reaches a minimum temperature of 160 degrees Fahrenheit.
- A "driving cycle" consists of engine startup, vehicle operation beyond the beginning of closed loop operation.




شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

## FL-22

## Fuel System

## Components Location

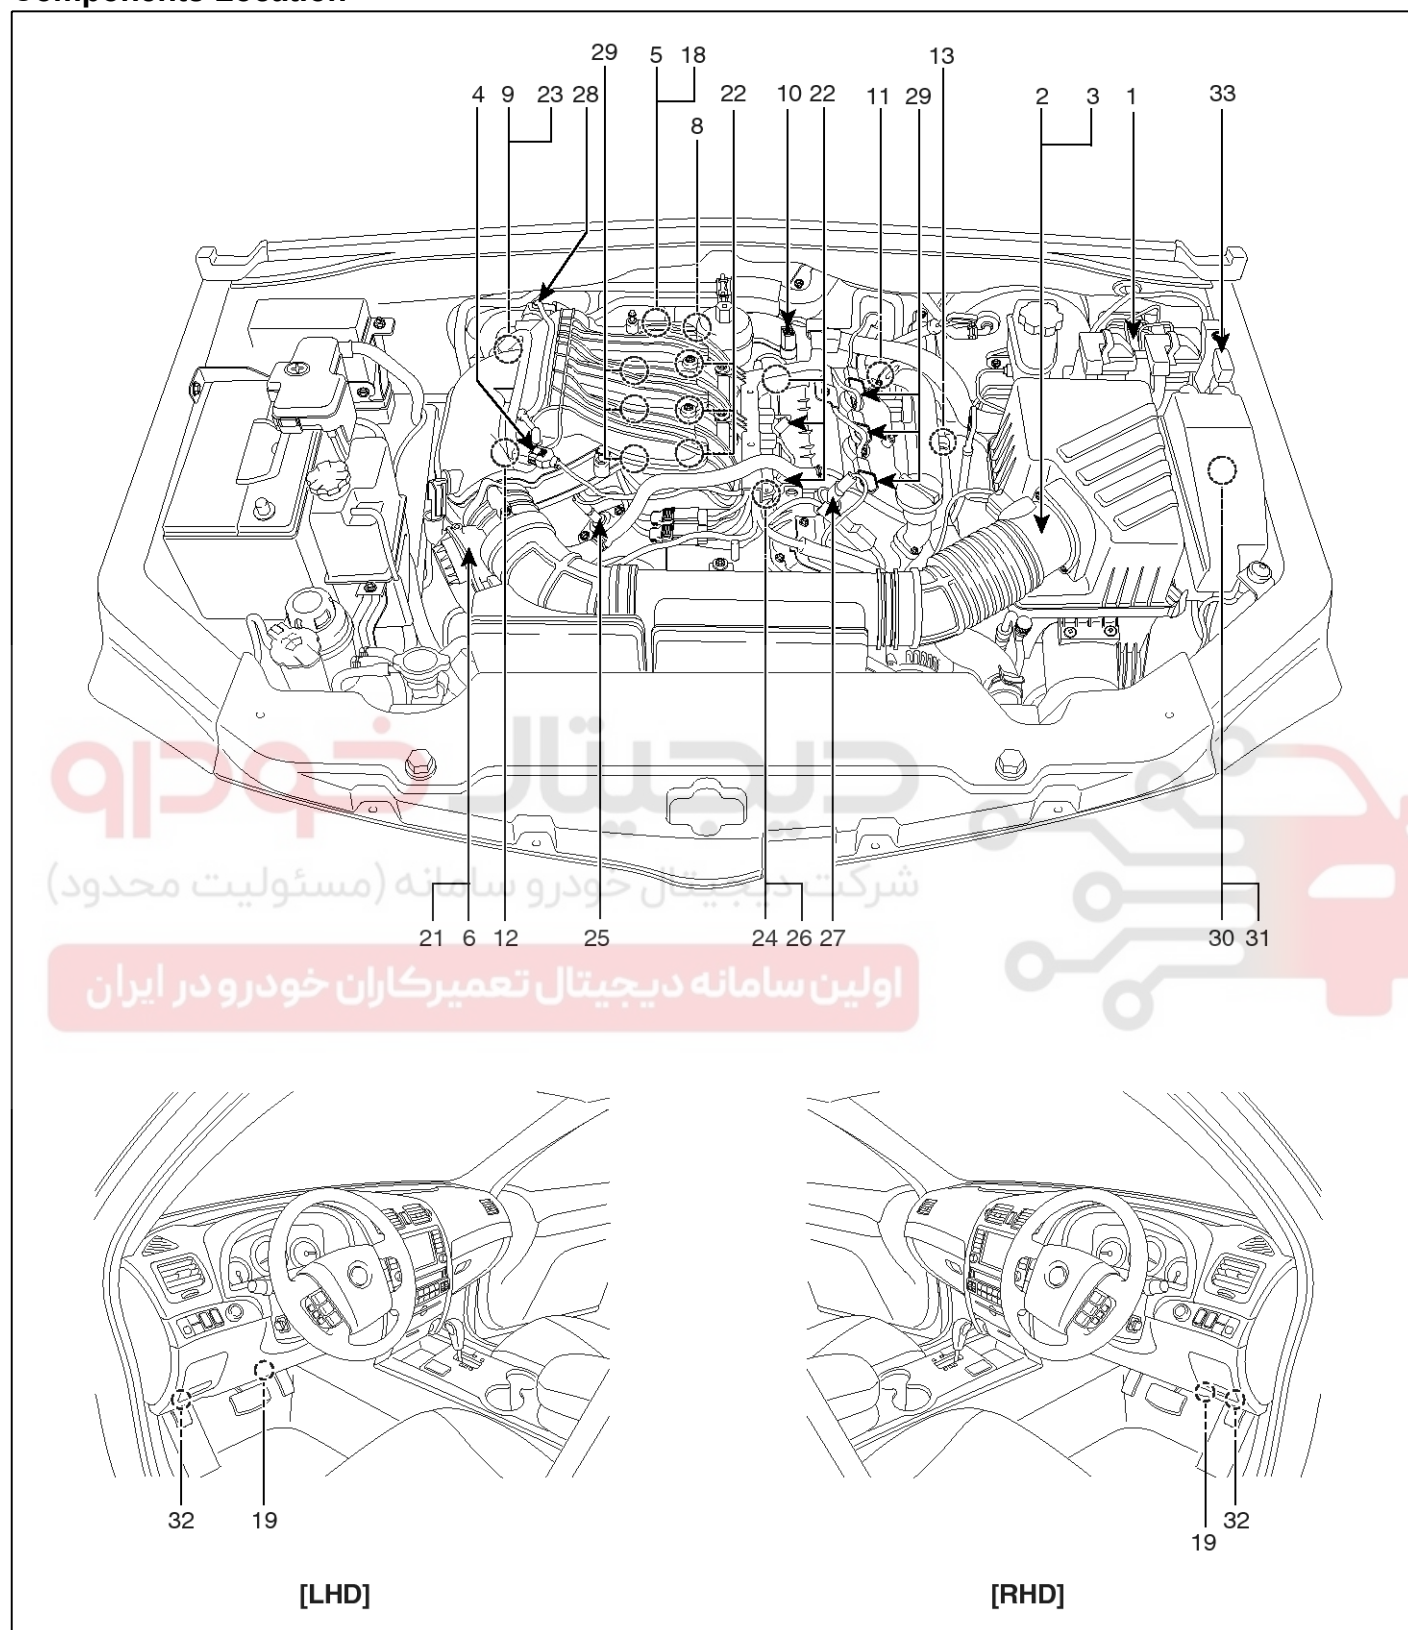

SHMFL9100L

# Engine Control System

## FL-23

1. ECM (Engine Control Module)
2. Mass Air Flow Sensor (MAFS)
3. Intake Air Temperature Sensor (IATS)
4. Manifold Absolute Pressure Sensor (MAPS)
5. Engine Coolant Temperature Sensor (ECTS)
6. Throttle Position Sensor (TPS) [integrated into ETC Module]
7. Crankshaft Position Sensor (CKPS)
8. Camshaft Position Sensor (CMPS) [Bank 1 / Intake]
9. Camshaft Position Sensor (CMPS) [Bank 1 / Exhaust]
10. Camshaft Position Sensor (CMPS) [Bank 2 / Intake]
11. Camshaft Position Sensor (CMPS) [Bank 2 / Exhaust]
12. Knock Sensor (KS) [Bank 1]
13. Knock Sensor (KS) [Bank 2]
14. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 1]
15. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 2]
16. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 1]
17. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 2]
18. CVVT Oil Temperature Sensor (OTS)
19. Accelerator Position Sensor (APS)
20. A/C Pressure Transducer (APT)
21. ETC Motor [integrated into ETC Module]
22. Injector
23. Purge Control Solenoid Valve (PCSV)
24. CVVT Oil Control Valve (OCV) [Bank 1 / Intake]
25. CVVT Oil Control Valve (OCV) [Bank 1 / Exhaust]
26. CVVT Oil Control Valve (OCV) [Bank 2 / Intake]
27. CVVT Oil Control Valve (OCV) [Bank 2 / Exhaust]
28. Variable Intake Solenoid (VIS) Valve
29. Ignition Coil
30. Main Relay
31. Fuel Pump Relay
32. Data Link Connector (DLC) [16 Pin]
33. Multi-Purpose Check Connector [20 Pin]

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




## FL-24

## Fuel System


1. ECM (Engine Control Module)

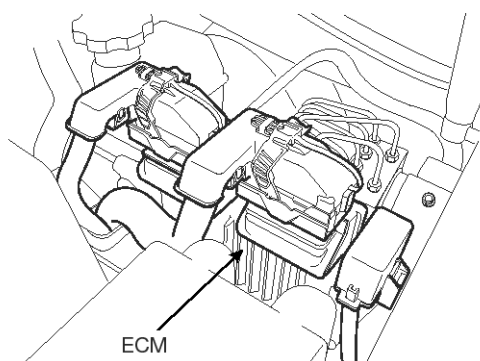


SHMFL9101L

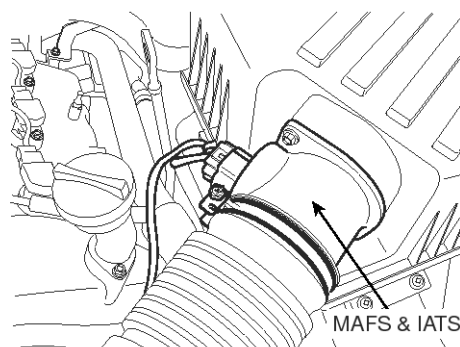 2. Mass Air Flow Sensor (MAFS)  
 3. Intake Air Temperature Sensor (IATS)


SHMFL9102L

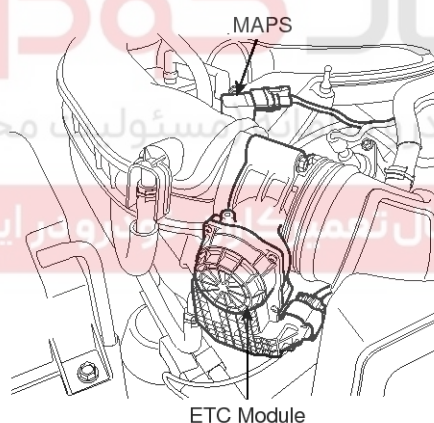 4. Manifold Absolute Pressure Sensor (MAPS)  
 6. Throttle Position Sensor (TPS)  
     [integrated into ETC Module]  
 21. ETC Motor [integrated into ETC Module]


SHMFL9103L

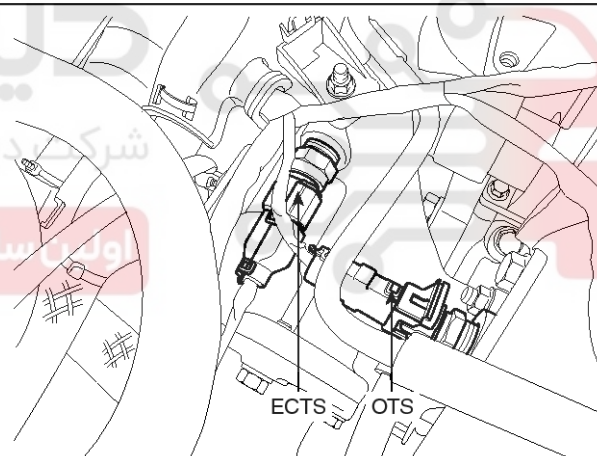
 5. Engine Coolant Temperature Sensor (ECTS)  
 18. CVVT Oil Temperature Sensor (OTS)


SBHFL8104D

# Engine Control System


## FL-25

7. Crankshaft Position Sensor (CKPS)

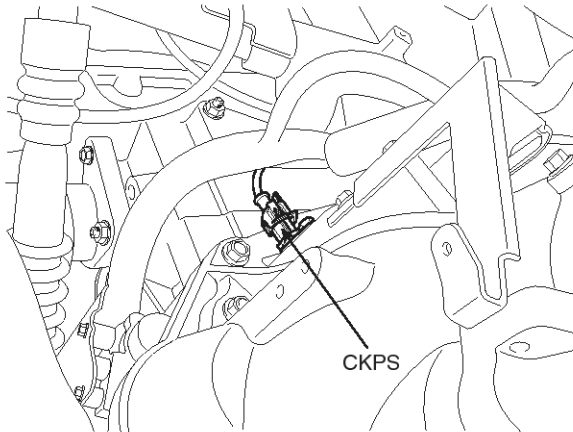


SBHFL8105D

8. Camshaft Position Sensor (CMPS) [Bank 1 / Intake]

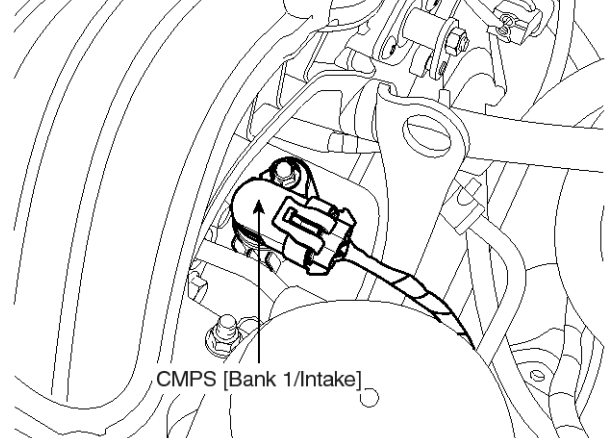


SBHFL9102L

9. Camshaft Position Sensor (CMPS) [Bank 1 / Exhaust]

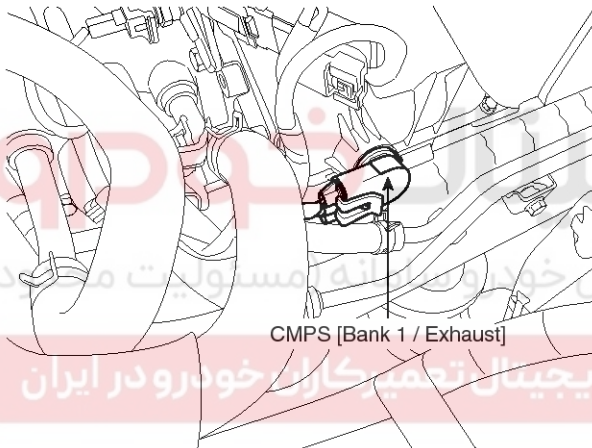


SBHFL9103L

10. Camshaft Position Sensor (CMPS) [Bank 2 / Intake]

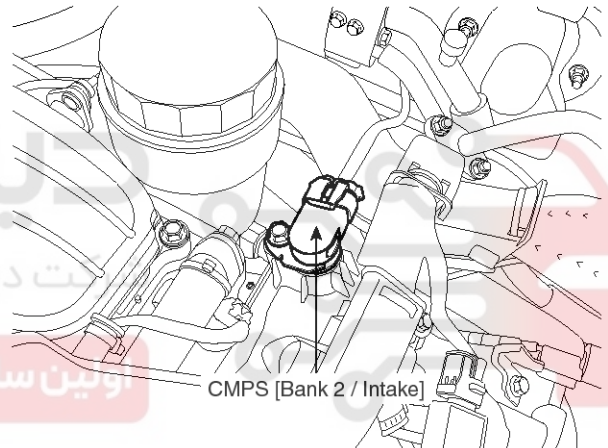


SBHFL9104L

11. Camshaft Position Sensor (CMPS) [Bank 2 / Exhaust]

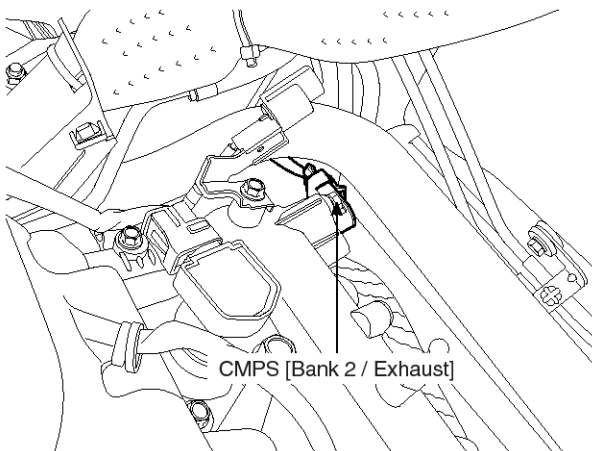

SBHFL9105L

12. Knock Sensor (KS) [Bank 1]

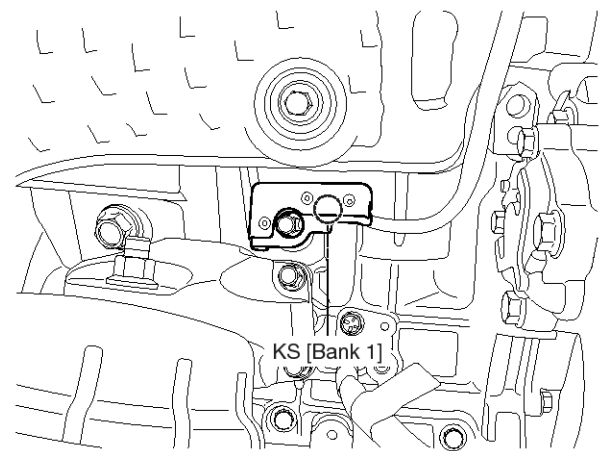


SBHFL9106L



## FL-26


## Fuel System

13. Knock Sensor (KS) [Bank 2]

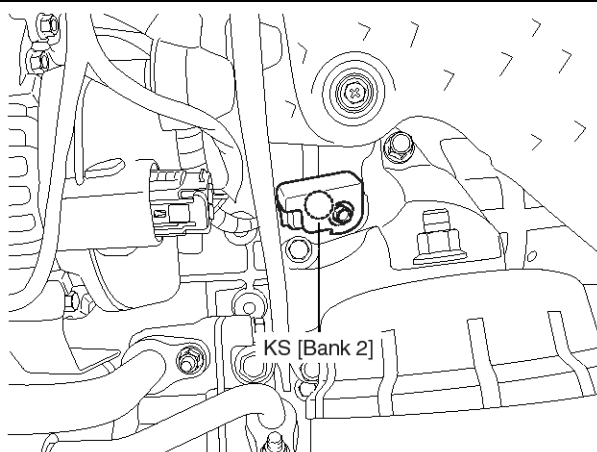


SBHFL9107L

14. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 1]

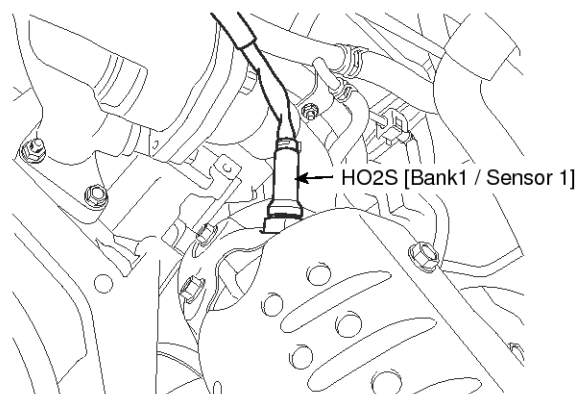


SHMFL9150L

15. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 2]

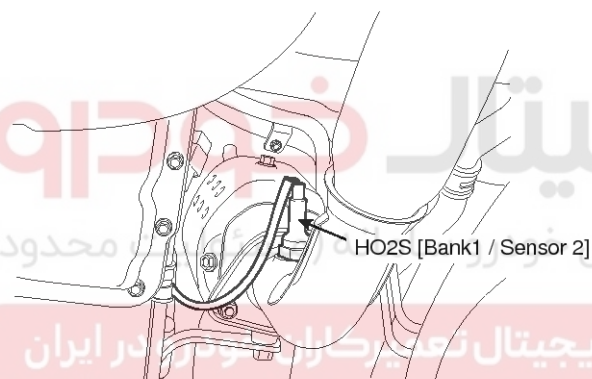


SHMFL9147L

16. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 1]

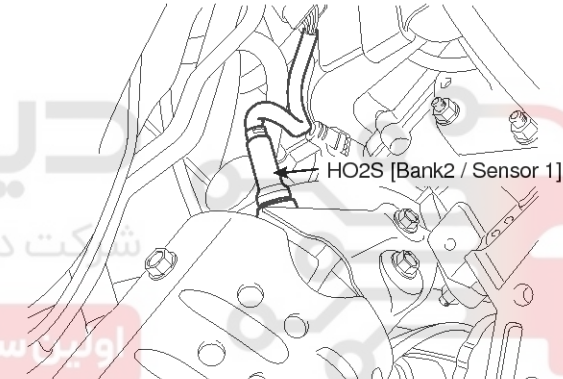


SHMFL9151L

17. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 2]

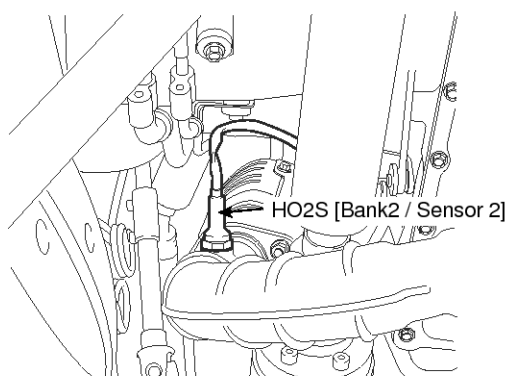

SHMFL9152L

19. Accelerator Position Sensor (APS)

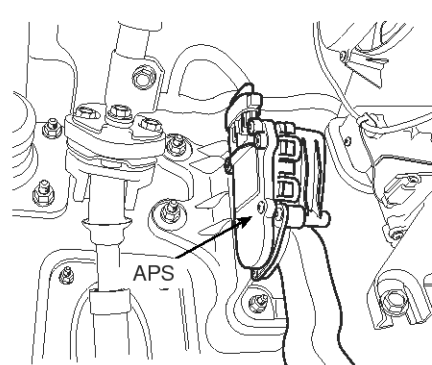


SHMFL9104L


# Engine Control System

## FL-27


20. A/C Pressure Transducer (APT)

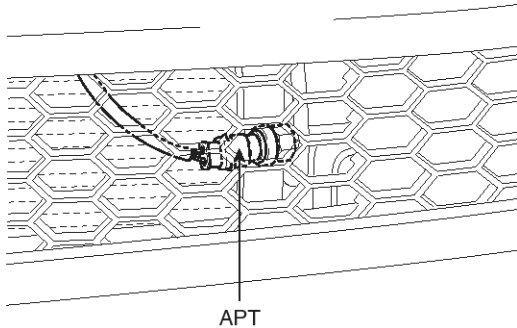


SHMFL9148L

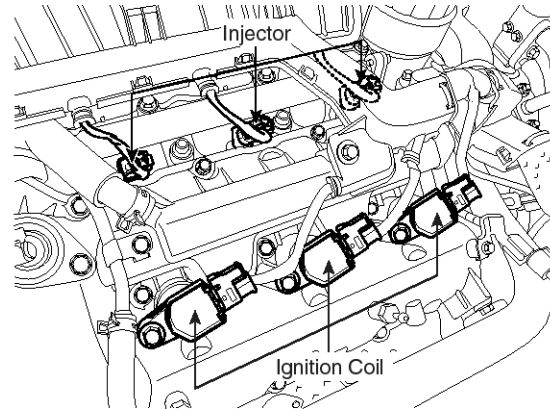22. Injector  
29. Ignition Coil

SBHFL9112L

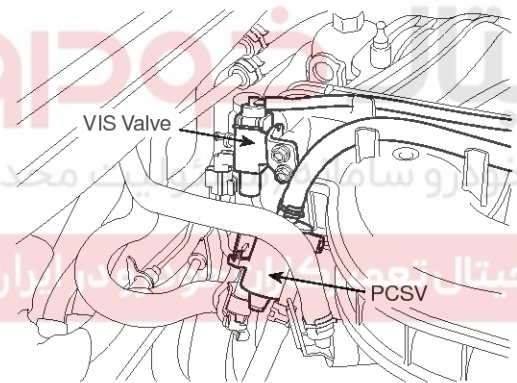23. Purge Control Solenoid Valve (PCSV)  
28. Variable Intake Solenoid (VIS) Valve

SHMFL9106L

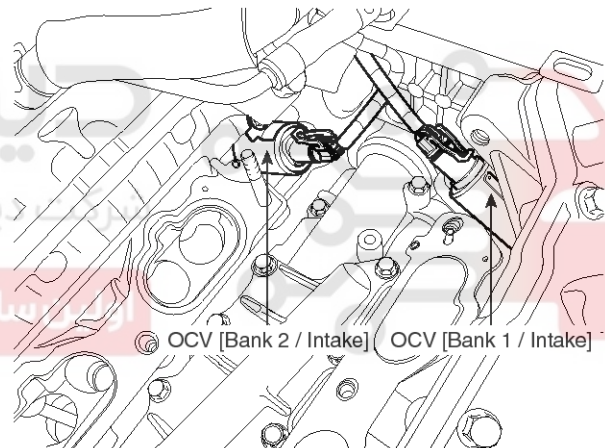24. CVVT Oil Control Valve (OCV) [Bank 1 / Intake]  
26. CVVT Oil Control Valve (OCV) [Bank 2 / Intake]


SBHFL9113L



## FL-28


## Fuel System

25. CVVT Oil Control Valve (OCV) [Bank 1 / Exhaust]

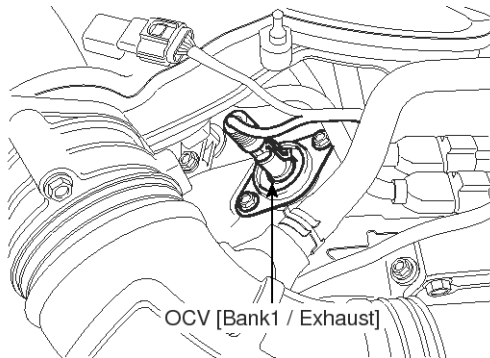


SHMFL9107L

27. CVVT Oil Control Valve (OCV) [Bank 2 / Exhaust]

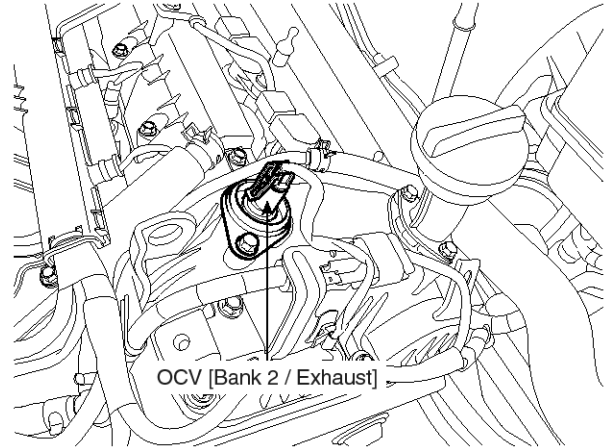

SBHFL9115L

30. Main Relay  
 31. Fuel Pump Relay  
 33. Multi-Purpose Check Connector [20 Pin]

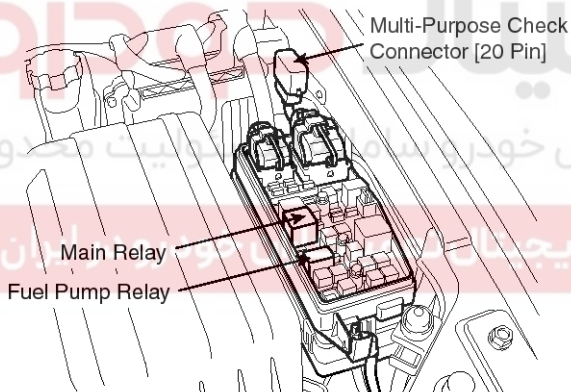

SHMFL9149L


# Engine Control System

FL-29

## Engine Control Module (ECM)

### ECM Terminal And Input/Output signal

#### ECM Harness Connector

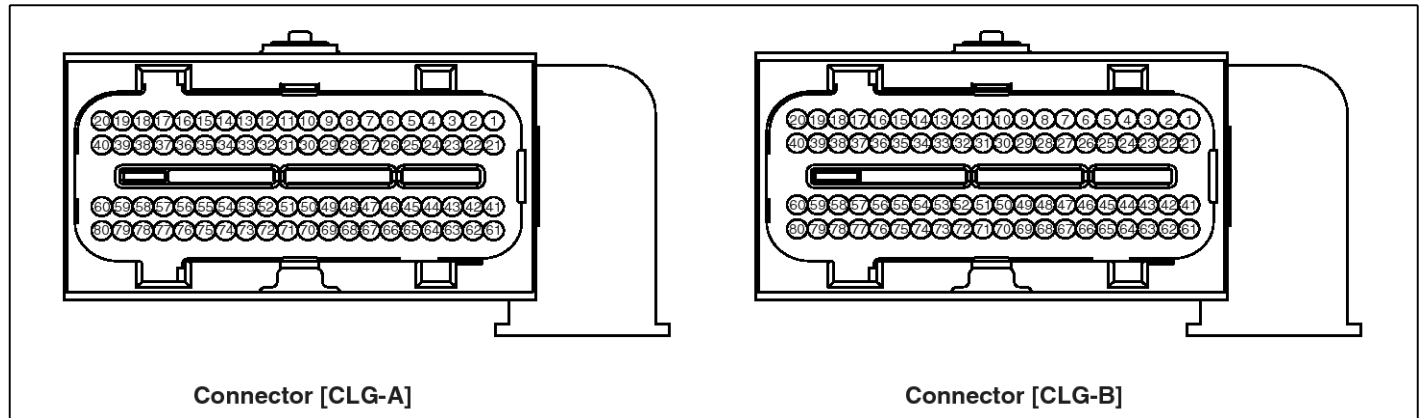

SHMFL9108L

### ECM Terminal Function

#### Connector [CLG-A]

Pin No.	Description	Connected to
1	2nd CAN [High]	Multi-Purpose Check Connector
2	2nd CAN [Low]	Multi-Purpose Check Connector
3	-	
4	-	
5	-	
6	-	
7	-	
8	-	
9	-	
10	Power Steering Switch signal input	Power Steering Switch
11	-	
12	-	
13	-	
14	-	
15	Alternator "FR" PWM signal input	Alternator
16	Ground	Cruise Control Switch
17	-	
18	A/C Switch "ON" signal input	A/C Control Module
19	-	
20	-	

## FL-30

## Fuel System

Pin No.	Description	Connected to
21	Brake Switch signal input	Brake Switch
22	-	
23	Brake Lamp signal input	Brake Switch
24	-	
25	Cruise Control Switch signal input	Cruise Control Switch
26	A/C Compressor Thermal Switch signal	A/C Compressor Thermal Switch
27	Immobilizer communication line	Immobilizer Control Unit [Without Button Engine Start System]
		Instrument Panel Module [With Button Engine Start System]
28	-	
29	-	
30	-	
31	-	
32	A/C Pressure Transducer (APT) signal input	A/C Pressure Transducer (APT)
33	Sensor ground	A/C Pressure Transducer (APT)
34	-	
35	-	
36	-	
37	-	
38	Battery power (B <sup>+</sup> )	Main Relay
39	Battery power (B <sup>+</sup> )	Main Relay
40	Battery power (B <sup>+</sup> )	Main Relay
41	CAN [High]	Other control module, Data Link Connector (DLC), Multi-Purpose Check Connector
42	CAN [Low]	Other control module, Data Link Connector (DLC), Multi-Purpose Check Connector
43	Main Relay control output	Main Relay
44	Intake Air Temperature Sensor (IATS) signal input	Intake Air Temperature Sensor (IATS)
45	-	
46	-	
47	Mass Air Flow Sensor (MAFS) signal input	Mass Air Flow Sensor (MAFS)
48	Sensor ground	Accelerator Position Sensor (APS) 2
49	Accelerator Position Sensor (APS) 2 signal input	Accelerator Position Sensor (APS) 2
50	-	
51	-	

# Engine Control System

**FL-31**

Pin No.	Description	Connected to
52	Vehicle speed signal input	ESP Control Module
53	Sensor ground	Intake Air Temperature Sensor (IATS)
54	Accelerator Position Sensor (APS) 1 signal input	Accelerator Position Sensor (APS) 1
55	Sensor ground	Accelerator Position Sensor (APS) 1
56	-	
57	Sensor power (+5V)	Accelerator Position Sensor (APS) 2
58	Sensor power (+5V)	A/C Pressure Transducer (APT)
59	Sensor power (+5V)	Accelerator Position Sensor (APS) 1
60	-	
61	Engine speed signal output	Power Distribution Module (PDM)
62	-	
63	Malfunction Indicator Lamp (MIL) control output	Malfunction Indicator Lamp (MIL)
64	A/C Compressor Relay control output	A/C Compressor Relay
65	Cooling Fan Relay control output [High]	Cooling Fan Control Module
66	Cooling Fan Relay control output [Low]	Cooling Fan Control Module
67	-	
68	-	
69	-	
70	Fuel Pump Relay control output	Fuel Pump Relay
71	Variable Intake Solenoid (VIS) Valve control output	Variable Intake Solenoid (VIS) Valve
72	Immobilizer Lamp control output	Immobilizer Lamp
73	-	
74	-	
75	-	
76	-	
77	-	
78	Purge Control Solenoid Valve (PCSV) control output	Purge Control Solenoid Valve (PCSV)
79	-	
80	-	

## FL-32

## Fuel System

## Connector [CLG-B]

Pin No.	Description	Connected to
1	ETC Motor [-] control output	ETC Motor
2	ETC Motor [+] control output	ETC Motor
3	-	
4	CVVT Oil Temperature Sensor (OTS) signal input	CVVT Oil Temperature Sensor (OTS)
5	-	
6	-	
7	Engine Coolant Temperature Sensor (ECTS) signal input	Engine Coolant Temperature Sensor (ECTS)
8	Manifold Absolute Pressure Sensor (MAPS) signal input	Manifold Absolute Pressure Sensor (MAPS)
9	-	
10	-	
11	Sensor power (+5V)	Manifold Absolute Pressure Sensor (MAPS)
12	Battery power (B+)	Ignition Switch
13	-	
14	Sensor ground	Throttle Position Sensor (TPS)
15	Sensor power (+5V)	Camshaft Position Sensor (CMPS) [Bank 2/Intake] Camshaft Position Sensor (CMPS) [Bank 2/Exhaust]
16	Sensor power (+5V)	Throttle Position Sensor (TPS)
17	Sensor ground	Camshaft Position Sensor (CMPS) [Bank 2/Intake] Camshaft Position Sensor (CMPS) [Bank 2/Exhaust]
18	Sensor ground	Camshaft Position Sensor (CMPS) [Bank 1/Intake] Camshaft Position Sensor (CMPS) [Bank 1/Exhaust]
19	Ignition Coil (Cylinder #6) control output	Ignition Coil (Cylinder #6)
20	-	
21	Crankshaft Position Sensor (CKPS) [High] signal input	Crankshaft Position Sensor (CKPS)
22	-	
23	Sensor Shield	Knock Sensor (KS) #1 [Bank 1] Knock Sensor (KS) #2 [Bank 2]
24	Camshaft Position Sensor (CMPS)[Bank 2/Intake] signal input	Camshaft Position Sensor (CMPS) [Bank 2/Intake]
25	Camshaft Position Sensor (CMPS)[Bank 1/Intake] signal input	Camshaft Position Sensor (CMPS) [Bank 1/Intake]
26	Camshaft Position Sensor (CMPS)[Bank 2/Exhaust] signal input	Camshaft Position Sensor (CMPS) [Bank 2/Exhaust]

# Engine Control System

**FL-33**

Pin No.	Description	Connected to
27	Camshaft Position Sensor (CMPS)[Bank 1/Exhaust] signal input	Camshaft Position Sensor (CMPS) [Bank 1/Exhaust]
28	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1]
29	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2]
30	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1]
31	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2]
32	Sensor power (+5V)	Camshaft Position Sensor (CMPS) [Bank 1/Intake]
		Camshaft Position Sensor (CMPS) [Bank 1/Exhaust]
33	Sensor ground	Engine Coolant Temperature Sensor (ECTS)
34	Sensor ground	Manifold Absolute Pressure Sensor (MAPS)
		CVVT Oil Temperature Sensor (OTS)
35	Power ground	Chassis Ground
36	Power ground	Chassis Ground
37	Power ground	Chassis Ground
38	Power ground	Chassis Ground
39	Power ground	Chassis Ground
40	Ignition Coil (Cylinder #4) control output	Ignition Coil (Cylinder #4)
41	Crankshaft Position Sensor (CKPS) [Low] signal input	Crankshaft Position Sensor (CKPS)
42	-	
43	-	
44	-	
45	-	
46	-	
47	-	
48	Throttle Position Sensor (TPS) 1 signal input	Throttle Position Sensor (TPS) 1
49	Heated Oxygen Sensor (HO2S)[Bank 1/Sensor 1] signal input	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1]
50	Heated Oxygen Sensor (HO2S)[Bank 1/Sensor 2] signal input	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2]
51	Heated Oxygen Sensor (HO2S)[Bank 2/Sensor 1] signal input	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1]
52	Heated Oxygen Sensor (HO2S)[Bank 2/Sensor 2] signal input	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2]
53	Knock Sensor (KS) [Bank 2] [High] signal input	Knock Sensor (KS) [Bank 2]
54	Knock Sensor (KS) [Bank 2] [Low] signal input	Knock Sensor (KS) [Bank 2]
55	Knock Sensor (KS) [Bank 1] [Low] signal input	Knock Sensor (KS) [Bank 1]

## FL-34

## Fuel System

Pin No.	Description	Connected to
56	Knock Sensor (KS) [Bank 1] [High] signal input	Knock Sensor (KS) [Bank 1]
57	Throttle Position Sensor (TPS) 2 signal input	Throttle Position Sensor (TPS) 2
58	-	
59	-	
60	Ignition Coil (Cylinder #2) control output	Ignition Coil (Cylinder #2)
61	CVVT Oil Control Valve (OCV)[Bank 2/Intake] control output	CVVT Oil Control Valve (OCV) [Bank 2/Intake]
62	CVVT Oil Control Valve (OCV)[Bank 1/Intake] control output	CVVT Oil Control Valve (OCV) [Bank 1/Intake]
63	Injector (Cylinder #2) control output	Injector (Cylinder #2)
64	Injector (Cylinder #3) control output	Injector (Cylinder #3)
65	CVVT Oil Control Valve (OCV)[Bank 1/Exhaust] control output	CVVT Oil Control Valve (OCV) [Bank 1/Exhaust]
66	CVVT Oil Control Valve (OCV)[Bank 2/Exhaust] control output	CVVT Oil Control Valve (OCV) [Bank 2/Exhaust]
67	Heated Oxygen Sensor (HO2S)[Bank 2/Sensor 1] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1]
68	Injector (Cylinder #4) control output	Injector (Cylinder #4)
69	Injector (Cylinder #5) control output	Injector (Cylinder #5)
70	Heated Oxygen Sensor (HO2S)[Bank 1/Sensor 1] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1]
71	Injector (Cylinder #6) control output	Injector (Cylinder #6)
72	Injector (Cylinder #1) control output	Injector (Cylinder #1)
73	Heated Oxygen Sensor (HO2S)[Bank 2/Sensor 2] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2]
74	Heated Oxygen Sensor (HO2S)[Bank 1/Sensor 2] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2]
75	-	
76	Battery power (B+)	Battery
77	Ignition Coil (Cylinder #3) control output	Ignition Coil (Cylinder #3)
78	Ignition Coil (Cylinder #5) control output	Ignition Coil (Cylinder #5)
79	Ignition Coil (Cylinder #1) control output	Ignition Coil (Cylinder #1)
80	-	



# Engine Control System

**FL-35**

## ECM Terminal Input/Output Signal Connector [CLG-A]

Pin No.	Description	Condition	Type	Level
1	2nd CAN [High]	RECESSIVE	Pulse	2.0 ~ 3.0V
		DOMINANT		2.75 ~ 4.5V
2	2nd CAN [Low]	RECESSIVE	Pulse	2.0 ~ 3.0V
		DOMINANT		0.5 ~ 2.25V
3	-			
4	-			
5	-			
6	-			
7	-			
8	-			
9	-			
10	Power Steering Switch signal input			
11	-			
12	-			
13	-			
14	-			
15	Alternator "FR" PWM signal input	Idle	PWM	High: Battery voltage
				Low: Max. 1.5V
				133 <Frequency< 200Hz
				5 <Duty< 95%
16	Ground	Idle	DC	Max. 150mV
17	-			
18	A/C Switch "ON" signal input	S/W ON	DC	Min. 5.7V
		S/W OFF	DC	Max. 1.0V
19	-			
20	-			
21	Brake Switch signal input	Brake ON	DC	Max. 0.5V
		Brake OFF		Battery Voltage
22	-			
23	Brake Switch Lamp input	Brake ON	DC	Battery Voltage
		Brake OFF		Max. 0.5V
24	-			

## FL-36

## Fuel System

Pin No.	Description	Condition	Type	Level
25	Cruise Control Switch signal input	MAIN	DC	11.1 ~ 12.1V
		SET		1.0 ~ 1.8V
		CANCEL		-0.5 ~ 0.5V
		RESUME		2.5 ~ 3.5V
26	A/C Compressor Thermal Switch signal input	A/C OFF	DC	Max. 1.0V
		A/C ON		Battery Voltage
27	Immobilizer communication line	When transmitting	DC	Hi: Min. Vbatt X 80%
				Lo: Max. Vbatt X 20%
		When receiving		Hi: Min. Vbatt X 70%
				Lo: Max. Vbatt X 30%
28	-			
29	-			
30	-			
31	-			
32	A/C Pressure Transducer (APT) signal input	A/C ON	DC	0.5 ~ 4.5V
33	Sensor ground	Idle	DC	Max. 150mV
34	-			
35	-			
36	-			
37	-			
38	Batterypower (B+)	Idle	DC	Battery Voltage
39	Batterypower (B+)	Idle	DC	Battery Voltage
40	Batterypower (B+)	Idle	DC	Battery Voltage
41	CAN [High]	RECESSIVE	Pulse	2.0 ~ 3.0V
		DOMINANT		2.75 ~ 4.5V
42	CAN [Low]	RECESSIVE	Pulse	2.0 ~ 3.0V
		DOMINANT		0.5 ~ 2.25V
43	Main Relay control output	Relay ON	DC	Max. 1.7V
		Relay OFF		Battery Voltage
44	Intake Air Temperature Sensor (IATS)signal input	Idle	DC	4.85V (-40℃)
				0.07V (150℃)
45	-			
46	-			

# Engine Control System

**FL-37**

Pin No.	Description	Condition	Type	Level
47	Mass Air Flow Sensor (MAFS) signal input	Idle	Pulse	High: Min.4.5V
				Low: Max. 0.6V
				768 <Frequency< 12,032Hz
				Duty= 50%
48	Sensor ground	Idle	DC	Max. 150mV
49	Accelerator Position Sensor (APS) 2 signal input	C.T	DC	0.29 ~ 0.46V
		W.O.T		1.93 ~ 2.18V
50	-			
51	-			
52	Vehicle speed signal input	Vehicle Run	Pulse	High: Min. 4.0V
				Low: Max. 1.1V
				6.4 <Frequency< 1,534Hz
				Duty= 50%
53	Sensor ground	Idle	DC	Max. 150mV
54	Accelerator Position Sensor (APS) 1 signal input	C.T	DC	0.58 ~ 0.93V
		W.O.T		3.85 ~ 4.35V
55	Sensor ground	Idle	DC	Max. 150mV
56	Sensor power (+5V)	Idle	DC	4.5 ~ 5.1V
57	Sensor power (+5V)	Idle	DC	4.9 ~ 5.1V
58	Sensor power (+5V)	Idle	DC	4.9 ~ 5.1V
59	Sensor power (+5V)	Idle	DC	4.9 ~ 5.1V
60	-			
61	Engine speed signal output	Idle	Pulse	High: Battery Voltage
				Low: Max. 1.1V
				0 <Frequency< 350Hz
				47.5 <Duty< 52.5%
62	-			
63	Malfunction Indicator Lamp (MIL) control output	MIL ON	DC	Max. 0.5V
		MIL OFF		Battery Voltage
64	A/C Compressor Relay control output			
65	Cooling Fan Relay control output [High]	Relay ON	DC	Max. 1.1V
		Relay OFF		Battery Voltage
66	Cooling Fan Relay control output [Low]	Relay ON	DC	Max. 1.1V
		Relay OFF		Battery Voltage

## FL-38

## Fuel System

Pin No.	Description	Condition	Type	Level
67	-			
68	-			
69	-			
70	Fuel Pump Relay control output	Relay ON	DC	Max. 1.1V
		Relay OFF		Battery Voltage
71	Variable Intake Solenoid (VIS) Valve control output	Valve Open	DC	Battery Voltage
		Valve Close		Max. 1.1V
72	Immobilizer Lamp control output	Lamp ON	DC	Max. 1.1V
		Lamp OFF		Battery Voltage
73	-			
74	-			
75	-			
76	-			
77	-			
78	Purge Control Solenoid Valve (PCSV) control output	Idle	Pulse	High: Battery Voltage
				Low: Max. 1.0V
				Frequency= 30Hz
				0 <Duty< 100%
79	-			
80	-			

# Engine Control System

## FL-39

### Connector [CLG-B]

Pin No	Description	Condition	Type	Level
1	ETC Motor [-] control output	Idle	PWM	Battery Voltage
2	ETC Motor [+] control output	Idle	Pulse	High: Battery Voltage
				Low: Max. 1.0V
				1,500 <Frequency< 2,400Hz
				0 <Duty< 98%
3	-			
4	CVVT Oil Temperature Sensor (OTS) signal input	Idle	DC	0.15(150℃) ~ 4.85V(-40℃)
5	-			
6	-			
7	Engine Coolant Temperature Sensor (ECTS) signal input	Idle	DC	0 ~ 5.0V
8	Manifold Absolute Pressure Sensor (MAPS) signal input	Idle	DC	4.43V (107kPa)
				0.75V (20kPa)
9	-			
10	-			
11	Sensor power (+5V)	Idle	DC	4.9 ~ 5.1V
12	Battery power (B+)	Idle	DC	Battery Voltage
13	-			
14	Sensor ground	Idle	DC	Max. 150mV
15	Sensor power (+5V)	Idle	DC	4.9 ~ 5.1V
16	Sensor power (+5V)	Idle	DC	4.9 ~ 5.1V
17	Sensor ground	Idle	DC	Max. 150mV
18	Sensor ground	Idle	DC	Max. 150mV
19	Ignition Coil (Cylinder #6) control output	Idle	Pulse	V <sub>peak</sub> = 400V
				0 <Frequency< 58.3Hz
20	-			
21	Crankshaft Position Sensor (CKPS) [High] signal input	Idle	SINE Wave	0.4 < V <sub>p_p</sub> < 200V
				55 <Frequency< 7,000Hz
22	-			
23	Sensor Shield	Idle	DC	Max. 150mV
24	Camshaft Position Sensor (CMPS) [Bank 2/Intake] signal input	Idle	Pulse	High: 3.2 ~ V <sub>cc</sub>
				Low: Max. 0.7V
				0 <Frequency< 350Hz

## FL-40

## Fuel System

Pin No	Description	Condition	Type	Level
25	Camshaft Position Sensor (CMPS) [Bank 1/Intake] signal input	Idle	Pulse	High: 3.2 ~ Vcc
				Low: Max. 0.7V
				0 <Frequency< 350Hz
26	Camshaft Position Sensor (CMPS) [Bank 2/Exhaust] signal input	Idle	Pulse	High: 3.2 ~ Vcc
				Low: Max. 0.7V
				0 <Frequency< 350Hz
27	Camshaft Position Sensor (CMPS) [Bank 1/Exhaust] signal input	Idle	Pulse	High: 3.2 ~ Vcc
				Low: Max. 0.7V
				0 <Frequency< 350Hz
28	Sensor ground	Idle	DC	Max. 150mV
29	Sensor ground	Idle	DC	Max. 150mV
30	Sensor ground	Idle	DC	Max. 150mV
31	Sensor ground	Idle	DC	Max. 150mV
32	Sensor power (+5V)	Idle	DC	4.9 ~ 5.1V
33	Sensor ground	Idle	DC	Max. 150mV
34	Sensor ground	Idle	DC	Max. 150mV
35	Power ground	Idle	DC	Max. 150mV
36	Power ground	Idle	DC	Max. 150mV
37	Power ground	Idle	DC	Max. 150mV
38	Power ground	Idle	DC	Max. 150mV
39	Power ground	Idle	DC	Max. 150mV
40	Ignition Coil (Cylinder #4) control output	Idle	Pulse	Vpeak = 400V
				0 <Frequency< 58.3Hz
41	Crankshaft Position Sensor (CKPS) [Low] signal input	Idle	SINE Wave	0.4 < Vp_p < 200V
				55 <Frequency< 7,000Hz
42	-			
43	-			
44	-			
45	-			
46	-			
47	-			
48	Throttle Position Sensor (TPS) 1 signal input	C.T	DC	0.25 ~ 0.9V
		W.O.T		Min. 4.0V



## Engine Control System

## FL-41

Pin No	Description	Condition	Type	Level
49	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1] signal input	RICH	DC	0.75 ~ 0.92V
		LEAN		0.04 ~ 0.1V
50	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2] signal input	RICH	DC	0.75 ~ 0.92V
		LEAN		0.04 ~ 0.1V
51	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1] signal input	RICH	DC	0.75 ~ 0.92V
		LEAN		0.04 ~ 0.1V
52	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2] signal input	RICH	DC	0.75 ~ 0.92V
		LEAN		0.04 ~ 0.1V
53	Knock Sensor (KS) [Bank 2] [High] signal input	Knocking	Variable Frequency	-0.3 ~ 0.3V
		Normal		0V
54	Knock Sensor (KS) [Bank 2] [Low] signal input	Knocking	Variable Frequency	-0.3 ~ 0.3V
		Normal		0V
55	Knock Sensor (KS) [Bank 1] [Low] signal input	Knocking	Variable Frequency	-0.3 ~ 0.3V
		Normal		0V
56	Knock Sensor (KS) [Bank 1] [High] signal input	Knocking	Variable Frequency	-0.3 ~ 0.3V
		Normal		0V
57	Throttle Position Sensor (TPS) 2 signal input	C.T	DC	Min. 4.0V
		W.O.T		0.25 ~ 0.9V
58	-			
59	-			
60	Ignition Coil (Cylinder #2) control output	Idle	Pulse	V <sub>peak</sub> = 400V
				0 < Frequency < 58.3Hz
61	CVVT Oil Control Valve (OCV)[Bank 2/Intake] control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency= 128Hz
				0 < Duty < 100%
62	CVVT Oil Control Valve (OCV)[Bank 1/Intake] control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency= 128Hz
				0 < Duty < 100%
63	Injector (Cylinder #2) control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0 < Frequency < 58.3Hz
				47 < V <sub>peak</sub> < 64V

## FL-42

## Fuel System

Pin No	Description	Condition	Type	Level
64	Injector (Cylinder #3) control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0 <Frequency< 58.3Hz
				47 < Vpeak < 64V
65	CVVT Oil Control Valve (OCV) [Bank 1/Exhaust] control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency= 128Hz
				0 <Duty< 100%
66	CVVT Oil Control Valve (OCV) [Bank 2/Exhaust] control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency= 128Hz
				0 <Duty< 100%
67	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1] Heater control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.15V
				0 <Duty<100%
68	Injector (Cylinder #4) control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0 <Frequency< 58.3Hz
				47 < Vpeak < 64V
69	Injector (Cylinder #5) control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0 <Frequency< 58.3Hz
				47 < Vpeak < 64V
70	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1] Heater control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.15V
				0 <Duty<100%
71	Injector (Cylinder #6) control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0 <Frequency< 58.3Hz
				47 < Vpeak < 64V
72	Injector (Cylinder #1 ) control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0 <Frequency< 58.3Hz
				47 < Vpeak < 64V

# Engine Control System

## FL-43

Pin No	Description	Condition	Type	Level
73	Heated Oxygen Sensor (HO2S)[Bank 2/Sensor 2] Heater control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.15V
				$0 < \text{Duty} < 100\%$
74	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2] Heater control output	Idle	PWM	High: Battery Voltage
				Low: Max. 1.15V
				$0 < \text{Duty} < 100\%$
75	-			
76	Batterypower (B+)	Idle	DC	Battery Voltage
77	Ignition Coil (Cylinder #3) control output	Idle	Pulse	$V_{\text{peak}} = 400\text{V}$
				$0 < \text{Frequency} < 58.3\text{Hz}$
78	Ignition Coil (Cylinder #5) control output	Idle	Pulse	$V_{\text{peak}} = 400\text{V}$
				$0 < \text{Frequency} < 58.3\text{Hz}$
79	Ignition Coil (Cylinder #1) control output	Idle	Pulse	$V_{\text{peak}} = 400\text{V}$
				$0 < \text{Frequency} < 58.3\text{Hz}$
80	-			


شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

## FL-44

## Fuel System


## Circuit Diagram

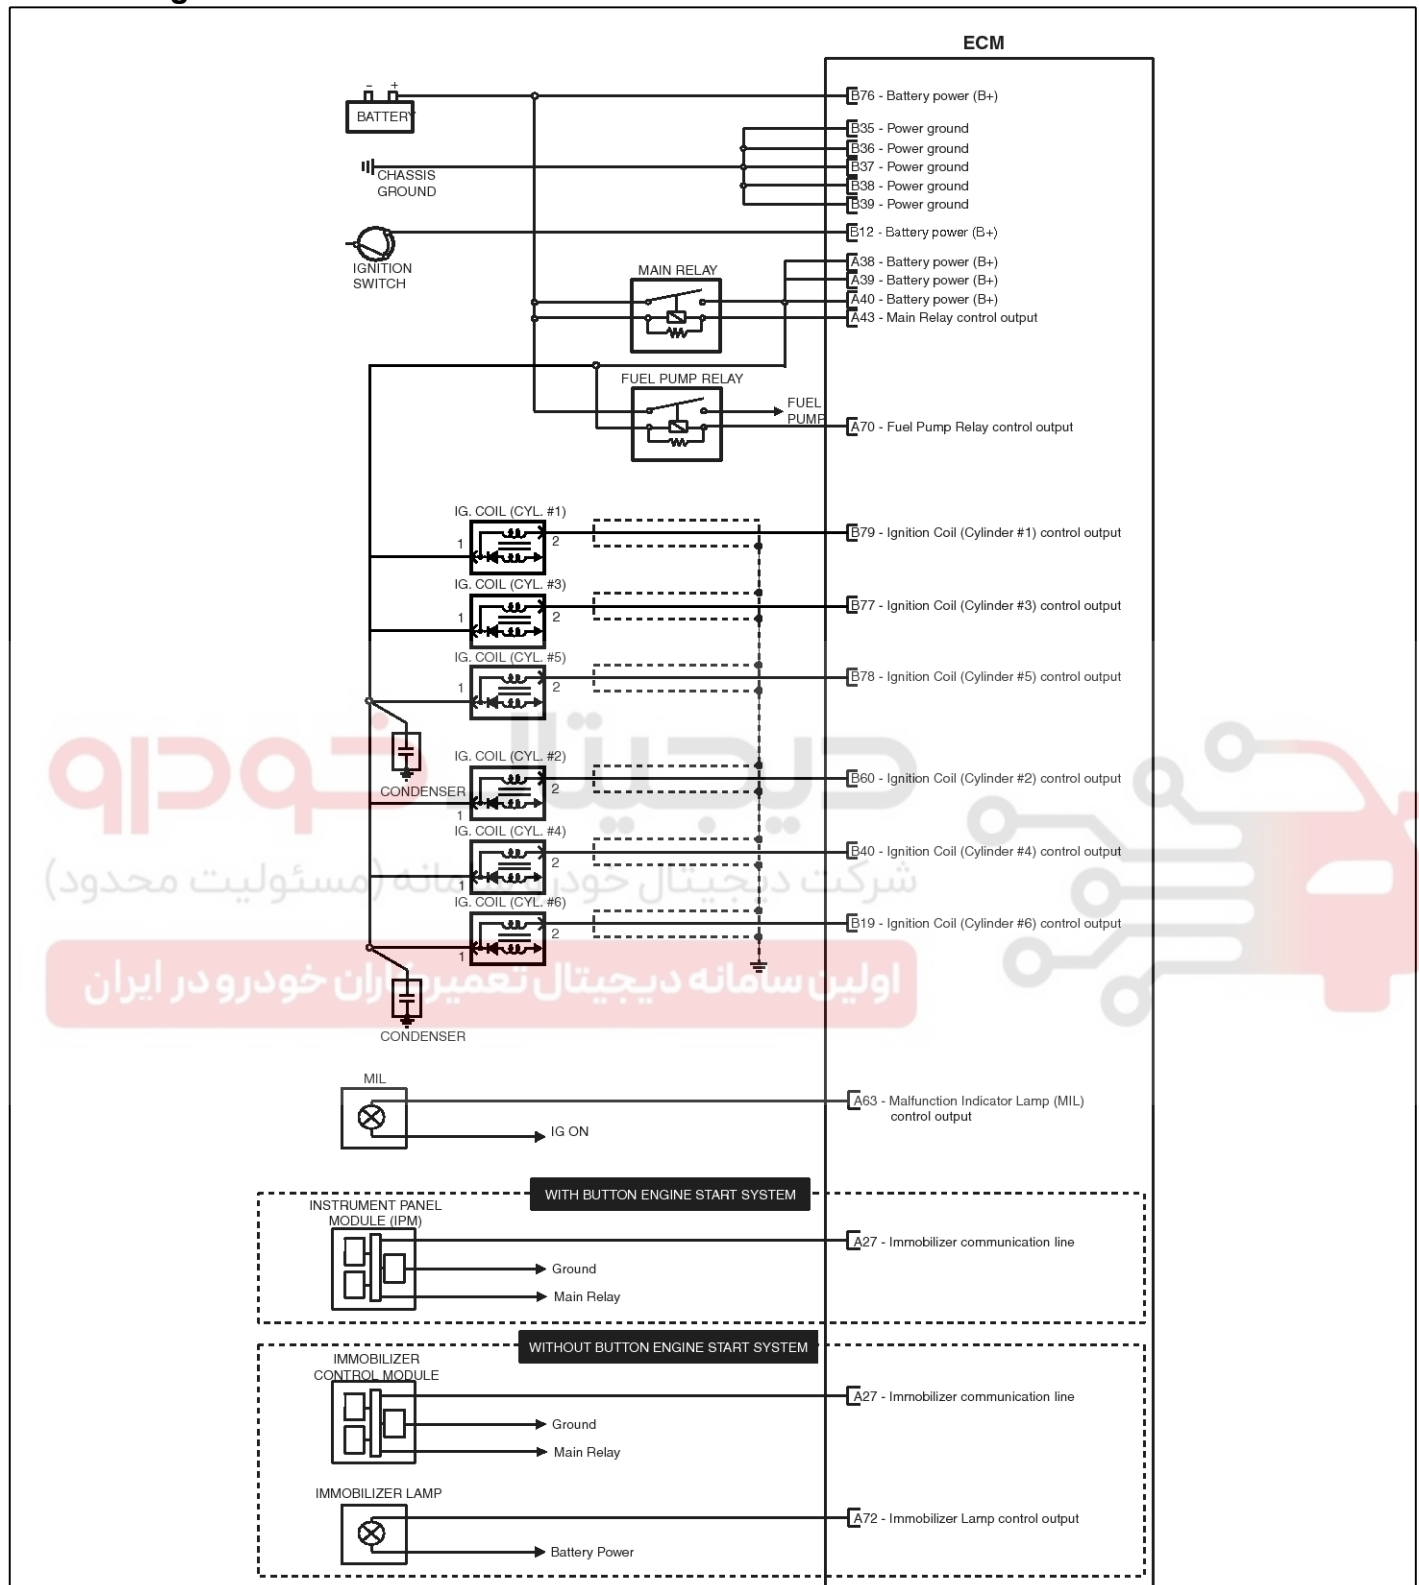

SBHFL9119L

# Engine Control System


## FL-45

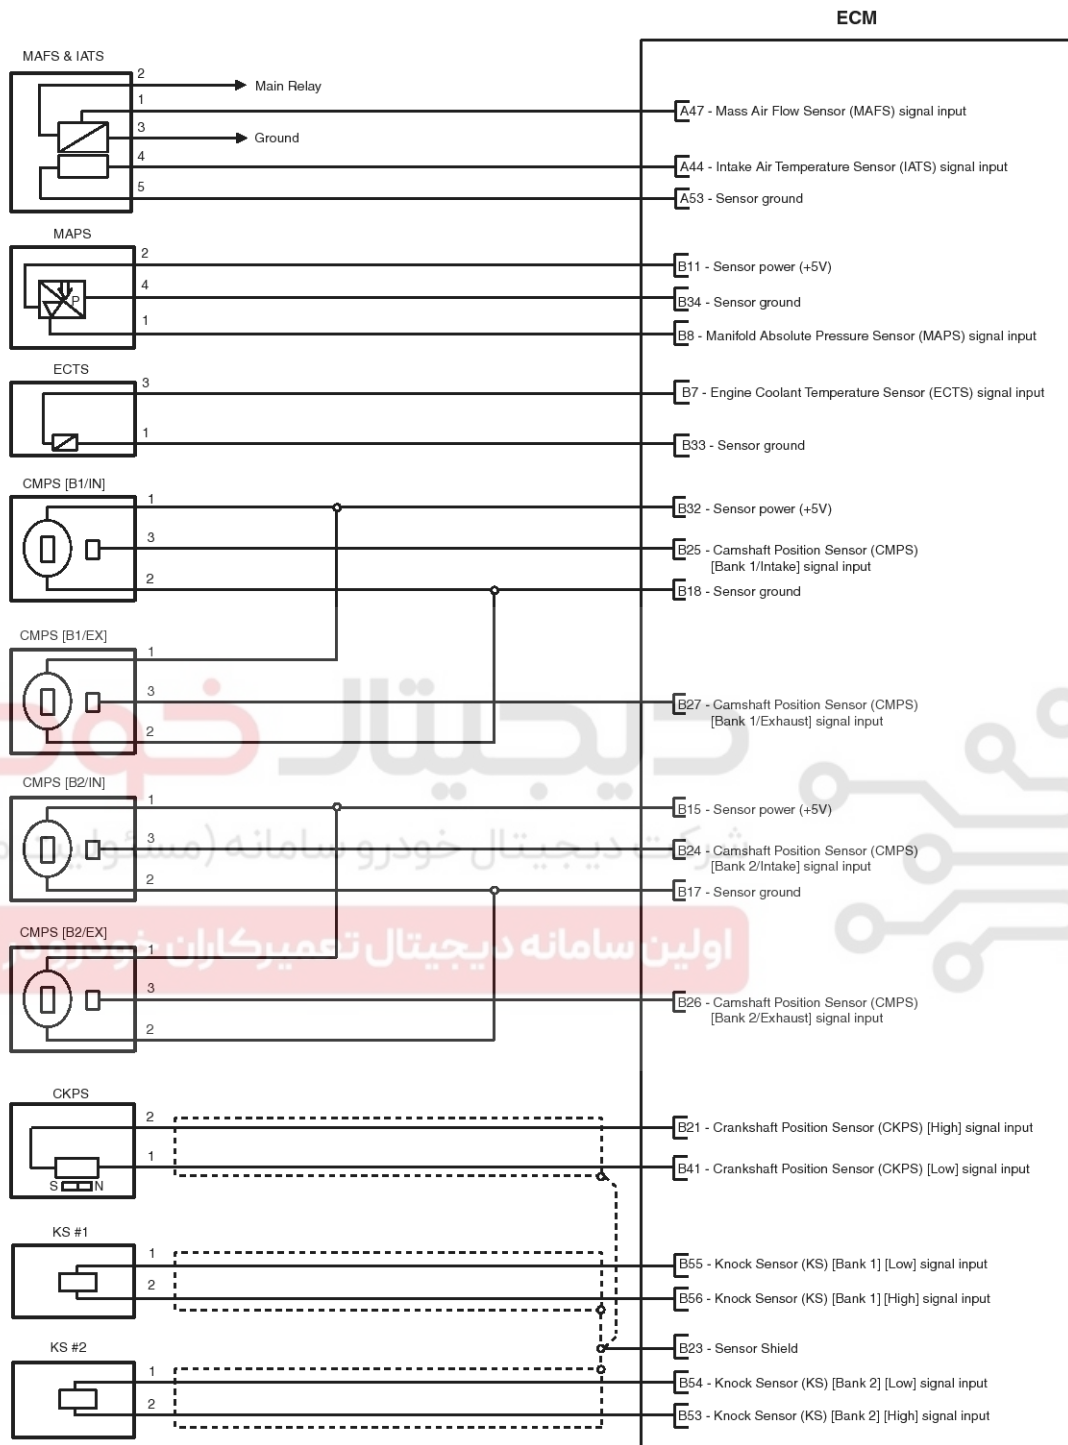

SBHFL9120L

## FL-46

## Fuel System

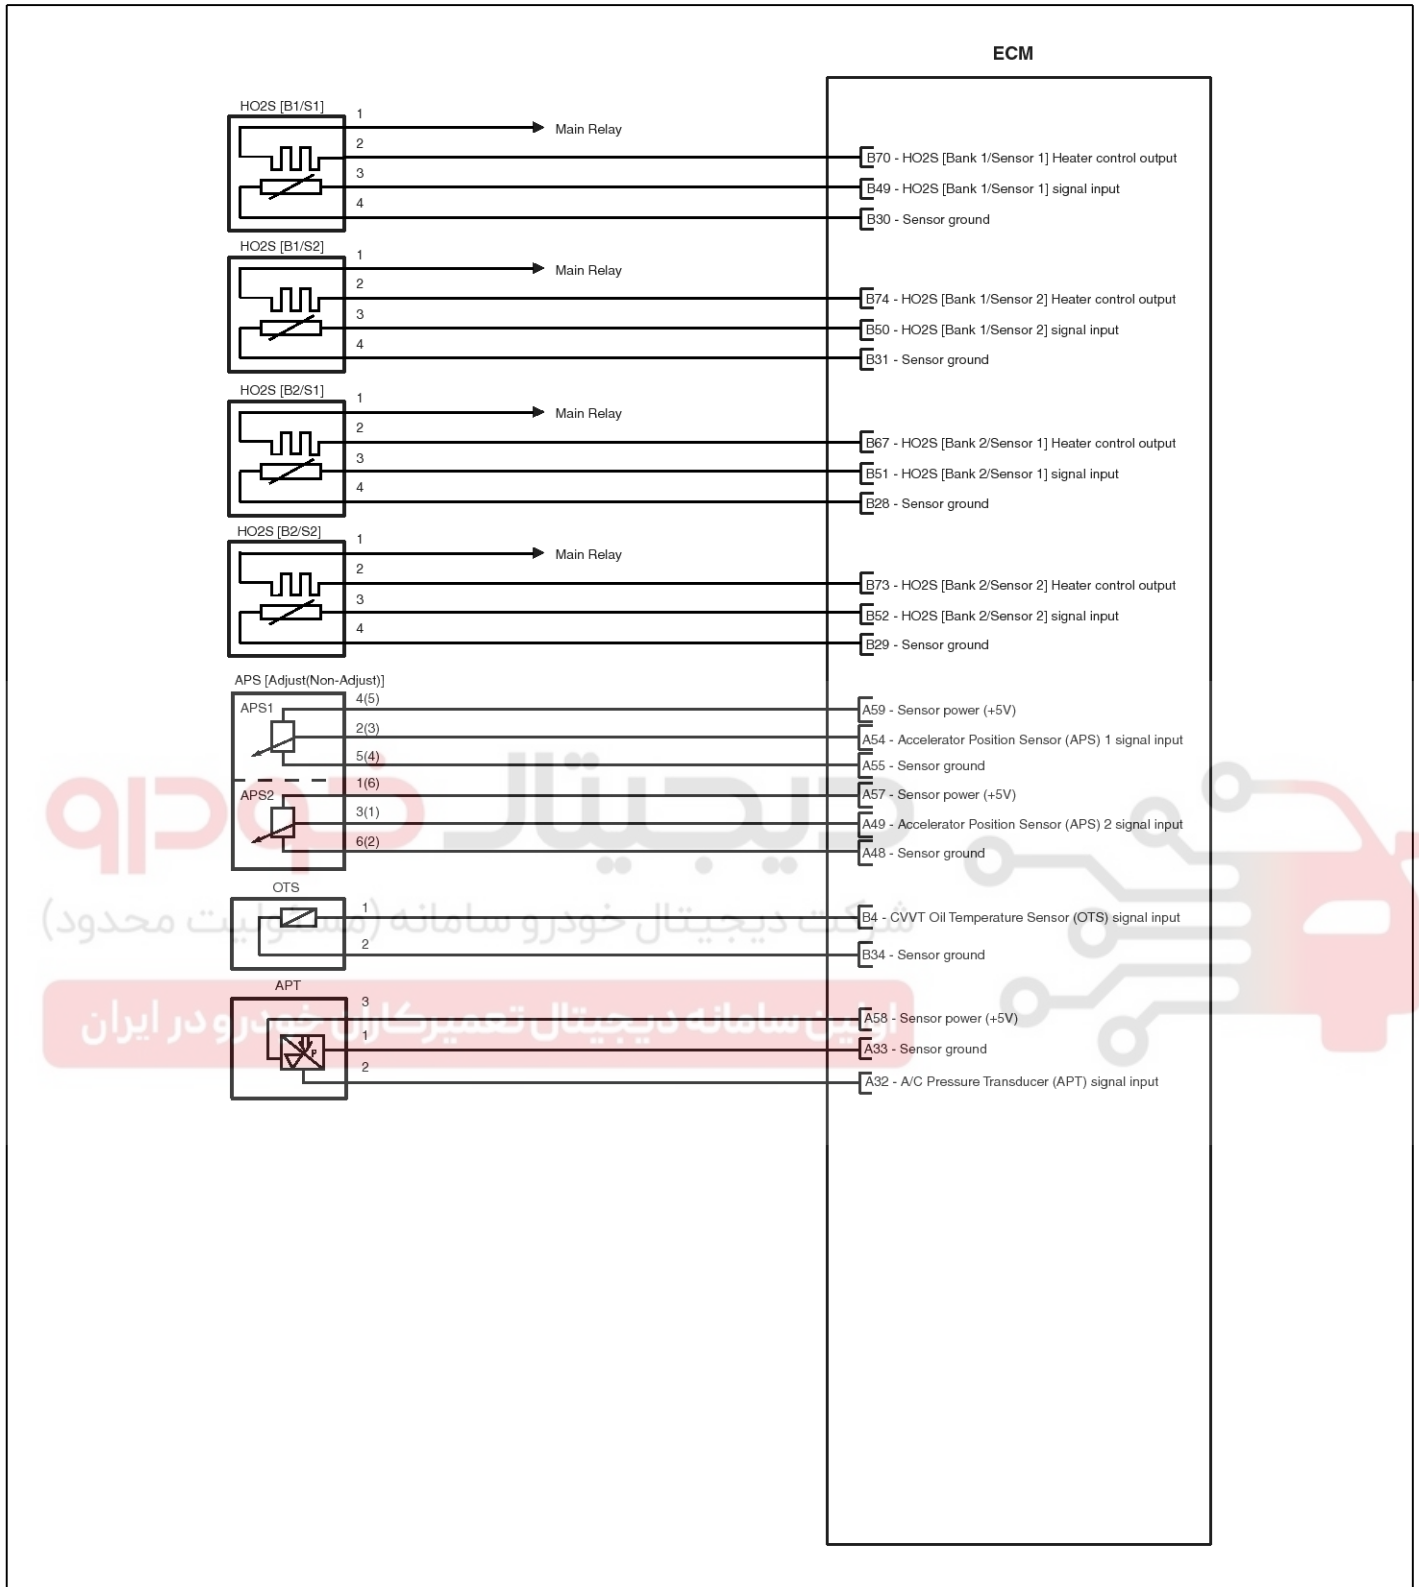


SHMFL9109L



# Engine Control System


## FL-47

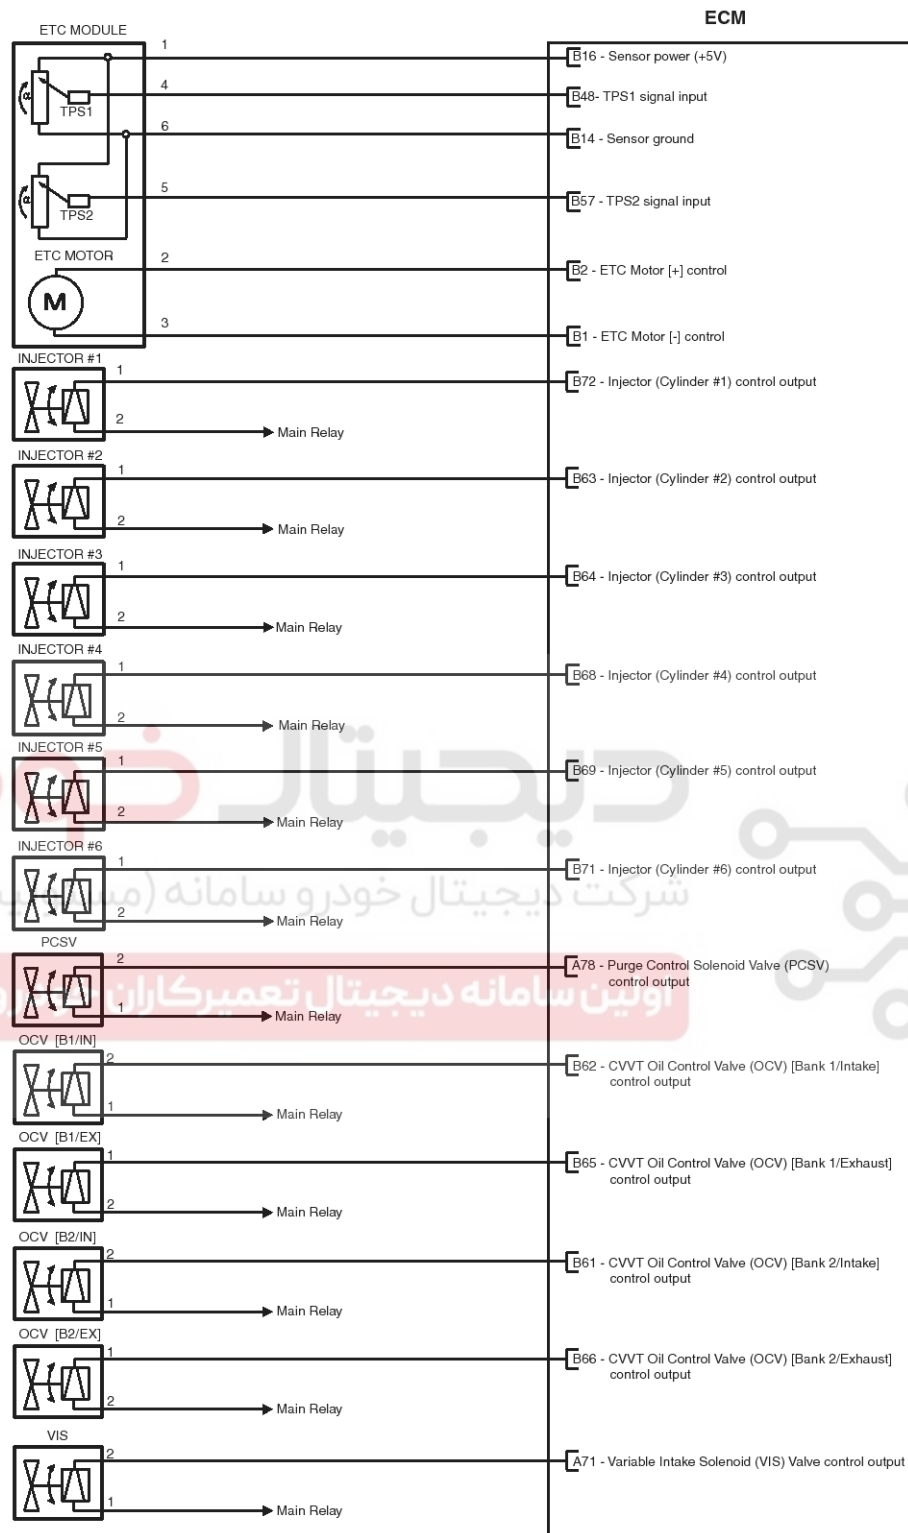

SHMFL9110L

## FL-48

## Fuel System

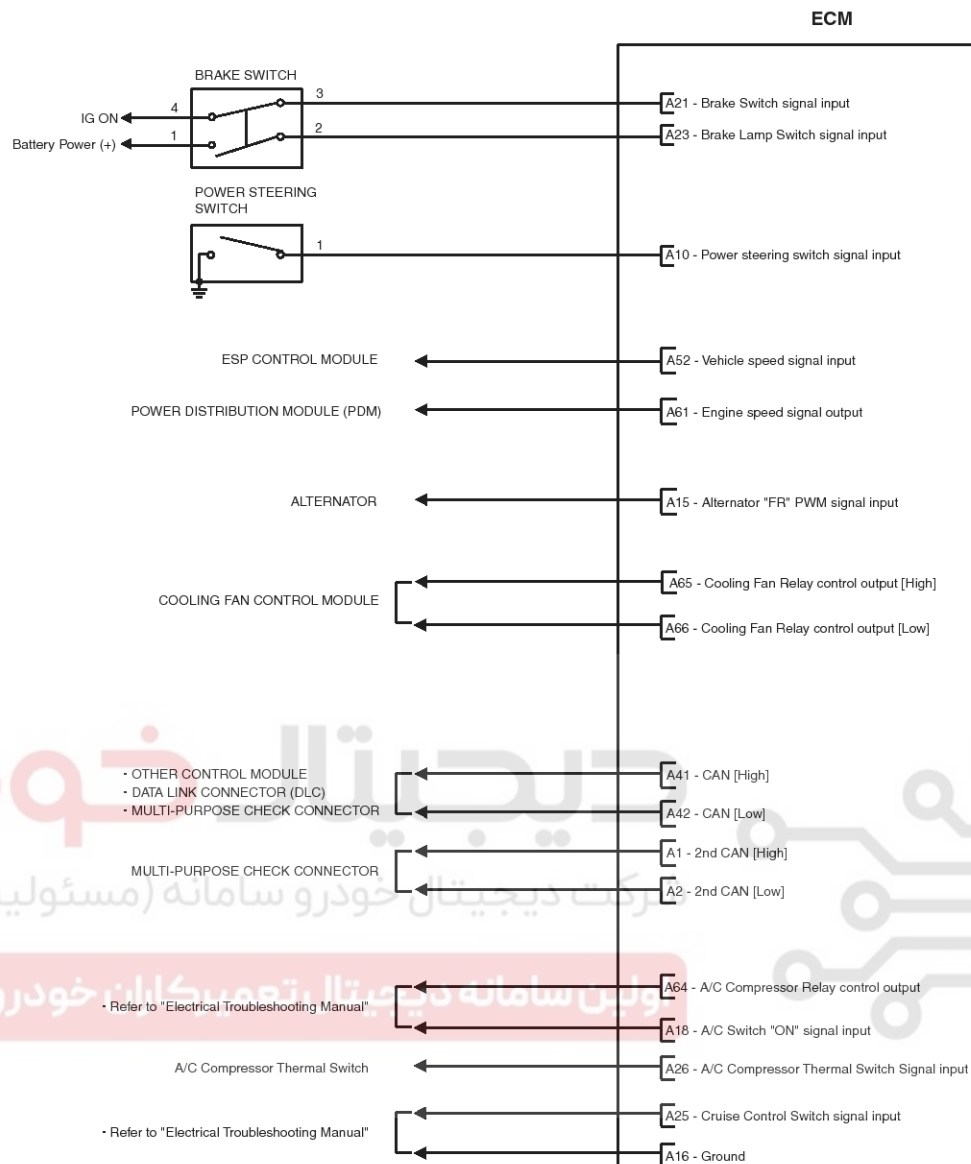

SHMFL9111L

# Engine Control System


FL-49

## Removal

### NOTICE


In the case of the vehicle equipped with immobilizer, perform "Key Teaching" procedure together (Refer to "Immobilizer" in BE group).

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the ECM connector (A) after removing the connector fixing clip (B).

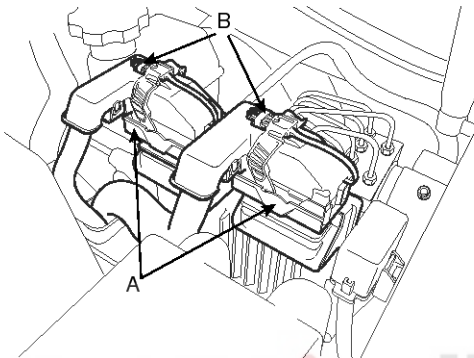

SHMFL9112L

3. After removing the installation bolts (A), remove the ECM (B) from the bracket.

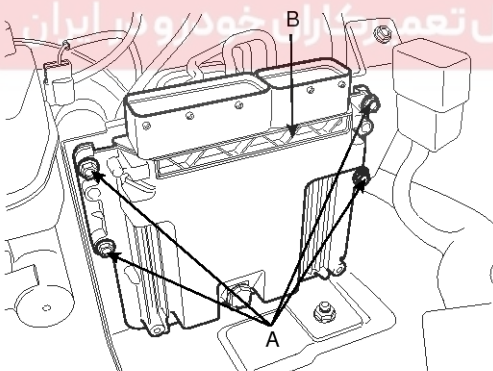

SHMFL9113L

## Installation

### NOTICE

In the case of the vehicle equipped with immobilizer, perform "Key Teaching" procedure together (Refer to "Immobilizer" in BE group).

1. Installation is reverse of removal.

### ECM installation bolt:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lbf.ft)

## ECM Problem Inspection Procedure

1. TEST ECM GROUND CIRCUIT: Measure resistance between ECM and chassis ground using the backside of ECM harness connector as ECM side check point. If the problem is found, repair it.

### Specification: Below 1Ω

2. TEST ECM CONNECTOR: Disconnect the ECM connector and visually check the ground terminals on ECM side and harness side for bent pins or poor contact pressure. If the problem is found, repair it.
3. If problem is not found in Step 1 and 2, the ECM could be faulty. If so, replace the ECM with a new one, and then check the vehicle again. If the vehicle operates normally then the problem was likely with the ECM.
4. RE-TEST THE ORIGINAL ECM: Install the original ECM (may be broken) into a known-good vehicle and check the vehicle. If the problem occurs again, replace the original ECM with a new one. If problem does not occur, this is intermittent problem (Refer to "Intermittent Problem Inspection Procedure" in Basic Inspection Procedure).


## FL-50

## Fuel System


### ETC (Electronic Throttle Control) System

#### Description

The Electronic Throttle Control (ETC) System consists of a throttle body with an integrated control motor and throttle position sensor (TPS). Instead of the traditional throttle cable, an Accelerator Position Sensor (APS) is used to receive driver input. The ECM uses the APS signal to calculate the target throttle angle; the position of the throttle is then adjusted via ECM control of the ETC motor. The TPS signal is used to provide feedback regarding throttle position to the ECM. Using ETC, precise control over throttle position is possible; the need for external cruise control modules/cables is eliminated.

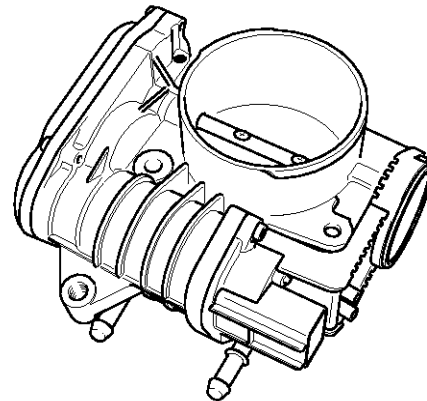

KFCF1020

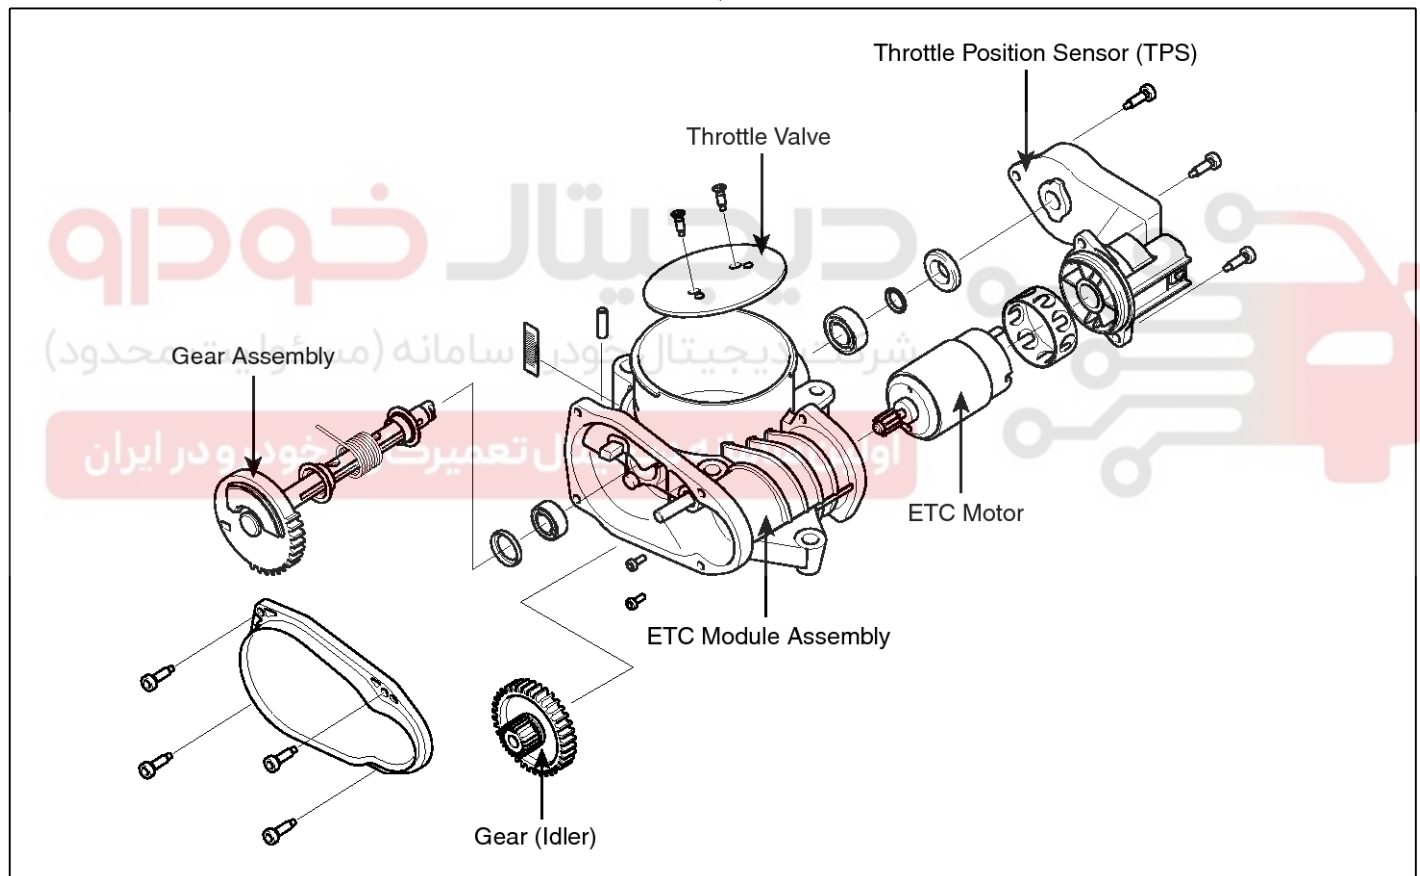


EGRF233A

# Engine Control System

FL-51

## Schematic Diagram

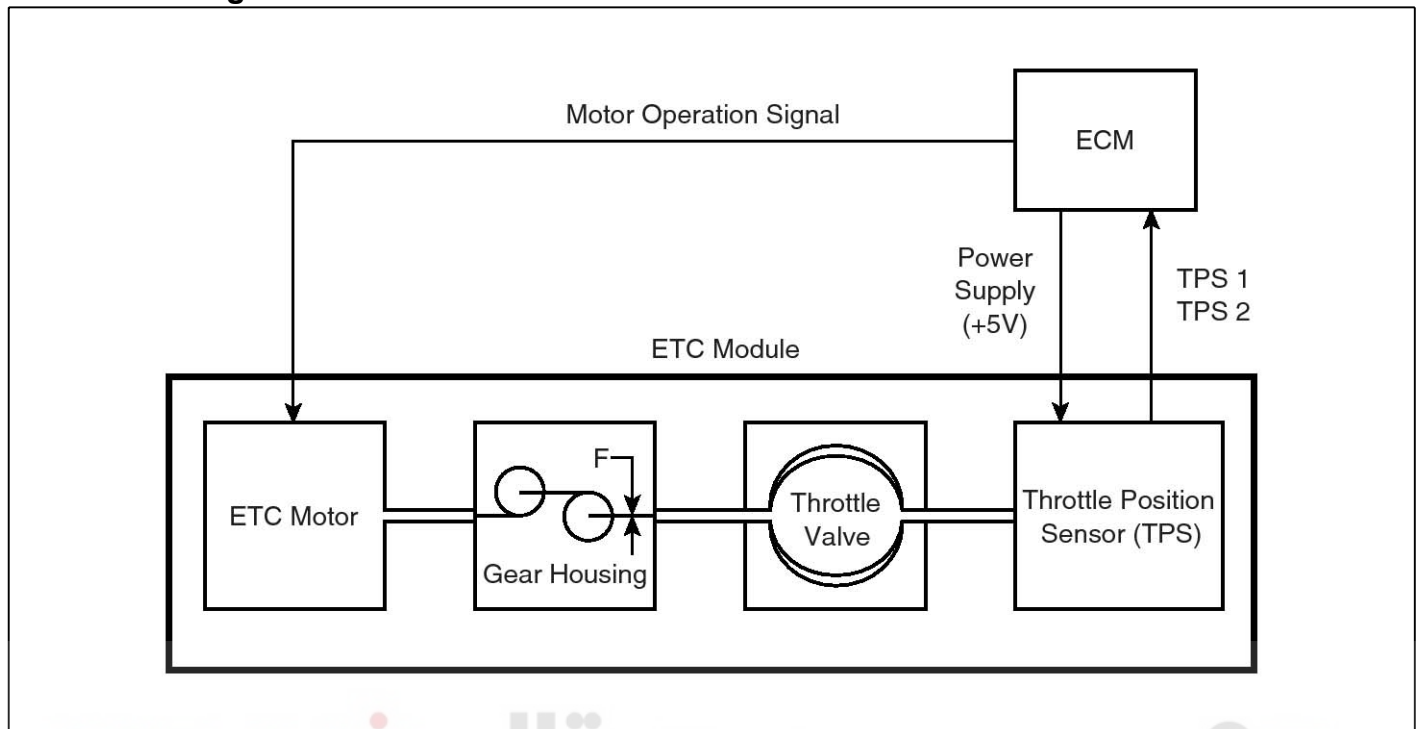

EGRF234A

## Fail-Safe Mode

Mode	Symptom	Possible Cause
[MODE 1] FORCED ENGINE SHUTDOWN	<ul style="list-style-type: none"> <li>Engine stop</li> </ul>	<ul style="list-style-type: none"> <li>ETC system cannot proceed without reliable algorithm procedure</li> <li>Fatal ECM internal programming error</li> <li>Faulty intake system or throttle body</li> </ul>
[MODE 2] FORCED IDLE & POWER MANAGEMENT	<ul style="list-style-type: none"> <li>Forced idle state controlled by fuel quantity regulation and ignition timing adjustment</li> </ul>	<ul style="list-style-type: none"> <li>ETC system can't control engine power via throttle device</li> <li>Disabled throttle control or broken throttle position information</li> </ul>
[MODE 3] FORCED IDLE	<ul style="list-style-type: none"> <li>No response for accelerator activation</li> <li>Forced idle state</li> </ul>	<ul style="list-style-type: none"> <li>No information about the accelerator position</li> <li>Broken APS 1 and 2, faulty A/D converter or internal controller</li> </ul>
[MODE 4] LIMIT PERFORMANCE & POWER MANAGEMENT	<ul style="list-style-type: none"> <li>Engine power is determined by accelerator position and idle power requirement (Limited vehicle running)</li> </ul>	<ul style="list-style-type: none"> <li>ETC system can't securely control engine power</li> </ul>
[MODE 5] LIMIT PERFORMANCE	<ul style="list-style-type: none"> <li>Engine power varies with accelerator position</li> <li>Driver perceives lack of engine power.</li> <li>MIL ON (Normal / vehicle running)</li> </ul>	<ul style="list-style-type: none"> <li>Not reliable accelerator position signal or bad maximum power generation</li> <li>Faulty APS, ignition voltage or internal controller</li> </ul>
[MODE 6] NORMAL	<ul style="list-style-type: none"> <li>Normal</li> </ul>	


## FL-52

## Fuel System

## Specification

## [Throttle Position Sensor (TPS)]

Throttle Angle(°)	Output Voltage(V)	
	TPS1	TPS2
0	0.0	5.0
10	0.5	4.5
20	0.9	4.1
30	1.4	3.6
40	1.8	3.2
50	2.3	2.7
60	2.7	2.3
70	3.2	1.8
80	3.6	1.4
90	4.1	0.9
100	4.5	0.5
110	5.0	0.0

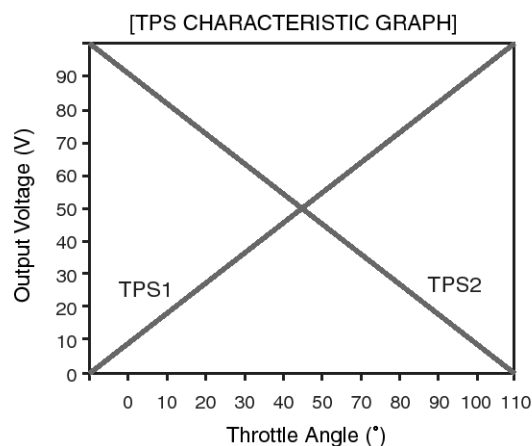

EGRF235A

Item	Sensor Resistance(k $\Omega$ )
TPS	1.6 ~ 2.4 [20°C (68°F)]

## [ETC Motor]


Item	Specification
Coil Resistance ( $\Omega$ )	1.275 ~ 1.725 [20°C (68°F)]



Engine Control System

FL-53

Circuit Diagram

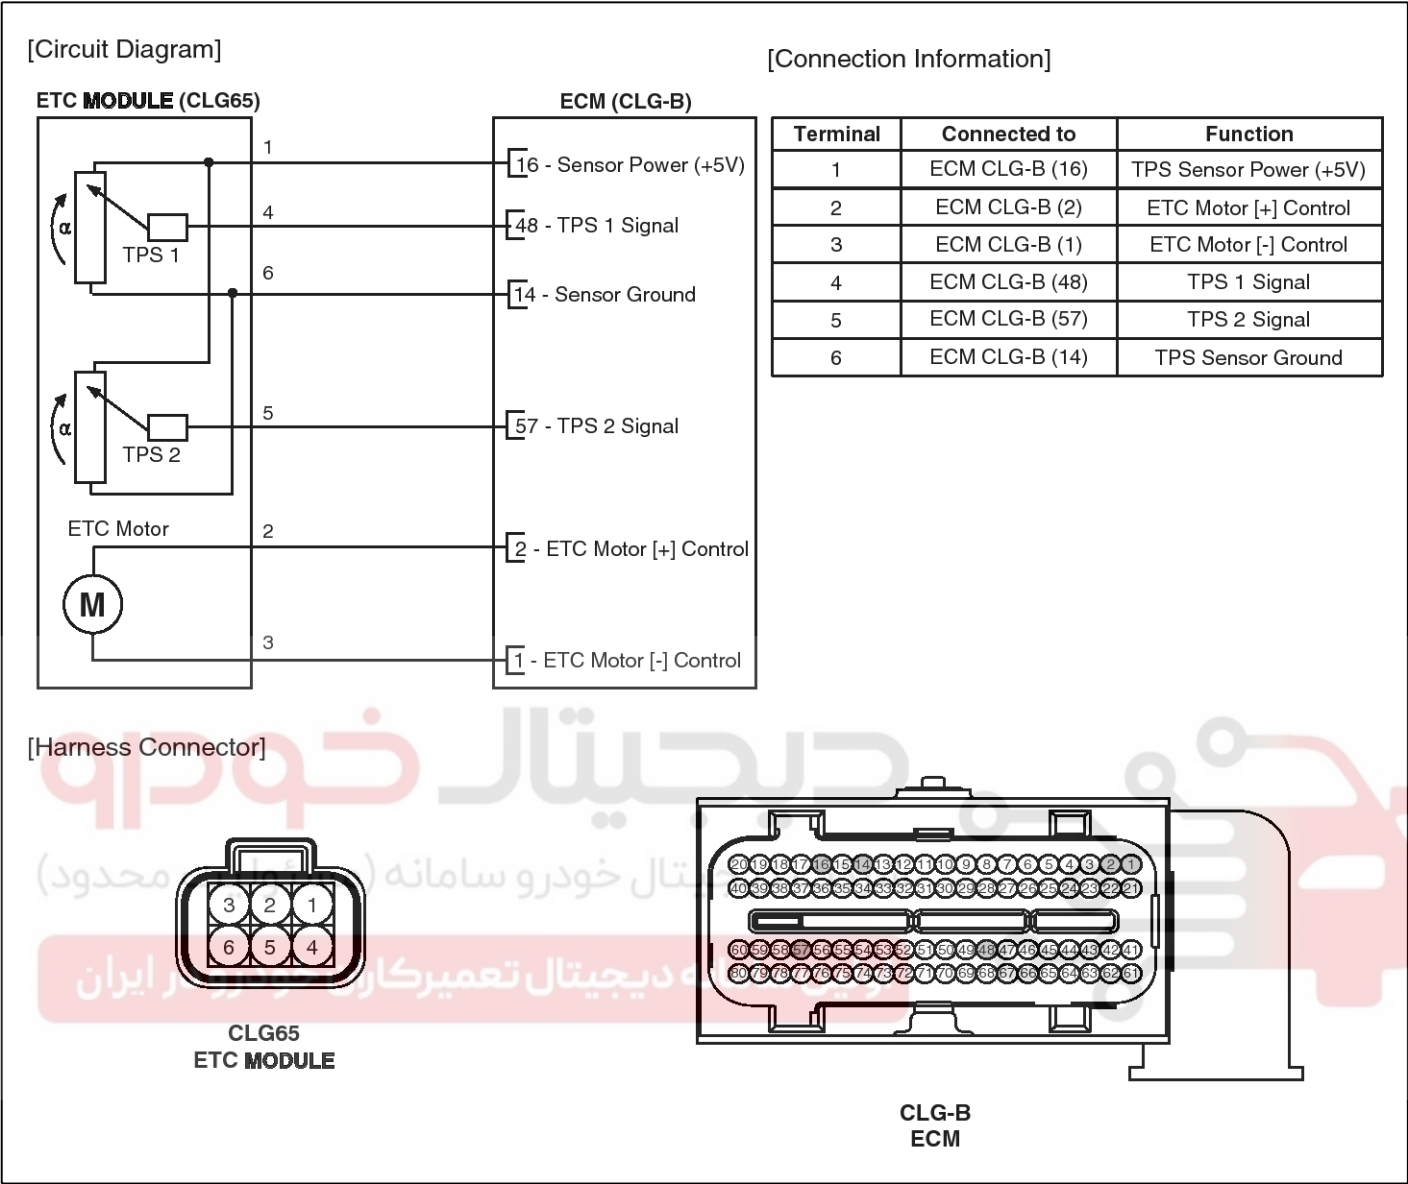

SHMFL9114L

## FL-54

## Fuel System

## Inspection

## Throttle Position Sensor (TPS)

1. Connect a scantool on the Data Link Connector (DLC).
2. Start the engine and measure the output voltage of TPS 1 and 2 at C.T. and W.O.T.

Throttle Angle	Output Voltage (V)	
	TPS 1	TPS 2
C.T	0.25 ~ 0.9	Min.4.0
W.O.T	Min.4.0	0.25 ~ 0.9

3. Turn the ignition switch OFF and disconnect the scantool from the DLC.
4. Disconnect the ETC module connector and measure the resistance between the ETC module terminals 1 and 6.

**Specification:** Refer to Specification Section.

## ETC Motor

1. Turn the ignition switch OFF.
2. Disconnect the ETC module connector.
3. Measure resistance between the ETC module terminals 2 and 3.
4. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



# Engine Control System


FL-55

## Mass Air Flow Sensor (MAFS)

### Description

Mass Air Flow Sensor (MAFS) is a hot-film type sensor and is located in between the air cleaner and the throttle body. It consists of a tube, a sensor assembly and a honey cell and detects the intake air quantity flowing into the intake manifold.

While the intake air coming out of the air cleaner flows by the honey cell, it becomes laminar flow, and then it passes the hot-film. At this time, heat transfer is generated by convection and this sensor loses its energy. This sensor detects the mass air flow by using the energy loss and transfers the information to the ECM by frequency. By using this signal, the ECM can calculate fuel quantity and ignition timing.

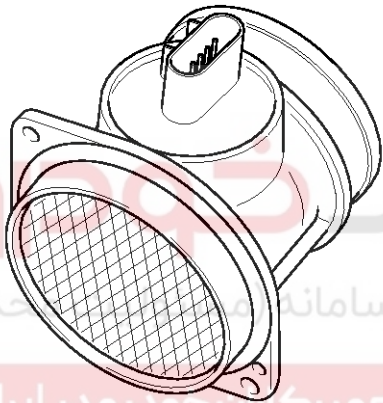

KFCF1021


### Specification

Air Flow (kg/h)	Frequency (Hz)
12.6	2,617
18.0	2,958
23.4	3,241
32.4	3,653
43.2	4,024
57.6	4,399
72.0	4,704
108.0	5,329
144.0	5,897
198.0	6,553
270.0	7,240
360.0	7,957
486.0	8,738
666.0	9,644
900.0	10,590

## FL-56

## Fuel System

## Circuit Diagram

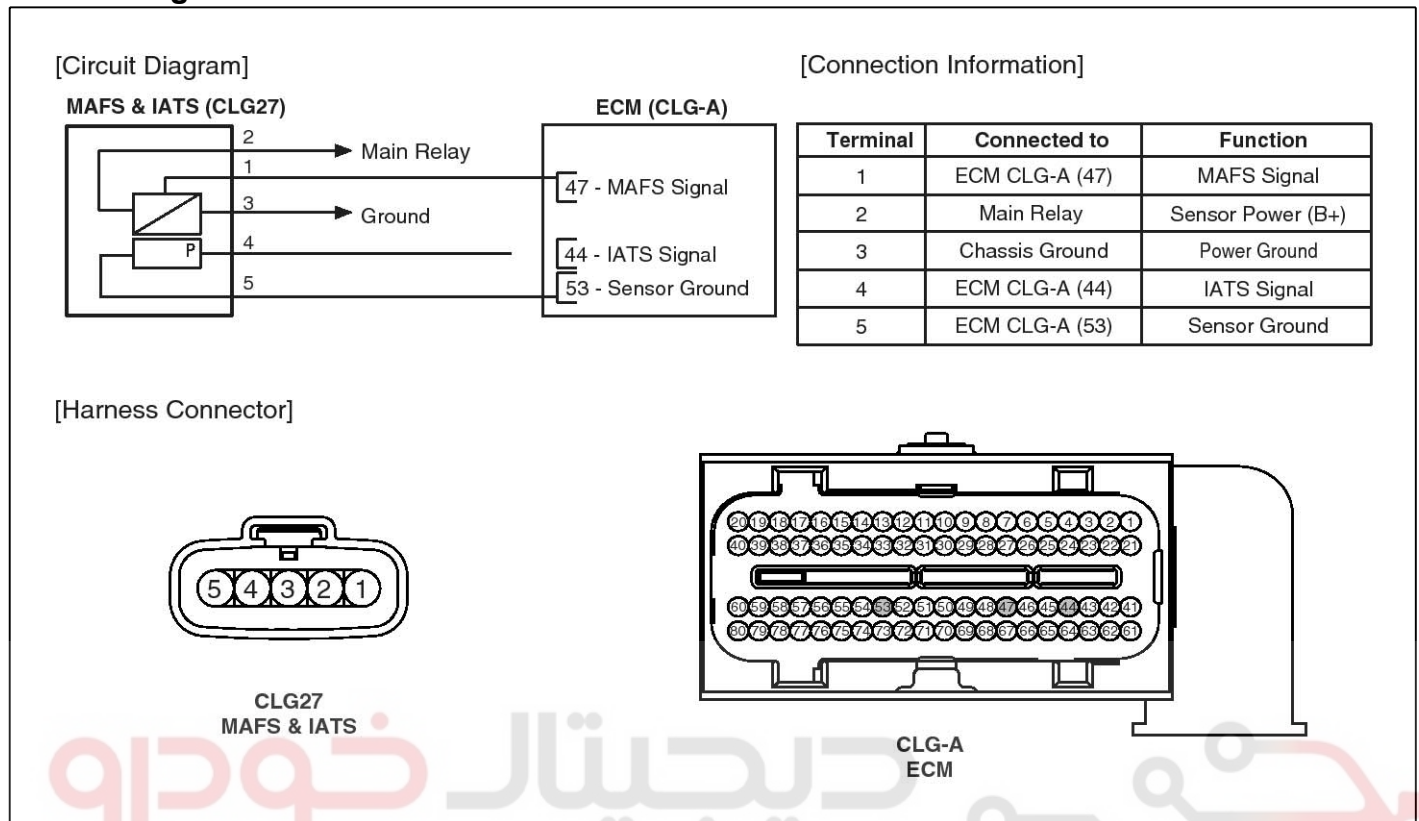

SHMFL9115L

## Inspection

1. Check the mass air flow sensor visually.
  - Mounting direction of the sensor
  - Any contamination, corrosion or damage of connector
  - Air cleaner's clogging or wet
  - Sensor cylinder's deforming or blocking by any foreign material
2. Check any leakage on intake system.


# Engine Control System

FL-57

## Intake Air Temperature Sensor (IATS)

### Description


Intake Air Temperature Sensor (IATS) is installed inside the Mass Air Flow Sensor (MAFS) and detects the intake air temperature. To calculate precise air quantity, correction of the air temperature is needed because air density varies according to the temperature. So the ECM uses not only MAFS signal but also IATS signal. This sensor has a Negative Temperature Coefficient (NTC) and its resistance is in inverse proportion to the temperature.

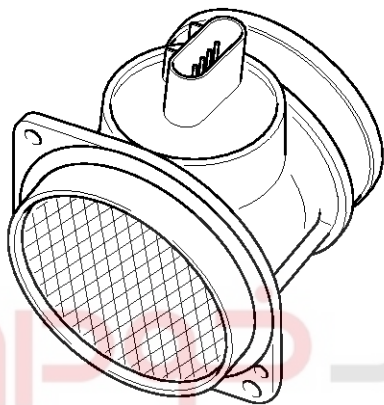

KFCF1021

### Specification

Temperature		Resistance (kΩ)
°C	°F	
-40	-40	100.87
-20	-4	28.58
0	32	9.40
10	50	5.66
20	68	3.51
40	104	1.47
60	140	0.67
80	176	0.33

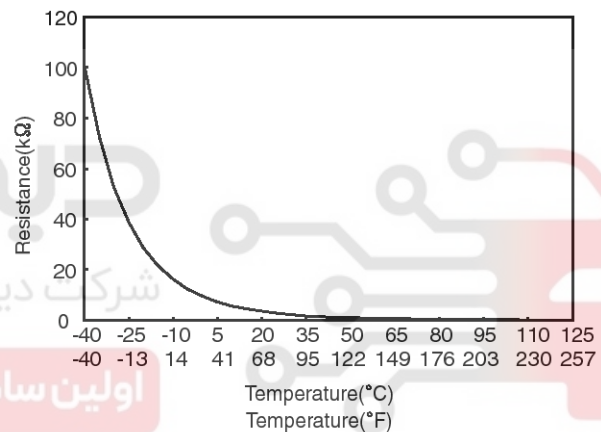


SHMFL9116L

## FL-58

## Fuel System

## Circuit Diagram

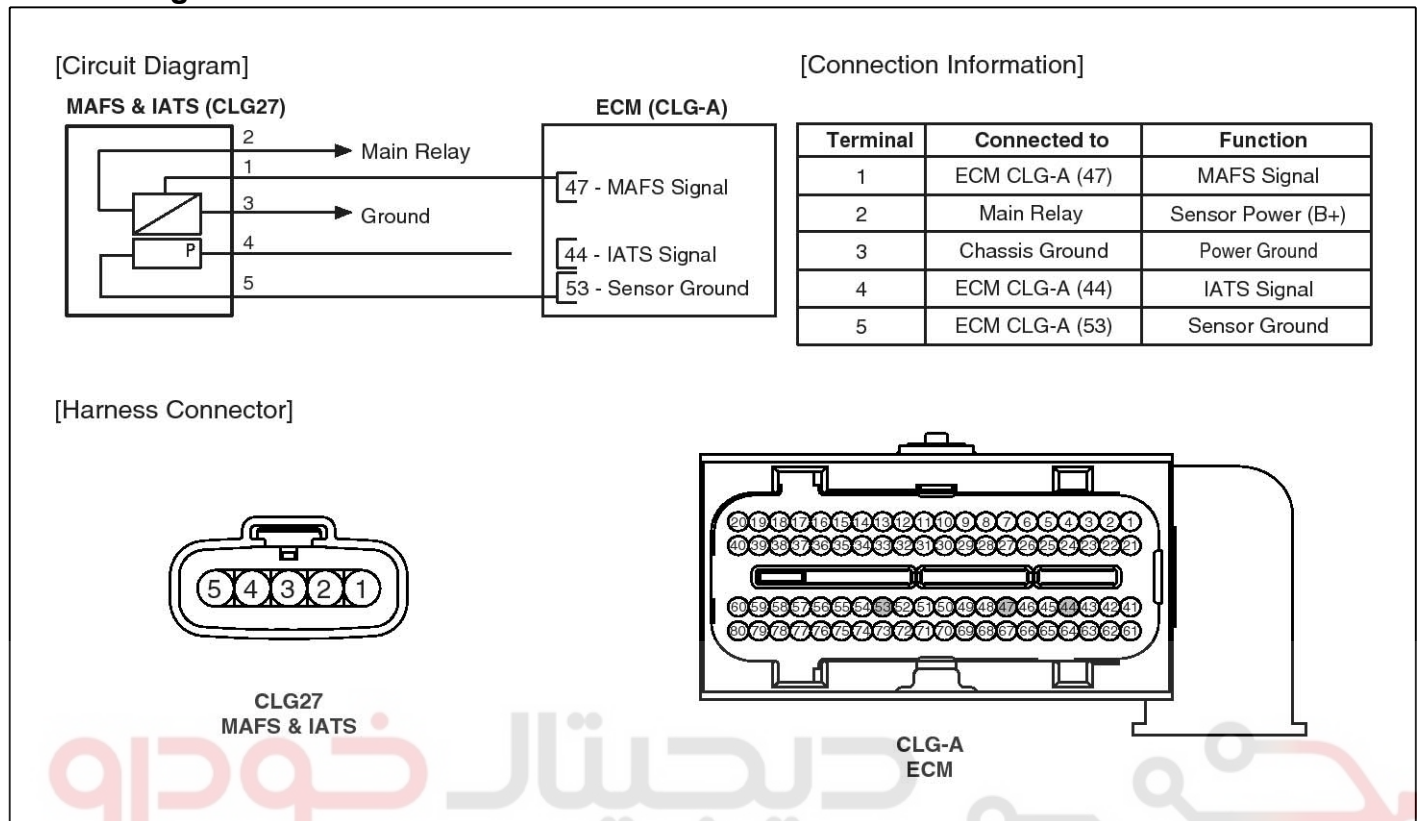

SHMFL9115L

## Inspection

1. Turn the ignition switch OFF.
2. Disconnect the IATS connector.
3. Measure resistance between the IATS terminals 4 and 5.
4. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.



# Engine Control System

FL-59


## Manifold Absolute Pressure Sensor (MAPS)

### Description

Manifold Absolute Pressure Sensor (MAPS) is a speed-density type sensor and is installed on the surge tank.

The MAPS senses absolute pressure in surge tank and transfers this analog signal proportional to the pressure to the ECM. The ECM calculates the intake air quantity and engine speed based on this signal.


This MAPS consists of a piezo-electric element and a hybrid IC that amplifies the element output signal. The element is silicon diaphragm type and adapts pressure sensitive variable resistor effect of semi-conductor. 100% vacuum and the manifold pressure apply to the both sides of it respectively. That is, this sensor outputs the silicon variation proportional to pressure change by voltage.

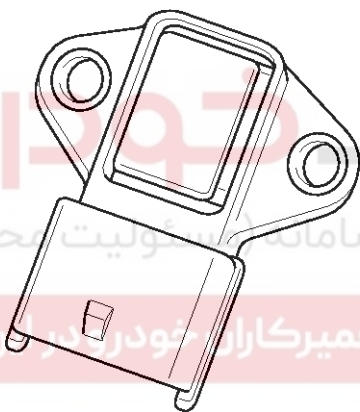

SBHFL8133D

### Specification

Pressure (kPa)	Output Voltage (V)
20.0	0.79
46.66	1.84
101.32	4.0

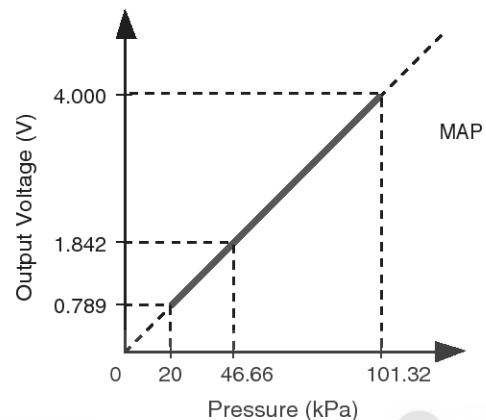

SBHFL9136L

FL-60

Fuel System

Circuit Diagram

[Circuit Diagram]

MAPS (CLG25)

ECM (CLG-B)

11 - Sensor Power (+5V)

34 - Sensor Ground

8 - MAPS Signal

[Connection Information]

Terminal	Connected to	Function
1	ECM CLG-B (8)	MAPS Signal
2	ECM CLG-B (11)	Sensor Power (+5V)
3	-	-
4	ECM CLG-B (34)	Sensor Ground

[Harness Connector]

CLG25  
MAPS

CLG-B  
ECM

Inspection

1. Connect a scantool on the Data Link Connector (DLC).
2. Measure the output voltage of the MAPS at idle and IG ON.

Condition	Output Voltage (V)
IG ON	3.9 ~ 4.1
Idle	0.8 ~ 1.6

# Engine Control System


FL-61

## Engine Coolant Temperature Sensor (ECTS)

### Description

Engine Coolant Temperature Sensor (ECTS) is located in the engine coolant passage of the cylinder head for detecting the engine coolant temperature. The ECTS uses a thermistor whose resistance changes with the temperature. The electrical resistance of the ECTS decreases as the temperature increases, and increases as the temperature decreases. The reference 5 V in the ECM is supplied to the ECTS via a resistor in the ECM. That is, the resistor in the ECM and the thermistor in the ECTS are connected in series. When the resistance value of the thermistor in the ECTS changes according to the engine coolant temperature, the output voltage also changes.

During cold engine operation the ECM increases the fuel injection duration and controls the ignition timing using the information of engine coolant temperature to avoid engine stalling and improve drivability.

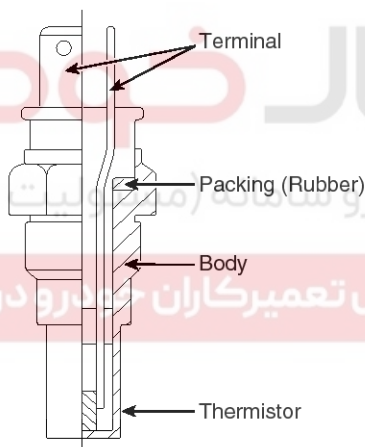

SBHFL9140L


### Specification

Temperature		Resistance (kΩ)
°C	°F	
-40	-40	48.14
-20	-4	14.13 ~ 16.83
0	32	5.79
20	68	2.31 ~ 2.59
40	104	1.15
60	140	0.59
80	176	0.32

FL-62

Fuel System

Circuit Diagram

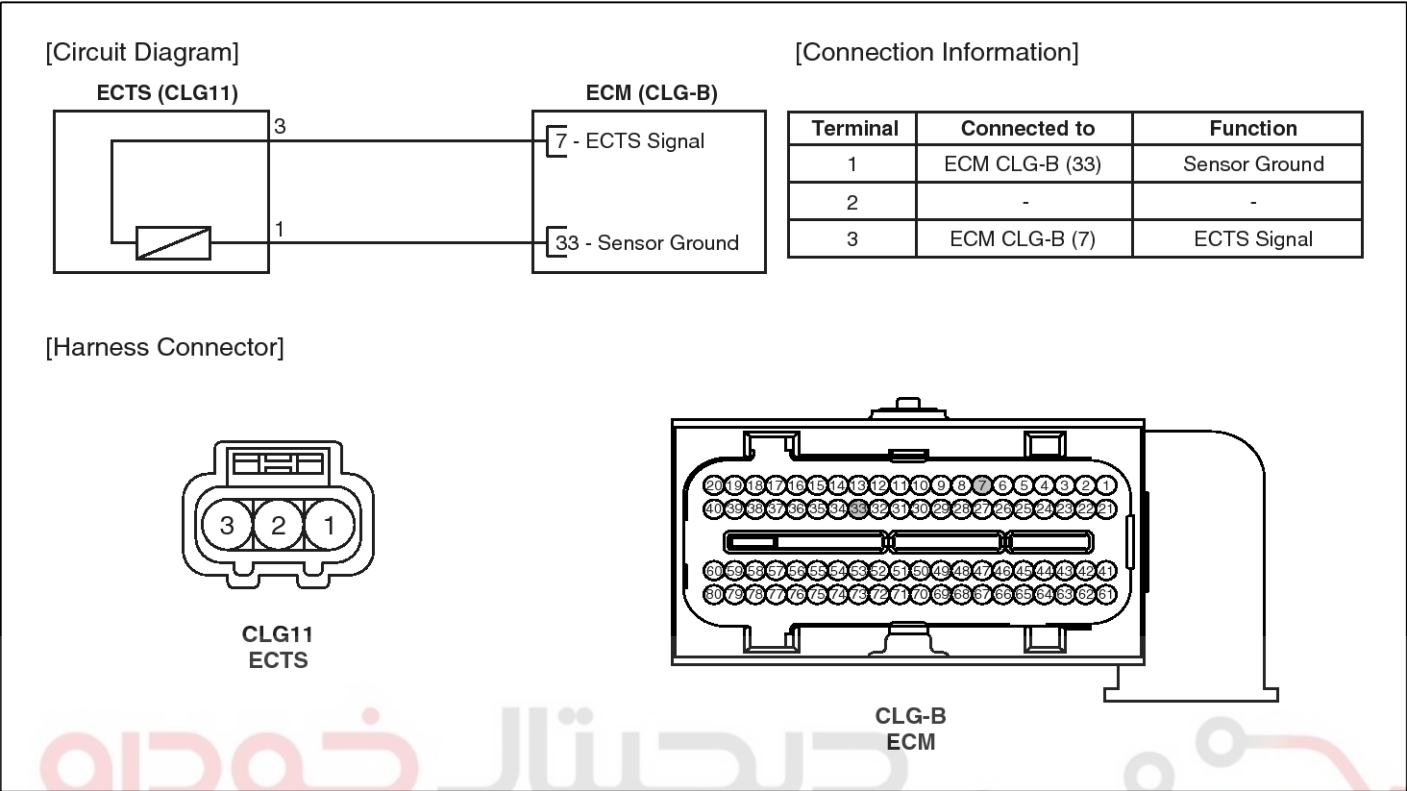

SHMFL9118L

Inspection

1. Turn the ignition switch OFF.
2. Disconnect the ECTS connector.
3. Remove the ECTS.
4. After immersing the thermistor of the sensor into engine coolant, measure resistance between the ECTS terminals 1 and 3.
5. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.

# Engine Control System


FL-63

## Crankshaft Position Sensor (CKPS)

### Description

Crankshaft Position Sensor (CKPS) detects the crankshaft position and is one of the most important sensors of the engine control system. If there is no CKPS signal input, the engine may stop because of CKPS signal missing.



This sensor is installed on transaxle housing or the cylinder block and generates alternating current by magnetic flux field which is made by the sensor and the target wheel when the engine rotates. The target wheel consists of 58 slots and 2 missing slots on 360 CA (Crank Angle).

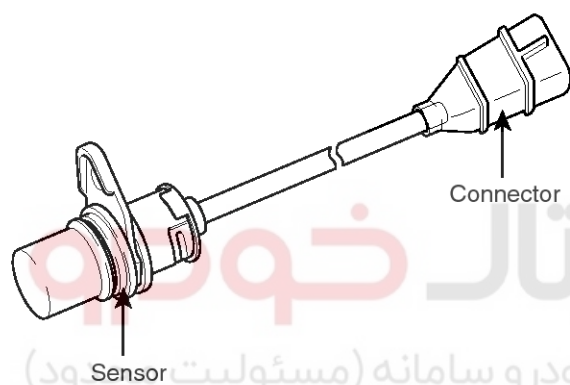

### Specification

Item	Specification
Coil Resistance ( $\Omega$ )	630 ~ 770 $\Omega$ [25 $^{\circ}$ C (77 $^{\circ}$ F)]
Air Gap (mm)	0.5 ~ 1.5

### Wave Form

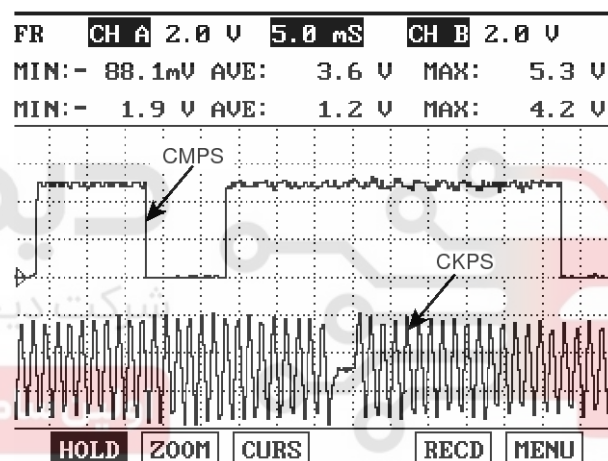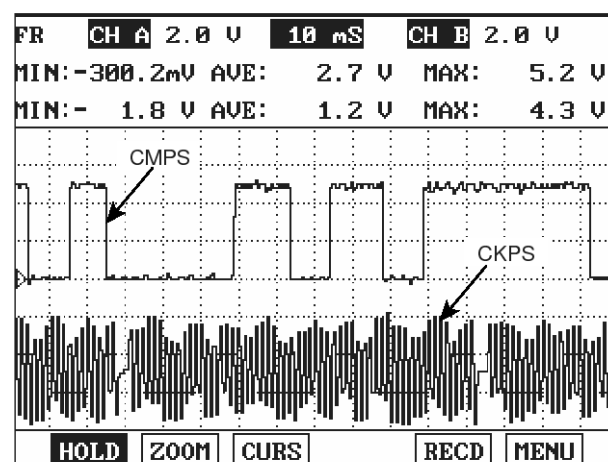


SBHFL9214L

## FL-64

## Fuel System

## Circuit Diagram

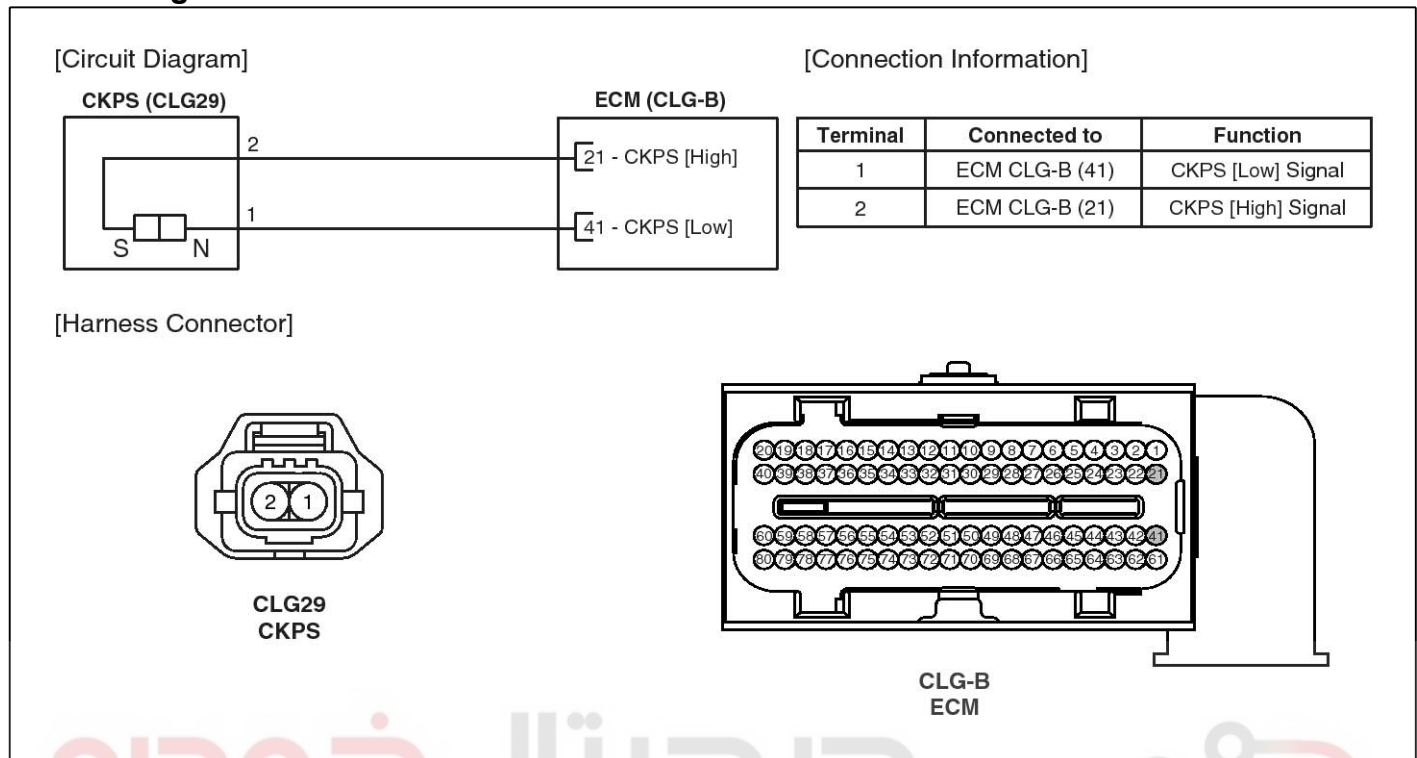

SHMFL9119L

## Inspection

1. Check the signal waveform of the CMPS and CKPS using a scantool.

**Specification:** Refer to "Wave Form"


# Engine Control System

FL-65

## Camshaft Position Sensor (CMPS)

### Description

Camshaft Position Sensor (CMPS) is a hall sensor and detects the camshaft position by using a hall element. It is related with Crankshaft Position Sensor (CKPS) and detects the piston position of each cylinder which the CKPS can't detect. The two CMPS are installed on engine head cover of bank 1 and 2 respectively and use a target wheel installed on the camshaft. This sensor has a hall-effect IC which output voltage changes when magnetic field is made on the IC with current flow. So the sequential injection of the 6 cylinders is impossible without CMPS signal.


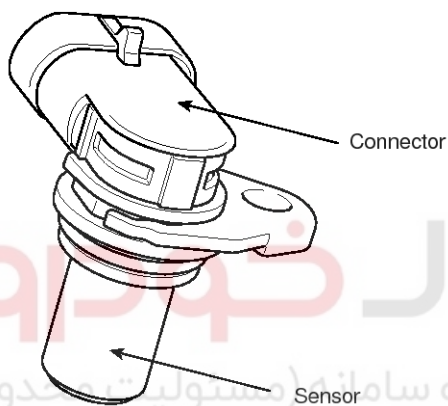


SBHFL9138L

### Specification

Item	Specification
Output Voltage (V)	High: 5.0V
	Low: 0.7V
Air Gap (mm)	0.5 ~ 1.5

### Wave Form

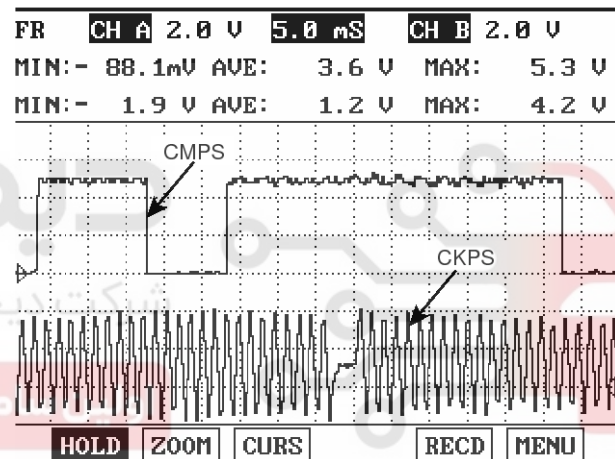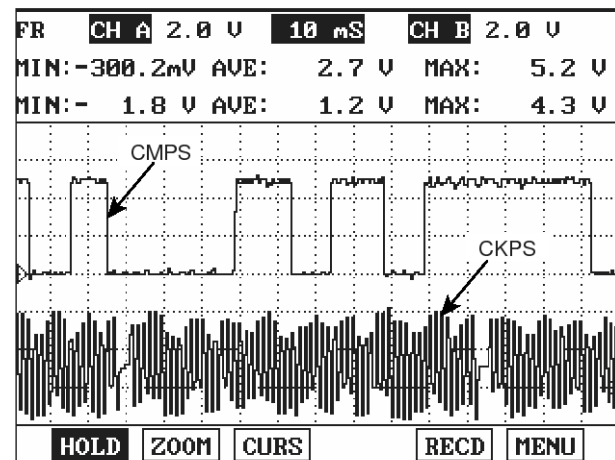

SBHFL9214L




## FL-66

## Fuel System

## Circuit Diagram

[Circuit Diagram]

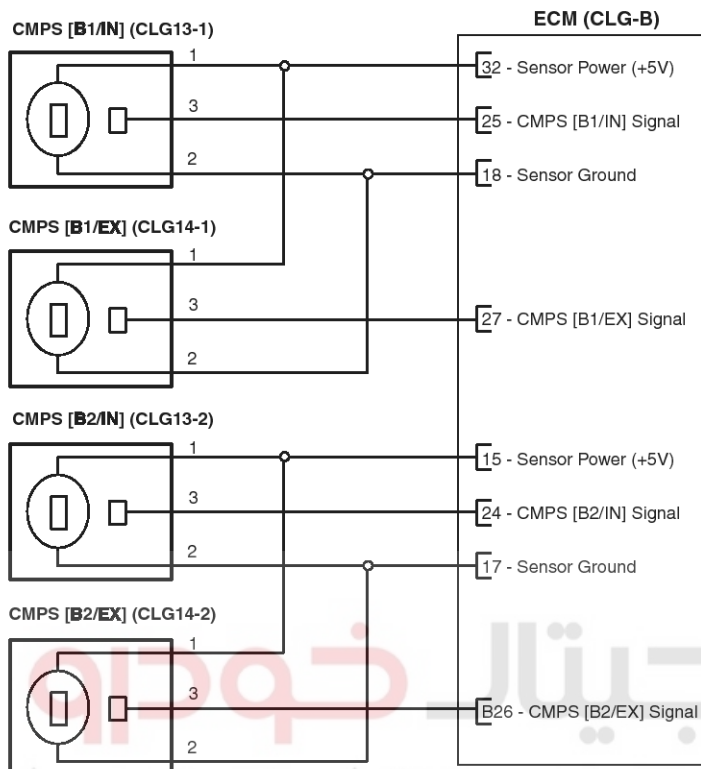

[Connection Information]

CMPS [BANK 1/INTAKE] (CLG13-1)

Terminal	Connected to	Function
1	ECM CLG-B (32)	Sensor Power (+5V)
2	ECM CLG-B (18)	Sensor Ground
3	ECM CLG-B (25)	CMPS [B1/IN] Signal

CMPS [BANK 1/EXHAUST] (CLG14-1)

Terminal	Connected to	Function
1	ECM CLG-B (32)	Sensor Power (+5V)
2	ECM CLG-B (18)	Sensor Ground
3	ECM CLG-B (27)	CMPS [B1/EX] Signal


CMPS [BANK 2/INTAKE] (CLG13-2)

Terminal	Connected to	Function
1	ECM CLG-B (15)	Sensor Power (+5V)
2	ECM CLG-B (17)	Sensor Ground
3	ECM CLG-B (24)	CMPS [B2/IN] Signal

CMPS [BANK 2/EXHAUST] (CLG14-2)

Terminal	Connected to	Function
1	ECM CLG-B (15)	Sensor Power (+5V)
2	ECM CLG-B (17)	Sensor Ground
3	ECM CLG-B (26)	CMPS [B2/EX] Signal

[Harness Connector]

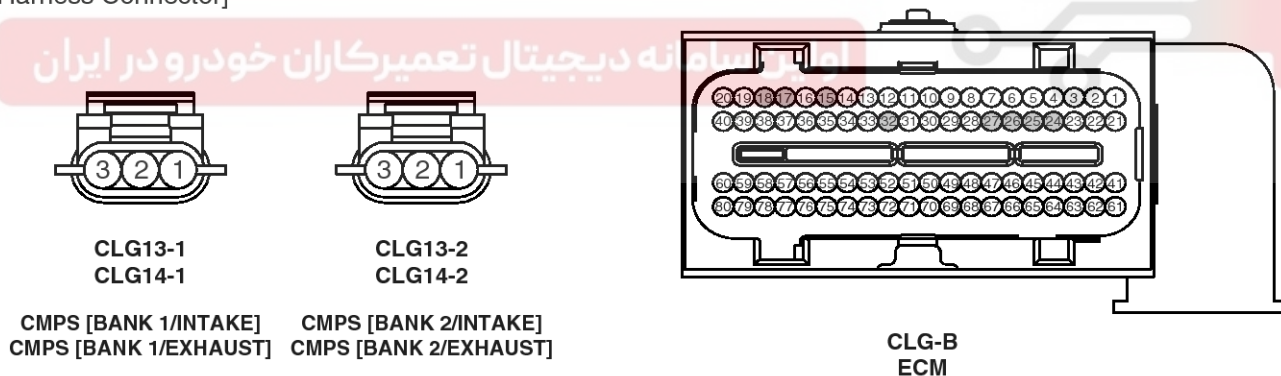

SHMFL9120L

## Inspection

1. Check the signal waveform of the CMPS and CKPS using a scantool.

**Specification:** Refer to "Wave Form"

# Engine Control System

FL-67

## Knock Sensor (KS)

### Description

Knocking is a phenomenon characterized by undesirable vibration and noise and can cause engine damage. Knock Sensor (KS) senses engine knocking and the two sensors are installed inside the V-valley of the cylinder block. When knocking occurs, the vibration from the cylinder block is applied as pressure to the piezoelectric element. At this time, this sensor transfers the voltage signal higher than the specified value to the ECM and the ECM retards the ignition timing. If the knocking disappears after retarding the ignition timing, the ECM will advance the ignition timing. This sequential control can improve engine power, torque and fuel economy.

### Specification

Item	Specification
Capacitance (pF)	1,480 ~ 2,220




## FL-68

## Fuel System

## Circuit Diagram

[Circuit Diagram]

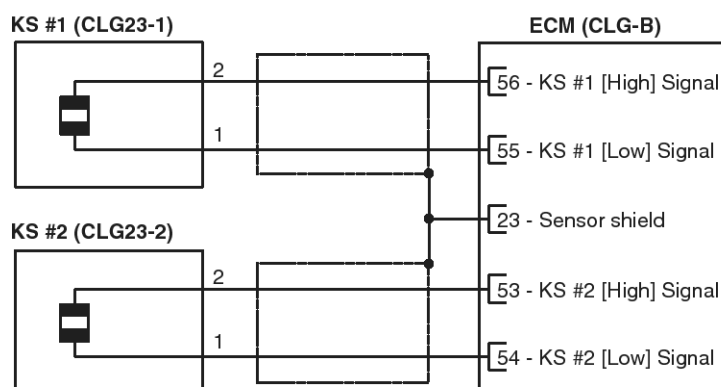

[Connection Information]


KNOCK SENSOR #1 (CLG23-1)

Terminal	Connected to	Function
1	ECM CLG-B (55)	KS #1 [Low] Signal
2	ECM CLG-B (56)	KS #1 [High] Signal

KNOCK SENSOR #2 (CLG23-2)


Terminal	Connected to	Function
1	ECM CLG-B (54)	KS #2 [Low] Signal
2	ECM CLG-B (53)	KS #2 [High] Signal

[Harness Connector]

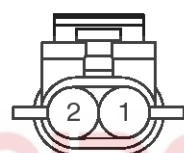


CLG23-1

KNOCK SENSOR #1

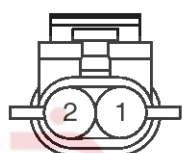

CLG23-2

KNOCK SENSOR #2

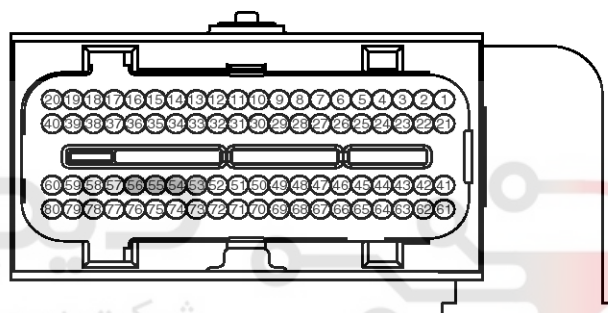CLG-B  
ECM

SHMFL9121L

# Engine Control System

FL-69


## Heated Oxygen Sensor (HO2S)

### Description

Heated Oxygen Sensor (HO2S) consists of the zirconium and the alumina and is installed on upstream and downstream of the Manifold Catalyst Converter (MCC).

After it compares oxygen consistency of the atmosphere with the exhaust gas, it transfers the oxygen consistency of the exhaust gas to the ECM. When A/F ratio is rich or lean, it generates approximately 1V or 0V respectively. In order that this sensor normally operates, the temperature of the sensor tip is higher than 370°C (698°F). So it has a heater which is controlled by the ECM duty signal.

When the exhaust gas temperature is lower than the specified value, the heater warms the sensor tip.

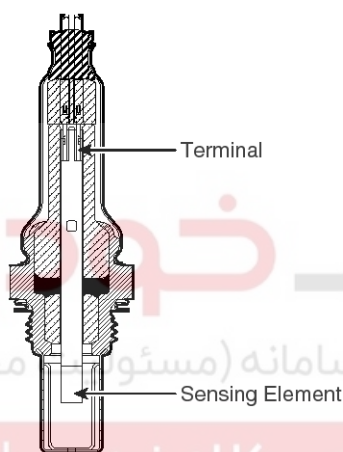




EGRF247A

### Specification

A/F Ratio ( $\lambda$ )	Output Voltage(V)
RICH	0.75 ~ 0.92
LEAN	0.04 ~ 0.1

Item	Specification
Heater Resistance ( $\Omega$ )	8.1 ~ 11.1 $\Omega$ [21°C (69.8°F)]

### Wave Form

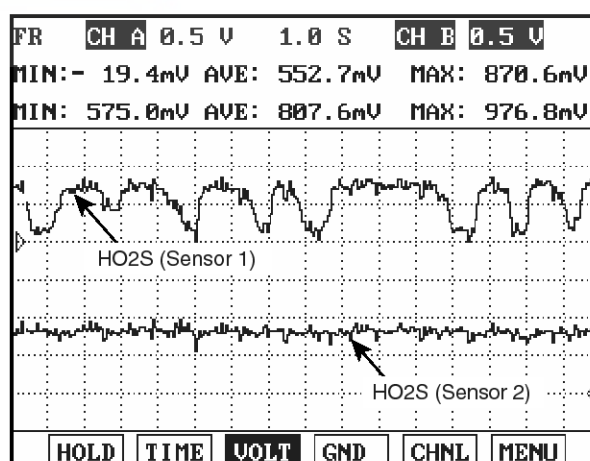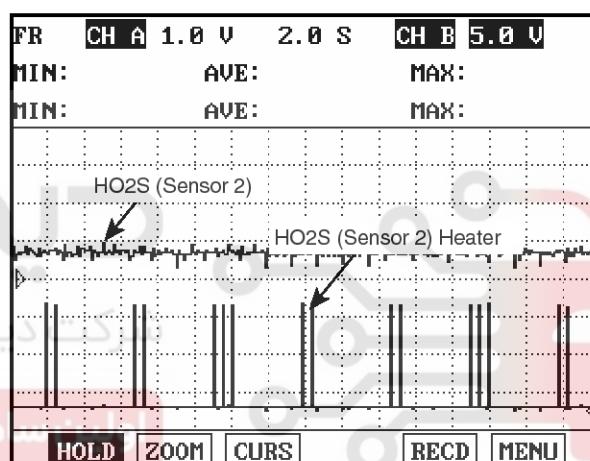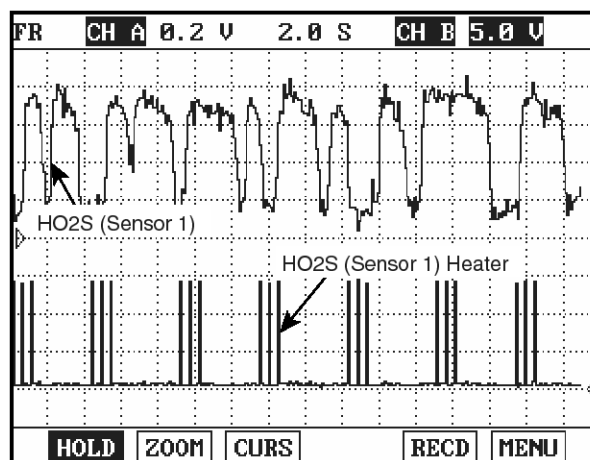

SBHFL9139L


## FL-70

## Fuel System

## Circuit Diagram


[Circuit Diagram]

HO2S [B1/S1] (CLG93)

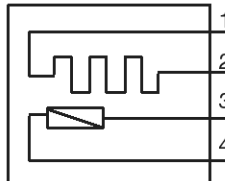


Main Relay

HO2S [B1/S2] (CLG95)

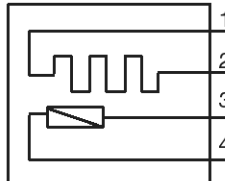


Main Relay

HO2S [B2/S1] (CLG94)

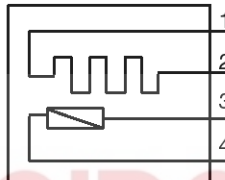

Main Relay

HO2S [B2/S2] (CLG96)

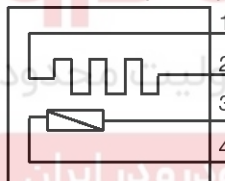

Main Relay

ECM (CLG-B)

[70 - Heater [B1/S1] Control

[49 - HO2S [B1/S1] Signal

[30 - Sensor Ground

[74 - Heater [B1/S2] Control

[50 - HO2S [B1/S2] Signal

[31 - Sensor Ground

[67 - Heater [B2/S1] Control

[51 - HO2S [B2/S1] Signal

[28 - Sensor Ground

[73 - Heater [B2/S2] Control

[52 - HO2S [B2/S2] Signal

[29 - Sensor Ground

[Connection Information]

HO2S [BANK 1/SENSOR 1] (CLG93)

Terminal	Connected to	Function
1	Main Relay	Battery Power (B+)
2	ECM CLG-B (70)	Heater [B1/S1] Control
3	ECM CLG-B (49)	HO2S [B1/S1] Signal
4	ECM CLG-B (30)	Sensor Ground

HO2S [BANK 1/SENSOR 2] (CLG95)

Terminal	Connected to	Function
1	Main Relay	Battery Power (B+)
2	ECM CLG-B (74)	Heater [B1/S2] Control
3	ECM CLG-B (50)	HO2S [B1/S2] Signal
4	ECM CLG-B (31)	Sensor Ground


HO2S [BANK 2/SENSOR 1] (CLG94)

Terminal	Connected to	Function
1	Main Relay	Battery Power (B+)
2	ECM CLG-B (67)	Heater [B2/S1] Control
3	ECM CLG-B (51)	HO2S [B2/S1] Signal
4	ECM CLG-B (28)	Sensor Ground

HO2S [BANK 2/SENSOR 2] (CLG96)


Terminal	Connected to	Function
1	Main Relay	Battery Power (B+)
2	ECM CLG-B (73)	Heater [B2/S2] Control
3	ECM CLG-B (52)	HO2S [B2/S2] Signal
4	ECM CLG-B (29)	Sensor Ground

[Harness Connector]

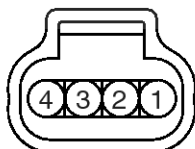

CLG93, CLG95, CLG94, CLG96

HO2S [BANK 1/SENSOR 1]  
HO2S [BANK 1/SENSOR 2]  
HO2S [BANK 2/SENSOR 1]  
HO2S [BANK 2/SENSOR 2]

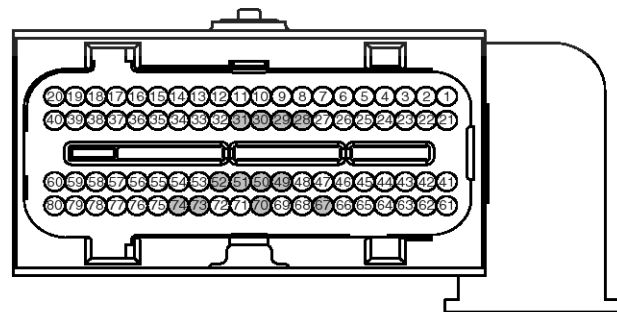CLG-B  
ECM

SHMFL9122L

## Inspection

1. Turn the ignition switch OFF.
2. Disconnect the HO2S connector.
3. Measure resistance between the HO2S terminals 1 and 2.

4. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.

# Engine Control System

FL-71

## CVT Oil Temperature Sensor (OTS)

### Description


Continuous Variable Valve Timing (CVVT) system advances or retards the valve timing of the intake and exhaust valve in accordance with the ECM control signal which is calculated by the engine speed and load.

By controlling CVVT, the valve over-lap or under-lap occurs, which makes better fuel economy and reduces exhaust gases (NOx, HC) and improves engine performance through reduction of pumping loss, internal EGR effect, improvement of combustion stability, improvement of volumetric efficiency, and increase of expansion work.

This system consist of

- the CVVT Oil Control Valve (OCV) which supplies the engine oil to the cam phaser or runs out the engine oil from the cam phaser in accordance with the ECM PWM (Pulse With Modulation) control signal,
- the CVVT Oil Temperature Sensor (OTS) which measures the engine oil temperature,
- and the Cam Phaser which varies the cam phase by using the hydraulic force of the engine oil.

The engine oil getting out of the CVVT oil control valve varies the cam phase in the direction (Intake Advance/Exhaust Retard) or opposite direction (Intake Retard/Exhaust Advance) of the engine rotation by rotating the rotor connected with the camshaft inside the cam phaser.

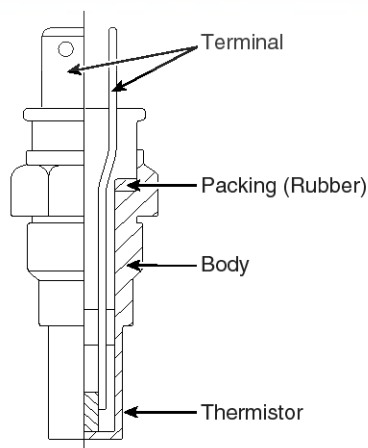

SBHFL9140L


### Specification

Temperature		Resistance (kΩ)
°C	°F	
-40	-40	52.15
-20	-4	16.52
0	32	6.0
20	68	2.45
40	104	1.11
60	140	0.54
80	176	0.29

## FL-72

## Fuel System

## Circuit Diagram

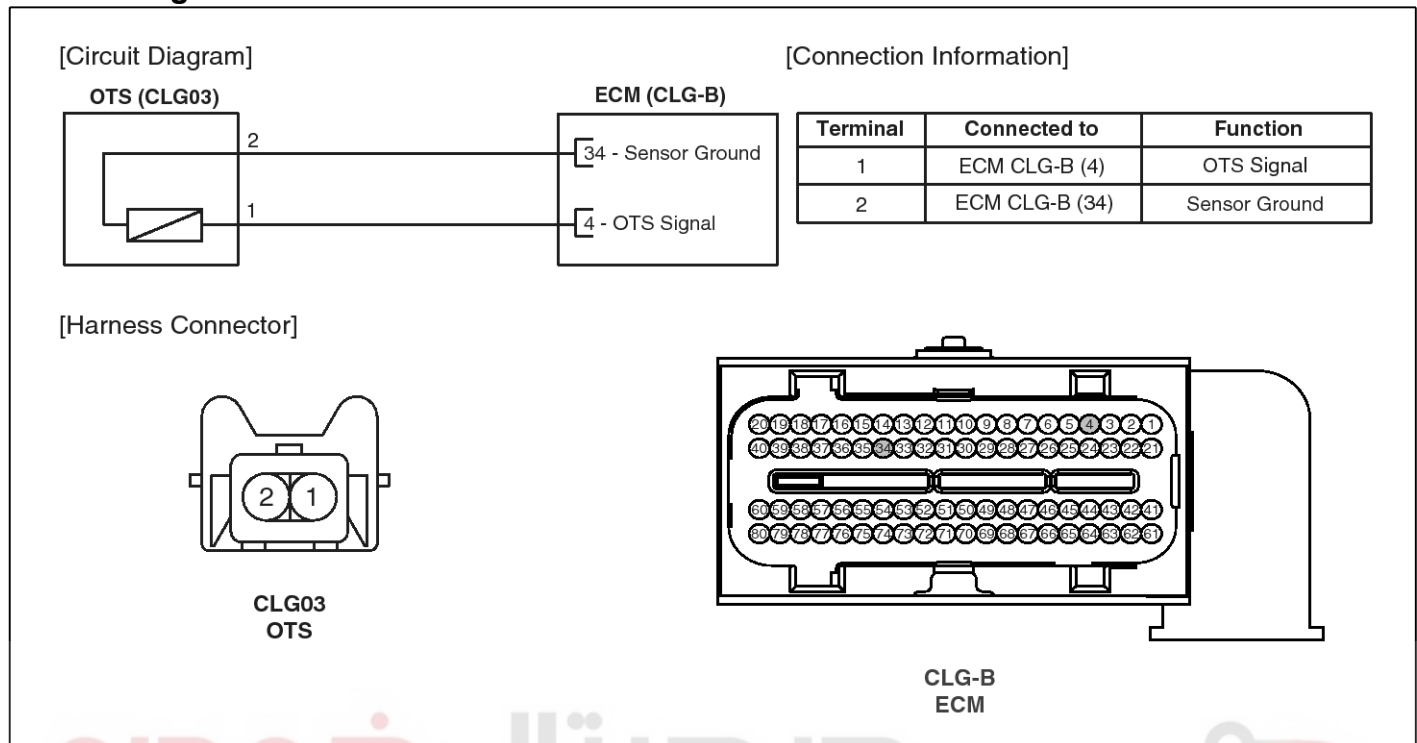

SHMFL9123L

## Inspection

1. Turn the ignition switch OFF.
2. Disconnect the OTS connector.
3. Remove the OTS.
4. After immersing the thermistor of the sensor into engine coolant, measure resistance between the OTS terminals 1 and 2.
5. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.




# Engine Control System

## FL-73


### Accelerator Position Sensor (APS)

#### Description

Accelerator Position Sensor (APS) is installed on the accelerator pedal module and detects the rotation angle of the accelerator pedal. The APS is one of the most important sensors in engine control system, so it consists of the two sensors which adapt individual sensor power and ground line. The second sensor monitors the first sensor and its output voltage is half of the first one. If the ratio of the sensor 1 and 2 is out of the range (approximately 1/2), the diagnostic system judges that a malfunction has occurred.

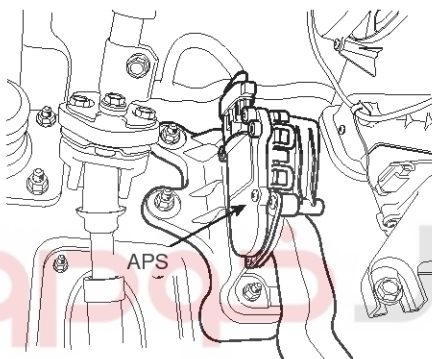

[Non - Adjust type]

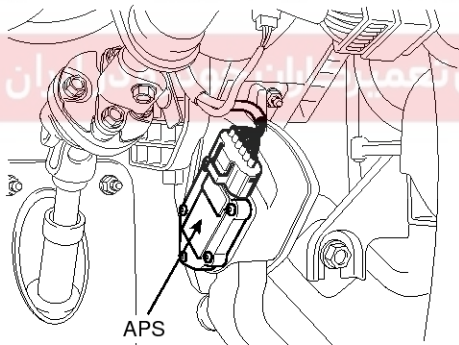


[Adjust type]

SHMFL9153L

#### Specification

##### [Non-Adjust type]

Pedal Position	Output Voltage(V) [Vref = 5.0V]	
	APS1	APS2
Released	0.7 ~ 0.8	0.275 ~ 0.475
Fully depressed	3.8 ~ 4.4	1.75 ~ 2.35

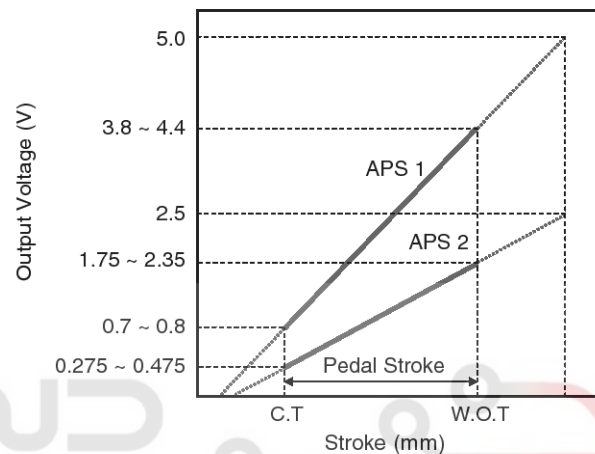

SENFL7130L


##### [Adjust type]

Accelerator Position	Output Voltage(V) [Vref = 5.0V]	
	APS1	APS2
C.T	0.7 ~ 0.8V	0.29 ~ 0.46V
W.O.T	3.85 ~ 4.35V	1.93 ~ 2.18V

Item	Sensor Resistance (kΩ)
APS1	0.7 ~ 1.3 at 20 °C (68 °F)
APS2	1.4 ~ 2.6 at 20 °C (68 °F)

FL-74

Fuel System

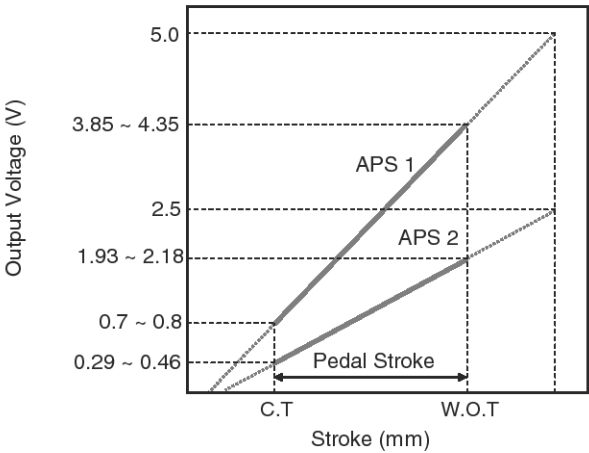

SHMFL9124L

Circuit Diagram

[Circuit Diagram]

APS (E10) [Non-Adjust type]

ECM (CLG-A)

[Connection Information]

Terminal	Connected to	Function
1	ECM CLG-A (49)	APS 2 Signal
2	ECM CLG-A (48)	APS 2 Sensor Ground
3	ECM CLG-A (54)	APS 1 Signal
4	ECM CLG-A (55)	APS 1 Sensor Ground
5	ECM CLG-A (59)	APS 1 Sensor Power (+5V)
6	ECM CLG-A (57)	APS 2 Sensor Power (+5V)

[Harness Connector]

E10  
APS

CLG-A  
ECM

SHMFL9126L


# Engine Control System

## FL-75

[Circuit Diagram]

APS (E09) [Adjust type]


ECM (CLG-A)

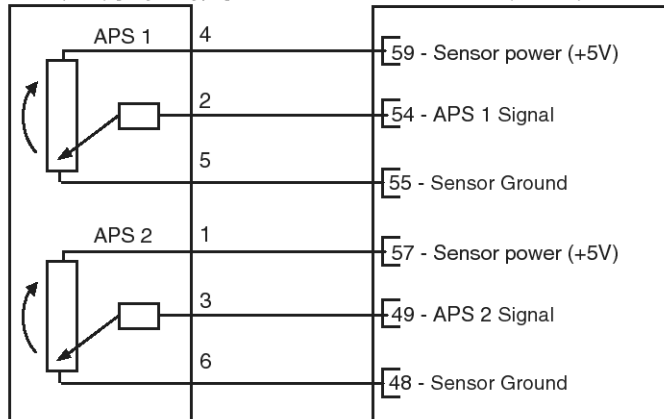


[Connection Information]

Terminal	Connected to	Function
1	ECM CLG-A (57)	APS 2 Sensor power (+5V)
2	ECM CLG-A (54)	APS 1 Signal
3	ECM CLG-A (49)	APS 2 Signal
4	ECM CLG-A (59)	APS 1 Sensor power (+5V)
5	ECM CLG-A (55)	APS 1 Ground
6	ECM CLG-A (48)	APS 2 Ground

[Harness Connector]

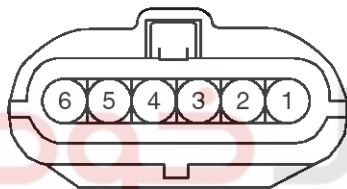

E09  
APS

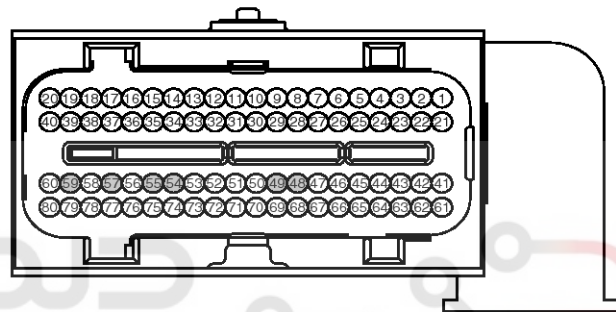

CLG-A  
ECM

شرکت دیجیتال خودرو سامانه (سئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

SHMFL9125L

## FL-76

## Fuel System

### Inspection

#### [Non-Adjust type]

1. Connect a scantool on the Data Link Connector (DLC).
2. Turn the ignition switch ON.
3. Measure the output voltage of the APS 1 and 2 at C.T and W.O.T.

**Specification:** Refer to Specification Section.

#### [Adjust type]

1. Connect a scan tool to the Diagnosis Link Connector (DLC).
2. Start engine and check output voltages of APS 1 and 2 at C.T and W.O.T.

### Specification


Accelerator Position	Output Voltage (V)	
	APS1	APS2
C.T	0.7 ~ 0.8V	0.29 ~ 0.46V
W.O.T	3.85 ~ 4.35V	1.93 ~ 2.18V

3. Turn ignition switch OFF and disconnect the scantool from the DLC.
4. Disconnect APS connector and measure resistance between APS terminals 4 and 5 (APS 1).

**Specification:** Refer to Specification Section.

5. Disconnect APS connector and measure resistance between APS terminals 1 and 6 (APS 2).

**Specification:** Refer to Specification Section.

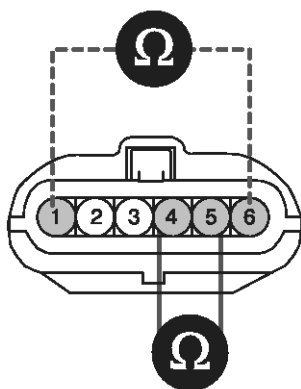

SMGF16109N

# Engine Control System


FL-77

## Injector

### Description

Based on information from various sensors, the ECM determines the fuel injection amount. The fuel injector is a solenoid-operated valve and the fuel injection amount is controlled by length of time that the fuel injector is held open.

The ECM controls each injector by grounding the control circuit. When the ECM energizes the injector by grounding the control circuit, the circuit voltage should be low (theoretically 0V) and the fuel is injected. When the ECM de-energizes the injector by opening control circuit, the fuel injector is closed and circuit voltage should be peak for a moment.

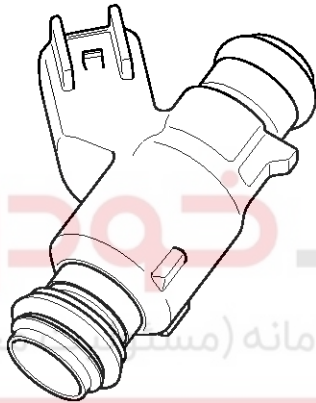

KFCF1026

### CAUTION

- If an injector connector is disconnected for more than 46 seconds while the engine runs, the ECM will determine that the cylinder is misfiring and cut fuel supply. So be careful not to exceed 46 seconds.
- But the engine runs normally in 10 seconds after turning the ignition key off.

### Specification


Item	Specification
Coil Resistance ( $\Omega$ )	11.4 ~ 12.6 [20°C (68°F)]

## FL-78

## Fuel System

## Circuit Diagram

[Circuit Diagram]

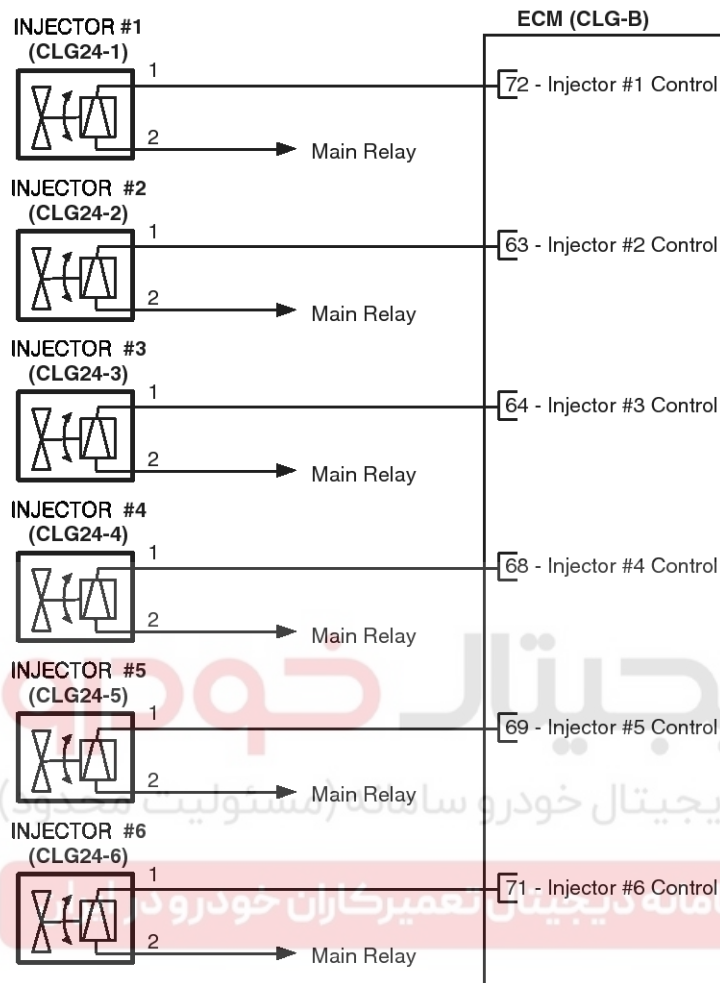

[Connection Information]

## INJECTOR #1 (CLG24-1)

Terminal	Connected to	Function
1	ECM CLG-B (72)	Injector #1 Control
2	Main Relay	Battery Power (B+)

## INJECTOR #2 (CLG24-2)

Terminal	Connected to	Function
1	ECM CLG-B (63)	Injector #2 Control
2	Main Relay	Battery Power (B+)

## INJECTOR #3 (CLG24-3)

Terminal	Connected to	Function
1	ECM CLG-B (64)	Injector #3 Control
2	Main Relay	Battery Power (B+)

## INJECTOR #4 (CLG24-4)

Terminal	Connected to	Function
1	ECM CLG-B (68)	Injector #4 Control
2	Main Relay	Battery Power (B+)


## INJECTOR #5 (CLG24-5)

Terminal	Connected to	Function
1	ECM CLG-B (69)	Injector #5 Control
2	Main Relay	Battery Power (B+)


## INJECTOR #6 (CLG24-6)

Terminal	Connected to	Function
1	ECM CLG-B (71)	Injector #6 Control
2	Main Relay	Battery Power (B+)

[Harness Connector]

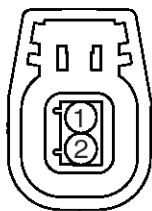

CLG24-1,2,3,4,5,6  
INJECTOR #1,2,3,4,5,6

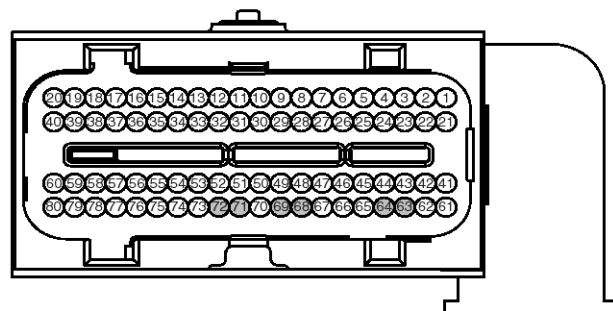

CLG-B  
ECM

SHMFL9127L

# Engine Control System

FL-79

## Inspection

1. Turn the ignition switch OFF.
2. Disconnect the injector connector.
3. Measure resistance between the injector terminals 1 and 2.
4. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران






## FL-80

## Fuel System

## Purge Control Solenoid Valve (PCSV)

## Description

Purge Control Solenoid Valve (PCSV) is installed on the surge tank and controls the passage between the canister and the intake manifold. It is a solenoid valve and is open when the ECM grounds the valve control line. When the passage is open (PCSV ON), fuel vapor stored in the canister is transferred to the intake manifold.

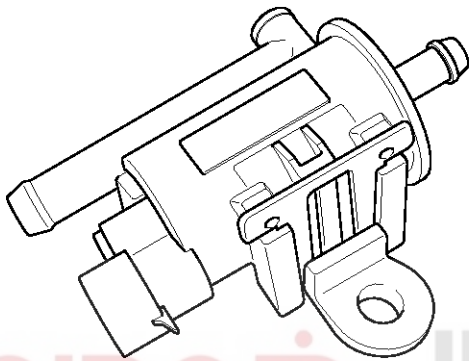


KFCF1028

## Specification

Item	Specification
Coil Resistance ( $\Omega$ )	19.0 ~ 22.0 [20°C (68°F)]

## Circuit Diagram

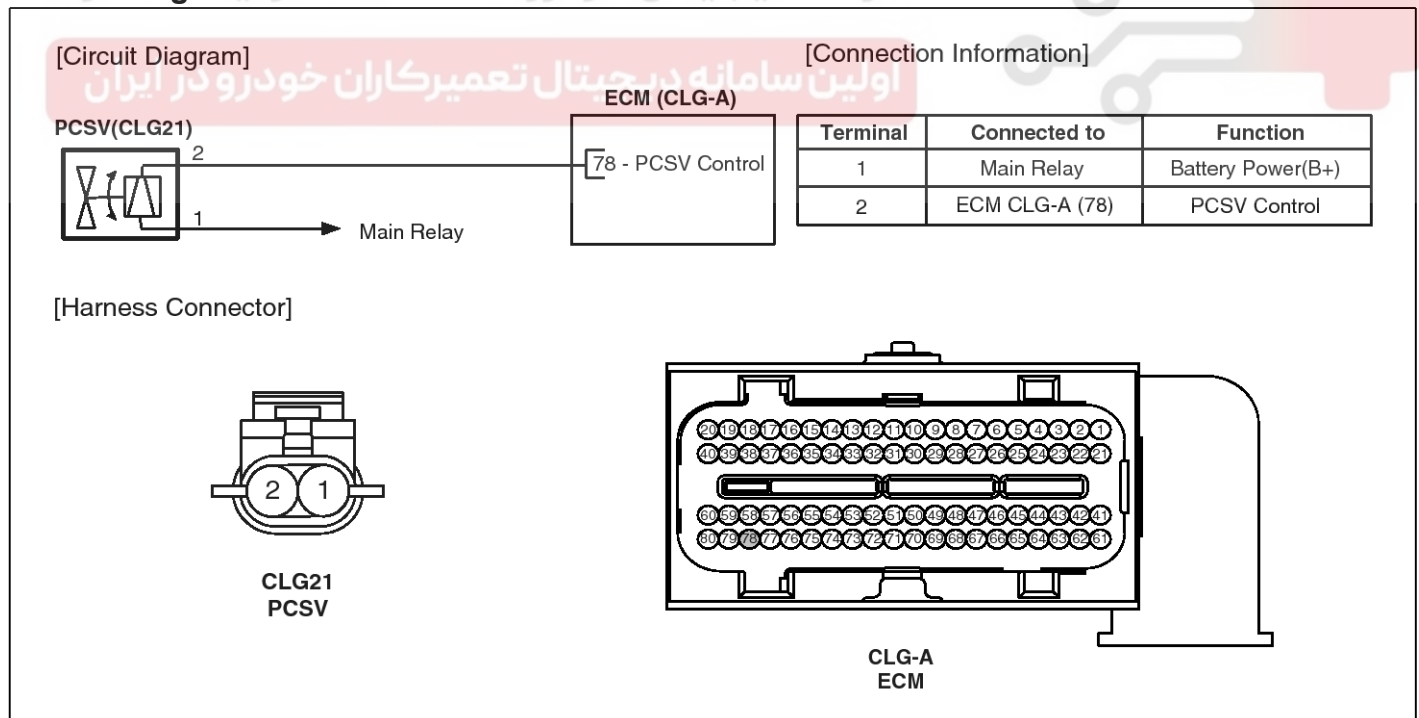

SHMFL9128L

# Engine Control System

FL-81

## Inspection

1. Turn the ignition switch OFF.
2. Disconnect the PCSV connector.
3. Measure resistance between the PCSV terminals 1 and 2.
4. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



## FL-82

## Fuel System

### CVT Oil Control Valve (OCV)

#### Description


Continuous Variable Valve Timing (CVVT) system advances or retards the valve timing of the intake and exhaust valve in accordance with the ECM control signal which is calculated by the engine speed and load.

By controlling CVVT, the valve over-lap or under-lap occurs, which makes better fuel economy and reduces exhaust gases (NOx, HC) and improves engine performance through reduction of pumping loss, internal EGR effect, improvement of combustion stability, improvement of volumetric efficiency, and increase of expansion work.

This system consist of

- the CVVT Oil Control Valve (OCV) which supplies the engine oil to the cam phaser or runs out the engine oil from the cam phaser in accordance with the ECM PWM (Pulse With Modulation) control signal,
- the CVVT Oil Temperature Sensor (OTS) which measures the engine oil temperature,
- and the Cam Phaser which varies the cam phase by using the hydraulic force of the engine oil.

The engine oil getting out of the CVVT oil control valve varies the cam phase in the direction (Intake Advance/Exhaust Retard) or opposite direction (Intake Retard/Exhaust Advance) of the engine rotation by rotating the rotor connected with the camshaft inside the cam phaser.

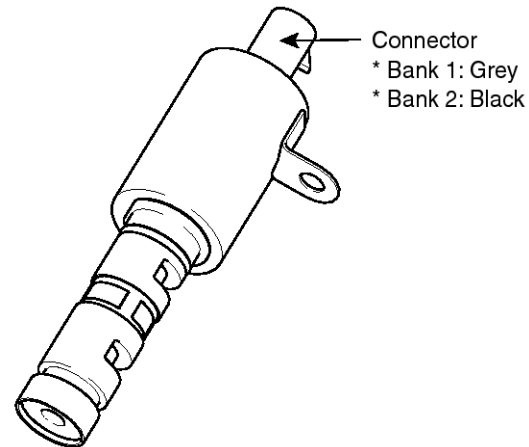

SBHFL9143L


#### Specification

Item	Specification
Coil Resistance ( $\Omega$ )	6.7 ~ 7.7 [20°C (68°F)]

# Engine Control System

FL-83

## Circuit Diagram

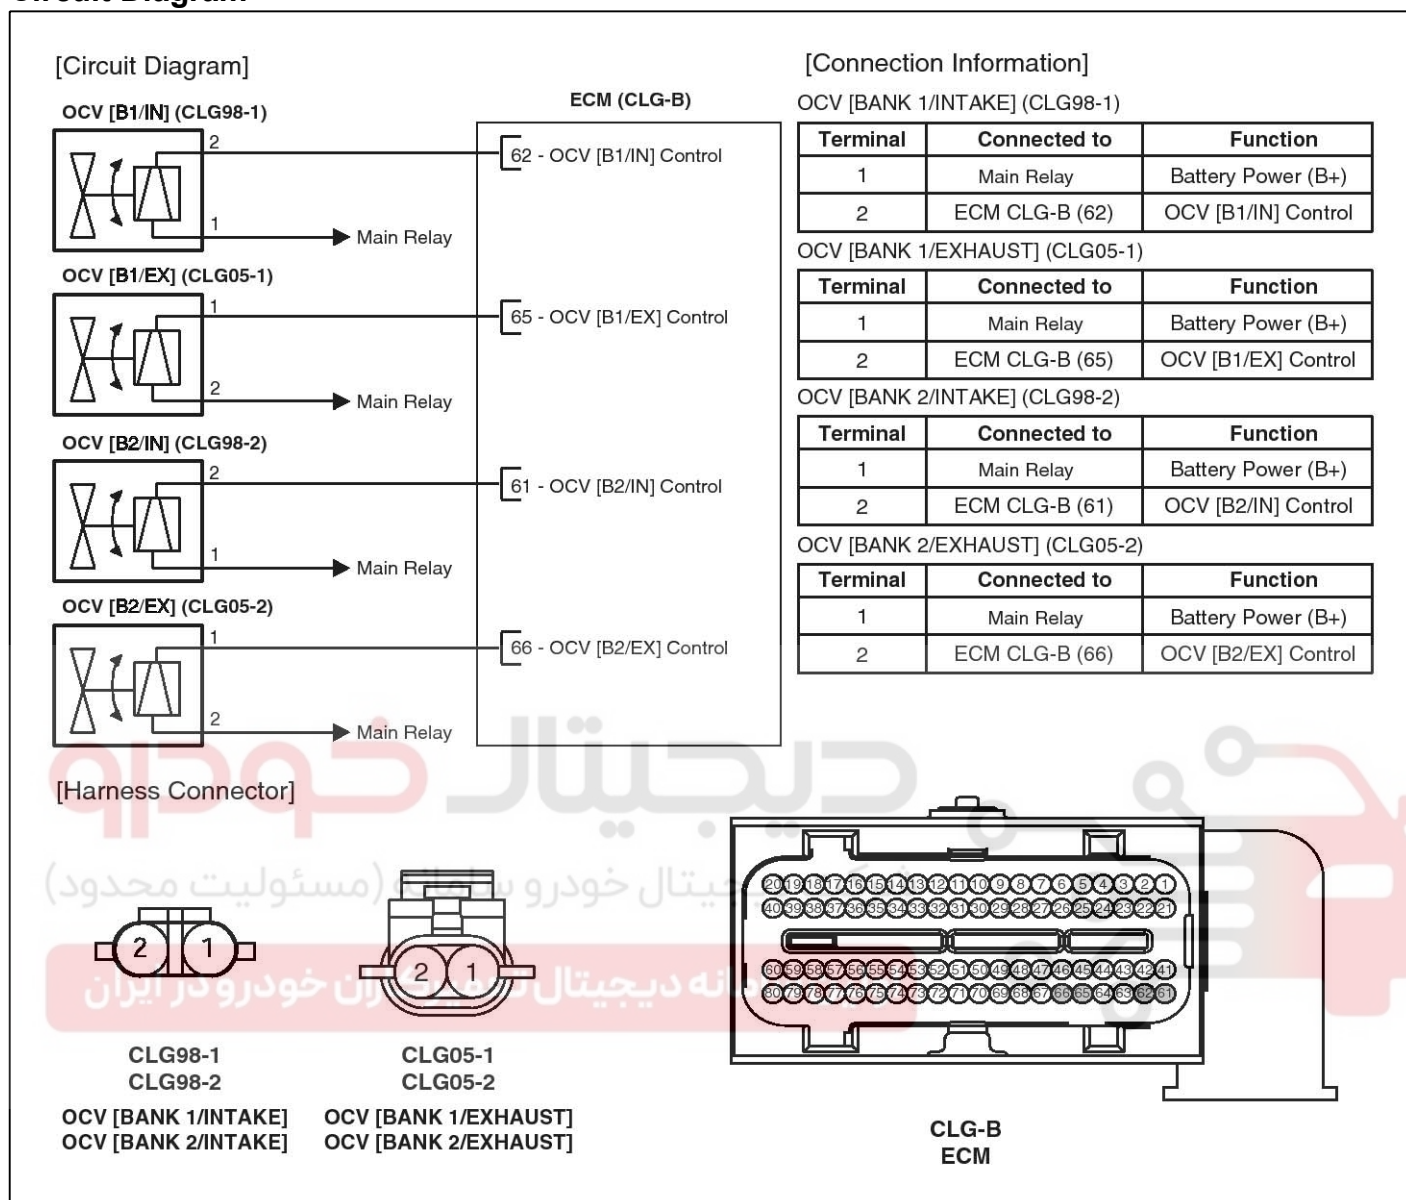

SHMFL9129L

## Inspection

1. Turn the ignition switch OFF.
2. Disconnect the OCV connector.
3. Measure resistance between the OCV terminals 1 and 2.
4. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.


## FL-84

## Fuel System

### Removal

#### [CVVT Oil Control Valve (Intake)]

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the intake manifold (Refer to "Intake And Exhaust System" in EM group).
3. Disconnect the CVVT oil control valve connector (A).

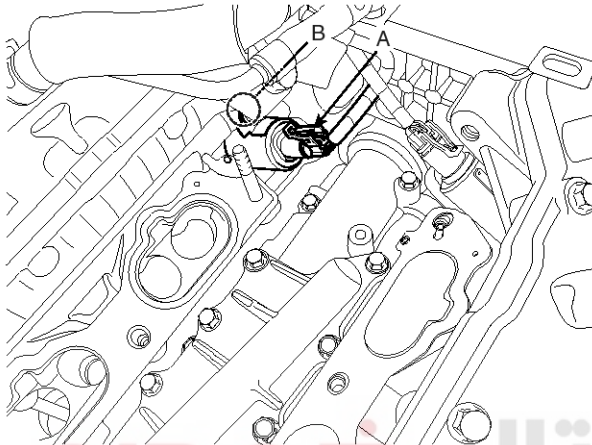


SBHFL8157D

4. Remove the mounting bolt (B), and then remove the valve from the engine.


#### [CVVT Oil Control Valve (Exhaust)]

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the CVVT oil control valve connector (A).

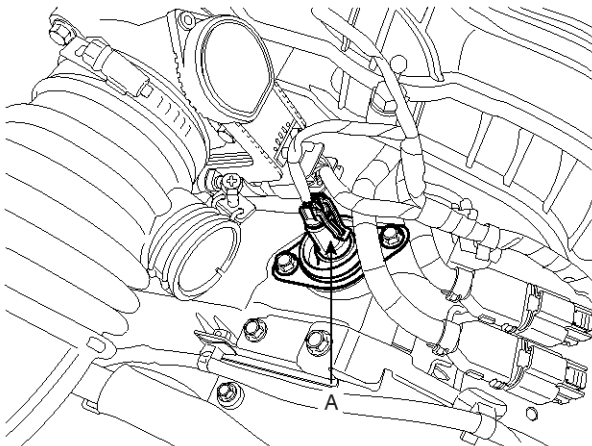

SBHFL8158D

3. Remove the cylinder head cover (Refer to "Cylinder Head Assembly" in EM group).
4. Remove the mounting bolt (A), and then remove the valve from the engine.

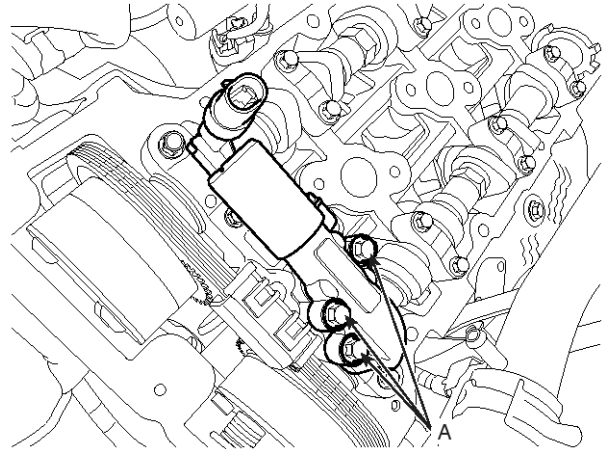

SBHFL8159D

### Installation

1. Installation is reverse of removal.

#### CVVT oil control valve installation bolt:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lbf.ft)

#### ⚠ CAUTION

Pay attention to color of the valve connector (Component and harness side) when installing. If an OCV is installed on opposite bank, the engine may be damaged.

#### [Connector Color]

Item	Component Side	Harness Side
Bank1 (RH)	Grey	
Bank 2(LH)	Black	

# Engine Control System


FL-85

## Variable Intake Solenoid (VIS) Valve


### Description

Variable Intake Manifold (VIS) Valve is installed on the intake manifold. It combines or divides the two banks' intake air passages to improve intake efficiency in accordance with the ECM control signal calculated by engine operating condition.

- Low/Middle Speed: Close VIS Valve → No Interference between LH & RH banks → Resonance Effect Maximized → Intake Efficiency Improved
- High Speed: Open VIS Valve → Intake Inertia Effect Maximized → Intake Efficiency Improved

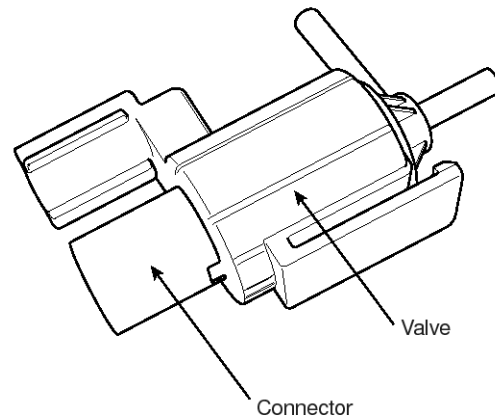

SBHFL9215L

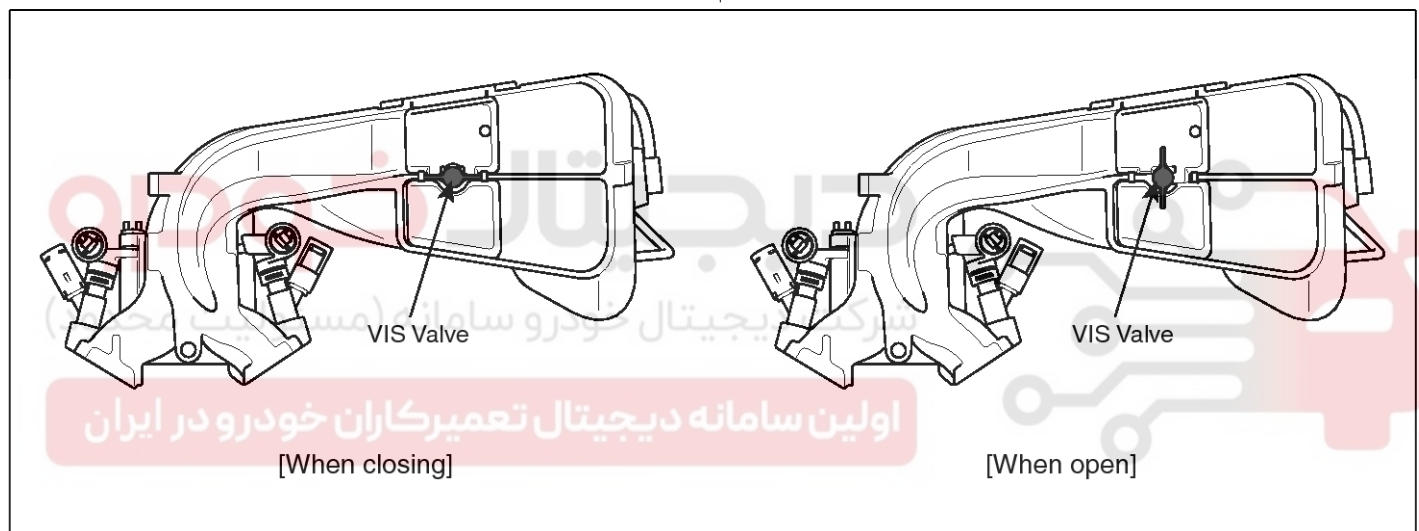

EGRF258A

### Specification


Item	Specification
Coil Resistance ( $\Omega$ )	30.0 ~ 35.0 [20°C (68°F)]



## FL-86

## Fuel System

## Circuit Diagram

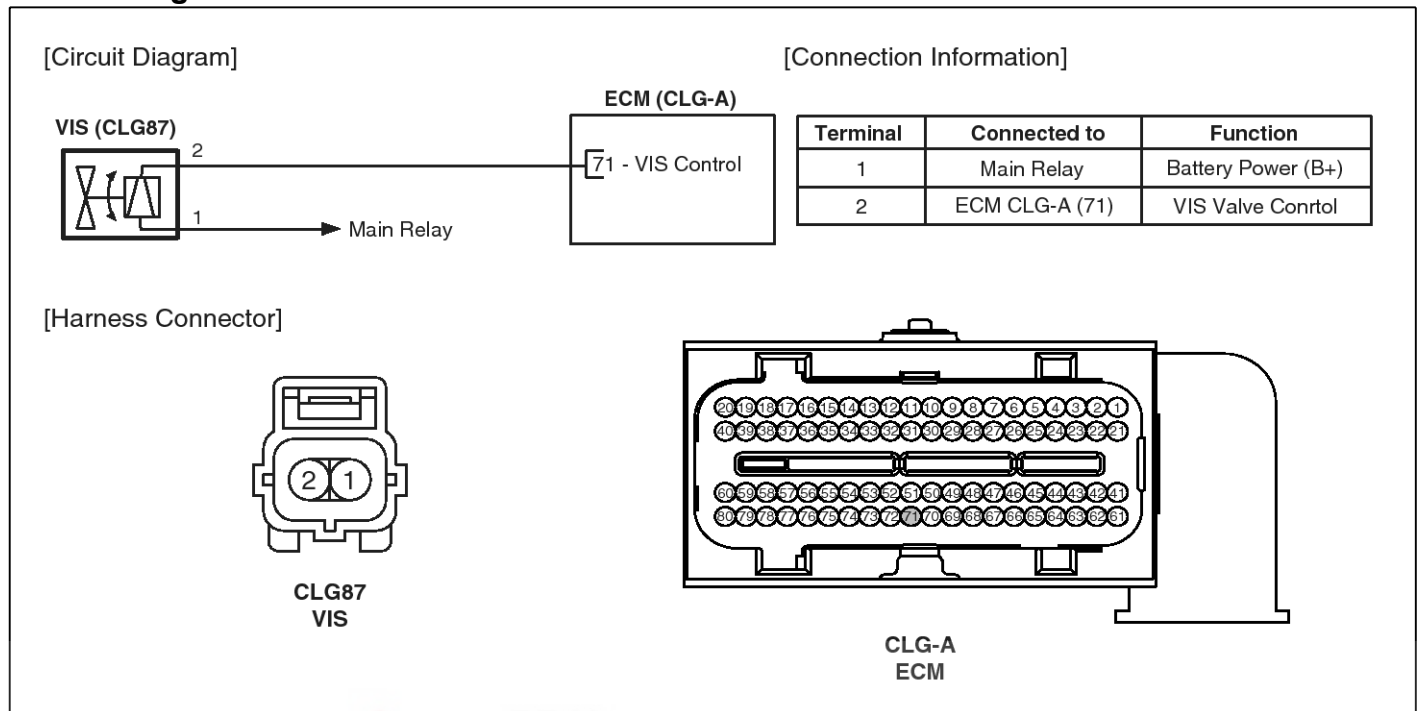

SHMFL9130L

## Inspection

1. Turn the ignition switch OFF.
2. Disconnect the VIS valve connector.
3. Measure resistance between the VIS valve terminals 1 and 2.
4. Check that the resistance is within the specification.

**Specification:** Refer to Specification Section.




# Fuel Delivery System

FL-87

## Fuel Delivery System

### Components Location

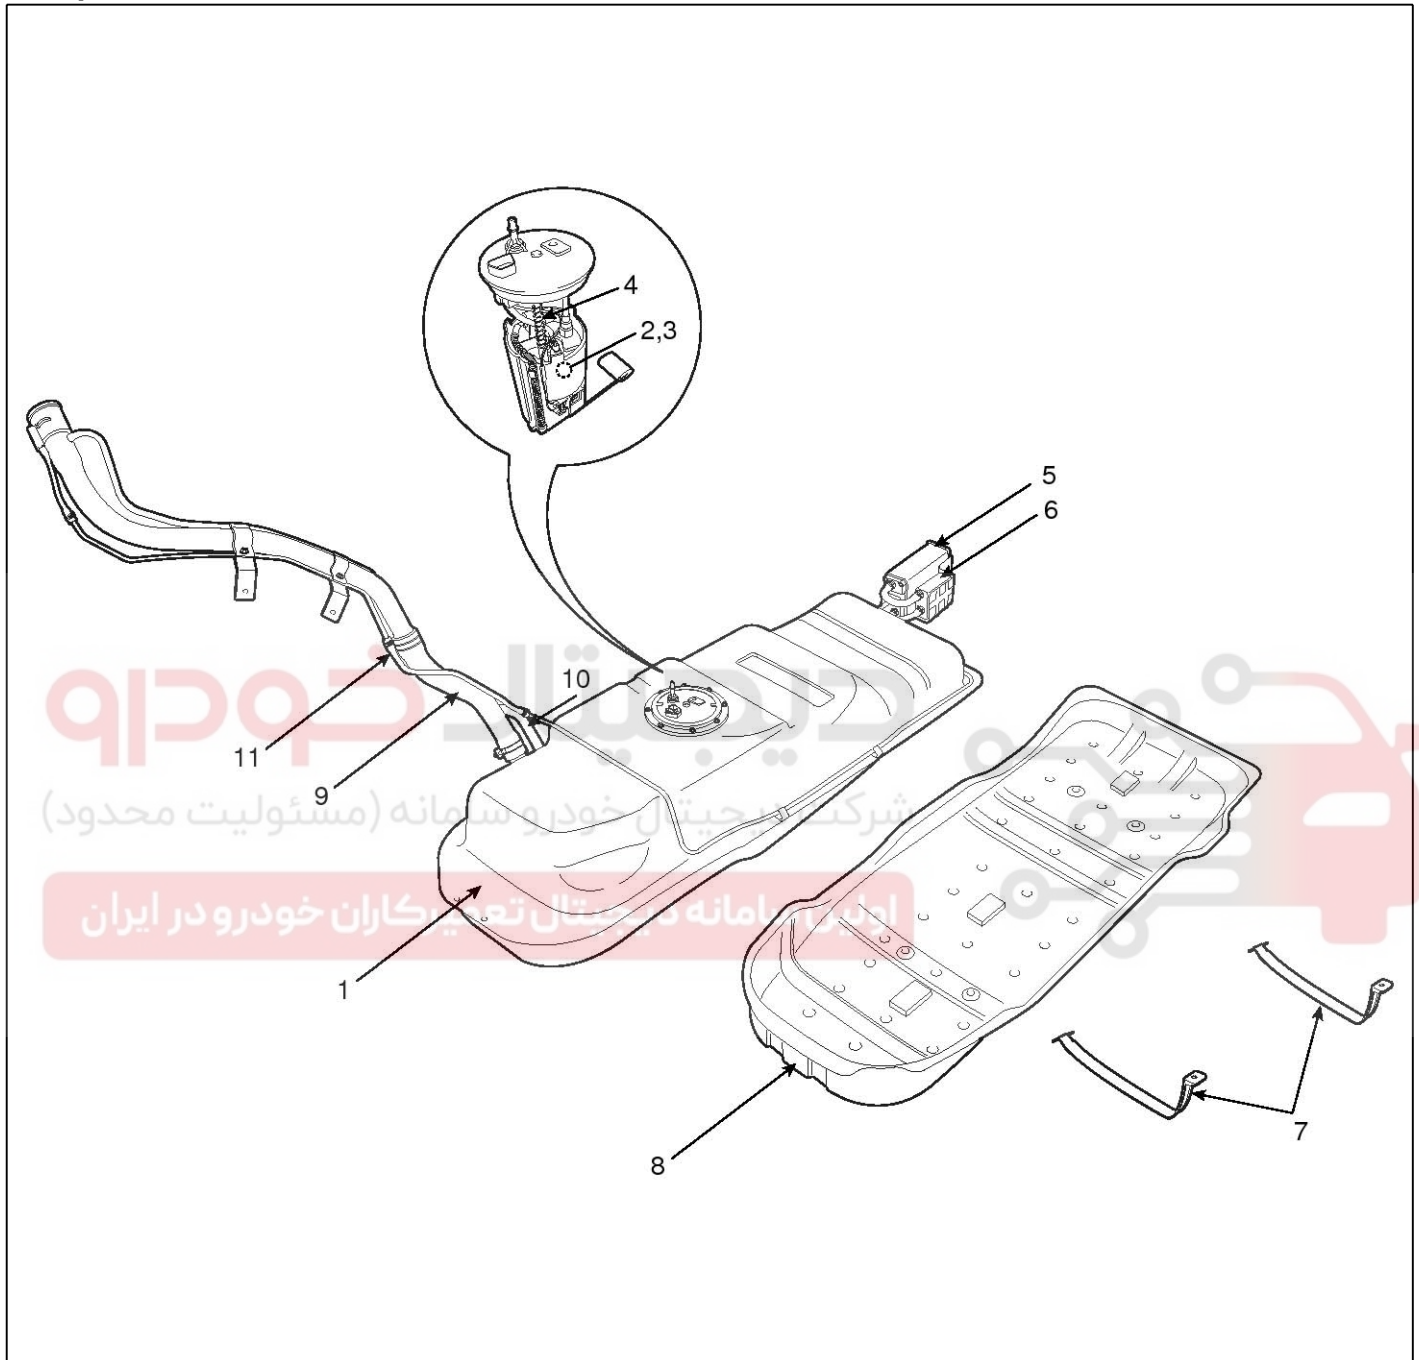

SHMFL9131L

1. Fuel Tank
2. Fuel Pump
3. Fuel Filter
4. Fuel Pressure Regulator
5. Canister
6. Fuel Tank Air Filter

7. Fuel Tank Band
8. Fuel Tank Protector
9. Fuel Filler Hose
10. Leveling Hose
11. Ventilation Hose


## FL-88

## Fuel System

## Fuel Pressure Test

## 1. PREPARING

1. Remove the 2nd left seat (Refer to "Seat" in BD group).
2. Open the carpet (A) for fuel pump and remove the service cover (B) for fuel pump.

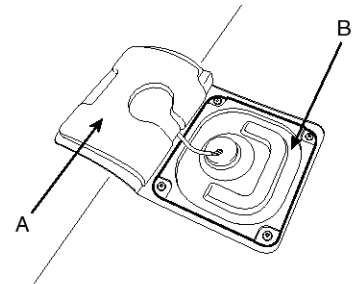


## 2. RELEASE THE INTERNAL PRESSURE

1. Disconnect the fuel pump connector (A).
2. Start the engine and wait until fuel in fuel line is exhausted.
3. After the engine stalls, turn the ignition switch to OFF position and disconnect the negative (-) terminal from the battery.



## NOTE

Be sure to reduce the fuel pressure before disconnecting the fuel feed hose, otherwise fuel will spill out.

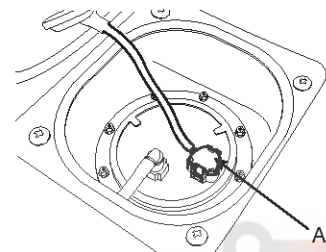

## 3. INSTALL THE SPECIAL SERVICE TOOL (SST) FOR MEASURING THE FUEL PRESSURE


1. Disconnect the fuel feed hose from the delivery pipe.



## CAUTION

Cover the hose connection with a shop towel to prevent splashing of fuel caused by residual pressure in the fuel line.

2. Install the Fuel Pressure Gauge Adapter (09353-38000) between the delivery pipe and the fuel feed hose.
3. Connect the Fuel Pressure Gauge Connector (09353-24000) to the Fuel Pressure Gauge Adapter (09353-38000).
4. Connect the Fuel Pressure Gauge and Hose (09353-24100) to Fuel Pressure Gauge Connector (09353-24000).
5. Connect the fuel feed hose to the Fuel Pressure Gauge Adapter (09353-38000).

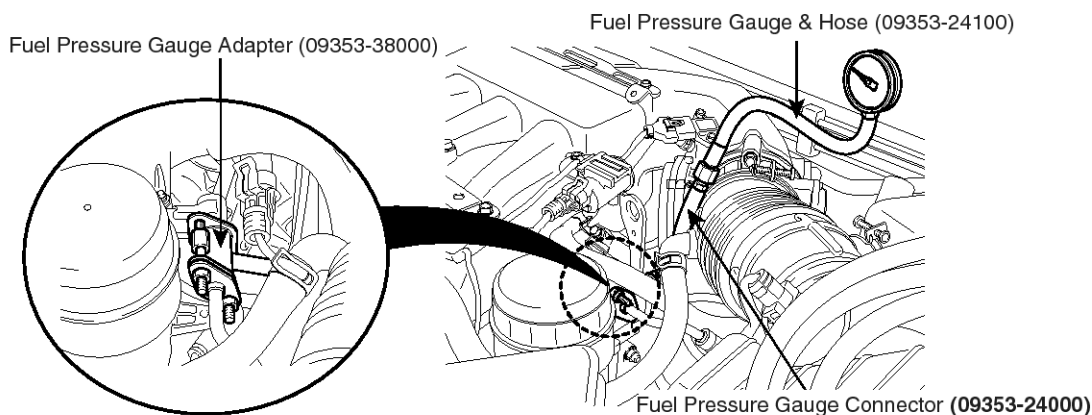

SHMFL9132L

# Fuel Delivery System

**FL-89**

## 4. INSPECT FUEL LEAKAGE ON CONNECTION

1. Connect the battery negative (-) terminal.
2. Apply battery voltage to the fuel pump terminal and activate the fuel pump. With fuel pressure applied, check that there is no fuel leakage from the fuel pressure gauge or connection part.

## 5. FUEL PRESURE TEST

1. Disconnect the negative (-) terminal from the battery.
2. Connect the fuel pump connector.
3. Connect the battery negative (-) terminal.
4. Start the engine and measure the fuel pressure at idle.

Standard Value: 379.5kPa (3.87kgf/cm<sup>2</sup>, 55.0psi)

- If the measured fuel pressure differs from the standard value, perform the necessary repairs using the table below.

Condition	Probable Cause	Suspected Area
Fuel Pressure too low	Clogged fuel filter	Fuel filter
	Fuel leak on the fuel-pressure regulator that is assembled on fuel pump because of poor seating of the fuel-pressure regulator.	Fuel Pressure Regulator
Fuel Pressure too High	Sticking fuel pressure regulator	Fuel Pressure Regulator

5. Stop the engine and check for a change in the fuel pressure gauge reading.

After engine stops, the gage reading should hold for about 5 minutes

- Observing the declination of the fuel pressure when the gage reading drops and perform the necessary repairs using the table below.

Condition	Probable Cause	Supected Area
Fuel pressure drops slowly after engine is stopped	Injector leak	Injector
Fuel pressure drops immediately after engine is stopped	The check valve within the fuel pump is open	Fuel Pump

SBHFL9126L

## FL-90

## Fuel System


### 6. RELEASE THE INTERNAL PRESSURE

1. Disconnect the fuel pump connector (A).
2. Start the engine and wait until fuel in fuel line is exhausted.
3. After the engine stalls, turn the ignition switch to OFF position and disconnect the negative (-) terminal from the battery.



#### NOTE

Be sure to reduce the fuel pressure before disconnecting the fuel feed hose, otherwise fuel will spill out.

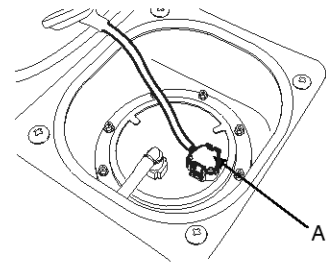

### 7. REMOVE THE SPECIAL SERVICE TOOL (SST) AND CONNECT THE FUEL LINE

1. Disconnect the Fuel Pressure Gauge and Hose (09353-24100) from the Fuel Pressure Gauge Connector (09353-24000).
2. Disconnect the Fuel Pressure Gauge Connector (09353-24000) from the Fuel Pressure Gauge Adapter (09353-38000).
3. Disconnect the fuel feed hose from the Fuel Pressure Gauge Adapter (09353-38000).
4. Disconnect the Fuel Pressure Gauge Adapter (09353-38000) from the delivery pipe.



#### CAUTION

Cover the hose connection with a shop towel to prevent splashing of fuel caused by residual pressure in the fuel line.

5. Connect the fuel feed hose to the delivery pipe.

### 8. INSPECT FUEL LEAKAGE ON CONNECTION

1. Connect the battery negative (-) terminal.
2. Apply battery voltage to the fuel pump terminal and activate the fuel pump. With fuel pressure applied, check that there is no fuel leakage from the fuel pressure gauge or connection part.
3. If the vehicle is normal, connect the fuel pump connector.

SHMFL9133L

# Fuel Delivery System


FL-91

## Fuel Tank

### Removal


#### 1. Preparation

- 1) Remove the 2nd left seat (Refer to "Seat" in BD group).
- 2) Open the carpet (A) for fuel pump and remove the service cover (B) for fuel pump.

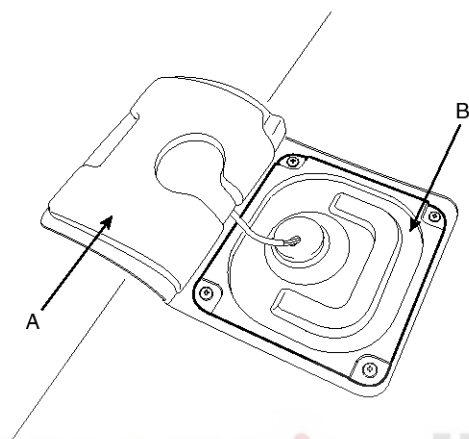

SHMFL8163D


- 3) Disconnect the fuel pump connector (A).

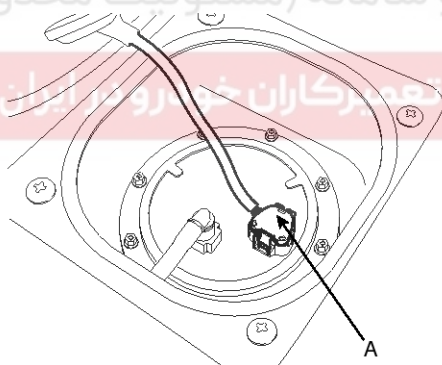

SHMFL9134L


- 4) Idle the engine and wait until fuel in fuel line is exhausted.
- 5) After engine stops, turn the ignition switch off.

2. Disconnect the fuel tube feed quick-connector (B).

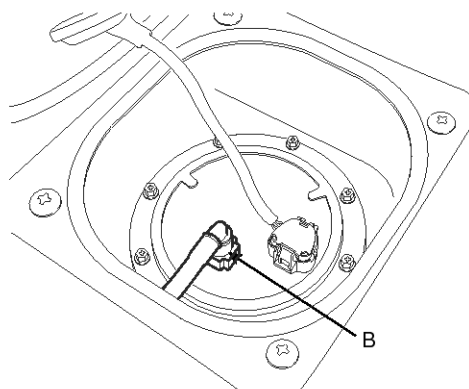

SHMFL9135L

3. Remove the rear-LH wheel & tire, and the inner wheel house (Refer to "DS" group in this SERVICE MANUAL).
4. Disconnect the leveling hose (A), the fuel filler hose (B) and the ventilation hose (C).

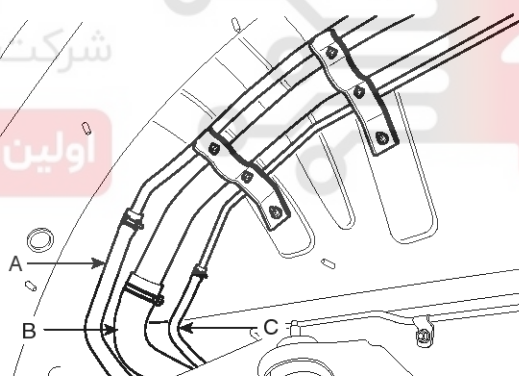


SHMFL8165D



## FL-92


## Fuel System

5. Lift the vehicle and support the fuel tank with a jack.
6. Disconnect the vapor hose (A, B, C) connected to the canister.

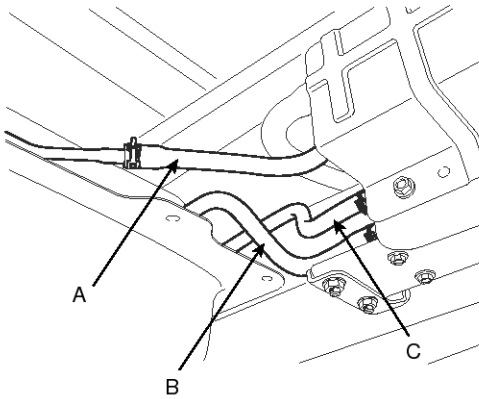


SHMFL9136L

7. Remove the protector (A) after removing 4 bolts / 4 nuts for installation.

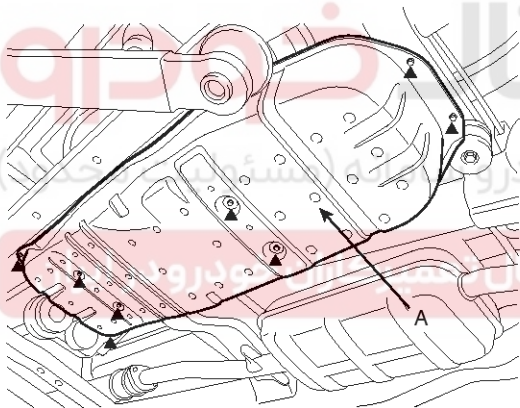

SHMFL8166D

8. Remove the fuel tank from the vehicle after removing the fuel tank band mounting nuts (A).

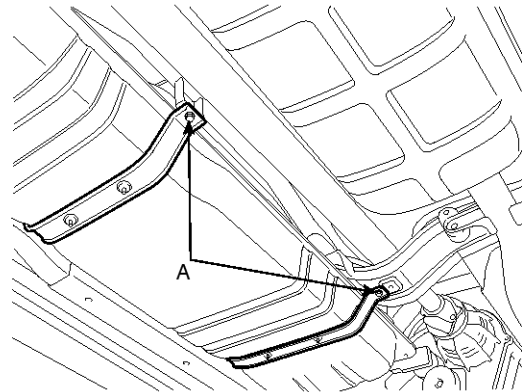

SHMFL8167D

### Installation

1. Installation is the reverse of removal.

#### Fuel tank band mounting nut:

48.1 ~ 58.9 N·m (5.0 ~ 6.0 kgf·m, 36.2 ~ 43.4 lb-ft)

#### Fuel tank protector installation bolt :


3.9 ~ 5.9 N·m (0.4 ~ 0.6 kgf·m, 2.9 ~ 4.3 lb-ft)

#### Fuel tank protector installation nut :

6.9 ~ 10.8 N·m (0.7 ~ 1.1 kgf·m, 5.1 ~ 8.0 lb-ft)

#### ⚠ CAUTION

Check the fuel tank installation position (A) with the position adjusting guide pin before reaching to the surface (B) of the frame when installing the fuel tank.

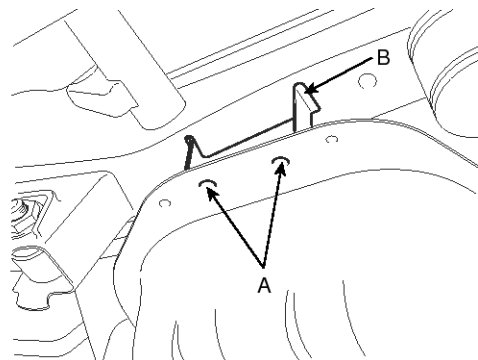

SHMFL9137L

# Fuel Delivery System


FL-93

## Fuel Pump

### Removal


#### 1. Preparation

- 1) Remove the 2nd left seat (Refer to "Seat" in BD group).
- 2) Open the carpet (A) for fuel pump and remove the service cover (B) for fuel pump.

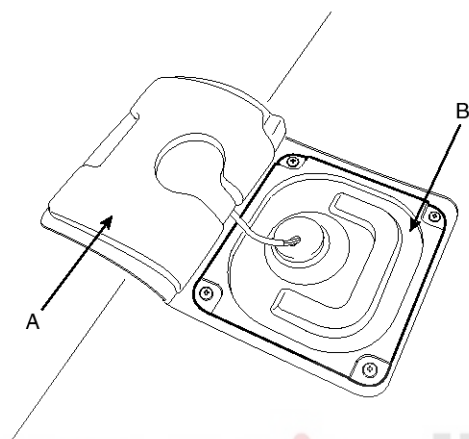

SHMFL8163D


- 3) Disconnect the fuel pump connector (A).

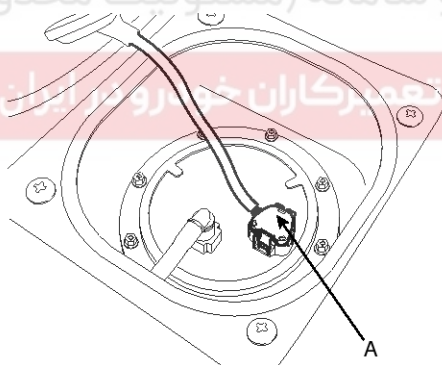

SHMFL9134L


- 4) Idle the engine and wait until fuel in fuel line is exhausted.
- 5) After engine stops, turn the ignition switch off.

2. Disconnect the fuel tube feed quick-connector (B).

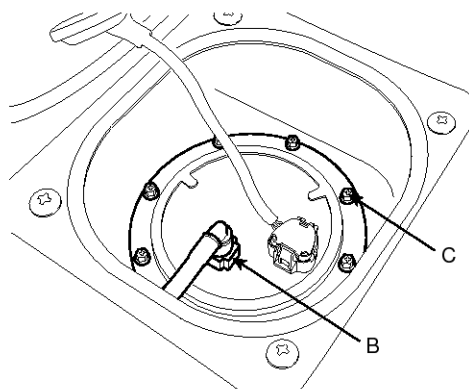

SHMFL9154L

3. Remove the fuel pump from the fuel tank after removing the installation bolts (C).

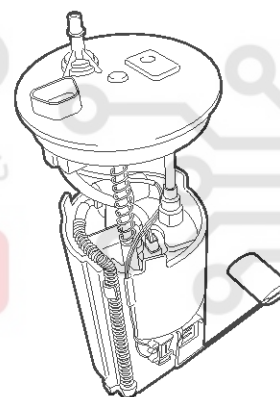

SHMFL9138L

### Installation

1. Installation is the reverse of removal.

#### Fuel pump installation bolt :

2.0 ~ 2.7 N.m (0.2 ~ 0.3 kgf.m, 1.4 ~ 2.2 lb-ft)

#### ⚠ CAUTION

When installing the fuel pump module, be careful not to get the seal-ring entangled.




# FL-94

## Fuel System

### Fuel Filter


#### Replacement

1. Remove the fuel pump (Refer to "Fuel Pump" in this group).
2. Disconnect the electric pump wiring connector (A) and the fuel sender connector (B).

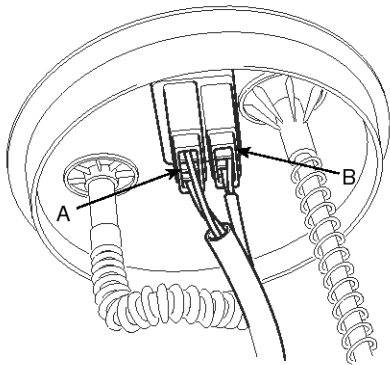


SHMFL9139L

3. Remove the fuel sender (C).

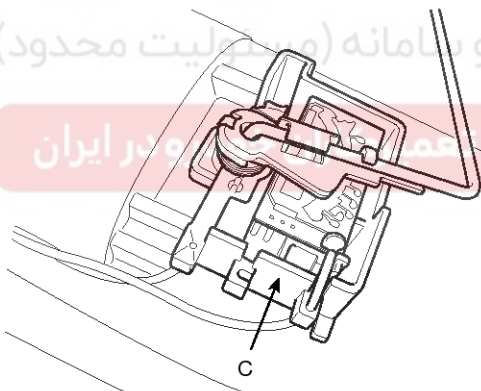


SHMFL9140L

4. Disconnect the fuel feed hose quick- connector (D).
5. Remove the fuel pressure regulator (E).

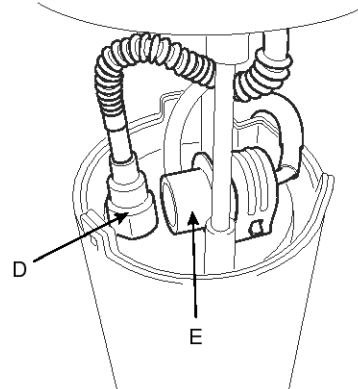

SHMFL9141L

6. Separate the reservoir cup assembly (F) from the electric pump & filter assembly (G) after disengaging two fixing hooks (H).

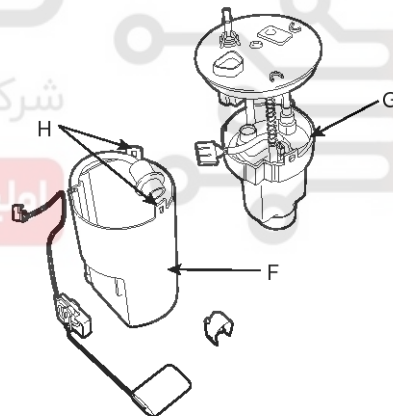


SHMFL9142L

# Fuel Delivery System


## FL-95

7. Remove the plate assembly after widening the space of cushion pipe fixing part (J).

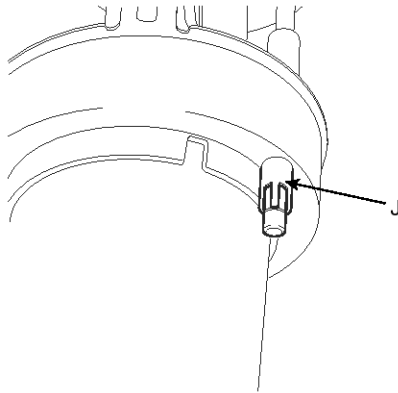


SHMFL9143L

8. Remove the fuel filter assembly (K) from the electric pump & pre-filter assembly after disengaging fixing hooks (L).

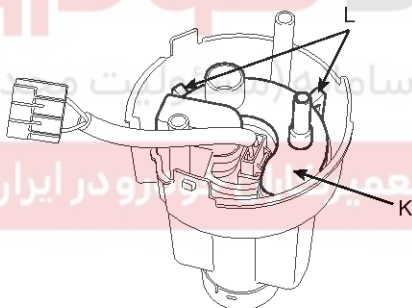

SHMFL9144L

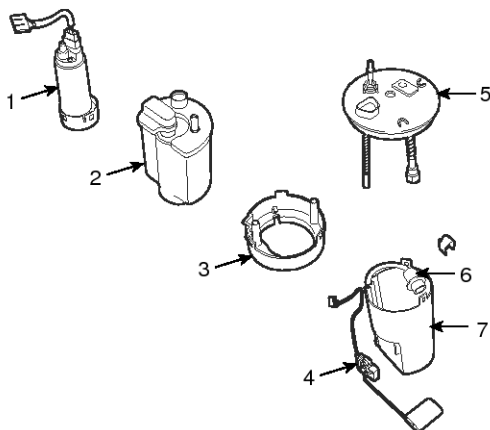

SHMFL9145L

1. Electric Pump
2. Fuel Filter
3. Filter Bracket
4. Fuel Sender
5. Plate Assembly
6. Fuel Pressure Regulator
7. Reservoir Cup


## FL-96

## Fuel System

### Filler-Neck Assembly

#### Removal

1. Remove the rear-LH wheel & tire, and the inner wheel house.
2. Disconnect the leveling hose (A), the fuel filler hose (B) and the ventilation hose (C).

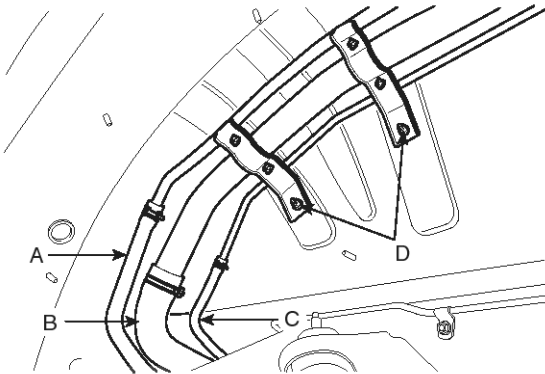

SHMFL8169D

3. Remove the bracket mounting nuts (D) and remove the filler-neck assembly.

#### Installation

1. Installation is the reverse of removal.

#### Filler-neck assembly installation nut :

6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)




# Fuel Delivery System

FL-97

## Accelerator Pedal

### Removal

1. Turn the ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the accelerator position sensor connector (A).

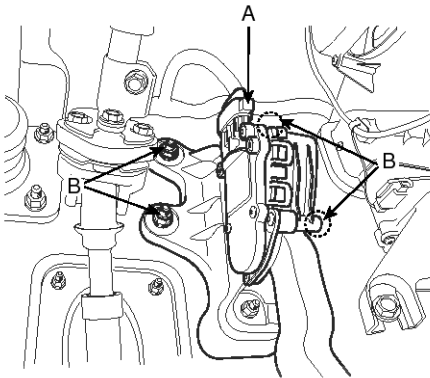

SHMFL9146L

3. Remove the accelerator pedal assembly from the vehicle after removing mounting nuts (B).

### NOTICE

The accelerator pedal module is installed by both-sides nuts. It is possible to remove the accelerator pedal module. But, installation is very difficult. We recommend you to remove the accelerator pedal assembly when servicing the accelerator pedal.

### Installation

1. Installation is the reverse of removal.

#### Accelerator pedal assembly installation nut :

12.8 ~ 15.7 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)

#### Accelerator pedal module installation nut :

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)