Engine Mechanical System

GENERAL

ENGINE AND TRANSAXLE ASSEMBLY

TIMING SYSTEM
TIMING CHAIN

CYLINDER HEAD ASSEMBLY

COOLING SYSTEM

LUBRICATION SYSTEM

INTAKE AND EXHAUST SYSTEM

INTAKE MANIFOLD EXHAUST MANIFOLD EXHAUST PIPE



شرکت دیجیتال خودرو سامانه (مسئولیت محدود

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران



ENGINE MECHANICAL SYSTEM

EM -2 GENERAL

SPECIFICATIONS E401C3BE

Description			Specifications	Limit
			3.8L	
General				
Туре			V-type, DOHC	
Number of cylin	ders		6	
Bore			96mm(3.7795in)	
Stroke			87.0mm(3.4252in)	
Total displaceme	ent		3,778cc(230.55cu.in.)	
Compression ra	tio		10.4	
Firing order			1-2-3-4-5-6	
Idle RPM			700 RPM	
Valve timing				
Intake	Opens(ATDC	C)	10°	
	Closes(ABD	C)	62°	
Exhaust	Opens(BBD)	C)	42°	
	Closes(ATD0	و ساما(۵	6° 0 2	
Cylinder head				
Flatness of gasket surface		اتعميرد	Less than 0.05mm (0.0019in.) [Less than 0.02mm (0.0008in.) / 150x150]	
Flatness of manifold	Intake		Less than 0.1mm(0.0039in.) [Less than 0.03mm(0.001in)/110x110]	
mounting	Exhaust		Less than 0.1mm(0.0039in.) [Less than 0.03mm(0.001in)/110x110]	
Camshaft				
Cam height	LH	Intake	46.8mm(1.8425in.)	
	Camshaft	Exhaust	45.8mm (1.8031in.)	
	RH	Intake	46.8mm(1.8425in.)	
	Camshaft	Exhaust	45.8mm (1.8031in.)	
Journal outer diameter	LH, RH Camshaft	Intake	No.1: 27.964 ~ 27.978mm (1.1009 ~ 1.1015in.) No.2,3,4: 23.954 ~ 23.970mm (0.9430 ~ 0.9437in.)	
	Exhaust		No.1: 27.964 ~ 27.978mm (1.1009 ~ 1.1015in.) No.2,3,4: 23.954 ~ 23.970mm (0.9430 ~ 0.9437in.)	
Bearing oil clearance	LH, RHcamshaft	Intake	No.1: 0.027 ~ 0.057mm (0.0011 ~ 0.0022in.) No.2,3,4: 0.030 ~ 0.067mm (0.0012 ~ 0.0026in.)	
	Exhaust		No.1: 0.027 ~ 0.057mm (0.0011 ~ 0.0022in.) No.2,3,4: 0.030 ~ 0.067mm (0.0012 ~ 0.0026in.)	
End play	•		0.02 ~ 0.18mm (0.0008 ~ 0.0071in.)	
Valve			,	

GENERAL EM -3

D	occrintian	Specifications	l imit
Description		3.8L	Limit
Valve length Intake		105.27mm(4.1445in.)	
	Exhaust	105.50mm (4.1535in.)	
Stem outer	Intake	5.465 ~ 5.480mm (0.2151 ~ 0.2157in.)	
diameter	Exhaust	5.458 ~ 5.470mm (0.2149 ~ 0.2153in.)	
Face angle		45.25° ~ 45.75°	
Thickness of	Intake	1.56 ~ 1.86mm(0.06142 ~ 0.07323in.)	
valvehead(mar- gin)	Exhaust	1.73 ~ 2.03mm(0.06811 ~ 0.07992in.)	
Valve stem to valve guide	Intake	0.020 ~ 0.047mm (0.00078 ~ 0.00185in.)	0.07mm (0.00275in.)
clearance	Exhaust	0.030 ~ 0.054mm (0.00118 ~ 0.00212in.)	0.09mm (0.00354in.)
Valve guide	•		•
Inner diameter	Intake	5.500 ~ 5.512mm (0.2165 ~ 0.2170in.)	
	Exhaust	5.500 ~ 5.512mm (0.2165 ~ 0.2170in.)	
Length	Intake	41.8 ~ 42.2mm (1.6457 ~ 1.6614in.)	
Exhaust		41.8 ~ 42.2mm (1.6457 ~ 1.6614in.)	
Valve seat			
Width of seat	Intake	1.15 ~ 1.45mm(0.05118 ~ 0.05709in.)	
contact	Exhaust	1.35 ~ 1.65mm(0.05315 ~ 0.06496in.)	
Seat angle	Intake 4	44.75° ~ 45.20°	
	Exhaust	44.75° ~ 45.20°	
Valve spring		1	1
Free length		43.86mm (1.7267in.)	
		19.3±0.8kg/34.0mm (42.7±1.8 lb/1.3386in.)	
Load		42.3±1.3kg/24.2mm (93.3±2.9 lb/0.9527in.)	
Out of squarene	SS	Less than 1.5°	
MLA			
MLA outer	Intake	34.964 ~ 34.980mm (1.3765 ~ 1.3772in.)	
diameter	Exhaust	34.964 ~ 34.980mm (1.3765 ~ 1.3772in.)	
Cylinder head	Intake	35.000 ~ 35.025mm (1.3779 ~ 1.3789in.)	
tappet bore inner diameter	Exhaust	35.000 ~ 35.025mm (1.3779 ~ 1.3789in.)	
MLA to tappet bore clearance	Intake	0.020 ~ 0.061mm (0.0008 ~ 0.0024in.)	0.07mm (0.0027in.)
	Exhaust	0.020 ~ 0.061mm (0.0008 ~ 0.0024in.)	0.07mm (0.0027in.)
Valve clearance	•		
Intake		0.17 ~ 0.23mm (0.0067 ~ 0.0090in.)	0.10 ~ 0.30mm (0.0039~0.0118in
		,	(0.0039~0.0118)

ENGINE MECHANICAL SYSTEM

Description		Specifications	l imit
Exhaust		3.8L	Limit
		0.27 ~ 0.33mm (0.0106 ~ 0.0129in.)	0.20 ~ 0.40mm (0.0078 ~ 0.0157in.)
Cylinder block			·
Cylinder bore		96.00 ~ 96.03mm(3.7795 ~ 3.7807in.)	
Flatness of gask	et surface	Less than 0.05mm (0.0019in.) [Less than 0.02mm (0.0008in.) / 150x150]	
Piston			
Piston outer diar	meter	95.96 ~ 95.99mm(3.7779 ~ 3.7791in.)	
Piston to cylinde	r clearance	0.03 ~ 0.05mm(0.0012 ~ 0.0020in.)	
Ring groove width	No. 1 ring groove	1.22 ~ 1.24mm(0.0480 ~ 0.0488in.)	1.26mm (0.0496in.)
	No. 2 ring groove	1.22 ~ 1.24mm (0.0480 ~ 0.0488in.)	1.26mm (0.0496in.)
	Oil ring groove	2.01 ~ 2.03mm (0.0791 ~ 0.0799in.)	2.05mm (0.0807in.)
Piston ring			
Side clearance	No. 1 ring	0.03 ~ 0.07mm(0.0012 ~ 0.0027in.)	0.1mm (0.004in.)
	No. 2 ring	0.03 ~ 0.07mm (0.0012 ~ 0.0027in.)	0.1mm (0.004in.)
	Oil ring	0.06 ~ 0.15mm (0.0024 ~ 0.0059in.)	0.2mm (0.008in.)
End gap	No. 1 ring	0.17 ~ 0.32mm (0.0067 ~ 0.0126in.)	0.6mm (0.0236in.)
ودر ایران	No. 2 ring	0.32 ~ 0.47mm (0.0126 ~ 0.0185in.)	0.7mm (0. <mark>0275i</mark> n.)
	Oil ring	0.20 ~ 0.70mm (0.0078 ~ 0.0275in.)	0.8mm (0.0315in.)
Piston pin			
Piston pin outer	diameter	23.001 ~ 23.006mm(0.9055 ~ 0.9057in.)	
Piston pin hole in	nner diameter	23.016 ~ 23.021mm(0.9061 ~ 0.9063in.)	
Piston pin hole of	clearance	0.01 ~ 0.02mm(0.0004 ~ 0.0008in.)	
Connecting rod s	small end inner diameter	22.974 ~ 22.985mm (0.9045 ~ 0.9049in.)	
Connecting rod s	small end hole clearance	-0.032 ~ -0.016mm (-0.0012 ~ 0.0006in.)	
Connecting roo	I		
Connecting rod b	oig end inner diameter	58.000 ~ 58.018mm(2.2834 ~2.2842in.)	
Connecting rod bearing oil clearance		0.038 ~ 0.056mm (0.0015 ~ 0.0022in.)	
Side clearance		0.1 ~ 0.25mm (0.0039 ~ 0.0098in.)	
Crankshaft			
Main journal out	er diameter	68.942 ~ 68.960mm (2.7142 ~ 2.7149in.)	
Pin journal outer diameter		54.954 ~ 54.972mm (2.1635 ~ 2.1642in.)	
Main bearing oil clearance		0.022 ~ 0.040mm (0.0008 ~ 0.0016in.)	
End play		0.10 ~ 0.28mm (0.0039 ~ 0.0110in.)	
Oil pump			

GENERAL EM -5

Description		Specifications	1 : :4	
De	escription	3.8L	Limit	
Relief valve opening pressure		450 ~ 550kPa (4.59 ~ 5.61kgf/cm²,65.28 ~ 79.79psi)		
Engine oil				
Oil quantity (Tota	ıl)	6.0L(6.34U.S.qts,5.28Imp.qts)	When replacing a short engine or a block assembly.	
Oil quantity (Oil p	oan)	5.5L(5.81U.S.qts,4.84Imp.qts)	When replacing an oil pan only.	
Oil quantity (Drai	n and refill)	5.2L(5.49U.S.qts,4.58Imp.qts)		
Oil quality		Above SJ or SL		
Oil pressure		130kPa(1.32kgf/cm²,18.77psi) [at 1000rpm,110°C(230°F)]		
Cooling system				
Cooling method		Forced circulation with electrical fan		
Coolant quantity		8.7L(9.19U.S.qts,7.66lmp.qts)		
Thermostat	Type	Wax pellet type		
	Opening temperature	82±2°C (179.6±35.6°F)		
	Fully opened temperature	95°C (203°F)		
یت محدود)	Full lift	10mm (0.3937in.) MIN		
Radiator cap	Main valve opening pressure	93.16 ~ 122.58kpa (0.95 ~ 1.25kg/cm², 13.51 ~ 17.78psi)		
Vacuum valve opening pressure		0.98 ~ 4.90 kpa (0.01 ~ 0.05kg/cm², 0.14 ~ 0.71 psi)		
Water temperati	ure sensor			
Туре		Thermister type		
Resistance	20°C (68°F)	2.31 ~ 2.59K		
	80°C(176°F)	0.3222 K		

ENGINE MECHANICAL SYSTEM

TIGHTENING TORQUE

Item	Quantity	Nm	kgf.m	lb-ft
Crankshaft pulley bolt	1	284.2 ~ 303.8	29.0 ~ 31.0	209.76 ~ 224.22
Timing chain cover bolt B	17	18.62 ~ 21.56	1.9 ~ 2.2	13.74 ~ 15.91
Timing chain cover bolt C	4	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Timing chain cover bolt D	1	58.80 ~ 68.80	6.0 ~ 7.0	43.40 ~ 50.63
Timing chain cover bolt E	1	58.80 ~ 68.80	6.0 ~ 7.0	43.40 ~ 50.63
Timing chain cover bolt F	2	24.50 ~ 26.46	2.5 ~ 2.7	18.08 ~ 19.53
Timing chain cover bolt G	4	21.56 ~ 23.52	2.2 ~ 2.4	15.91 ~ 17.36
Timing chain cover bolt H	1	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Timing chain cover bolt I	1	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Timing chain cover bolt J	1	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Cam to cam guide bolt	4	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Timing chain auto tensioner bolt	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Timing chain auto tensioner nut	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Timing chain guide bolt	4	19.60 ~ 24.50	2.0 ~ 2.5	14.17 ~ 18.08
Oil pump chain cover bolt	3	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Oil pump chain tensioner bolt	1	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Oil pump chain guide bolt	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Oil pump chain sprocket bolt	حودرو	18.62 ~ 21.56	1.9 ~ 2.2	13.74 ~ 15.91
Lower oil pan bolt	13	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Drive belt auto tensioner bolt(M12)	جيت∤لت	81.4 ~ 85.3	8.3 ~ 8.7	60.0 ~ 62.9
Drive belt auto tensioner bolt(M8)	1	17.64 ~ 21.56	1.8 ~ 2.2	13.02 ~ 15.91
Drive belt idler bolt	1	53.90 ~ 57.82	5.5 ~ 5.9	39.78 ~ 42.67
OCV(oil control valve) bolt	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Cylinder head bolt	16	39.2 + 120° + 90°	4.0 + 120° + 90°	28.93+ 120° + 90°
Cylinder head bolt	1	18.62 ~ 23.52	1.9 ~ 2.4	13.74 ~ 17.36
CVVT & exhaust cam sprocket bolt	4	64.68 ~ 76.44	6.6 ~ 7.8	47.74 ~ 56.42
Camshaft bearing cap bolt	32	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Cylinder head cover bolt	38	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Connecting rod bearing bolt	12	19.60 + 90°	2.0 + 90°	14.46 + 90°
Main bearing cap inner bolt(M11)	8	49.00 + 90°	5.0 + 90°	36.16 + 90°
Main bearing cap outer bolt(M8)	8	19.60 + 120°	2.0 + 120°	14.46 + 120°
Main bearing cap side bolt(M8)	6	29.40 ~ 31.36	3.0 ~ 3.2	21.70 ~ 23.14
Oil drain cover bolt	6	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Rear oil seal case bolt	6	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Baffle plate bolt	12	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Upper oil pan bolt	16	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68

GENERAL EM -7

Item	Quantity	Nm	kgf.m	lb-ft
Knock sensor bolt	2	15.68 ~ 23.52	1.6 ~ 2.4	11.57 ~ 17.36
Drive plate bolt cap	8	71.54 ~ 75.46	7.3 ~ 7.7	52.80 ~ 55.69
Oil filter cap		24.50	2.5	18.08
Oil drain bolt cap	1	34.30 ~ 44.10	3.5 ~ 4.5	25.31 ~ 32.55
Oil pump bolt	3	20.6 ~ 22.6	2.1 ~ 2.3	15.2 ~ 16.6
Oil filter body bolt	10	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Oil filter body cover bolt	11	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Water vent hose bolt(Timing chain cover bolt L)	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Water pump bolt(Timing chain cover bolt K)	1	21.56 ~ 26.46	2.2 ~ 2.7	15.91 ~ 19.53
Water pump bolt	4	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Water pump pulley bolt	4	7.84 ~ 9.80	0.8 ~ 1.0	5.78 ~ 7.23
Water temp. control nut	4	19.6 ~ 23.52	2.0 ~ 2.4	14.5 ~ 17.36
Water temp. control bolt	2	19.6 ~ 23.52	2.0 ~2.4	14.5 ~ 17.36
Water inlet pipe bolt	3	16.66 ~ 19.60	1.7 ~ 2.0	12.30 ~ 14.47
Air vent pipe bolt	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ <mark>8.</mark> 68
Intake manifold bolt	6	26.5 ~ 31.4	2.7 ~ 3.2	19.5 ~ 23.1
Intake manifold nut	2.	18.62 ~ 23.52	1.9 ~ 2.4	13.74 ~ 17.36
Surge tank bolt (M8 × 25)	3	18.62 ~ 23.52	1.9 ~ 2.4	13.74 ~ 17.36
Surge tank bolt (M6 × 106)	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Surge tank nut	1	18.62 ~ 23.52	1.9 ~ 2.4	13.74 ~ 17.3 6
Breather pipe bolt	2	9.80 ~ 11.76	1.0 ~ 1.2	7.23 ~ 8.68
Surge tank bracket bolt rear (M10 x 18)	2	27.44 ~ 31.36	2.8 ~ 3.2	20.25 ~ 23.14
Surge tank bracket bolt front (M8 x 16)	2	18.62 ~ 23.52	1.9 ~ 2.4	13.74 ~ 17.36
ETC bracket bolt	2	15.68 ~ 25.48	1.6 ~ 2.6	11.57 ~ 18.80
Exhaust manifold nut	16	39.20 ~ 44.10	4.0 ~ 4.5	28.93 ~ 32.55
Heat proctor bolt	8	16.66 ~ 21.56	1.7 ~ 2.2	12.30 ~ 15.91
Front muffler	2	39.20 ~ 58.80	4.0 ~ 6.0	28.93 ~ 43.40

ENGINE MECHANICAL SYSTEM

EM -8


INSPECTION F404D6D0

COMPRESSION PRESSURE

NOTE

If the there is lack of power, excessive oil consumption or poor fuel economy, measure the compression pressure.

- Warm up and stop engine. Allow the engine to warm up to normal operating temperature.
- 2. Remove the surge tank.
- 3. Remove the ignition coil connectors(A) and ignition coils(B).

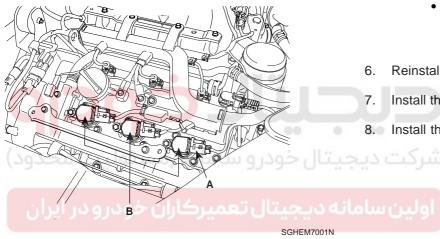

- Remove the spark plugs. Using a 16mm plug wrench, remove the 6 spark plugs.
- Check cylinder compression pressure.
 - Insert a compression gauge into the spark plug hole.
 - Fully open the throttle. 2)
 - After 7 times of cranking the engine, measure the compression pressure.

NOTE

Always use a fully charged battery to obtain engine speed of 250 rpm or more.

Repeat steps 1) through 3) for each cylinder. 4)

MOTE

This measurement must be done in as short a time as possible.

Compression pressure:

1,225kPa (12.5kgf/cm², 177psi) Minimum pressure:

1,078kPa (11.0kgf/cm², 156psi)

- If the cylinder compression in 1 or more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and repeat steps (1) through (3) for cylinders with low compression.
 - If adding oil helps the compression, it is likely that the piston rings and/or cylinder bore are worn or damaged.
 - If pressure stays low, a valve may be sticking or seating is improper, or there may be leakage past the gasket.
- Reinstall the spark plugs.
- Install the ignition coil and ignition coil connectors.
- 8. Install the surge tank.

GENERAL EM -9


VALVE CLEARANCE INSPECTION AND ADJUSTMENT

NOTE

Inspect and adjust the valve clearance when the engine is cold (Engine coolant temperature : 20°C) and cylinder head is installed on the cylinder block.

- 1. Remove the engine cover.
- 2. Remove air cleaner assembly.
- 3. Remove the surge tank.
- 4. Remove the cylinder head cover.
 - Disconnect the ignition coil connector and remove the ignition coil.
 - 2) Disconnect the breather pipe assembly(A) from the cylinder head cover.


- 5. Set No.1 cylinder to TDC/compression.
 - Turn the crankshaft pulley and align its groove with the timing mark "T" of the lower timing chain cover.

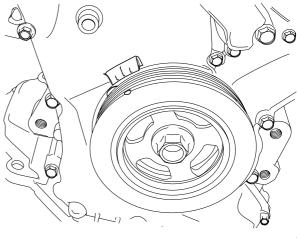

KDRF108A


 Check that the mark(A) of the camshaft timing sprockets are in straight line on the cylinder head surface as shown in the illustration.

If not, turn the crankshaft one revolution (360°)

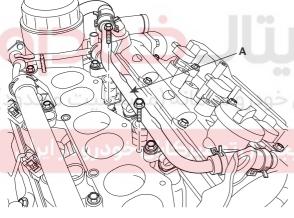


ECBF031A

3) Loosen the cylinder head cover bolts and then remove the cover(A) and gasket.

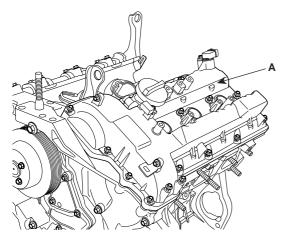

KDRF112A

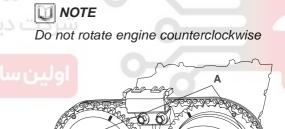


KDRF113A

EM-10

ENGINE MECHANICAL SYSTEM

- 6. Inspect the valve clearance.
 - Check only the valve indicated as shown. [No. 1 cylinder: TDC/Compression] measure the valve clearance.

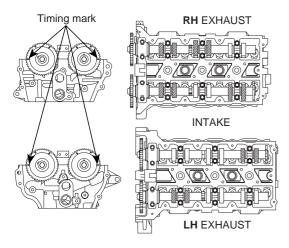

EDRF021A

Measurement method.

- Using a thickness gauge, measure the clearance between the tappet and the base circle of camshaft.
 - Record the out-of-specification valve clearance measurements. They will be used later to determine the required replacement adjusting tappet.

Valve clearance Specification

Engine coolant temperature: 20°C [68°F]

Limit


Intake : $0.17 \sim 0.23$ mm ($0.0067 \sim 0.0090$ in.) Exhaust : $0.27 \sim 0.33$ mm ($0.0106 \sim 0.0129$ in.)

 Turn the crankshaft pulley one revolution (360°) and align the groove with timing mark "T" of the lower timing chain cover.



Do not rotate engine counterclockwise

 Check only valves indicated as shown. [NO. 4 cylinder: TDC/compression]. Measure the valve clearance. (Refer to procedure step1))

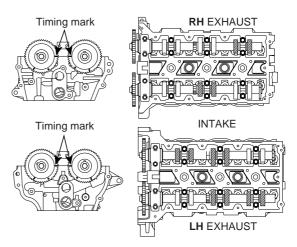


EDRF022A

- 7. Adjust the intake and exhaust valve clearance.
 - 1) Set the No.1 cylinder to the TDC/compression.
 - 2) Remove the timing chain.



Before removing the timing chain, mark the RH/LH timing chain with an identification based on the location of the sproket because the identification mark on the chain for TDC(Top Dead Center) can be erased.


3) Remove the camshaft bearing caps(A).

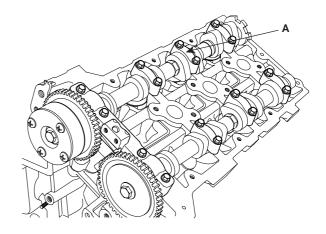

KDRF196A

GENERAL EM -11

Remove the camshaft assembly(A).

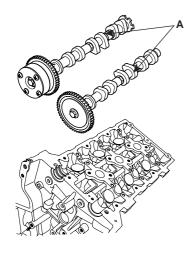

KDRF197A

- Remove MLAs.
- Measure the thickness of the removed tappet using a micrometer.

Select a new tappet with a thickness as close as possible to the calculated value.

NOTE


Shims are available in 41size increments of 0.015mm (0.0006in.) from 3.00mm (0.118in.) to 3.600mm (0.1417in.)

9) Place a new tappet on the cylinder head.

| NOTE

Apply engine oil at the selected tappet on the periphery and top surface.

- 10) Install the intake and exhaust camshaft.
- 11) Install the bearing caps.(Refer to Cylinder head assembly in this Group)
- 12) Install the timing chain.(Refer to Timing system in this Group)
- 13) Turn the crankshaft two turns in the operating direction(clockwise) and realign crankshaft sprocket and camshaft sprocket timing marks(A).

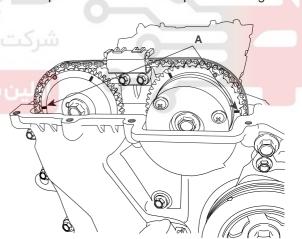

KDRF113A

FDKF889D

Calculate the thickness of a new tappet so that the valve clearance comes within the specified value.

Valve clearance(Engine coolant tempera-

ture: 20°C[68°F])

T: Thickness of removed tappet A: Measured valve clearance N: Thickness of new tappet

Intake : N = T + [A - 0.20mm(0.0079in.)]Exhaust: N = T + [A - 0.30mm (0.0118in.)] 14) Recheck the valve clearance.

Valve clearance (Engine coolant tempera-

ture: 20°C[68°F]) [Specification]

Intake: 0.17 ~ 0.23mm (0.0067 ~ 0.0090in.) Exhaust: 0.27 ~ 0.33mm (0.0106 ~ 0.0129in.)

ENGINE MECHANICAL SYSTEM

• Repair or replace as required.

TROUBLESHOOTING

Symptom Suspect area Remedy Replace the crankshaft and bearings Engine misfire with abnormal Worn crankshaft bearings. internal lower engine noises. Loose or damaged engine drive plate. as required. Repair or replace the drive plate as required. Inspect the cylinder for a loss of Worn piston rings. (Oil consumption may or may not cause compression. the engine to misfire.) Repair or replace as required. Replace the crankshaft and bearings Worn crankshaft thrust bearings as required. Engine misfire with abnormal Stuck valves. Repair or replace as required. valve train noise. (Carbon buildup on the valve stem) Excessive worn or mis-aligned Replace the timing chain and timing chain. sprocket as required. Worn camshaft lobes. Replace the camshaft and valve lifters. Engine misfire with coolant · Faulty cylinder head gasket and/or Inspect the cylinder head and cranking or other damage to the engine block for damage to consumption. cylinder head and engine block the coolant passages and/or a cooling system. faulty head gasket. Coolant consumption may or may not Repair or replace as required. cause the engine to overheat. Repair or replace as required. Engine misfire with excessive Worn valves, guides and/or valve oil consumption. stem oil seals. Inspect the cylinder for a loss Worn piston rings. (Oil consumption may or may not cause of compression. the engine to misfire) Repair or replace as required. Incorrect oil viscosity. · Drain the oil. Engine noise on start-up, but only lasting a few seconds. • Install the correct viscosity oil. Worn crankshaft thrust bearing. · Inspect the thrust bearing and crankshaft.

GENERAL EM -13

Symptom	Suspect area	Remedy
Upper engine noise,regard-	Low oil pressure.	Repair or replace as required.
less of engine speed.	Broken valve spring.	Replace the valve spring.
	Worn or dirty valve lifters.	Replace the valve lifters.
	Stretched or broken timing chain and/or damaged sprocket teeth.	Replace the timing chain and sprockets.
	Worn timing chain tensioner, if applicable.	Replace the timing chain tensioner as required.
	Worn camshaft lobes.	 Inspect the camshaft lobes. Replace the timing camshaft and valve lifters as required.
	Worn valve guides or valve stems.	Inspect the valves and valve guides,then repair as required.
	Stuck valves. Carbon on the valve stem or valve seat may cause the valve to stay open.	Inspect the valves and valve guides, then repair as required.
	Worn drive belt, idler, tensioner and bearing.	Replace as required.
Lower engine noise,regard-	Low oil pressure.	Repair as required.
less of engine speed.	Loose or damaged drive plate.	Repair or replace the drive plate.
	Damaged oil pan, contacting the oil pump screen.	Inspect the oil pan.Inspect the oil pump screen.Repair or replace as required.
	Oil pump screen loose, damaged or restricted.	Inspect the oil pump screen.Repair or replace as required.
کاری خوجار ایران	Excessive piston-to-cylinder bore clearance.	 Inspect the piston, piston pin and cylinder bore. Repair as required.
	Excessive piston pin-to-piston clearance.	 Inspect the piston, piston pin and the connecting rod. Repair or replace as required.
	Excessive connecting rod bearing clearance	Inspect the following components and repair as required. • The connecting rod bearings. • The connecting rods. • The crankshaft pin journals.
	Excessive crankshaft bearing clearance.	Inspect the following components, and repair as required. • The crankshaft bearings. • The crankshaft main journals. • The cylinder block.
	Incorrect piston, piston pin and connecting rod installation	 Verify the piston pins and connecting rods are installed correctly. Repair as required.

ENGINE MECHANICAL SYSTEM

Symptom	Suspect area	Remedy
Engine noise under load.	Low oil pressure	Repair or replace as required.
	Excessive connecting rod bearing clearance .	Inspect the following components and repair as required: • The connecting rod bearings. • The connecting rods. • The crankshaft.
	Excessive crankshaft bearing clearance.	Inspect the following components, and repair as required. • The crankshaft bearings. • The crankshaft main journals. • The cylinder block.
Engine will not crank-crankshaft will not rotate.	Hydraulically locked cylinder. Coolant/antifreeze in cylinder. Oil in cylinder. Fuel in cylinder.	 Remove spark plugs and check for fluid. Inspect for broken head gasket. Inspect for cracked engine block or cylinder head. Inspect for a sticking fuel injector and/or leaking fuel regulator.
	Broken timing chain and/or timing chain and/or timing chain gears.	 Inspect timing chain and gears. Repair as required.
	Material in cylinder. Broken valve Piston material Foreign material	Inspect cylinder for damaged components and/or foreign materials. Repair or replace as required.
رانستونیت معدود)	Seized crankshaft or connecting rod bearings.	 Inspect crankshaft and connecting rod bearing. Repair as required.
03 7 37 7 03	Bent or broken connecting rod.	 Inspect connecting rods. Repair as required.
	Broken crankshaft.	 Inspect crankshaft. Repair as required.

GENERAL EM -15

SPECIAL SERVICE TOOLS E787872C

Tool (Number and name)	Illustration	Use
Crankshaft front oil seal installer (09231-3C100)		Installation of the front oil seal
Chuuhaal atannar	KDRF233A	Demoval and installation of the flywheel
Flywheel stopper (09231-3C300)	The same of the sa	Removal and installation of the flywheel and crankshaft pulley.
	KCRF030D	
Torque angle adapter (09221-4A000)	LCAC030A	Installation of bolts & nuts needing an angular method
Valve stem seal remover (09222-29000)	KDRF232A	Removal of the valve stem seal
Valve stem seal installer		Installation of the valve stem seal
(09222-3C100)	LCAC030D	

ENGINE MECHANICAL SYSTEM

Tool (Number and name)	Illustration	Use
Valve spring compressor & holder (09222-3K000) (09222-3C300)	A B ECRF003A	Removal and installation of the intake or exhaust valves A: 09222-3K000 B: 09222-3C300 (holder)
Crankshaft rear oil seal installer (09231-3C200) (09231-H1100)	ACRF003A	Installation of the crankshaft rear oil seal A: 09231-3C200 B: 09231-H1100
Oil pan remover	7	Removal of oil pan
(09215-3C000) (a)	شرکت در پیتال خودر و ساما	
	KDRF219A	
Oil filter wrench (09263-3C100)		Removal and installation of the oil filter
	B6327000	

ENGINE AND TRANSAXLE ASSEMBLY

REMOVAL E31DBAFC




CAUTION

- Use fender covers to avoid damaging painted surfaces.
- · To avoid damage, unplug the wiring connectors carefully while holding the connector


NOTE

- · Mark all wiring and hoses to avoid misconnection.
- Remove the engine cover(A).

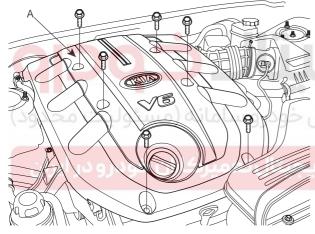


SGHAT7001N


Remove the air duct(A).

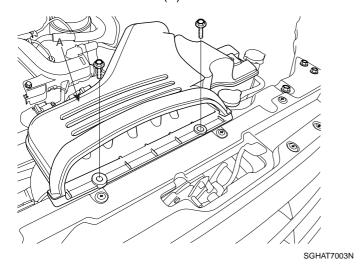

Disconnect the neagative terminal from the battery(A).

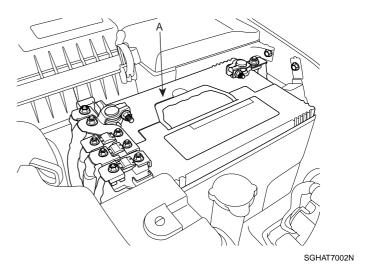


- Recover refrigerant and remove the high & low pressure pipe. (Refer to Air conditioner compressor in HA Group)
- Remove the intake air hose and air cleaner assembly.
 - Disconnect the AFS connector(A).
 - 2) Disconnect the breather hose(B) from air cleaner hose.
 - Disconnect the ECM connector.
 - Remove the intake air hose(C) and air cleaner body(D).

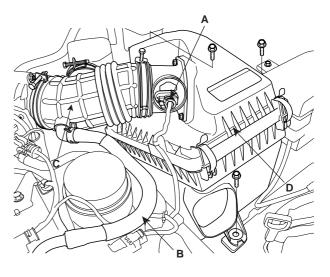


SGHEM7005N

6. Remove the battery tray(A).

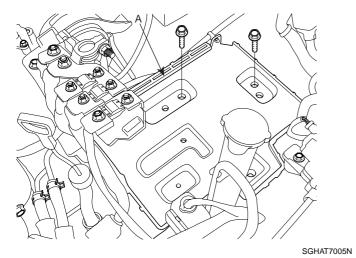


- 7. Remove front wheels.
- 8. Remove under cover(A).

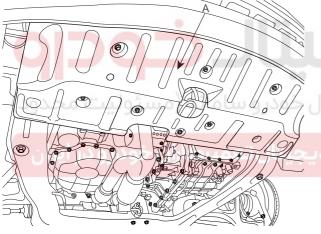


SGHAT6021D

- Drain the engine coolant.Remove the radiator cap to speed draining.
- 10. Remove the upper radiator hose and lower radiator hose(A).

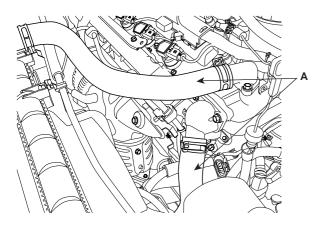


KDRF148A

- 11. Remove transaxle oil cooler hose.
- 12. Remove fuel hose(A) and PCSV(B) hose.

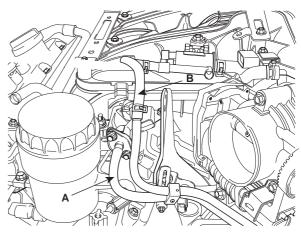

ACCF008A


- 13. Remove engine wiring.
 - 1) Disconnect RH oxygen sensor connector(B).
 - 2) Disconnect power steering oil pressure sensor connector(A).

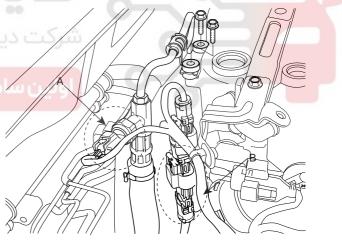

SGHEM7008N

3) Disconnect RH injector connector and ignition coil connector.


4) Disconnect OCV connector(A) and knock sensor connector(B).

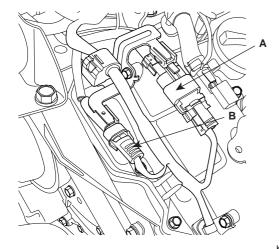

KDRF155A

5) Disconnect LH front oxygen sensor connector(A).


Disconnect LH ignition coil connector(A), injector connector(B), condenser connector(C) and ground(D), and remove wiring harness protector(E).

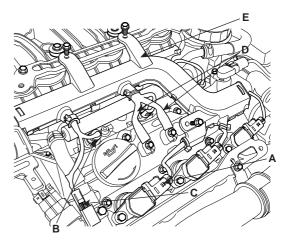

KDRF158A


KDRF159A

B) Disconnect LH CMPS(A) and oil pressure switch connector(B).

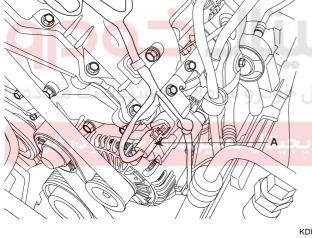


KDRF156A

Disconnect alternator connector(A).

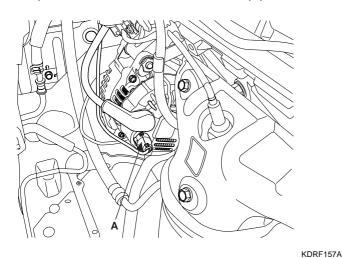


9) Disconnect PCSV connector(A) and MAP sensor connector(B).

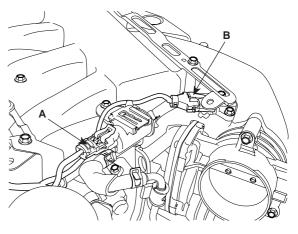

UCBF003A


ENGINE MECHANICAL SYSTEM

10) Disconnect RH CMPS(A) and OTS connector(B).

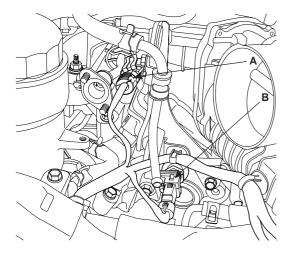


KDRF161A

 Disconnect ETC connector(A) and knock sensor connector(B). 13) Disconnect LH rear oxygen sensor connector(A) and CPS connector(B).

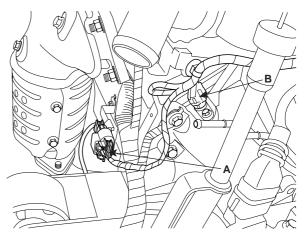


KDRF164A

- 14. Disconnect the transaxle wire harness connector and remove the transaxle control cable.
- 15. Remove heater hose(A).

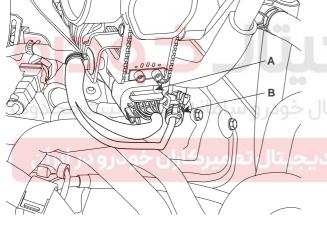


KDRF162A

12) Disconnect ECT sensor connector(A).

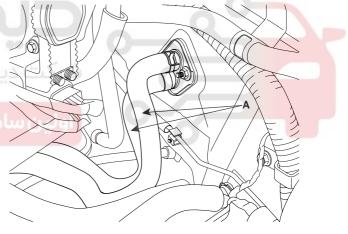


KDRF165A

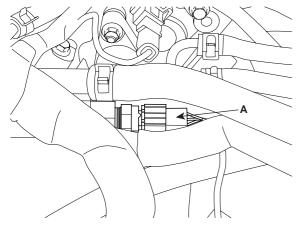


KDRF163A

16. Remove brake vacuum hose(A).

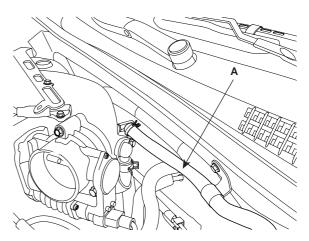


KDBF101A

17. Remove power steering pump hose(A).

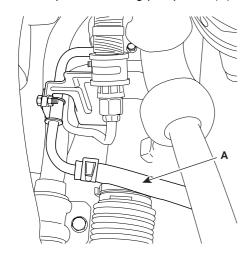

KDRF175A


- 18. Remove A/C compressor hose.
- 19. Drain transaxle oil.
- 20. Remove lower arm ball joint.
- 21. Remove tie rod end ball joint.
- 22. Remove stabilizer link.
- 23. After removing a split pin and nut from the steering bar tie rod, disconnect it.
- 24. Remove power steering return hose(A) and drain power steering oil.

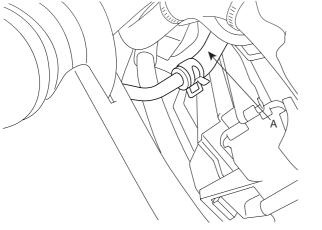

SGHAT6022D

- 25. Remove front roll stopper mounting bolt.
- 26. Remove rear roll stopper mounting bolt.
- 27. Remove steering u-joint mounting bolt.

28. Remove front exhaust pipe(A).

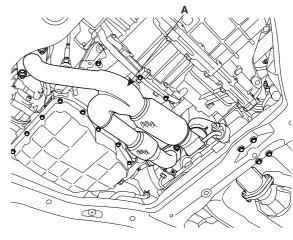


KCBF102A

29. Supporting the cross member(A) with a jack, remove the stay with the mounting bolts.

Tightening torque:


137.3~156.9Nm (14.0~16.0kgf.m, 101.3~115.7lb-ft)

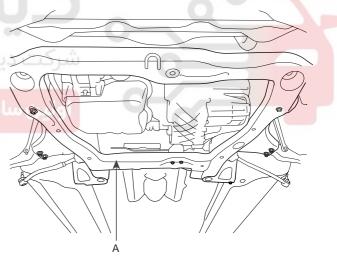

KMRE009R

- 30. Remove drive shaft from transaxle.
- 31. Install jack for supporting engine and transaxle assembly.

32. Disconnet the ground cable(A) from the engine mounting bracket.

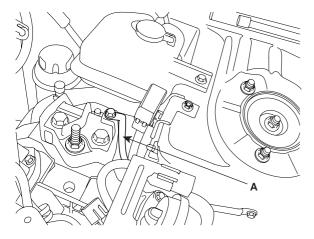

KDBF102A

- 33. Remove the engine mounting bracket.
- 34. Remove the transaxle mounting bracket(A).

INSTALLATION


Installation is in the reverse order of removal.


Perform the following:

- · Adjust the shift cable.
- Refill an engine with engine oil.
- · Refill a transaxle with fluid.
- · Refill a radiator with engine coolant.
- · Bleed air from the cooling system with the heater valve open.
- · Clean the battery posts and cable terminals with sandpaper assemble them, then apply grease to prevent corrosion.
- · Inspect for fuel leakage.

After assembling the fuel line, turn on the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and fuel line pressurizes.

Repeat this operation two or three times, then check for fuel leakage at any point in the fuel lines.

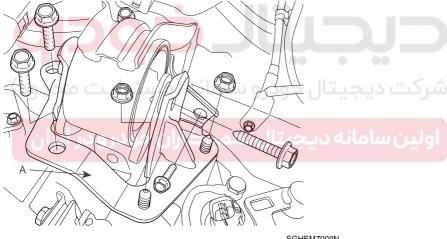

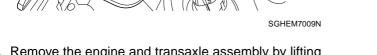

35. Remove the engine and transaxle assembly by lifting vehicle.



When removing the engine and transaxle assembly, be careful not to damage any surrounding parts or body components.




TIMING SYSTEM EM -23

TIMING SYSTEM

TIMING CHAIN


COMPONENTS EFFAFA9E

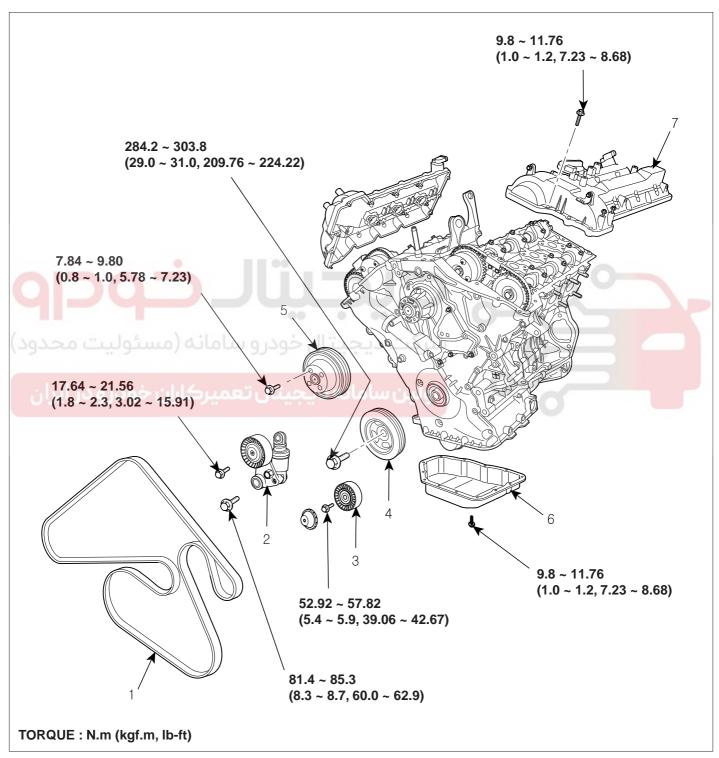

- 1. Drive belt
- 2. Drive belt tensioner
- 3. Idler
- 4. Damper pulley

- 5. Water pump pulley
- 6. Oil pan
- 7. Cylinder head cover

SGHEM7020N

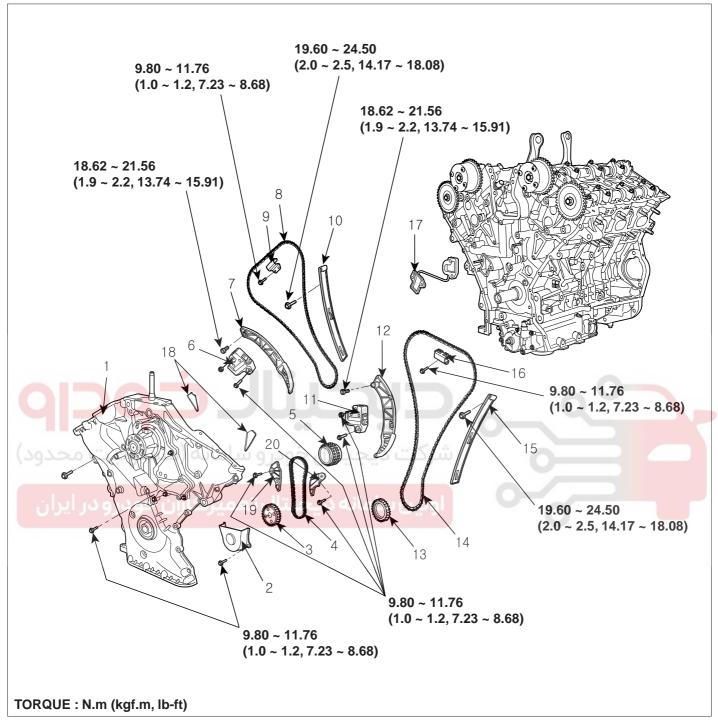

- 1. Timing chain cover
- 2. Oil pump chain cover
- 3. Oil pump sprocket
- 4. Oil pump chain
- 5. Crankshaft sprocket
- 6. Timing chain auto tensioner
- 7. Timing chain tensioner arm
- 8. Timing chain
- 9. Cam to cam guide
- 10. Timing chain guide
- 11. Timing chain auto tensioner
- 12. Timing chain tensioner arm
- 13. Crankshaft sprocket
- 14. Timing chain

- 15. Timing chain guide
- 16. Cam to cam guide
- 17. Tensioner adapter
- 18. Gasket
- 19. Oil pump chain guide
- 20. Oil pump temsioner assembly

ECBF009A


TIMING SYSTEM EM -25

UCBF009A


REMOVAL EE688815

Engine removal is required for this procedure.

Remove the drive belt(A).

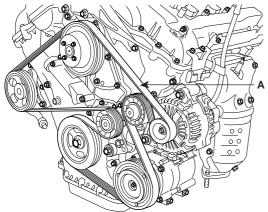


Remove the generator(A).

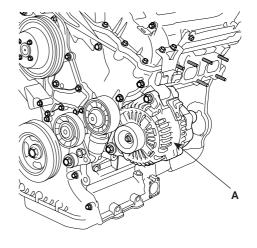


KDRF104A


Remove drive belt idler(A).

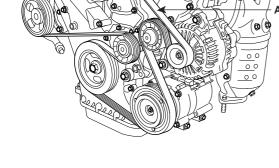


Remove the power steering pump(A).

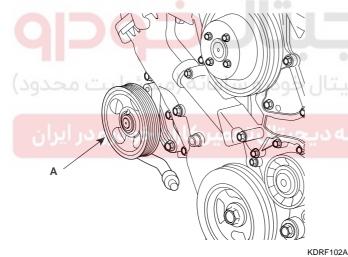

Remove drive belt auto tensioner(A).

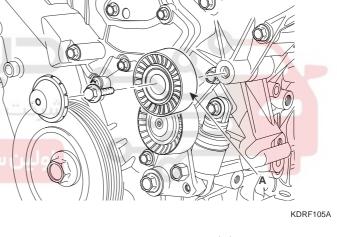


Remove the A/C compressor(A).

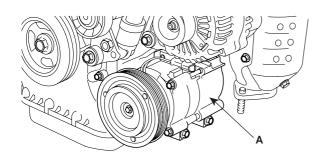

KDRF106A

KDRF103A


7. Remove water pump pulley(A).

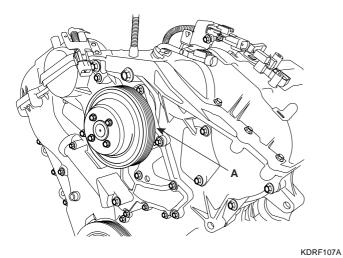

Remove intake manifold.

DISASSEMBLY ECE9DBD


- 1. Remove cylinder head cover.
 - Remove connector bracket(A) from LH cylinder head cover.

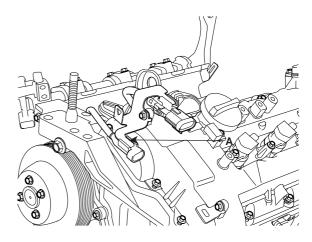

KDRF110A

 Disconnect RH ignition coil connector(A), condenser connector(B) and remove wiring bracket(C)



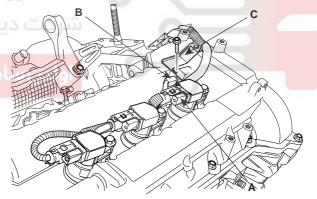


KDRF111A

c. Remove LH,RH ignition coil.

TIMING SYSTEM EM -27

d. Remove LH,RH cylinder head cover(A).

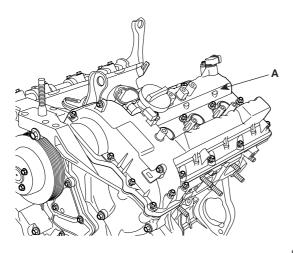


KDRF112A

- Set No.1 cylinder to TDC/compression.
 - Turn the crankshaft pulley and align its groove with the timing mark "T" of the lower timing chain cover.




Do not rotate engine counterclockwise.

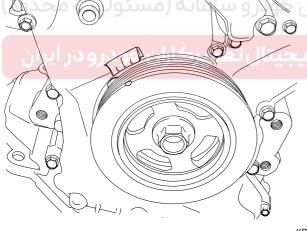

KDRF108A

 Check that the mark(A) of the camshaft timing sprockets are in straight line on the cylinder head surface as shown in the illustration.
 If not, turn the crankshaft one revolution (360°).

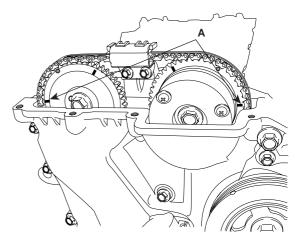


KDRF113A

NOTE

Do not rotate engine counterclockwise.

Remove the lower oil pan(A).

Insert the blade of SST(09215-3C000) between the upper oil pan and lower oil pan, and cut off applied sealer and remove lower oil pan.

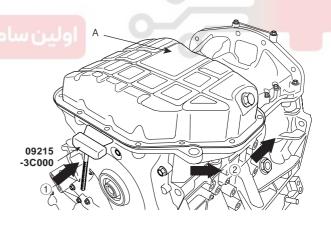

STGEM7100N


🚹 CAUTION

- Insert the SST between the oil pan and the ladder frame by tapping it with a plastic hammer in the direction of arrow.
- After tapping the SST with a plastic hammer along the direction of arrow around more than 2/3 edge of the oil pan, remove it from the ladder frame.
- Do not turn over the SST abruptly without tapping.

It can result in damage of the SST.


ENGINE MECHANICAL SYSTEM

Remove the crankshaft damper pulley(A).

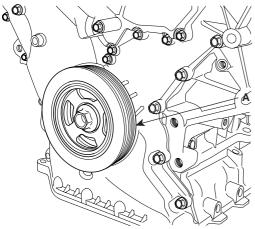

KDRF109A

Install a set pin after compressing the timing chain tensioner.

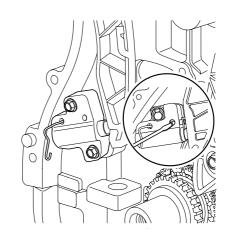

KCRF105A

Remove the timing chain cover(A). Remove RH cam-to-cam guide(A).




KDRF116A

NOTE

Be careful not to damage the contact surfaces of cylinder block, cylinder head and timing chain cover. Before removing the timing chain, mark the RH/LH timing chain with an identification based on the location of the sproket because the identification mark on the chain for TDC(Top Dead Center) can be erased.

Remove RH timing chain auto tensioner(A) and RH timing chain tensioner arm(B).

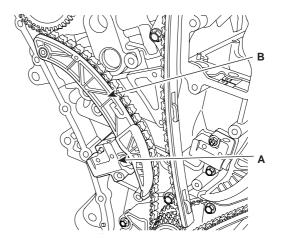


KDRF117A


TIMING SYSTEM EM -29

KDRF119A

9. Remove oil pump chain cover(A).

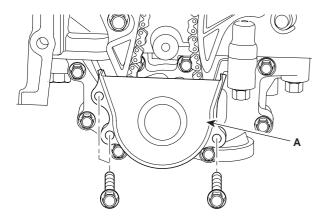


13. Remove RH timing chain guide(A).

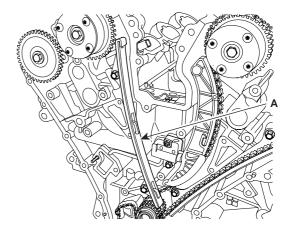


KDRF118A

KDRF185A

10. Remove oil pump chain tensioner assembly(A).

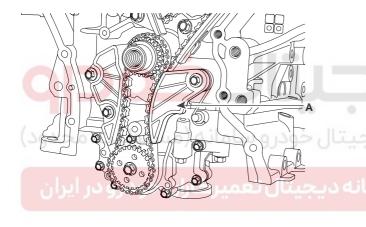


14. Remove oil pump chain sprocket(A) and oil pump chain(B).

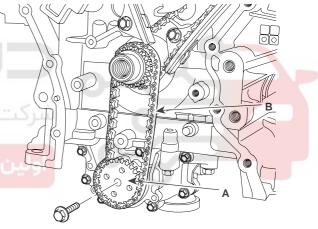


KDRF121A

11. Remove oil pump chain guide(A).

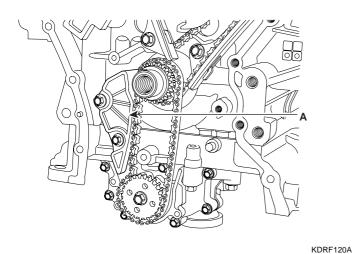


15. Remove crankshaft sprocket(A)(Oil pump & RH camshaft drive).

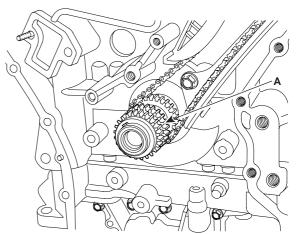


KDRF122A

12. Remove RH timing chain.

16. Remove LH cam-to-cam guide(A).

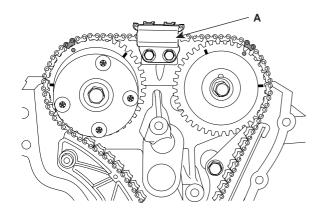

20. Remove crankshaft sprocket(A)(LH camshaft drive).

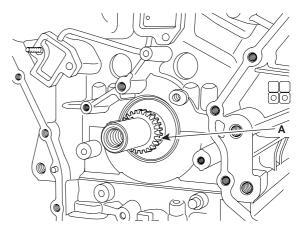


KDRF123A

KDRF126A

17. Remove LH timing chain auto tensioner(A) and LH timing chain tensioner arm(B).


21. Remove tensioner adapter assembly(A).

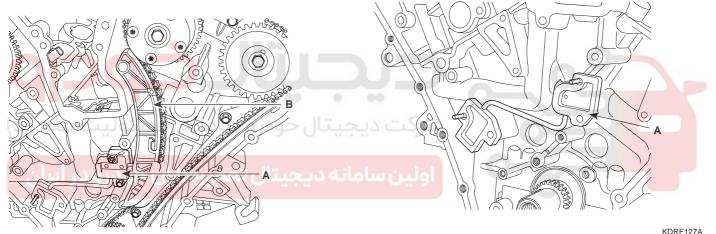

KDRF127/

- KDRF124A
- 19. Remove LH timing chain guide(A).

18. Remove LH timing chain.

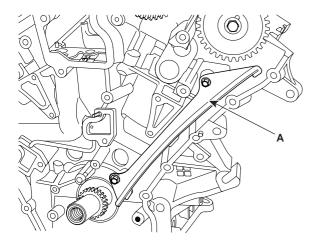

KDRF125A

TIMING SYSTEM EM -31

INSPECTION E33C7CDE

SPROCKETS, CHAIN TENSIONER, CHAIN GUIDE, CHAIN TENSIONER ARM

- Check the camshaft sprocket and crankshaft sprocket for abnormal wear, cracks, or damage. Replace as necessary.
- Inspect the tensioner arm and chain guide for abnormal wear, cracks, or damage. Replace as necessary.
- 3. Check that the tensioner piston moves smoothly when the ratchet pawl is released with thin rod.

BELT, IDLER, BELT TENSIONER, PULLEY


- Check the belt for oil or dust deposits.
 Replace, if necessary.
 Small deposits should be wiped away with a dry cloth or paper. Do not clean with solvent.
- When the engine is overhauled or belt tension adjusted, check the belt carefully. If any of the following flaws are evident, replace the belt.

NOTE

- Do not bend, twist or turn the timing belt inside out.
- Do not allow the timing belt to come into contact with oil, water and steam.
- Inspect the idler for easy and smooth rotation and check for play or noise.


REASSEMBLY EOBF1C9F

 The key(A) of crankshaft should be aligned with the timing mark(B) of timing chain cover. As a result of this, the piston of No.1 cylinder is placed at the top dead center on compression stroke.

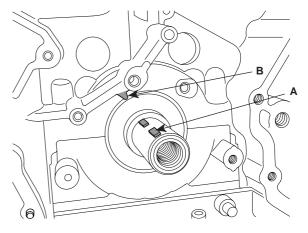


KDRF128A

Install tensioner adapter assembly(A).

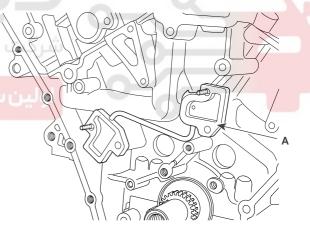

KDRF127A

3. Install crankshaft sprocket(A)(LH camshaft drive).

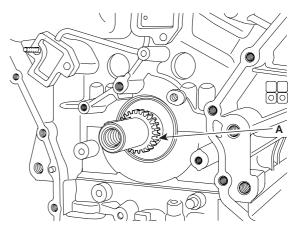


KDRF126A

ENGINE MECHANICAL SYSTEM

4. Install LH timing chain guide(A).

Tightening torque

19.60 ~ 24.50Nm(2.0 ~ 2.5kgf.m, 14.17 ~ 18.08lb-ft)

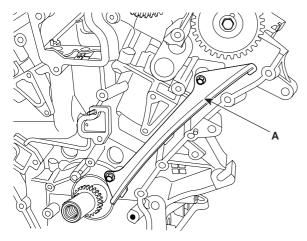

KDRF125A

Install LH timing chain.

To install the timing chain with no slack between each shaft (cam, crank), follow the below procedure.

Crankshaft sprocket(A) Timing chain guide(B)

Exhaust camshaft sprocket(C) Intake camshaft sprocket(D).

The timing mark of each sprocket should be matched with timing mark (color link) of timing chain when installing timing chain.

KDRF123B

Install LH timing chain tensioner arm(B).


Tightening torque

18.62 ~ 21.56Nm(1.9 ~ 2.2kgf.m, 13.74 ~ 15.91lb-ft)

7. Install LH chain tensioner(A).

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

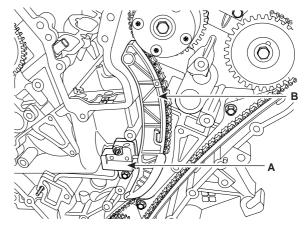


KDRF124A

8. Install LH cam-to-cam guide(A).

Tightening torque


9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

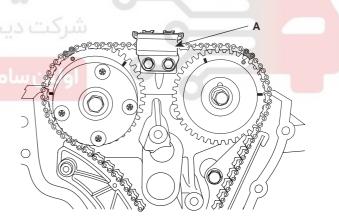

KDRF123A

TIMING SYSTEM EM -33

Install crankshaft sprocket(A)(Oil pump & RH camshaft drive).

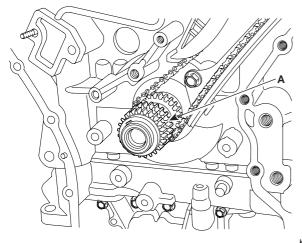


KDRF122A

10. Install oil pump chain(B) and oil pump sprocket(A).

Tightening torque

18.62 ~ 21.56Nm(1.9 ~ 2.2kgf.m, 13.74 ~ 15.91lb-ft)

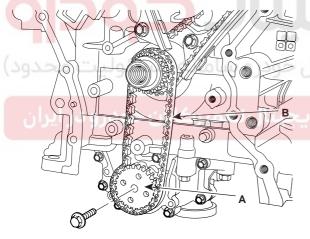


KDRF121A

11. Install RH timing chain guide(A).

Tightening torque

19.60 ~ 24.50Nm(2.0 ~ 2.5kgf.m, 14.17 ~ 18.08lb-ft)

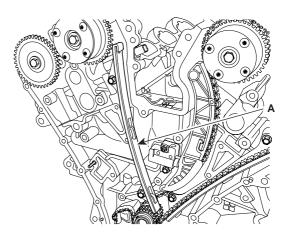


KDRF118A

12. Install RH timing chain.


To install the timing chain with no slack between each shaft (cam, crank), follow the below procedure.

Crankshaft sprocket(A) Intake camshaft sprocket(B) Exhaust camshaft sprocket(C).

The timing mark of each sprocket should be matched with timing mark (color link) of timing chain when installing timing chain.

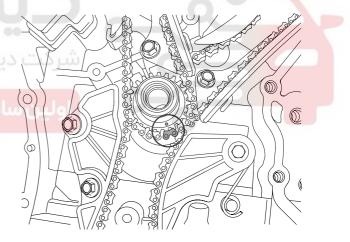

KDRF129A

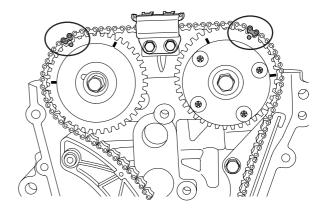

KDRF116B

ENGINE MECHANICAL SYSTEM

13. Install RH timing chain tensioner arm(B).


Tightening torque

18.62 ~ 21.56Nm(1.9 ~ 2.2kgf.m, 13.74 ~ 15.91lb-ft)

14. Install RH timing chain auto tensioner(A).

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

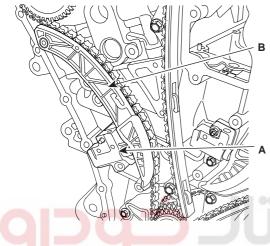


KDRF117A

••

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

15. Install RH cam-to-cam guide(A).

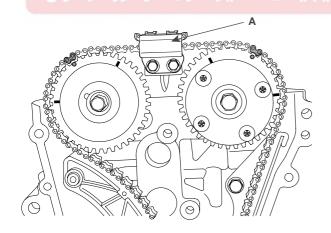


KDRF116A

16. Install oil pump chain guide(A).

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

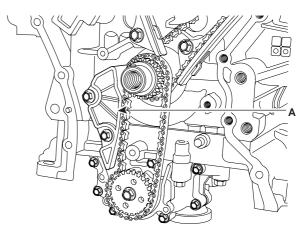


KDRF120A

17. Install oil pump chain tensioner assembly(A).

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

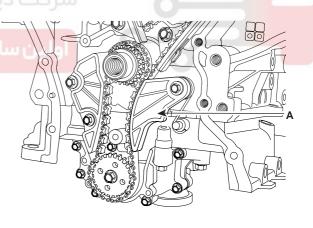


KDRF119A

Pull out the pins of hydraulic tensioners (LH & RH). TIMING SYSTEM **EM -35**

19. Install oil pump chain cover(A).

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

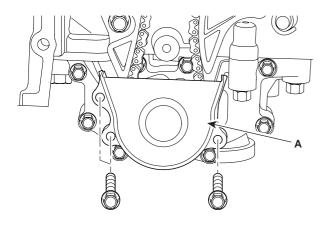

KDRF185A


20. After rotating crankshaft 2 revolutions in regular direction(clockwise viewed from front), confirm the timing mark.



Always turn the crankshaft clockwise.

- 21. Install timing chain cover.
 - The sealant locations on chain cover and on counter parts (cylinder head, cylinder block, and lower oil pan) must be free of engine oil and
 - Before assembling the timing chain cover, the liquid sealant TB1217H should be applied on the gap between cylinder head and cylinder block. The part must be assembled within 5 minutes after sealant was applied.


Bead width: 2.5mm(0.1in.)

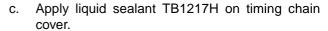

The part must be assembled within 5 minutes after sealant was applied.

Sealant should be applied without discontinuity.

Bead width: 2.5mm(0.1in.)

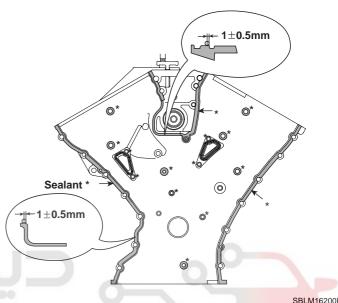


SBLM16200L

Install the new gasket(A) to the timing chain cover.



KDRF220A

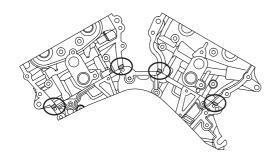

KDRF134A

EM-36

The dowel pins on the cylinder block and holes on the timing chain cover should be used as a reference in order to assemble the timing chain cover correctly.

Tightening torque

B(17): $18.62 \sim 21.56$ Nm($1.9 \sim 2.2$ kgf.m,

13.74 ~ 15.91lb-ft)

C(4): 9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

D(1): 58.80 ~ 68.80Nm(6.0 ~ 7.0kgf.m,

43.40 ~ 50.63lb-ft)

E(1): 58.80 ~ 68.80Nm(6.0 ~ 7.0kgf.m,

43.40 ~ 50.63lb-ft)

F(2): 24.50 ~ 26.46Nm(2.5 ~ 2.7kgf.m,

18.08 ~ 19.53lb-ft)

G(4): 21.56 ~ 23.52Nm(2.2 ~ 2.4kgf.m,

15.91 ~ 17.36lb-ft)

H(1): 9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)


I(1): 9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

J(1): 9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

K(4): 9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

L(1): 21.56 ~ 26.46Nm(2.2 ~ 2.7kgf.m, 15.91

~ 19.53lb-ft) - New bolt

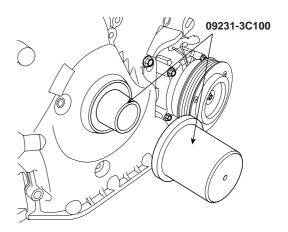

22. Using SST(09231-3C100), install timing chain cover

ECRF050A


23. Install lower oil pan.

oil seal.

- Using a gasket scraper, remove all the old packing material from the gasket surfaces.
- Before assembling the oil pan, the liquid sealant TB1217H should be applied on oil pan. The part must be assembled within 5 minutes after the sealant was applied.

UCBF013A

f. The firing and/or blow out test should not be performed within 30 minutes after the timing chain cover was assembled.

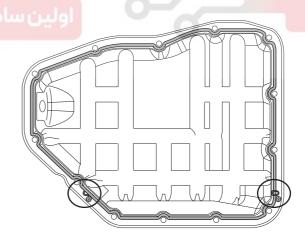

Bead width: 2.5mm(0.1in.). But marked

area(*) to be 5.0mm(0.2in.)

KDRF136A

/ CAUTION


- · Clean the sealing face before assembling two parts.
- · Remove harmful foreign materials on the sealing face before applying sealant.
- · When applying sealant gasket, sealant must not protrude into the inside of oil pan.
- To prevent leakage of oil, apply sealant gasket ot the inner threads to the bolt holes.
- · After assembly, wait at least 30 minutes before filling the engine with oil.

TIMING SYSTEM EM -37

f. Install oil pan(A).Uniformly tighten the bolts in several passes.

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

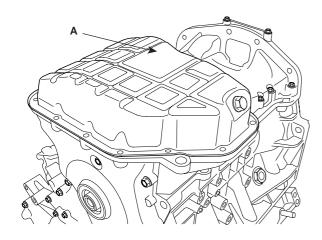


KDRF114A


24. Using SST(09231-3C300) install crankshaft damper pulley(A).

Tightening torque

284.2 ~ 303.8Nm(29.0 ~ 31.0kgf.m, 209.76 ~ 224.22lb-ft)

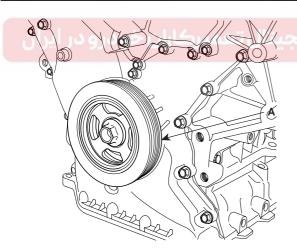


KDRF109A

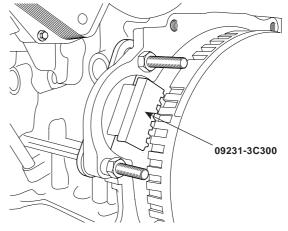

ECRF061A

- 25. Install cylinder head cover.
 - a. The hardening sealant located on the upper area between timing chain cover and cylinder head should be removed before assembling cylinder head cover.
 - After applying sealant(TB1217H), it should be assembled within 5 minutes. Bead width: 2.5mm(0.1in.)

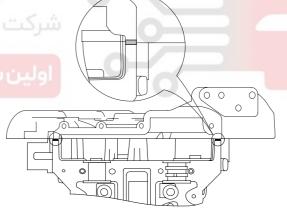

KDRF231A


 The firing and/or blow out test should not be performed within 30 minutes after the cylinder head cover was assembled.

ENGINE MECHANICAL SYSTEM


d. Install the cylinder head cover bolts as following method.

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

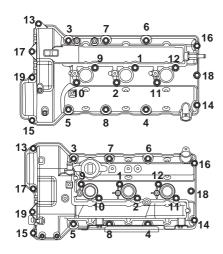

 Install connector bracket(A) from LH cylinder head cover.

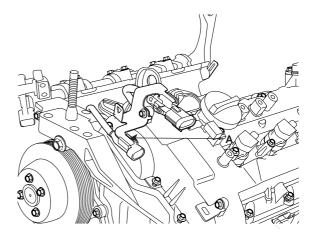

KDRF110A

KDRF139A




CAUTION

Do not reuse cylinder head cover gasket.

- e. Install ignition coil
- f. Connect RH ignition coil connector(A), condenser connector(B) and install wiring bracket(C).



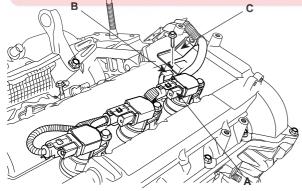

KDRF111A


TIMING SYSTEM EM -39

INSTALLATION E0ED79CB

- Install intake manifold.
- 2. Install water pump pulley(A).

Tightening torque

7.84 ~ 9.80Nm(0.8 ~ 1.0kgf.m, 5.78 ~ 7.23lb-ft)

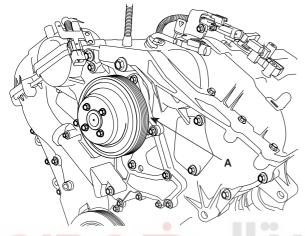


KDRF107A

Install drive belt auto tensioner(A). 3.

Tightening torque


81.4 ~ 85.3Nm(8.3 ~ 8.7kgf.m, 60.0 ~ 62.9lb-ft) 17.64 ~ 21.56Nm(1.8 ~ 2.2kgf.m, 13.02 ~ 15.91lb-ft)

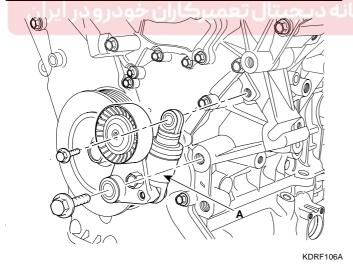

Install drive belt idler(A).


Tightening torque

52.92 ~ 57.82Nm(5.4 ~ 5.9kgf.m, 39.06 ~ 42.67lb-ft)

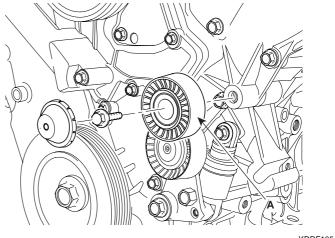


KDRF105A

Install the generator(A).

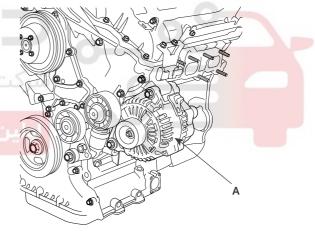


KDRF104A

Install air conditioner compressor(A).

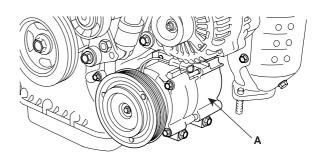

KDRF103A

7. Install power steering pump(A).

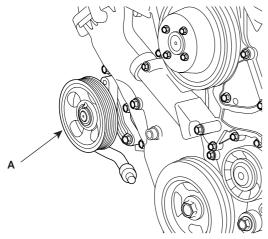


KDRF102A

8. Install drive belt(A).

Crankshaft pulley A/C pulley idler pulley generator pulley water pump pulley P/S pump pulley tensioner pulley.

Rotate auto tensioner arm in the counter - clockwise direction while moving auto tensioner pulley bolt with wrench.

After putting belt on auto tensioner pulley, release the auto tensioner pulley slowly.

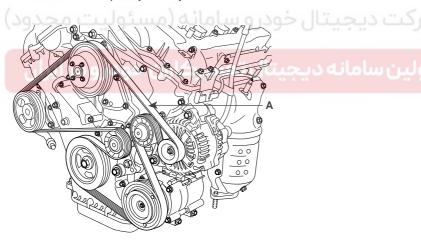




EM -41

CYLINDER HEAD ASSEMBLY


COMPONENTS EEECCDC0

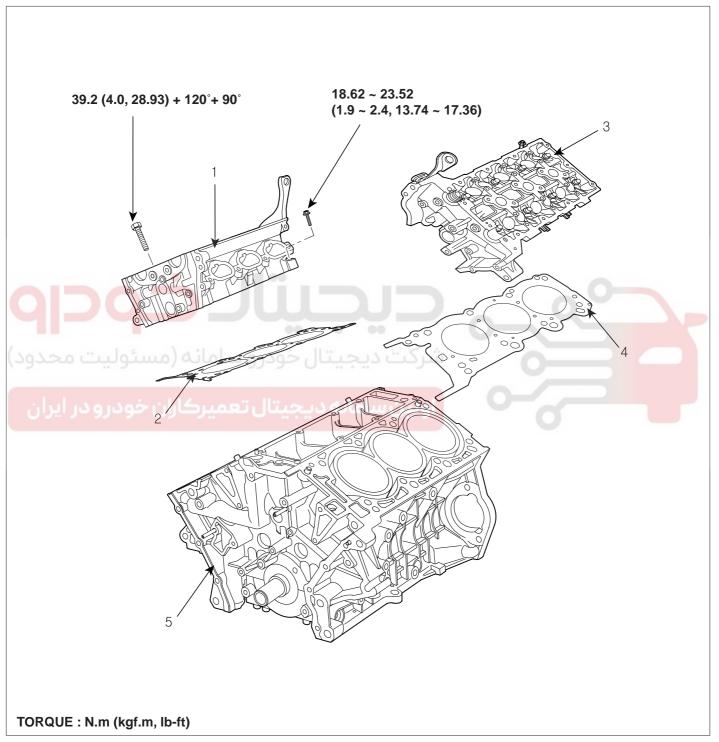

- 1. RH cylinder head
- 2. RH cylinder head gasket
- 3. LH cylinder head

- 4. LH cylinder head gasket
- 5. Cylinder block

ECBF010A

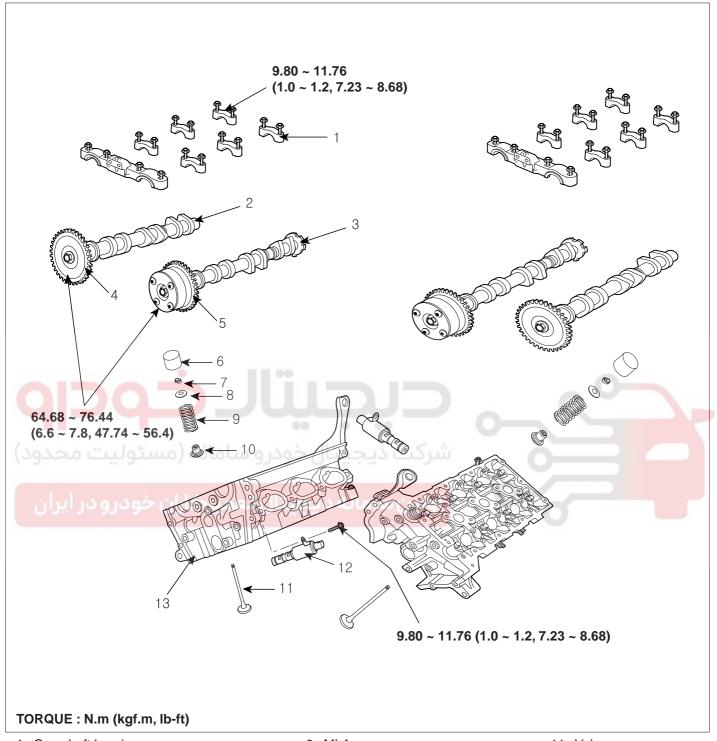

- 1. Camshaft bearing cap
- 2. Exhaust camshaft
- 3. Intake camshaft
- 4. Exhaust camshaft sprocket
- 5. CVVT assembly

- 6. MLA
- 7. Retainer lock
- 8. Retainer
- 9. Valve spring
- 10. Valve stem seal

- 11. Valve
- 12. OCV
- 13. Cylinder head

ECBF011A

EM -43

REMOVAL

EC0F8ABA



CAUTION


- · Use fender covers to avoid damaging painted surfaces.
- · To avoid damaging the cylinder head, wait until the engine coolant temperature drops below normal operating temperature before removing it.
- When handling a metal gasket, take care not to fold the gasket or damage the contact surface of the gasket.
- · To avoid damage, unplug the wiring connectors carefully while holding the connector portion.



- Mark all wiring and hoses to avoid misconnec-
- Turn the crankshaft pulley so that the No. 1 piston is at top dead center.


Engine removal is required for this procedure.

- Remove exhaust manifold
- Remove intake manifold.
- Remove timing chain. 3
- Remove water temperature control assembly.
- Remove camshaft bearing cap(A). 5.

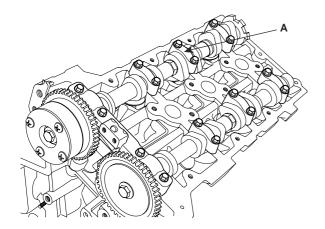


KDRF196A


Remove camshaft assembly(A).

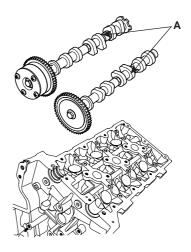

KDRF197A

- Remove cylinder head bolts, then remove cylinder head.
 - Uniformly loosen and remove the 16 cylinder head bolts, in several passes, in the sequence shown. Remove the 16 cylinder head bolts and plate washers.

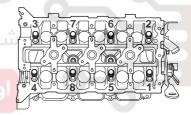

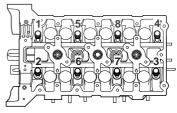

KDRF199A



A CAUTION

Head warpage or cracking could result from removing bolts in an incorrect order.

Lift the cylinder head from the dowels on the cylinder block and place the cylinder head on wooden blocks on a bench.



∴ CAUTION

Be careful not to damage the contact surfaces of the cylinder head and cylinder block.


ENGINE MECHANICAL SYSTEM

DISASSEMBLY




Identify MLA, valves and valve springs as they are removed so that each item can be reinstalled in its original position.

1. Remove MLAs(A).

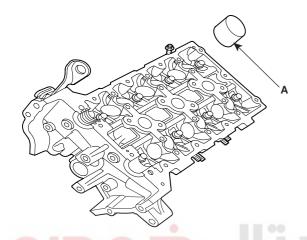

KDRF200A

- 2) Remove the spring retainer.
- 3) Remove the valve spring.
- 4) Remove the valve.
- 5) Using SST(09222-29000), remove the valve stem seal.

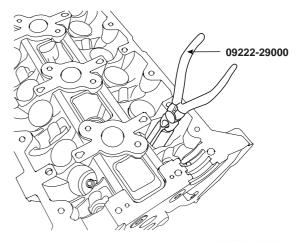


KDRF234A


- Remove valves.
 - Using SST(09222-3K000, 09222-3C300), compress the valve spring and remove retainer lock.
- **NOTE**

Do not reuse old valve stem seals.

Remove OCV(A).

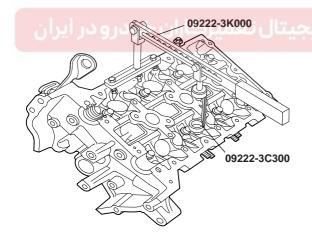

KDRF201A

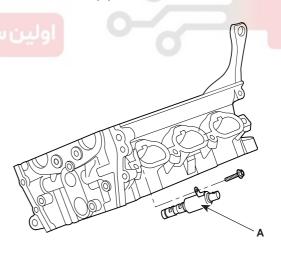

KDRF202A

EM -45

INSPECTION EA4BD93A

CYLINDER HEAD

 Inspect for flatness.
 Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder block


and the manifolds for warpage.

Flatness of cylinder head gasket surface

Standard: Less than 0.05mm(0.002in.)[Less than 0.02mm(0.0008in.)/150x150]

Flatness of manifold gasket surface

Standard: Less than 0.03mm(0.001in)/110x110

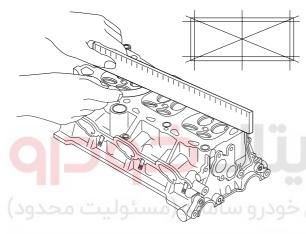

EDQF160A

Inspect for cracks.


Check the combustion chamber, intake ports, exhaust ports and cylinder block surface for cracks. If cracked, replace the cylinder head.

VALVE AND VALVE SPRING

- Inspect valve stems and valve guides.
 - Using a caliper gauge, measure the inside diameter of the valve guide.

Valve guide I.D.


Intake / Exhaust : 5.500 ~ 5.512mm (0.216 ~ 0.217in.)

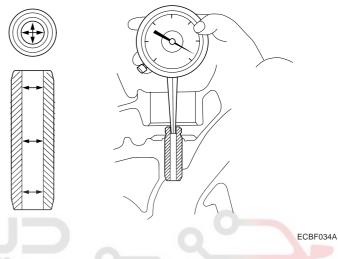

2) Using a micrometer, measure the diameter of the valve stem.

Valve stem O.D.

Intake: 5.465 ~ 5.480mm (0.2151 ~ 0.2157in.) Exhaust: 5.458 ~ 5.470mm (0.2149 ~ 0.2153in.)

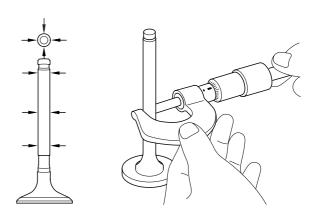

KCRF227A

ENGINE MECHANICAL SYSTEM

 Subtract the valve stem diameter measurement from the valve guide inside diameter measurement.

Valve stem-to-guide clearance

[Standard]

Intake: 0.020 ~ 0.047mm (0.0008 ~ 0.0018in.) Exhaust: 0.030 ~ 0.054mm (0.0012 ~ 0.0021in.)

[Limit]

Intake: 0.07mm (0.0027in.) Exhaust: 0.09mm (0.0035in.)

- 2. Inspect valves.
 - Check the valve is ground to the correct valve face angle.
 - Check that the surface of the valve for wear. If the valve face is worn, replace the valve.
 - Check the valve head margin thickness.
 If the margin thickness is less than minimum, replace the valve.

3. Inspect valve seats

Check the valve seat for evidence of overheating and improper contact with the valve face.

If the valve seat is worn, replace cylinder head. Before reconditioning the seat, check the valve guide for wear. If the valve guide is worn, replace cylinder head. Recondition the valve seat with a valve seat grinder or cutter. The valve seat contact width should be within specifications and centered on the valve face.

- 4. Inspect valve springs.
 - 1) Using a steel square, measure the out-of-square of the valve spring.
 - 2) Using vernier calipers, measure the free length of the valve spring.

Valve spring

[Standard]


Free height: 43.86mm (1.7267in.)

Out-of-square: 1.5°

Margin

[Standard]

Intake: 1.56 ~ 1.86mm(0.06142 ~ 0.07323in.) Exhaust: 1.73 ~ 2.03mm(0.06811 ~ 0.07992in.)

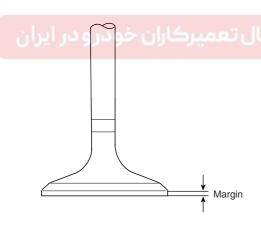


ECKD221A

Check the valve length.

Length

Intake: 105.27mm (4.1445in) Exhaust: 105.50mm (4.1535in)

5) Check the surface of the valve stem tip for wear. If the valve stem tip is worn, replace the valve.

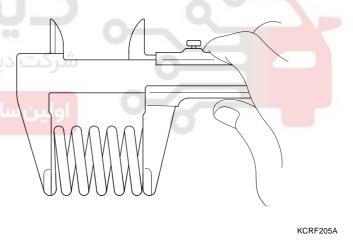

EM -47

MLA

1. Inspect MLA.

Using a micrometer, measure the MLA outside diameter.

MLA O.D.

Intake/Exhaust: 34.964 ~ 34.980mm(1.3765

~ 1.3771in.)

Using a caliper gauge, measure MLA tappet bore inner diameter of cylinder head.

Tappet bore I.D.

Intake/Exhaust: 35.000 ~ 35.025mm(1.3779

~ 1.3789in.)

Subtract MLA outside diameter measurement from tappet bore inside diameter measurement.

MLA to tappet bore clearance

[Standard]

Intake/Exhaust: 0.020 ~ 0.061mm(0.0008 ~ 0.0024in.)

[Limit]

Intake/Exhaust: 0.07mm(0.0027in.)


CAMSHAFT

Inspect cam lobes.
 Using a micrometer, measure the cam lobe height.

Cam height

[Standard value]


Intake: 46.8mm (1.8425in.) Exhaust: 45.8mm (1.8031in.)

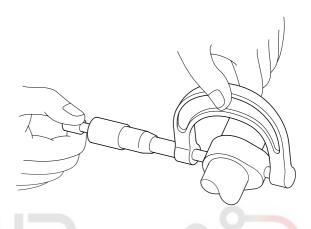

KCRF206A

If the cam lobe height is less than standard, replace the camshaft.

- 2. Inspect camshaft journal clearance.
 - 1) Clean the bearing caps and camshaft journals.
 - 2) Place the camshafts on the cylinder head.
 - Lay a strip of plastigage across each of the camshaft journals.

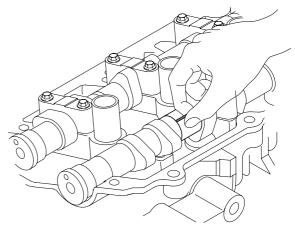

KCRF207A

ENGINE MECHANICAL SYSTEM

Using a dial indicator, measure the end play while

moving the camshaft back and forth.

[Standard value]: 0.02 ~ 0.18mm(0.0008 ~ 0.0071in.)

4) Install the bearing caps.

CAUTION

Do not turn the camshaft.

- 5) Remove the bearing caps.
- 6) Measure the plastigage at its widest point.

Bearing oil clearance

[Standard value]


Intake

No.1 journal : $0.020 \sim 0.057$ mm ($0.0008 \sim 0.0022$ in.) No.2,3,4 journal : $0.030 \sim 0.067$ mm (0.0012

~ 0.0026in.) Exhaust

No.1 journal : 0.020 ~ 0.057mm (0.0008 ~ 0.0022in.) No.2,3,4 journal : 0.030 ~ 0.067mm (0.0012

~ 0.0026in.)

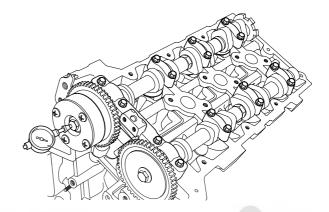

Inspect camshaft end play.


Camshaft end play

Install the camshafts.

KDRF196B

If the end play is greater than maximum, replace the camshaft. If necessary, replace cylinder head.

Remove the camshafts.

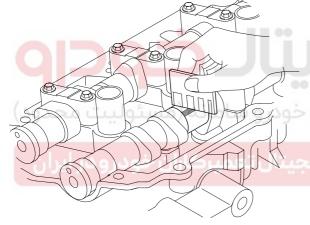

KCRF208A


If the oil clearance is greater than maximum, replace the camshaft. If necessary, replace cylinder head.

- 7) Completely remove the plastigage.
- 8) Remove the camshafts.

EM -49

CVVT ASSEMBLY

- 1. Inspect CVVT assembly.
 - 1) Check that the CVVT assembly will not turn.
 - 2) Apply vinyl tape to the retard hole except the one indicated by the arrow in the illustration.

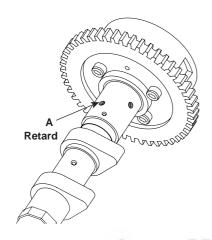

ECRF015A

Wind tape around the tip of the air gun and apply air of approx. 150kpa(1.5kgf/cm², 21psi) to the port of the camshaft.

(Perform this in order to release the lock pin for the maximum delay angle locking.)

Advance

Under the condition of (3), turn the CVVT assembly to the advance angle side (the arrow marked

bly will turn to the advance side without applying

direction in the illustration) with your hand. Depending on the air pressure, the CVVT assem-

SGHEM7010N

5) Except the position where the lock pin meets at the maximum delay angle, let the CVVT assembly turn back and forth and check the movable range and that there is no interference.

Standard: Movable smoothly in the range about 22.5°

When the oil splashes, wipe it off with a shop rag.

6) Turn the CVVT assembly with your hand and lock it at the maximum delay angle position (clockwise).

ENGINE MECHANICAL SYSTEM

REASSEMBLY

ED39E8B




Thoroughly clean all parts to be assembled. Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces. Replace oil seals with new ones.


- 1. Install valves.
 - 1) Using SST(09222-3C100), push in a new oil seal.



Do not reuse old valve stem seals. Incorrect installation of the seal could result in oil leakage past the valve guides.

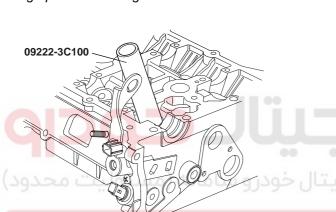

3) Using the SST(09222 - 3K000, 09222-3C300), compress the spring and install the retainer locks. After installing the valves, ensure that the retainer locks are correctly in place before releasing the valve spring compressor.

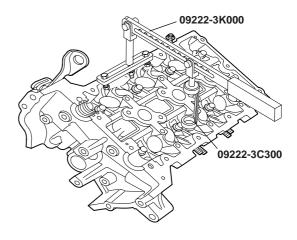

KDRF201A

- 4) Lightly tap the end of each valve stem two or three times with the wooden handle of a hammer to ensure proper seating of the valve and retainer lock.
- Install MLAs.


 Check that the MLA rotates smoothly by hand.

ولین سامانه دیجیتال تعمیرکاران خودرو در ایران «KCRF120B

2) Install the valve, valve spring and spring retainer.



Place valve springs so that the side coated with enamel faces toward the valve spring retainer and then install the retainer.

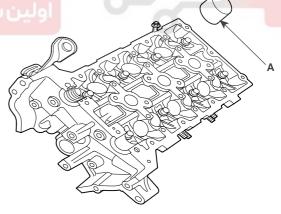

KDRF200A

NOTE


MLA can be reinstalled in its original position.

EM -51

3. Install OCV(A).

Tightening torque

9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

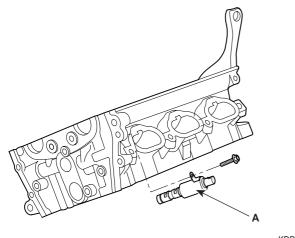

KDRF202A

MOTE

- To install OCV with gray colored connector into RH bank.
- To install OCV with black colored connector into LH bank.

A CAUTION

- · Do not reuse the OCV when dropped.
- Keep the OCV clean.
- Do not hold the OCV sleeve during servicing.
- When the OCV is installed on the engine, do not move the engine while holding the OCV yoke.

INSTALLATION


E63A6A04

MOTE

- Thoroughly clean all parts to be assembled.
- Always use a new head and manifold gasket.
- The cylinder head gasket is a metal gasket. Take care not to bend it.
- Rotate the crankshaft, set the No.1 piston at TDC.

1. Install the cylinder head.

- The sealant locations on cylinder head and cylinder block must be free of engine oil and ETC.
- Apply sealant on cylinder block top face before assembling cylinder head gaskets.
 The part must be assembled within 5 minutes after sealant was applied.

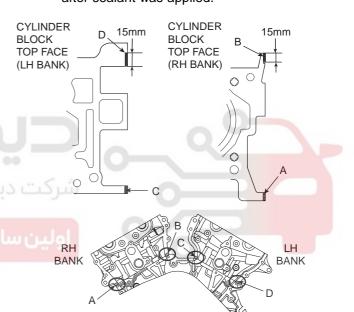

Engine Front Face

ECBF017A


ENGINE MECHANICAL SYSTEM



Refer to the illustration below to apply the sealant.

Bead width: 2.0~3.0 mm

Sealant locations: 1.0~1.5mm from block surface Recommended sealant: Liquid sealant TB1217H

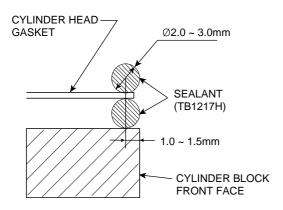


ECBF018A

ECBF019A

c. Apply sealant on cylinder head gaskets after assembling cylinder head gaskets on cylinder block. The part must be assembled within 5 minutes after sealant was applied.



Be careful of the installation direction.

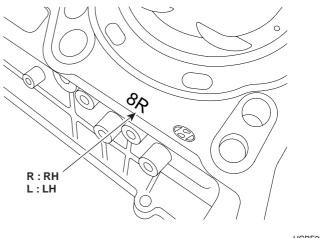


UCBF004A

d. Install the cylinder head.



Remove the extruded sealant after assembling cylinder heads.

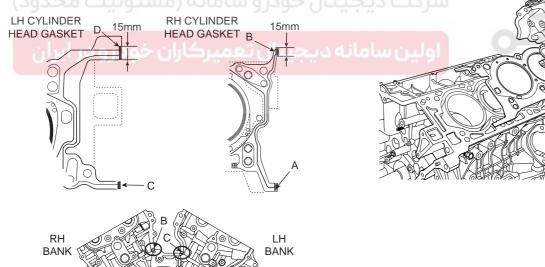

KDRF198A

Engine Front Face

EM -53

- 2. Place the cylinder head carefully to avoid damaging the gasket.
- 3. Install cylinder head bolts.
 - Do not apply engine oil on the threads and under the heads of the cylinder head bolts.
 - Using SST(09221-4A000), install and tighten the cylinder head bolts and plate washers, in several passes, in the sequence shown.

Tightening torque


1st step: 37.3~41.2Nm(3.8~4.2 kgf.m, 27.5~30.4 lb-ft)

2nd step:120° ±2° 3rd step: 90° ±2°

18.62 ~ 23.52Nm(1.9 ~ 2.4kgf.m, 13.74 ~ 17.36lb-ft)(A)



Always use new cylinder head bolts.

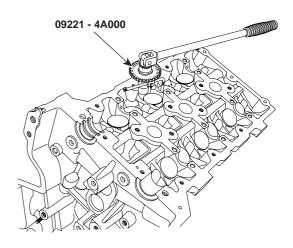


KDRF223A


4. Install the CVVT and camshaft sprocket.

Tightening torque

64.68 ~ 76.44Nm(6.6 ~ 7.8 kgf.m, 47.74 ~ 56.4lb-ft)

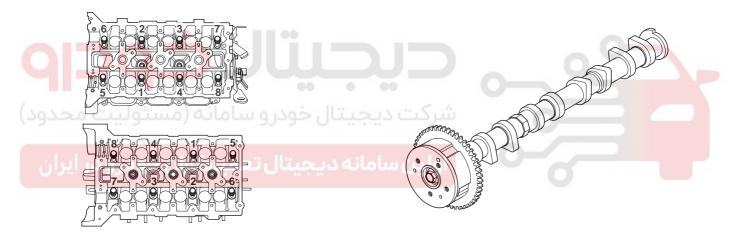

KDRF199B KCRF122A

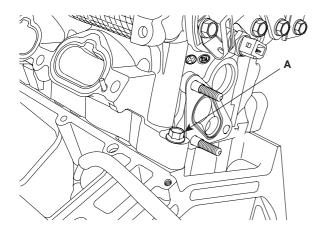

ECBF035A


₩ NOTE

- Install camshaft-inlet to dowel pin of CVVT assembly.
 - At this time, do not install to oil hole of camshaft-inlet.
- Hold the hexagonal head wrench portion of the camshaft with a vise, and install the bolt and CVVT assembly.
- Do not rotate CVVT assembly when camshaft is installed to dowel pin of CVVT assembly.

5. Install camshafts(A).

NOTE


- Apply a light coat of engine oil on camshaft journals.
- Assemble the key groove of camshaft rear side to the same level of head top surface.
- Be careful the right, left bank, intake, exhaust side before assembling.

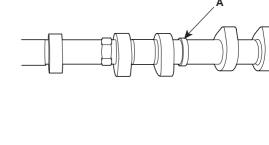

EXHAUST CAMSHAFT

KDRF227A


	LH	RH	
3.8L	A : Ø27mm(1.0630in.)	A : Ø30mm(1.1811in.)	

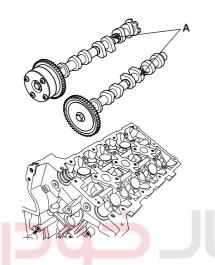

KDRF197

INTAKE CAMSHAFT



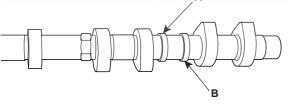



	LH	RH	
3.8L	A: Ø30mm(1.1811in.) B: Ø27mm(1.0630in.)	A: Ø30mm(1.1811in.) B: Ø27mm(1.0630in.)	

KDRF226A

	LH	RH	
3.8L	A: Ø30mm(1.1811in.) B: Ø27mm(1.0630in.)	A : Ø27mm(1.0630in.) B : Ø30mm(1.1811in.)	


EM -55

Install camshaft bearing caps as following order.

Tightening torque

1st step: 5.9Nm(0.6 kgf.m, 4.3 lb-ft) 2nd step: 9.80 ~ 11.76Nm(1.0 ~ 1.2kgf.m,

7.23 ~ 8.68lb-ft) - 2nd step

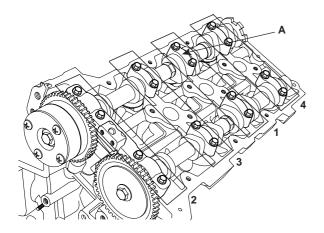


- 7. Install water temperature control assembly.
- 8. Install timing chain.
- Check and adjust valve clearance. 9.
- 10. Install the exhaust manifold.
- 11. Install the intake manifold.

UCBF014A



Be careful the right, left bank, intake, exhaust side, front mark before assembling.

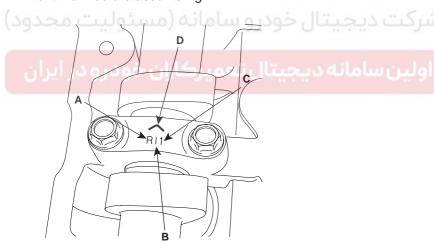

ECBF036A

A : L(LH),R(RH)

B: I(Intake), None(Exhaust)

C: Journal number

D: Front mark




∴ CAUTION

Rotate the crankshaft so as not to contact the valves to the pistons by positianing the pistons below 10mm(0.3937in.) from the top of cylinder block.

ENGINE BLOCK

COMPONENTS EA1BE037

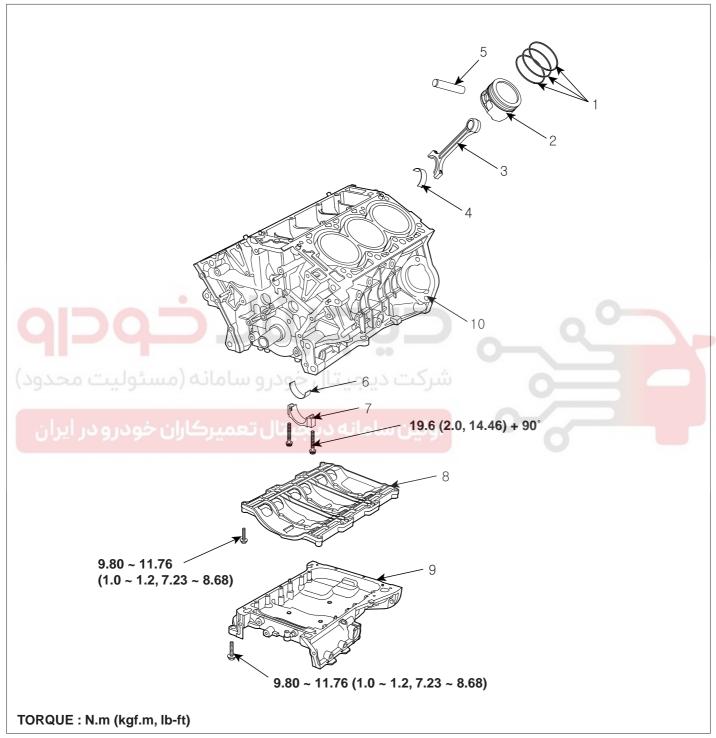


- 1. Piston ring
- 2. Piston
- 3. Connecting rod
- 4. Connecting rod upper bearing
- 5. Piston pin

- 6. Connecting rod lower bearing
- 7. Connecting rod bearing cap
- 8. Baffle plate
- 9. Upper oil pan
- 10. Cylinder block

SGHEM7011N

ENGINE BLOCK EM -57

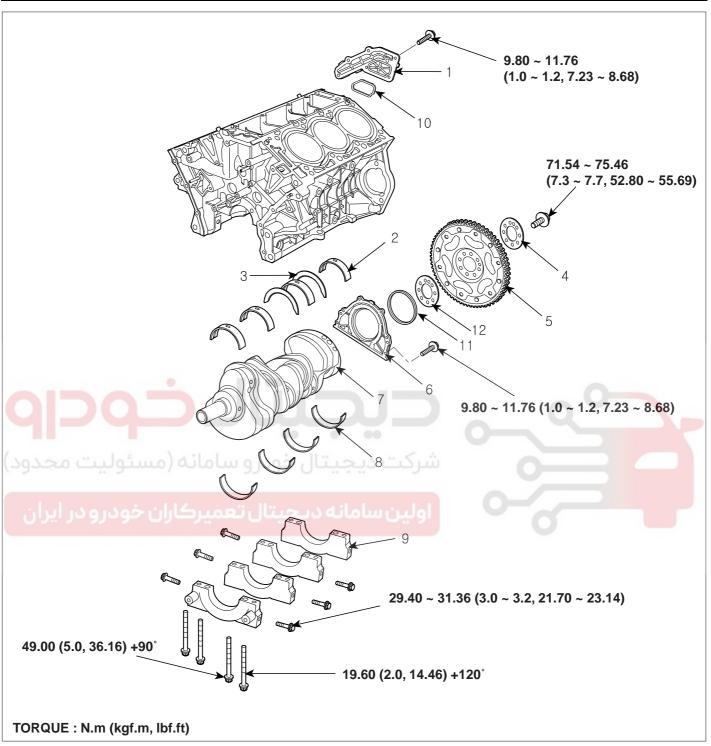

- 1. Oil drain cover
- 2. Crankshaft upper bearing
- 3. Thrust bearing
- 4. Plate adapter
- 5. Drive plate
- 6. Rear oil seal case

- 7. Crankshaft
- 8. Crankshaft lower bearing
- 9. Main bearing cap
- 10. Oil drain cover gasket
- 11. Rear oil seal
- 12. Crank adapter

SBLM16203L

ENGINE MECHANICAL SYSTEM

EM -58

REMOVAL




(1) CAUTION

- · Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.

Ⅲ NOTE


- · Mark all wiring and hoses to avoid misconnec-
- · Inspect the timing belt before removing the cylinder head.
- Turn the crankshaft pulley so that the No.1 piston is at top dead center.
- Engine removal is required for this procedure.
- Remove exhaust manifold. 1.
- 2. Remove intake manifold.
- Remove timing chain. 3.
- 4. Remove water temperature control assembly.
- 5. Remove cylinder head.
- 6. Remove oil pump.
- 7. Remove oil filter assembly.
- 8. Remove A/C compressor(A) from engine.

Remove alternator(A) from engine.

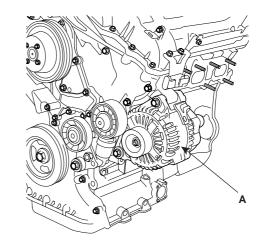


KDRF104A

10. Remove power steering pump(A) from engine.

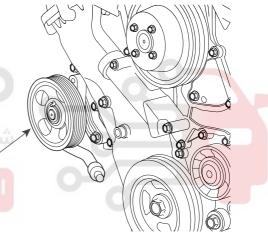



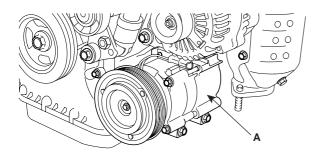


KDRF103A


ENGINE BLOCK EM -59

DISASSEMBLY

- 1. Remove drive plate.
- 2. Remove knock sensor(A).

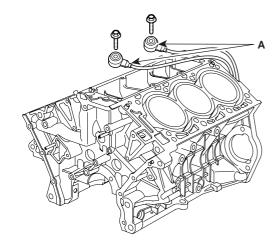


Remove rear oil seal case(A).

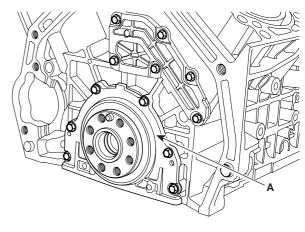

KDRF208A

Remove oil drain cover(A).

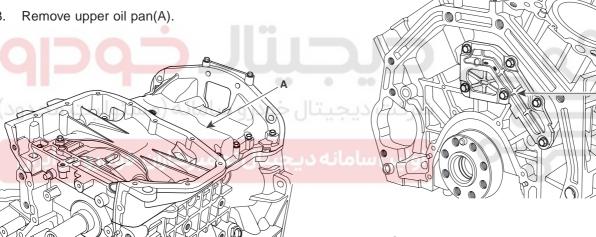

KDRF206A

KDRF205A


KDRF209A

- 7. Check the connecting rod end play.
- 8. Check the connecting rod cap oil clearance.
- 9. Remove piston and connecting rod assemblies.
 - 1) Using a ridge reamer, remove all the carbon from the top of the cylinder.
 - Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.

NOTE

- Keep the bearings, connecting rod and cap toaether.
- Arrange the piston and connecting rod assemblies in the correct order.

Remove baffle plate(A).

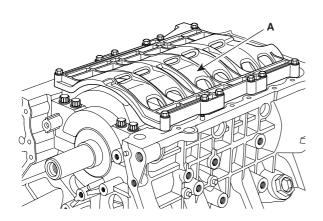


KDRF207A

ENGINE MECHANICAL SYSTEM

EM -60

- 10. Remove crankshaft main bearing cap and check oil clearance.
- 11. Check the crankshaft end play.
- 12. Lift the crankshaft(A) out of engine, being careful not to damage journals.

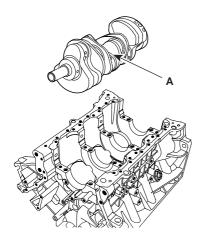

KDRF210A



Arrange the main bearings and thrust bearings in the correct order.

- 13. Check fit between piston and piston pin. Try to move the piston back and forth on the piston pin. If any movement is felt, replace piston and piston pin as a set.
- 14. Remove piston rings.
 - Using a piston ring expander, remove the 2 compression rings.
 - Remove 2 side rails and the spacer by hand.



Arrange the piston rings in the correct order only.


15. Disconnect connecting rod from piston. Using a press, remove the piston pin from the piston. (Press-in load: 800 ~ 1400kg (1764 ~ 3086lb)

INSPECTION

CONNECTING ROD AND CRANKSHAFT

Check the connecting rod end play. Using a feeler gauge, measure the end play while moving the connecting rod back and forth.

Standard end play: 0.1~ 0.25mm(0.004 ~ 0.010in.)

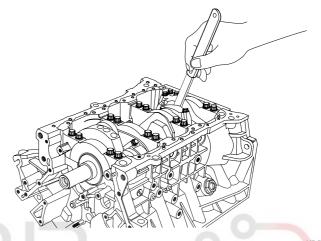

KDRF211A

- If out-of-tolerance, install a new connecting rod.
- If still out-of-tolerance, replace the crankshaft.
- Check the connecting rod bearing oil clearance.
 - Check the matchmarks on the connecting rod and cap are aligned to ensure correct reassembly.
 - 2) Remove 2 connecting rod cap bolts.
 - Remove the connecting rod cap and bearing half.
 - Clean the crank pin and bearing.
 - Place plastigage across the crank pin.
 - Reinstall the bearing half and cap, and torque the bolts.

Tightening torque

19.6Nm (2.0kgf.m, 14.46lb-ft) + 90°



NOTE


Do not turn the crankshaft.

ENGINE BLOCK EM -61

- Remove 2 bolts, connecting rod cap and bearing-
- Measure the plastigage at its widest point.

Standard oil clearance

 $0.038 \sim 0.056$ mm $(0.0015 \sim 0.0022$ in.)

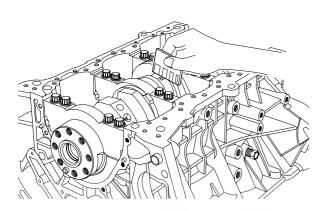

If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.

CAUTION

Do not file, shim, or scrape the bearings or the caps to adjust clearance.

10) If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.

NOTE


If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.



/ CAUTION

If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

CONNECTING ROD MARK LOCATION

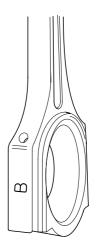


EDQF196A

IDENTIFICATION OF CONNECTING ROD

CLASS	MARK	INSIDE DIAMETER
0	а	58.000 ~ 58.006mm (2.2834 ~ 2.2837in.)
1	b	58.006 ~ 58.012mm (2.2837 ~ 2.2839in.)
2	С	58.012 ~ 58.018mm (2.2839 ~ 2.2842in.)

CRANKSHAFT PIN MARK LOCATION

IDENTIFICATION OF CRANKSHAFT

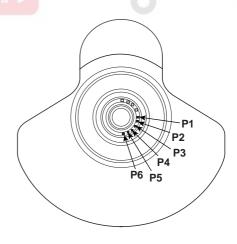

ECBF037A


ENGINE MECHANICAL SYSTEM

EM -62

DISCRIMINATION OF CRANKSHAFT

CLASS	MARK	OUTSIDE DIAMETER OF PIN
I	1 or A	54.966 ~ 54.972mm (2.1640 ~ 2.1642in.)
П	2 or B	54.960 ~ 54.966mm (2.1638 ~ 2.1640in.)
III	3 or C	54.954 ~ 54.960mm (2.1635 ~ 2.1638in.)

PLACE OF IDENTIFICATION MARK (CONNECTING ROD BEARING)

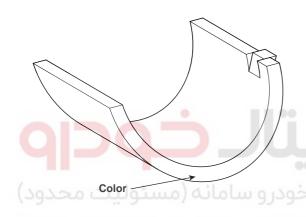

ECRF021A

IDENTIFICATION OF CONNECTING ROD BEARING

CLASS	MARK	THICKNESS OF BEARING
E	BLUE	1.514 ~ 1.517mm (0.0596 ~ 0.0597in.)
D	BLACK	1.511 ~ 1.514mm (0.0595 ~ 0.0596in.)
С	BROWN	1.508 ~ 1.511mm (0.0594 ~ 0.0595in.)
В	GREEN	1.505 ~ 1.508mm (0.0593 ~ 0.0594in.)
А	YELLOW	1.502 ~ 1.505mm (0.0591 ~ 0.0593in)

11) Selection

			NECTING IFICATION	
		0(a)	1(b)	2(c)
CRANK- SHAFT	1 or A	A (YEL- LOW)	B (GREEN)	C (BROWN)
INDEN- TIFICA- TION	2 or B	B (GREEN)	C (BROWN)	D (BLACK)
MARK	3 or C	C (BROWN)	D (BLACK)	E (BLUE)

- 3. Check the crankshaft bearing oil clearance.
 - To check main bearing-to-journal oil clearance, remove the main bearing caps and bearing halves.
 - Clean each main journal and bearing half with a clean shop tower.
 - 3) Place one strip of plastigage across each main journal.
 - 4) Reinstall the bearings and caps, then torque the bolts.

Tightening torque

49.00Nm(5.0 kgf.m, 36.16lb-ft) + 90° 19.60 Nm(2.0 kgf.m, 14.46lb-ft)+ 120° 29.40 ~ 31.36Nm(3.0 ~ 3.2 kgf.m, 21.70 ~ 23.14lb-ft)




Do not turn the crankshaft.

ENGINE BLOCK EM -63

5) Remove the cap and bearing again, and measure the widest part of the plastigage.

Standard oil clearance 0.022 ~ 0.040mm (0.0009 ~ 0.0016in.)

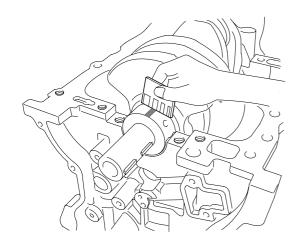

KCRF170A

6) If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.



Do not file, shim, or scrape the bearings or the caps to adjust clearance.

7) If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.

NOTE

If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.




If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Crankshaft bore mark location

Letters have been stamped on the block as a mark for the size of each of the 5 main journal bores.

Use them, and the numbers or bar stamped on the crank (marks for main journal size), to choose the correct bearings.

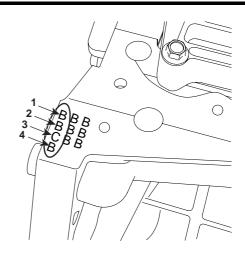

ECBF038A

DISCRIMINATION OF CYLINDER BLOCK

CLASS	MARK	INSIDE DIAMETER	
а	А	73.500 ~ 73.506mm (2.8937 ~ 2.8939in.)	
b	В	73.506 ~ 73.512mm (2.8939 ~ 2.8942in.)	
С	С	73.512 ~ 73.5 <mark>18</mark> mm (2.8942 ~ 2.894 <mark>4</mark> in.)	

CRANKSHAFT JOURNAL MARK LOCATION DISCRIMINATION OF CRANKSHAFT




ECBF039A

DISCRIMINATION OF CRANKSHAFT

CLASS	MARK	OUTSIDE DIAMETER OF JOURNAL
I	1 ro A	68.954 ~ 68.960mm (2.7147 ~ 2.7150in.)
П	2 or B	68.948 ~ 68.954mm (2.7145 ~ 2.7147in.)
III	3 or C	68.942 ~ 68.948mm (2.7142 ~ 2.7145in.)

ENGINE MECHANICAL SYSTEM

PLACE OF IDENTIFICATION MARK (CRANKSHAFT BEARING)

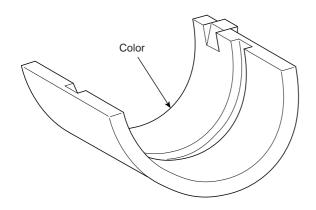

ECRF022A

DISCRIMINATION OF CRANKSHAFT BEARING


CLASS	MARK	THICKNESS OF BEARING
E	BLUE	2.277 ~ 2.280mm (0.0896 ~ 0.0897in.)
D	BLACK	2.274 ~ 2.277mm (0.0895 ~ 0.0896in.)
ه محدود)	BROWN	2.271 ~ 2.274mm (0.0894 ~ 0.0895in.)
در ایرهن	GREEN	2.268 ~ 2.271mm (0.0893 ~ 0.0894in.)
А	YELLOW	2.265 ~ 2.268mm (0.0892 ~ 0.0893in.)

SELECTION

			IKSHAFT E	
		a(A)	b(B)	c(C)
CRANK- SHAFT	1 or A	A (YEL- LOW)	B (GREEN)	C (BROWN)
IDEN- TIFICA- TION	2 or B	B (GREEN)	C (BROWN)	D (BLACK)
MARK	3 or C	C (BROWN)	D (BLACK)	E (BLUE)

Check crankshaft end play.
 Using a dial indicator, measure the thrust clearance while prying the crankshaft back and forth with a screwdriver.

Standard end play 0.10 ~ 0.28mm (0.0039 ~ 0.0110in.)

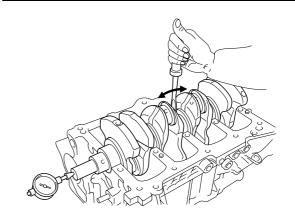

ECKD001B

If the end play is greater than maximum, replace the thrust bearings as a set.

Thrust bearing thickness 2.41 ~ 2.45mm(0.0949 ~ 0.0964in.)


Inspect main journals and crank pins
 Using a micrometer, measure the diameter of each
 main journal and crank pin.

Main journal diameter: 68.942 ~ 68.960mm

 $(2.7142 \sim 2.7149in.)$

Crank pin diameter: 54.954 ~ 54.972mm

 $(2.1635 \sim 2.1642in.)$

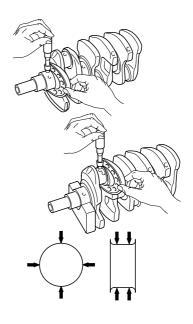

ECKD001E

ENGINE BLOCK EM -65

CONNECTING RODS

- When reinstalling, make sure that cylinder numbers put on the connecting rod and cap at disassembly match. When a new connecting rod is installed, make sure that the notches for holding the bearing in place are on the same side.
- Replace the connecting rod if it is damaged on the thrust faces at either end. Also if step wear or a severely rough surface of the inside diameter of the small end is apparent, the rod must be replaced as well.
- Using a connecting rod aligning tool, check the rod for bend and twist. If the measured value is close to the repair limit, correct the rod by a press. Any connecting rod that has been severely bent or distorted should be replaced.

Allowable bend of connecting rod :

 $0.05 mm \; / \; 100 mm \; (0.0020 \; in./3.94 \; in.)$ or less

Allowable twist of connecting rod:

0.1mm / 100mm (0.0039 in./3.94 in.) or less

CYLINDER BLOCK

- Remove gasket material.
 Using a gasket scraper, remove all the gasket material from the top surface of the cylinder block.
- Clean cylinder block
 Using a soft brush and solvent, thoroughly clean the cylinder block.
- Inspect top surface of cylinder block for flatness.
 Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head gasket for warpage.

Flatness of cylinder block gasket surface Standard: Less than 0.05mm(0.0020 in.),Less than 0.02mm(0.0008in.) / 150 x 150



EDQF154A

Inspect cylinder bore diameter
 Visually check the cylinder for vertical scratchs.
 If deep scratches are present, replace the cylinder block.


ENGINE MECHANICAL SYSTEM

Inspect cylinder bore diameter
 Using a cylinder bore gauge, measure the cylinder bore diameter at position in the thrust and axial directions.

Standard diameter 96.00 ~ 96.03mm (3.7795 ~ 3.7807in.)

Class	Size	Cylinder bore inner diameter
Class	code	3.8L
Α	А	96.00~96.01mm (3.7795 ~ 3.7799in.)
В	В	96.01~96.02mm (3.7799 ~ 3.7803in.)
С	С	96.02~96.03mm (3.7803 ~ 3.7807in.)

7. Check the piston size code(A) and the front mark(B) on the piston top face.

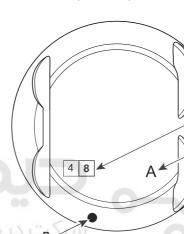

displacement 8 : 3.8L

Mark for total

SGHEM7002N

Check the cylinder bore size code on the cylinder block.

EDQF153A

RH Bank LH Bank 5 B B 4 6

Class	Size code	Piston outer diameter
		3.8L
А	А	95.96 ~ 95.97mm (3.7779 ~ 3.7783in.)
В	В	95.97 ~ 95.98mm (3.7783 ~ 3.7787in.)
С	С	95.98 ~95.99mm (3.7787 ~ 3.7791in.)

8. Select the piston related to cylinder bore class.

Clearance:

0.03 ~ 0.05mm(0.0012 ~ 0.0020in.)

ECBF002A

ENGINE BLOCK EM -67

PISTON AND RINGS

- 1. Clean piston
 - Using a gasket scraper, remove the carbon from the piston top.
 - 2) Using a groove cleaning tool, clean the piston ring grooves.
 - Using solvent and a brush, thoroughly clean the piston.



Do not use a wire brush.

The standard measurement of the piston outside diameter is taken 14 mm (0.5512 in.) from the bottom of the piston.

Standard diameter

95.96 ~ 95.99mm (3.7779~ 3.7791in.)

 Inspect the piston ring side clearance.
 Using a feeler gauge, measure the clearance between new piston ring and the wall of the ring groove.


Piston ring side clearance

Standard

No.1: 0.03 ~ 0.07mm (0.0012 ~ 0.0027in.) No.2: 0.03 ~ 0.07mm (0.0012 ~ 0.0027in.) Oil ring: 0.06 ~ 0.15mm (0.0024 ~ 0.0059in.)

Limit

No.1: 0.1mm (0.004in.) No.2: 0.1mm (0.004in.) Oil ring: 0.2mm (0.008in.)

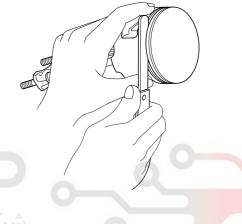

ECKD001G

If the clearance is greater than maximum, replace the piston.



ECKD001D

Calculate the difference between the cylinder bore diameter and the piston diameter.

Piston-to-cylinder clearance

 $0.03 \sim 0.05$ mm $(0.0012 \sim 0.0020$ in.)

ENGINE MECHANICAL SYSTEM

EM -68

5. Inspect piston ring end gap.

To measure the piston ring end gap, insert a piston ring into the cylinder bore. Position the ring at right angles to the cylinder wall by gently pressing it down with a piston. Measure the gap with a feeler gauge. If the gap exceeds the service limit, replace the piston ring. If the gap is too large, recheck the cylinder bore diameter against the wear limits. If the bore is over the service limit, the cylinder block must be replaced.

Piston ring end gap

Standard

No.1 : $0.17 \sim 0.32$ mm ($0.0067 \sim 0.0126$ in.) No.2 : $0.32 \sim 0.47$ m ($0.0126 \sim 0.0185$ in.) Oil ring : $0.20 \sim 0.70$ mm ($0.0079 \sim 0.0275$ in.)

Limit

No.1 : 0.6mm (0.0236in.) No.2 : 0.7mm (0.0275in.) Oil ring : 0.8mm (0.0315in.)




PISTON PINS

1. Measure the diameter of the piston pin.

Piston pin diameter

23.001 ~ 23.006mm (0.9056 ~ 0.9057in.)

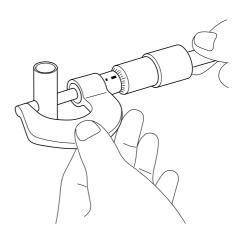

ECKD001Z

2. Measure the piston pin-to-piston clearance.

Piston pin-to-piston clearance

0.01 ~ 0.02mm (0.0004 ~ 0.0008in.)

 Check the difference between the piston pin diameter and the connecting rod small end diameter.

Piston pin-to-connecting rod interference

-0.032 ~ -0.016mm (-0.00126 ~ -0.00063in.)

ENGINE BLOCK EM -69

REASSEMBLY

E2B1FCB7




- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
- Replace all gaskets, O-rings and oil seals with new parts.
- Assemble piston and connecting rod.
 - 1) Use a hydraulic press for installation.
 - The piston front mark and the connecting rod front mark must face the timing belt side of the engine.



- 1) Align the bearing claw with the groove of the connecting rod or connecting rod cap.
- Install the bearings(A) in the connecting rod and connecting rod cap(B).



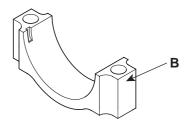

SGHEM7013N

4. Install main bearings.

NOTE


Upper bearings have an oil groove of oil holes; Lower bearings do not.

1) Align the bearing claw with the claw groove of the cylinder block, push in the 4 upper bearings(A).




Install piston rings.

- 1) Install the oil ring spacer and 2 side rails by hand.
- Using a piston ring expander, install the 2 compression rings with the code mark facing upward.
- 3) Position the piston rings so that the ring ends are as shown.

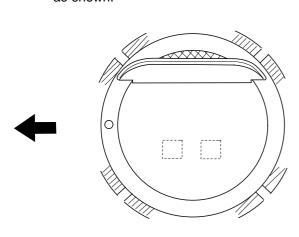

ECKD321A

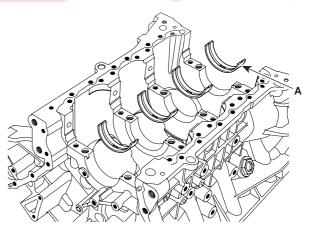


KDRF216A

Align the bearing claw with the claw groove of the main bearing cap, and push in the 4 lower bearings.


ENGINE MECHANICAL SYSTEM

Install thrust bearings.
 Install the 2 thrust bearings(A) under the No.3 journal position of the cylinder block with the oil grooves facing outward.

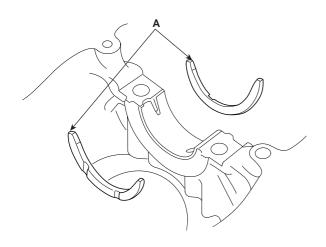

NOTE


- Always use new main bearing cap bolts.
- If any of the bearing cap bolts are broken or deformed, replace it.

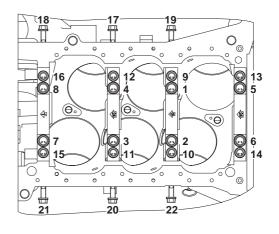

KDRF140A

Use SST(09221-4A000), install main bearing cap bolts.

. Place crankshaft on the cylinder block.

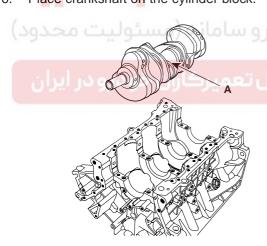

09221 - 4A000

KDRF224A

KDRF210A

ECKD324A

- 7. Place main bearing caps on cylinder block.
- 8. Install main bearing cap bolts.
 - 1) Install and uniformly tighten the bearing cap bolts, in several passes, in the sequence shown.

Tightening torque

Main bearing cap bolt 49.00Nm(5.0 kgf.m, 36.16lb-ft) + 90 $^{\circ}$ (1 \sim 8) 19.60 Nm(2.0 kgf.m, 14.46lb-ft)+ 120 $^{\circ}$ (9 \sim 16) 29.40 \sim 31.36Nm(3.0 \sim 3.2 kgf.m, 21.70 \sim 23.14lb-ft) (17 \sim 22)

- 2) Check that the crankshaft turns smoothly.
- 9. Check crankshaft end play.
- 10. Install piston and connecting rod assemblies.

NOTE

Before installing the pistons, apply a coat of engine oil to the ring grooves and cylinder bores.


 Install the ring compressor, check that the bearing is securely in place, then position the piston in the cylinder, and tap it in using the wooden handle of a hammer. ENGINE BLOCK EM -71

- Stop after the ring compressor pops free, and check the connecting rod-to-check journal alignment before pushing the piston into place.
- 3) Apply engine oil to the bolt threads. Install the rod caps with bearings, and torque the bolts.

Tightening torque

19.6Nm (2.0kgf.m, 14.46lb-ft) + 90°

Use SST(09221-4A000), install connecting rod bearing cap bolts.

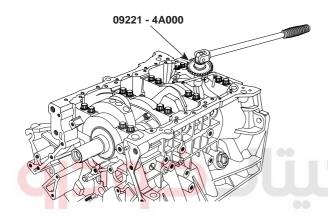

KDRF225A

NOTE


- Always use new connecting rod bearing cap bolts.
- Maintain downward force on the ring compressor to prevent the rings from expanding before entering the cylinder bore.



12. Install oil drain cover.

Tightening torque


9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.67lb-ft)

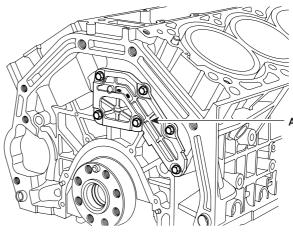


KDRF209A

NOTE

- Clean the sealing face before assembling two parts.
- Remove harmful foreign materials on the sealing face before applying sealant
- Before assembling oil drain cover, the liquid sealant TB1217H should be applied to the oil drain cover.
- The part must be assembled within 5 minutes after sealant was applied.
- Apply sealant to the inner threads of the bolt holes.

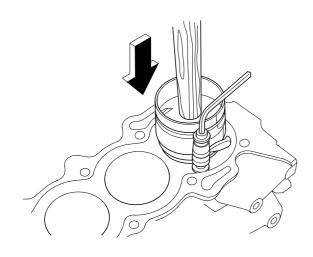

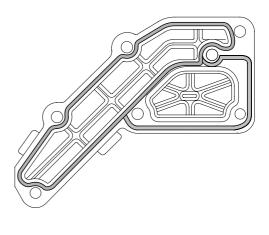

ECBF003A


ECKD001F

ENGINE MECHANICAL SYSTEM


13. Install rear oil seal case.

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.67lb-ft)

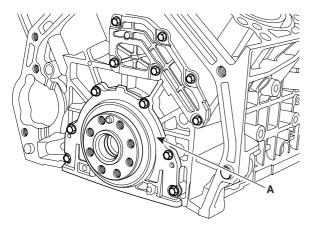

KDRF208A

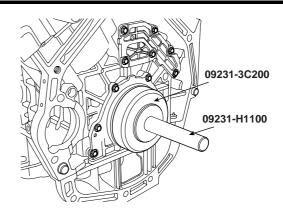

KDRF237A

15. Install baffle plate.


Install and uniformly tighten the baffle plate bolts, in several passes, in the sequence shown.

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)




- Clean the sealing face before assembling two parts.
- Remove harmful foreign materials on the sealing face before applying sealant
- Before assembling rear oil seal case, the liquid sealant TB1217H should be applied to the rear oil seal case.
- The part must be assembled within 5 minutes after sealant was applied.
- Apply sealant to the inner threads of the bolt holes.

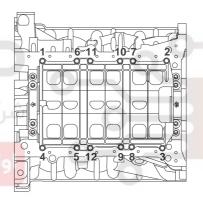

KDRF135A


- 16. Install upper oil pan.
 - a. Using a gasket scraper, remove all the old packing material from the gasket surfaces.
 - Before assembling the oil pan, the liquid sealant TB1217H should be applied on upper oil pan.
 The part must be assembled within 5 minutes after the sealant was applied.

Bead width: 2.5mm(0.1in.)

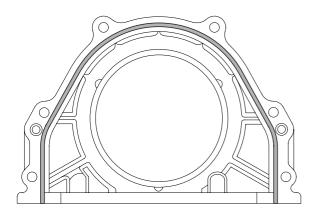

KDRF218A

14. Using SST(09231-3C200, 09231-H1100), install rear oil seal.

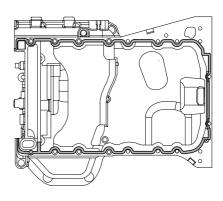

KDRF130A

ENGINE BLOCK EM -73

NOTE

- Clean the sealing face before assembling two parts.
- Remove harmful foreign materials on the sealing face before applying sealant
- When applying sealant gasket, sealant must not protrude into the inside of oil pan.
- To prevent leakage of oil, apply sealant gasket to the inner threads of the bolt holes.
- Install upper oil pan.
 Uniformly tighten the bolts in several passes.

Tightening torque


9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

10. Install ex

17. Install knock sensor.

Tightening torque

15.68 ~ 23.52Nm (1.6 ~ 2.4kgf.m, 11.57 ~ 17.36lb-ft)

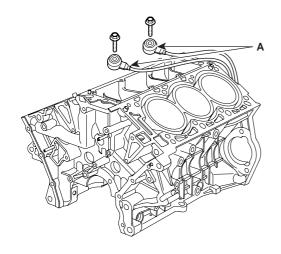

KDRF205A

18. Install drive plate.

Tightening torque

71.54 ~ 75.46Nm (7.3 ~ 7.7kgf.m, 52.80 ~ 55.69lb-ft)


INSTALLATION EC9DBCE3

- Install power steering pump.
- 2. Install alternator.
- 3. Install air conditioner compressor
- Install oil filter assembly.
- 5. Install oil pump.
- 6. Install cylinder head.
- 7. Install water temperature control assembly.
- 8. Install timing chain.
- Install intake manifold.
- 10. Install exhaust manifold.



COOLING SYSTEM

COMPONENTS E6DF76AB

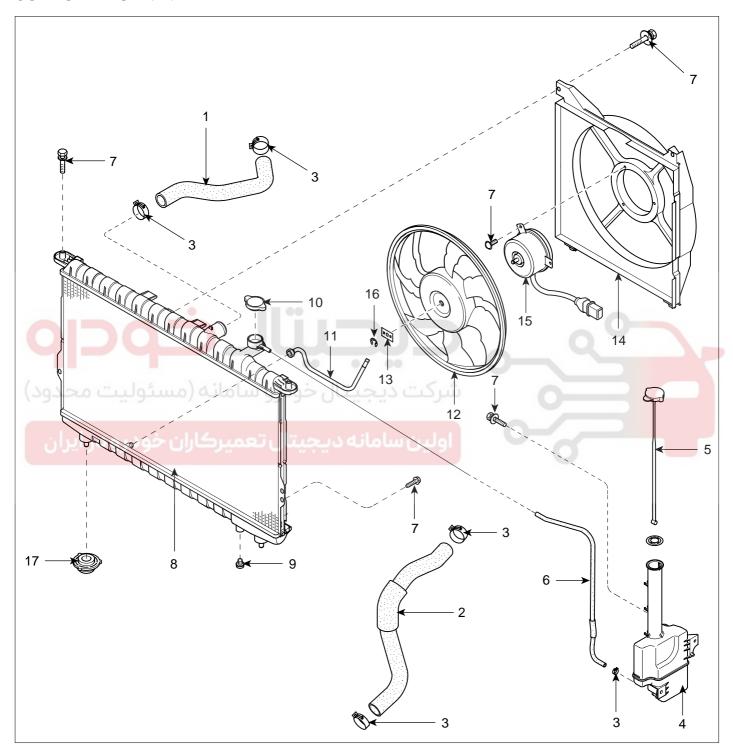


- 1. Radiator upper hose
- 2. Radiator lower hose
- 3. Hose clamp
- 4. Reservoir
- 5. Reservoir cap
- 6. Reservoir hose

- 7. Bolt
- 8. Radiator
- 9. Drain plug
- 10. Radiator cap
- 11. Oil cooler tube
- 12. Cooling fan

- 13. Washer
- 14. Radiator shroud
- 15. Motor assembly
- 16. Retainer
- 17. Radiator mounting lower insulator

SGHEM7003N

COOLING SYSTEM EM -75

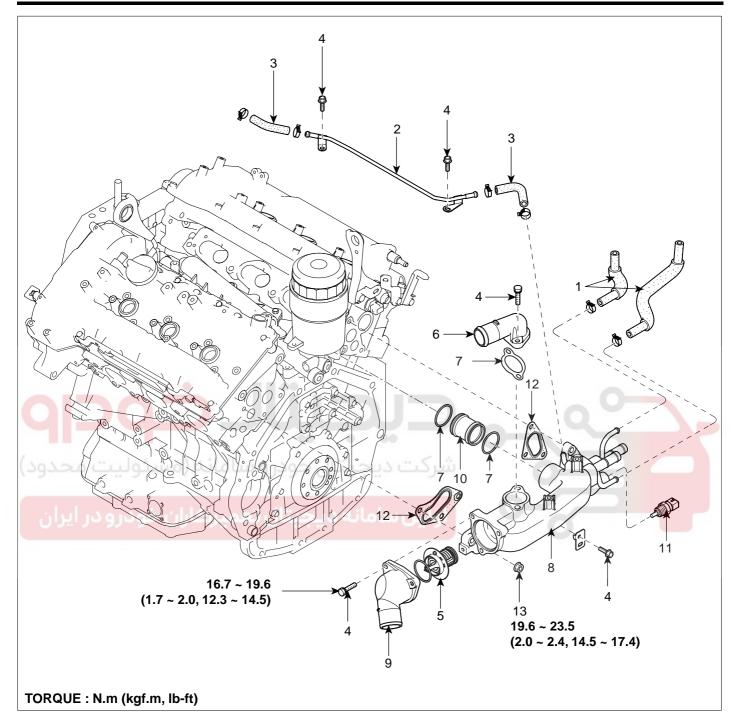

- 1. Water hose
- 2. Vent pipe
- 3. Vent hose
- 4. Bolt
- 5. Thermostat assembly
- 6. Outlet fitting
- 7. Gasket

- 8. Thermostat housing assembly
- 9. Inlet fitting
- 10. Tube
- 11. Engine coolant temperature sensor
- 12. Thermostat gasket
- 13. Nut
- 14. Inlet fitting O-ring

SGHEM7014N

ENGINE MECHANICAL SYSTEM

ENGINE COOLANT REFILLING AND BLEEDING ED42148D

WARNING

Never remove the radiator cap when the engine is hot. Serious scalding could be caused by hot fluid under high pressure escaping from the radiator.



When pouring engine coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the paint. If any coolant spills, rinse it off immediately.

- Make sure the engine and radiator are cool to the touch.
- 2. Remove radiator cap.
- Loosen the drain plug, and drain the coolant.
- Tighten the radiator drain plug securely.
- Remove, drain and reinstall the reservoir. Fill the tank halfway to the MAX mark with water, then up to the MAX mark with antifreeze.
- 6. Fill fluid mixture with coolant and water(4: 6) slowly through the radiator cap. Push the upper/lower hoses of the radiator so as to bleed air easily.



NOTE

- · Use only genuine antifreeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 50%
 - Coolant concentrations less than 50% may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60% will impair cooling efficiency and are not recommended.



CAUTION

- Do not mix different brands of antifreeze/coolants.
- Do not use additional rust inhibitors or antirust products; they may not be compatible with the coolant.

- Start the engine and run so coolant circulates. When the cooling fan operates and coolant circulates, refill coolant through the radiator cap.
- Repeat 7 until the cooling fan cycles 3 ~ 5 times and bleed air sufficiently out of the cooling system.
- Install the radiator cap and fill the reservoir tank to the "MAX" line with coolant.
- 10. Run the vehicle under idle until the cooling fan operates 2 ~ 3 times.
- 11. Stop the engine and wait until coolant gets cool.
- 12. Repeat 6 to 11 until the coolant level doesn't fall any more, bleed air out of the cooling system.



NOTE

Bleed air out of the cooling system and refill coolant when coolant completely cools, recheck the coolant level in the reservoir tank for 2 ~ 3 days after replacing coolant.






COOLING SYSTEM EM -77

CAP TESTING

1. Remove the radiator cap, wet its seal with engine coolant, then install it to pressure tester.

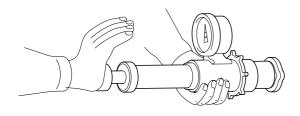




ECKD501X

- Apply a pressure of 93 ~ 123kPa (0.95 ~ 1.25kgf/cm², 14 ~ 19psi)
- 3. Check for a drop in pressure.
- 4. If the pressure drops, replace the cap.

TESTING

 Wait until engine is cool, then carefully remove the radiator cap and fill the radiator with engine coolant, then install it on the pressure tester.

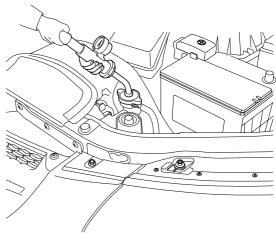

SGHEM7015N

- Apply a pressure tester to the radiator and apply a pressure of 93 ~ 123kPa (0.95 ~ 1.25kgf/cm² 14 ~18psi).
- 3. Inspect for engine coolant leaks and a drop in pressure.
- 4. Remove the tester and reinstall the radiator cap.



Check for engine oil in the coolant and/or coolant in the engine oil.

ENGINE MECHANICAL SYSTEM

EM -78

REMOVAL EECA3D1


WATER PUMP

1. Drain the engine coolant.




System is under high pressure when the engine is hot. To avoid danger of releasing scalding engine coolant, remove the cap only when the engine is cool.

2. Remove drive belt(A).

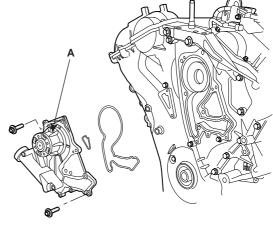


Remove the water pump(A) and gasket.

KDRF221A

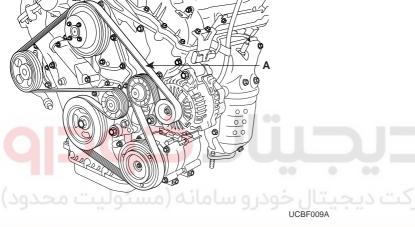

3. Remove the 4 bolts and pump pulley(A).

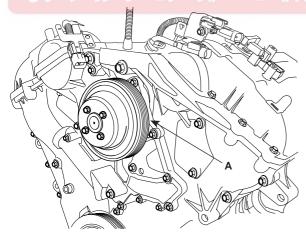


KDRF107A

COOLING SYSTEM EM -79


WATER TEMPERATURE CONTROL ASSEMBLY

- 1. Drain the engine coolant.
- 2. Remove air cleaner assembly.
- 3. Disconnect radiator upper and lower hose(A).

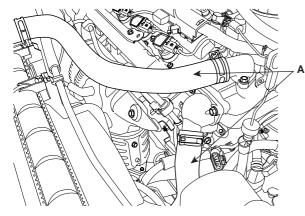

KDRF148A

- 4. Disconnect ECT sensor connector.
- Disconnect heater hose, water vent hose and water hose from water temperature control assembly.
- Remove wiring protector.
- 7. Remove water temperature control assembly(A).

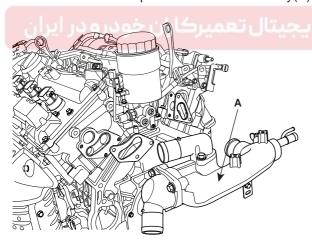


SGHEM7016N

THERMOSTAT



Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

- 1. Drain engine coolant so its level is below thermostat.
- 2. Remove water inlet(A) and thermostat(B).

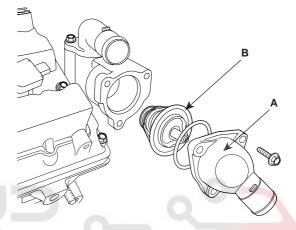


SGHEM7017N

EM-80

RADIATOR

- 1. Drain the engine coolant.
- 2. Remove the air duct(A).

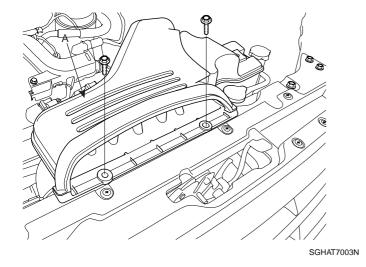

INSPECTION EEE5DC


WATER PUMP

- 1. Check each part for cracks, damage or wear, and replace the coolant pump assembly if necessary.
- 2. Check the bearing for damage, abnormal noise and sluggish rotation, and replace the coolant pump assembly if necessary.
- Check for coolant leakage. If coolant leaks from hole, the seal is defective. Replace the coolant pump assembly.



A small amount of "weeping" from the bleed hole is normal.

Disconnect radiator upper and lower hoses(A).

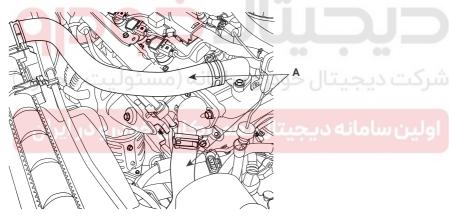




- 4. Disconnect transaxle oil cooler hoses.
- 5. Disconnect the radiator fan connector.
- 6. Remove the radiator bracket.
- 7. Remove the radiator.

COOLING SYSTEM EM -81

THERMOSTAT

1. Immerse the thermostat in water and gradually heat the water.

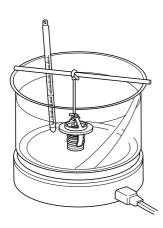

ECKD503B

- Check the valve opening temperature.
 Valve opening temperature: 82°C (177°F)
 Full opening temperature: 95°C (205°F)
 If the valve opening temperature is not as specified, replace the thermostat.
- Check the valve lift.
 Valve lift: Min. 10mm (0.4in.) at 95°C (205°F)
 If the valve lift is not as specified, replace the thermostat


INSTALLATION

WATER PUMP

 Install the water pump(A) and a new gasket(B) with 12 bolts.

Tightening torque

21.56 ~ 23.52Nm (2.2 ~ 2.4kgf.m, 15.91 ~ 17.36lb-ft) 9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

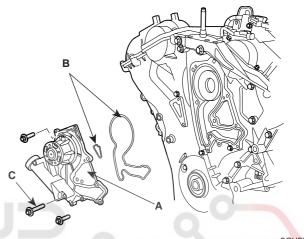


SGHEM7018N

NOTE

- Clean the contact face before assembly.
- Always use a new bolt(C) and gaskets(B).
- 2. Install the 4 bolts and pump pulley(A).

Tightening torque

7.84 ~ 9.80Nm (0.8 ~ 1.0kgf.m, 5.78 ~ 7.23lb-ft)

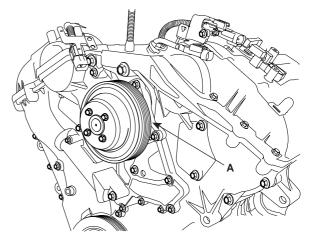


KDRF107A

ENGINE MECHANICAL SYSTEM

Install drive belt(A).

EM-82

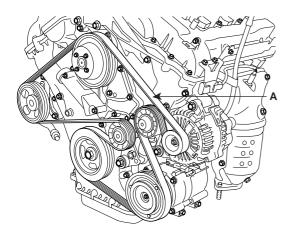

KDRF101A

- 4. Fill with engine coolant.
- 5. Start engine and check for leaks.
- 6. Recheck engine coolant level.

WATER TEMPERATURE CONTROL ASSEMBLY




Clean the contact face before assembly.

 Install water temperature control assembly(B) and new gasket(A).

Tightening torque

18.62 ~ 23.52Nm (1.9 ~ 2.4kgf.m, 13.74 ~ 17.36lb-ft)

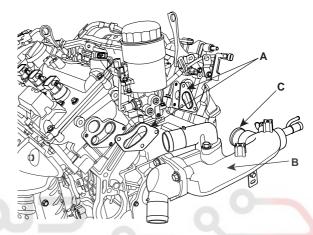


SGHEM7019N



Use new O-rings(C) when reassembling.

- Connect water hoses to the water temperature control assembly.
- 3. Install wiring protector.
- 4. Connect ECT sensor connector.
- 5. Connect radiator upper and lower hose(A).

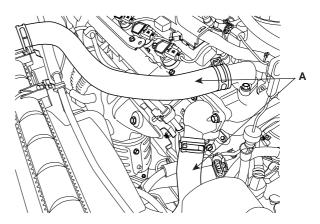

KDRF148A


به دیجیتال تعمیرکاران خودرو در ایران

COOLING SYSTEM EM -83

- 6. Install air cleaner assembly.
- 7. Fill with engine coolant.
- 8. Start engine and check for leaks.
- 9. Recheck engine coolant level.

THERMOSTAT

- Place thermostat in thermostat housing.
 - Install the thermostat with the jiggle valve upward.
 - 2) Install a new thermostat(B).

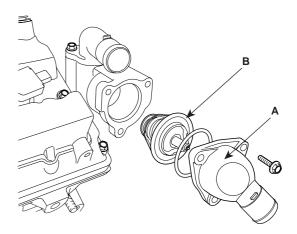

SGHEM7017N

جيتال خودرو

2. Install water inlet(A).

Tightening torque


16.66 ~ 19.60Nm (1.7 ~ 2.0kgf.m, 12.30 ~ 14.47lb-ft)

امانه دیجیتال تعمیرکاران خودرو در ایران


- 3. Fill with engine coolant.
- 4. Start engine and check for leaks.

RADIATOR

- 1. Install the radiator.
- 2. Install the radiator bracket.
- 3. Reconnect the radiator fan connector.
- 4. Connect transaxle oil cooler hoses.
- 5. Connect radiator upper and lower hoses(A).

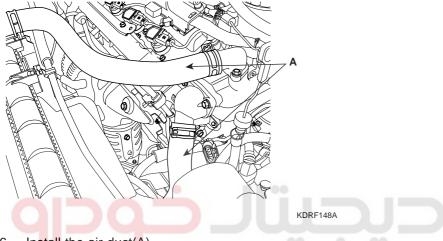

6. Install the air duct(A).

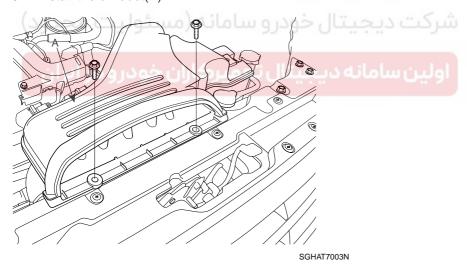


- 7. Fill with engine coolant.
- 8. Start engine and check for leaks.
- 9. Recheck engine coolant level.

LUBRICATION SYSTEM

EM -85

LUBRICATION SYSTEM

COMPONENTS E35BD1AA

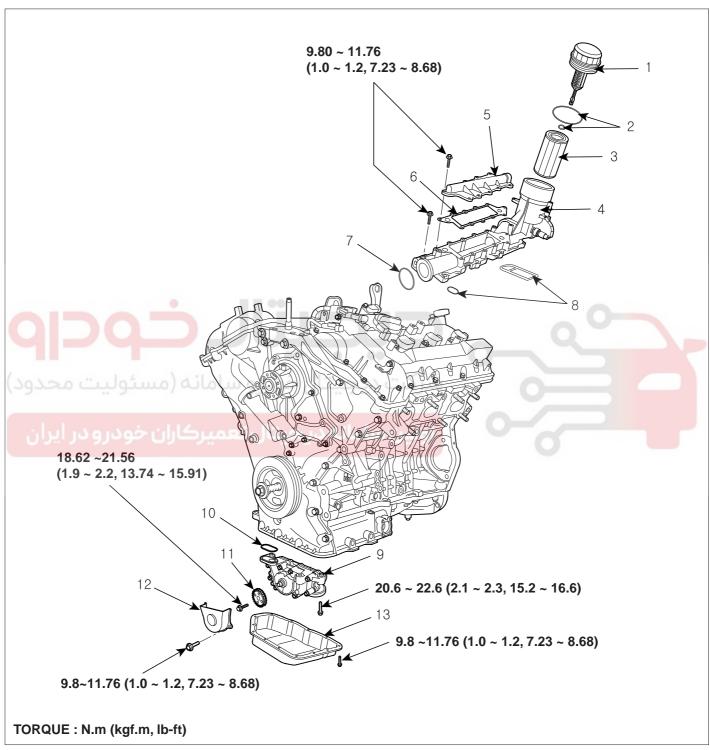

- 1. Oil filter cap
- 2. O ring
- 3. Oil filter element
- 4. Oil filter body
- 5. Oil filter body cover

- 6. Gasket
- 7. O ring
- 8. Gasket
- 9. Oil pump
- 10. Gasket

- 11. Oil pump sprocket
- 12. Oil pump chain cover
- 13. Lower oil pan

ECBF005A

ENGINE MECHANICAL SYSTEM

EM -86

INSPECTION EE8AE591

1. Check engine oil quality.

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

2. Check engine oil level.

After warming up the engine and then 5 minutes after the engine stops, oil level should be between the "L" and "F" marks on the dipstick.


If low, check for leakage and add oil up to the "F" mark.

₩ NOTE

Do not fill with engine oil above the "F" mark.

SELECTION OF ENGINE OIL

Recommended API classification: Above SJ or SL Recommended SAE viscosity grades: 5W-20 If 5W-20 engine oil is not available, 5W-30 or secondary recommanded engine oil for corresponding temperature range can be used.

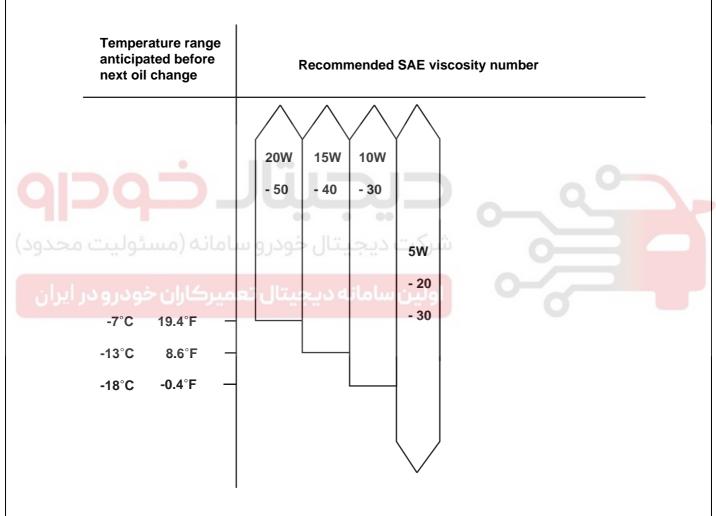

SGHEM7001L



For best performance and maximum protection of all types of operation, select only those lubricants which .


- Satisfy the requirement of the API classification.
- Have proper SAE grade number for expected ambient temperature range.

Lubricants that do not have both an SAE grade number and API service classification on the container should not be used. LUBRICATION SYSTEM EM -87

REMOVAL EEB453AF

OIL PUMP

- 1. Drain engine oil.
- 2. Using SST(09215-3C000) remove lower oil pan(A).

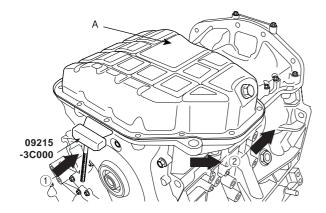

STGEM7100N




Be careful not to damage the contact surfaces of upper oil pan and lower oil pan.

A CAUTION

- Insert the SST between the oil pan and the ladder frame by tapping it with a plastic hammer in the direction of arrow.
- After tapping the SST with a plastic hammer along the direction of arrow around more than 2/3 edge of the oil pan, remove it from the ladder frame.
- Do not turn over the SST abruptly without tapping.


It can result in damage of the SST.

3. Remove oil pump chain cover(A).

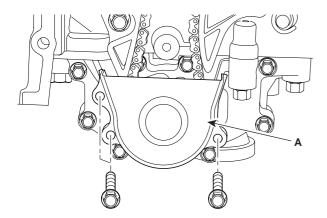


KDRF185A

4. Remove oil pump chain sprocket(A).

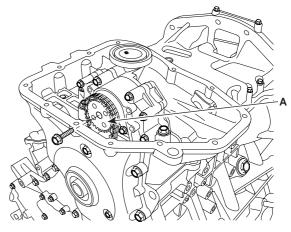

KDRF189A


Remove oil pump(A).

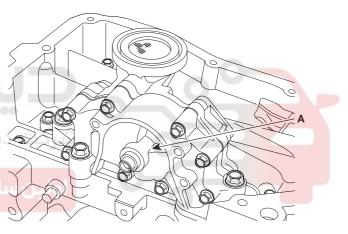


KDRF190A

OIL FILTER ASSEMBLY

- 1. Loosen the oil filter cap by turning it counterclockwise to drain the oil in the oil filter.
- 2. Remove surge tank and intake manifold.
- 3. Disconnect oil pressure switch connector.
- 4. Drain the engine coolant.
- 5. Disconnect water hoses from ETC.
- 6. Remove water temperature control assembly.
- 7. Disconnect water vent hose(A).
- 8. Remove oil filter body cover(B).

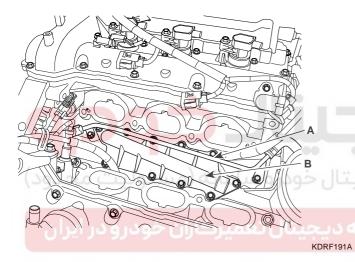

9. Remove oil filter body.(A).

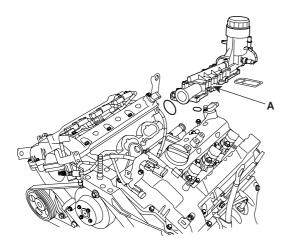

KDRF192A




E9C606A4

OIL PRESSURE SWITCH

1. Check the continuity between the terminal and the body with an ohmmeter.


If there is no continuity, replace the oil pressure switch.

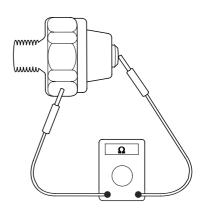

ECKD001W

- Check the continuity between the terminal and the body when the fine wire is pushed. If there is continuity even when the fine wire is pushed, replace the switch.
 - If there is no continuity when a 50kpa (7psi) vacuum is applied through the oil hole, the switch is operating properly.

Check for air leakage. If air leaks, the diaphragm is broken. Replace it.

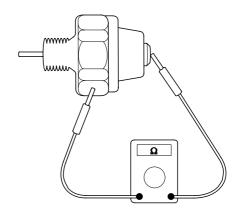

ECKD001Y

NOTE


Be careful of the knock sensor connector.

EM-89 LUBRICATION SYSTEM

OIL AND FILTER

CAUTION


- · Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Exercise caution in order to minimize the length and frequency of contact of your skin to used oil. Wear protective clothing and gloves. Wash your skin thoroughly with soap and water, or use water-less hand cleaner, to remove any used engine oil. Do not use gasoline, thinners, or solvents.
- · In order to preserve the environment, used oil and used oil filter must be disposed of only at designated disposal sites.
- Park the car on level ground. Start the engine and let it warm up.
- Turn the engine off and open the hood. Remove the engine cover.
- Wait for 5 minutes after loosening the oil filter cap by turning it counterclockwise with SST(09263-3C100) to drain well the oil in the oil filter.

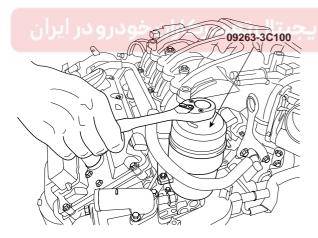

ECRF051A

- Drain the engine oil.
 - Remove the oil filler cap.
 - After lifting the car, remove the oil drain plug and drain the oil into a container.
- Replace oil filter.
 - a. Disconnect the oil filter cap from oil filter body.
 - Remove the oil filter element. b.
 - Check and clean the oil filter installation surface.
 - Check the part number of the new oil filter is same as old one.

Install new oil filter element(A) and two new O-rings(B).

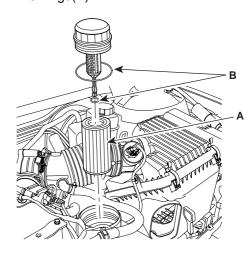

KDRF188A

- Apply clean engine oil to the new O-rings. Lightly screw the oil filter cap into place, and tighten it until the O-ring contacts the seat.
- Finally tighten it again by specified tightening torque.

Tightening torque

24.50Nm (2.5kgf.m, 18.08lb-ft)

- Refill with engine oil. 6.
 - a. Install the oil drain plug with a new gasket.

Tightening torque

34.3 ~ 44.1Nm (3.5 ~ 4.5kgf.m, 25.3 ~ 32.5lb-ft)

Fill with fresh engine oil, after removing the engine oil level gauge.

Capacity

When replacing a short engine or a block assembly: 6.0L(6.34U.S.qts,5.28lmp.qts)

When replacing an oil pan only: 5.5L(5.81U.S.qts,4.84lmp.qts)

Drain and refill: 5.2L(5.49U.S.qts,4.58lmp.qts)

- Install the oil filler cap and oil level gauge.
- Start the engine and check to be sure no oil is leaking from the drain plug or oil filter.
- Recheck engine oil level.

ENGINE MECHANICAL SYSTEM

INSTALLATION

OIL PUMP


Install oil pump(A).

Tightening torque

20.6 ~ 22.6Nm (2.1 ~ 2.3kgf.m, 15.2 ~ 16.6lb-ft)




Always use a new O-ring(B).

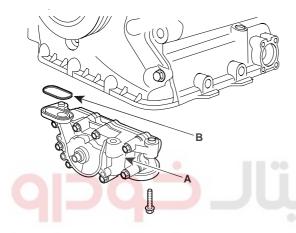

Install oil pump sprocket(A)and oil pump chain on the oil pump.

Tightening torque

18.62 ~ 21.56Nm (1.9 ~ 2.2kgf.m, 13.74 ~ 15.91lb-ft)

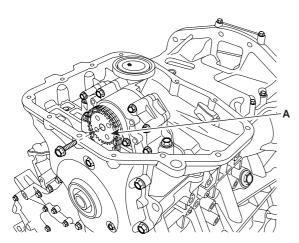


KDRF189A

Install oil pump chain cover(A).

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

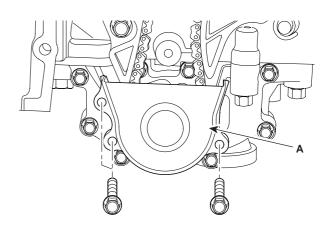


KDRF185A

- Install lower oil pan.
 - Using a gasket scraper, remove all the old packing material from the gasket surfaces.
 - Before assembling the oil pan, the liquid sealant TB1217H should be applied on upper oil pan. The part must be assembled within 5 minutes after the sealant was applied.

Bead width: 2.5mm(0.1in.)

But marked area(*) to be 5.0mm(0.2in.)

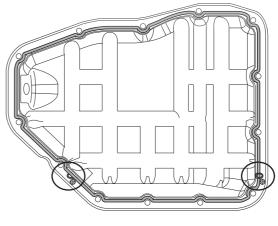

KDRF136A

/!\ CAUTION


- · Clean the sealing face before assembling two parts.
- · Remove harmful foreign materials on the sealing face before applying sealant
- · When applying sealant gasket, sealant must not be protrude into the inside of oil pan.
- · To prevent leakage of oil, apply sealant gasket to the inner threads of the bolt holes.

LUBRICATION SYSTEM EM -91

e. Install lower oil pan.
Uniformly tighten the bolts in several passes.

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

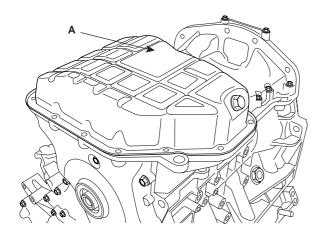

KDRF114A


 f. After assembly, wait at least 30 minutes before filling the engine with oil.

OIL FILTER ASSEMBLY

Install oil filter body(A) and new O-rings.

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

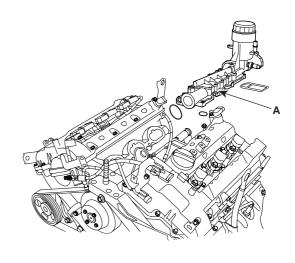

KDRF192A


NOTE

- All rubber gaskets must not be damaged by assembling parts.
- Be careful of the knock sensor connector.
- Always use a new O-ring

 Install oil filter body cover(B) and new gasket on the oil filter body.

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

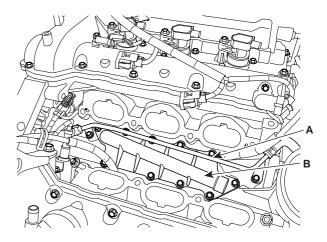

KDRF191A

ENGINE MECHANICAL SYSTEM

EM -92

3. Connect water vent hose(A)

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)


- 4. Install water temperature control assembly.
- 5. Connect water hoses on the ETC.
- 6. Connect oil pressure switch connector.
- 7. Install intake manifold and surge tank.
- 8. Fill with engine coolant.
- 9. Start engine and check for leaks.
- 10. Recheck engine coolant level.



INTAKE AND EXHAUST SYSTEM

INTAKE MANIFOLD

COMPONENTS EBCD8B14

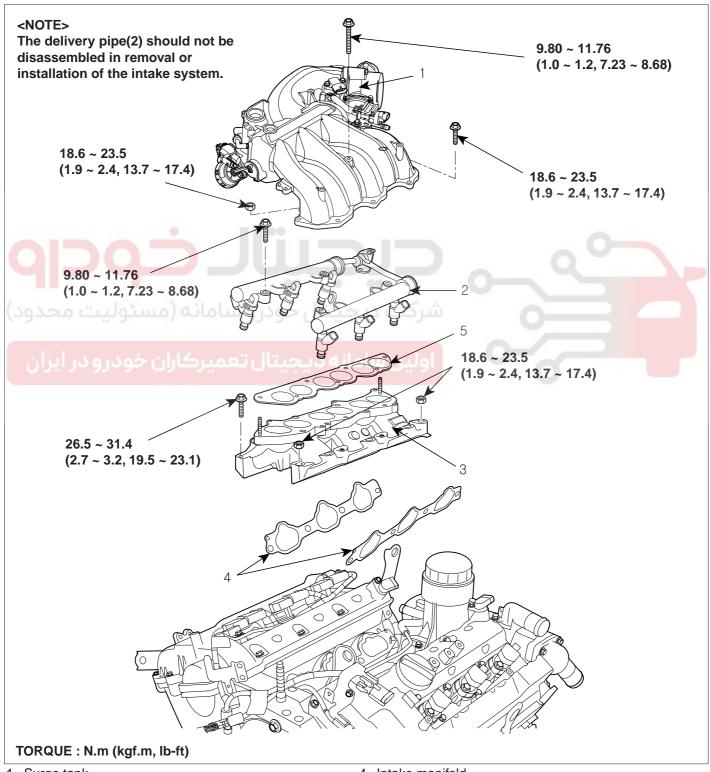


- 1. Surge tank
- 2. Delivery pipe
- 3. Surge tank gasket

- 4. Intake manifold
- 5. Intake manifold gasket


ENGINE MECHANICAL SYSTEM

REMOVAL E3EAC1CF

- 1. Disconnect AFS(A) and breather hose(B).
- 2. Remove air cleaner body(D) and intake hose(C).

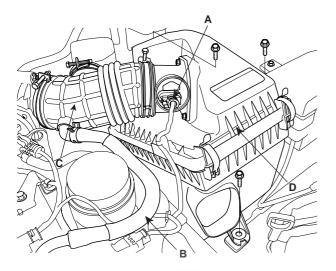

Disconnect PCSV connector(A), MAP sensor connector(B) and PCSV hose.

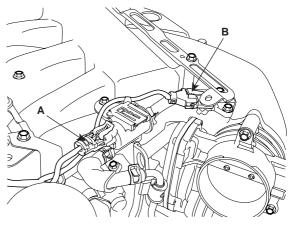


UCBF003A

6. Disconnect ETC connector(A) and knock sensor connector(B).


SGHEM7005N

3. Disconnect RH oxygen sensor connector(A).

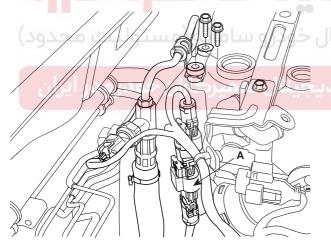


SGHEM7006N

 Disconnect RH injector connector and ignition coil connector.

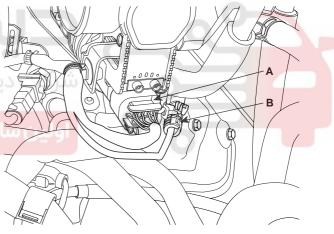

KDRF162A

- 7. Disconnect water hoses(B) from ETC.
- 8. Disconnect PCV(C) hose.

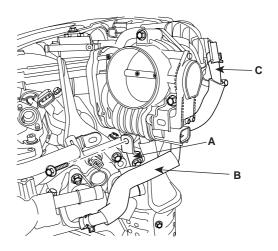


KDRF176A


INTAKE AND EXHAUST SYSTEM

EM -95

- 9. Disconnect brake vacuum hose.
- 10. Remove surge tank stay(A).

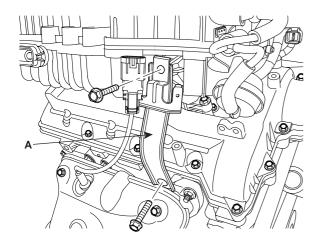

- 14. Disconnect LH injector connector.
- 15. Remove intake manifold(A) and gasket.

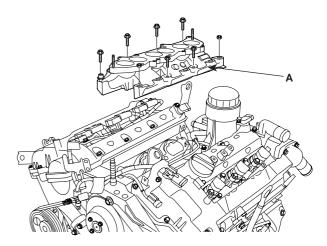


KDRF182A

- UCBF020A
- 11. Remove connector bracket from surge tank or connectors(2EA).



UCBF007A

13. Disconnect breather Pipe assembly(A).

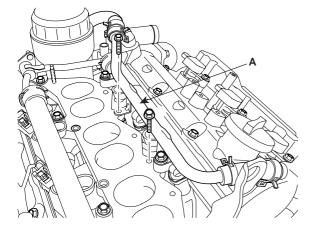

ECBF031A

ENGINE MECHANICAL SYSTEM

INSTALLATION EFC2/

 Install intake manifold and new gasket on the cylinder head.

Tightening torque

1st: 3.9 ~ 5.9Nm (0.4 ~ 0.6kgf.m, 2.9 ~ 4.3lb-ft)

2st: 18.62 ~ 23.52Nm (1.9 ~ 2.4kgf.m,


13.74 ~ 17.36lb-ft)

3st: Repeat 2nd step twice or move.



Be careful of the installation direction.

a - h : 1st step order1 ~ 8 : 2nd step order

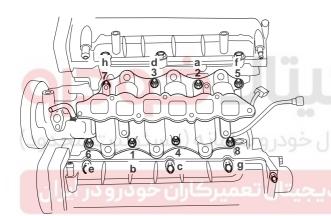

Tightening torque

6.86 ~ 10.78Nm (0.7 ~ 1.1kgf.m, 5.06 ~ 7.96lb-ft)

Install surge tank stay.

Tightening torque

27.44 ~ 31.36Nm (2.8 ~ 3.2kgf.m, 20.25 ~

23.14lb-ft) - Engine front side

18.62 ~ 23.52Nm (1.9 ~ 2.4kgf.m, 13.74 ~

17.36lb-ft) - Engine rear side

- 8. Connect brake vacuum hose.
- 9. Connect PCV hose.
- 10. Connect water hoses to ETC.
- 11. Connect ETC connector and knoch sensor connector.
- Connect PCSV connector, MAP sensor connector and PCSV hoe.
- 13. Connect RH injector connector and ignition coil connector.
- 14. Connect RH oxygen sensor connector.
- 15. Install air cleaner upper cover and in take hose.
- Connect AFS(A) and breather hose.

SBLM16207L

- Install delivery pipe.(Refer to FL group)
- 3. Connect LH injector connector.
- 4. Connect breather Pipe assembly.

Tightening torque

9.80 ~ 11.76Nm (1.0 ~ 1.2kgf.m, 7.23 ~ 8.68lb-ft)

Install surge tank.

Tightening torque

9.80 \sim 11.76Nm (1.0 \sim 1.2kgf.m, 7.23 \sim 8.68lb-ft) - Long bolt 1EA 18.62 \sim 23.52Nm (1.9 \sim 2.4kgf.m, 13.74 \sim 17.36lb-ft) - Short bolts 3EA/Nuts 2EA


Install connector bracket on the surge tank.

INTAKE AND EXHAUST SYSTEM

EM -97

EXHAUST MANIFOLD

COMPONENTS E5AE5CA6

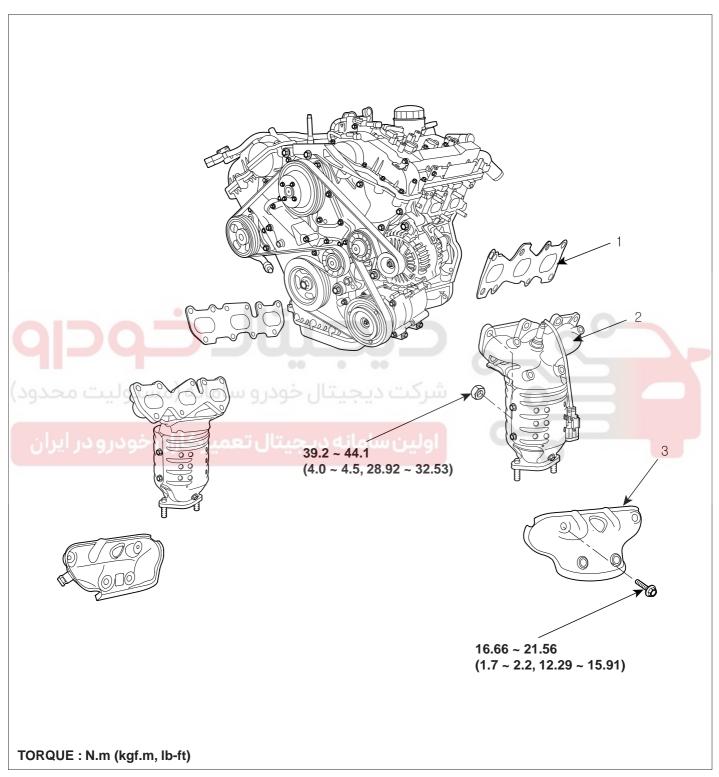

- 1. Gasket
- 2. Exhaust manifold


3. Heat protector

ECBF014A

EM -98 ENGINE MECHANICAL SYSTEM


REMOVAL E4376546

1. Remove under cover(A).

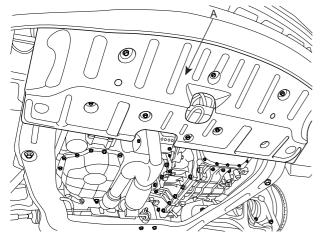


SGHAT6021D

Disconnect LH,RH rear oxygen sensor connector from bracket.

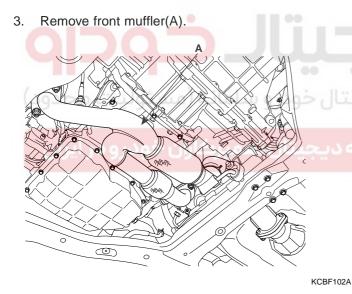


4. Remove oil level gauge(A).

5. Disconnect LH front oxygen sensor connector(B) from bracket.

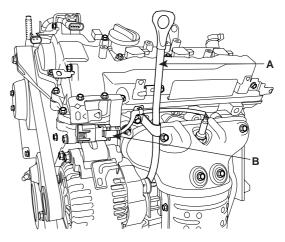


UCBF010A

6. Remove LH heat protector(A).

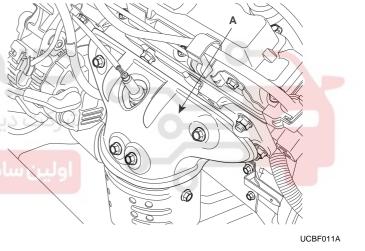

7. Remove LH exhaust manifold.

8. Disconnect RH front oxygen sensor connector from bracket.

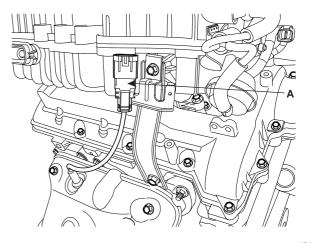


KDRF177B

INTAKE AND EXHAUST SYSTEM

EM -99

- 9. Remove RH heat protector.
- 10. Remove RH exhaust manifold.

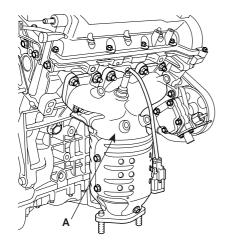

INSTALLATION E5DDACFB

1. Install new gasket and exhaust manifold.

Tightening torque

39.2 ~ 44.1Nm(4.0 ~ 4.5kgf.m, 28.92 ~ 32.53lb-ft)

Install heat protector.

Tightening torque

16.66 ~ 21.56Nm(1.7 ~ 2.2kgf.m, 12.30 ~ 15.91lb-ft)

3. Install front muffler.

Tightening torque

39.2 ~ 58.8N.m(4.0 ~ 6.0kgf.m, 28.92 ~ 43.37lb-ft)

- 4. Connect oxygen sensor connector.
- Install under cover.






UCBF012A



EXHAUST PIPE

COMPONENTS E93A1D60

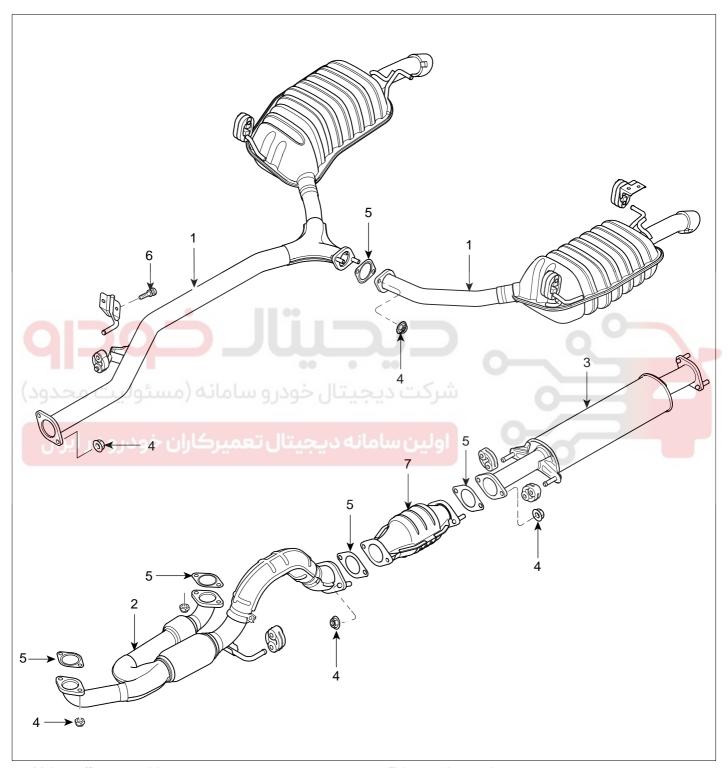

- 1. Main muffler assembly
- 2. Front muffler assembly
- 3. Center muffler assembly
- 4. Nut

- 5. Exhaust pipe gasket
- 6. Bolt
- 7. Catalytic converter

SGHEM7007N